



WARNING

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

1. Test if power is OFF at circuit breaker or fuse block
2. Please read the instructions before use


CAUTION

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.


Electrical products can cause death or injury, or damage to property.

If in any doubt about the installation or use of this product, consult a competent electrician.

CONTENTS

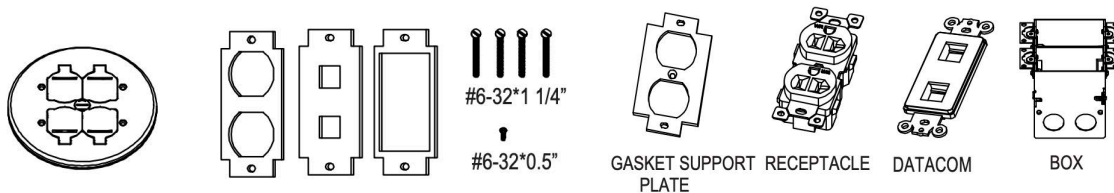

INSTALLATION

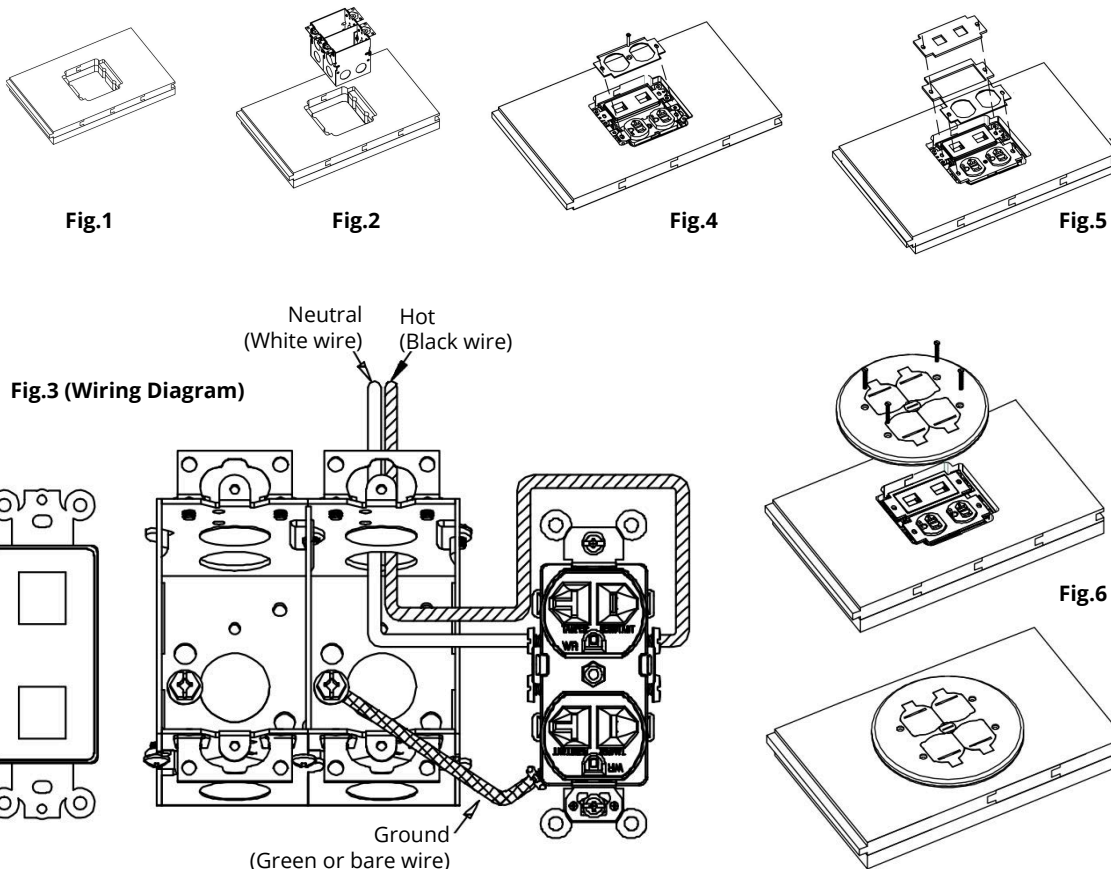

- 1) Tape the template on the area you want to place the floor box. Cut the electrical box into the subfloor or finished floor, avoiding floor joists.
- 2) Remove knockouts. Pull the wire through the opening of the floors and knockouts and connect wires based on the wiring diagram. Secure electrical box with four screws through outside tabs. (screws not provided)
- 3) Wire receptacle in accordance with the wiring diagram (Fig.3)
- 4) Attach gasket support plate to the receptacle with #6-32*0.5* screw
- 5) Place foam gasket on top of gasket support plate and datacom
- 6) Install coverplate using #6-32*1 1/4" screws

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.