

8891400 SERIES LED Mini Strobe




Surface Mount

To +VDC (fuse @ 1A)
TO Chassis Ground

For Synchronization

1. Connect **YELLOW** wires of all heads together for synchronization (all heads must be set at the same pattern)

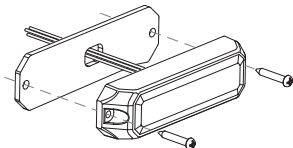

For Simultaneous or Alternating Flash

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping Mode; lighthead will display short (single or double) flashers:
 - Single flash = Group 1
 - Double flash = Group 2
2. Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Groups:
 - Heads in the same Group flash together.
 - Group 1 Heads alternate with Group 2 Heads

For Flash Patterns

1. Momentarrily apply +VDC to **YELLOW** wire:
 - Once for next pattern
 - Quickly three times for pattern Zero

Note: Flash Pattern is preset to #0 Quint Flash

#	FLASH PATTERN
0	Quint
1	8 Flash
2	Single-Quad
3	Single H/L
4	Single-Triple-Quint
5	Random

#	FLASH PATTERN
6	Steady
7	Single
8	Mega
9	Double
10	Triple
11	Quad


8891400 SERIES LED Mini Strobe



Adhesive Mount


1. Select mounting location and clean surface
2. Peel one side of adhesive and apply to lighthead base
3. Peel other side of adhesive and secure lighthead firmly to the mounting surface

Note: Optimum adhesive strength is achieved after 24 hours.

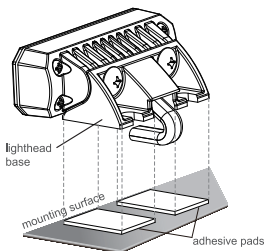

Screw Mount

1. Select mounting location.
2. Mark and drill mounting holes.
3. Secure lighthead to mounting surface with supplied screws.

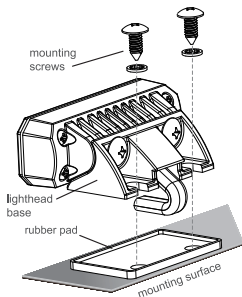

Bracket Mount

1. Select mounting location.
2. Place rubber pad to bottom of lighthead base
3. Place lighthead to the mounting surface.
4. Align top holes of bracket onto the lighthead base alignment points.
5. Secure lighthead with supplied screws from the bottom of the bracket

