


08024 Honda CRF1000L Africa Twin Wind Deflector Fitting Instructions

Kit Includes:

|                             |            |
|-----------------------------|------------|
| ● 2X M5 X 20mm Bolt         | CBOLM50009 |
| ▲ 2X M6 X 25mm Bolt         | CBOLM60011 |
| ■ 4X M6 Spacer              | CSPAM60009 |
| ◆ 2X M6 X 12mm Steel Collar | CSPAM60005 |

- Remove the OEM bolts from the places shown below (see diagram).

Please note: the part will flex slightly when fully tightened at the forward mounting points - this isn't an issue and will not damaged the product.

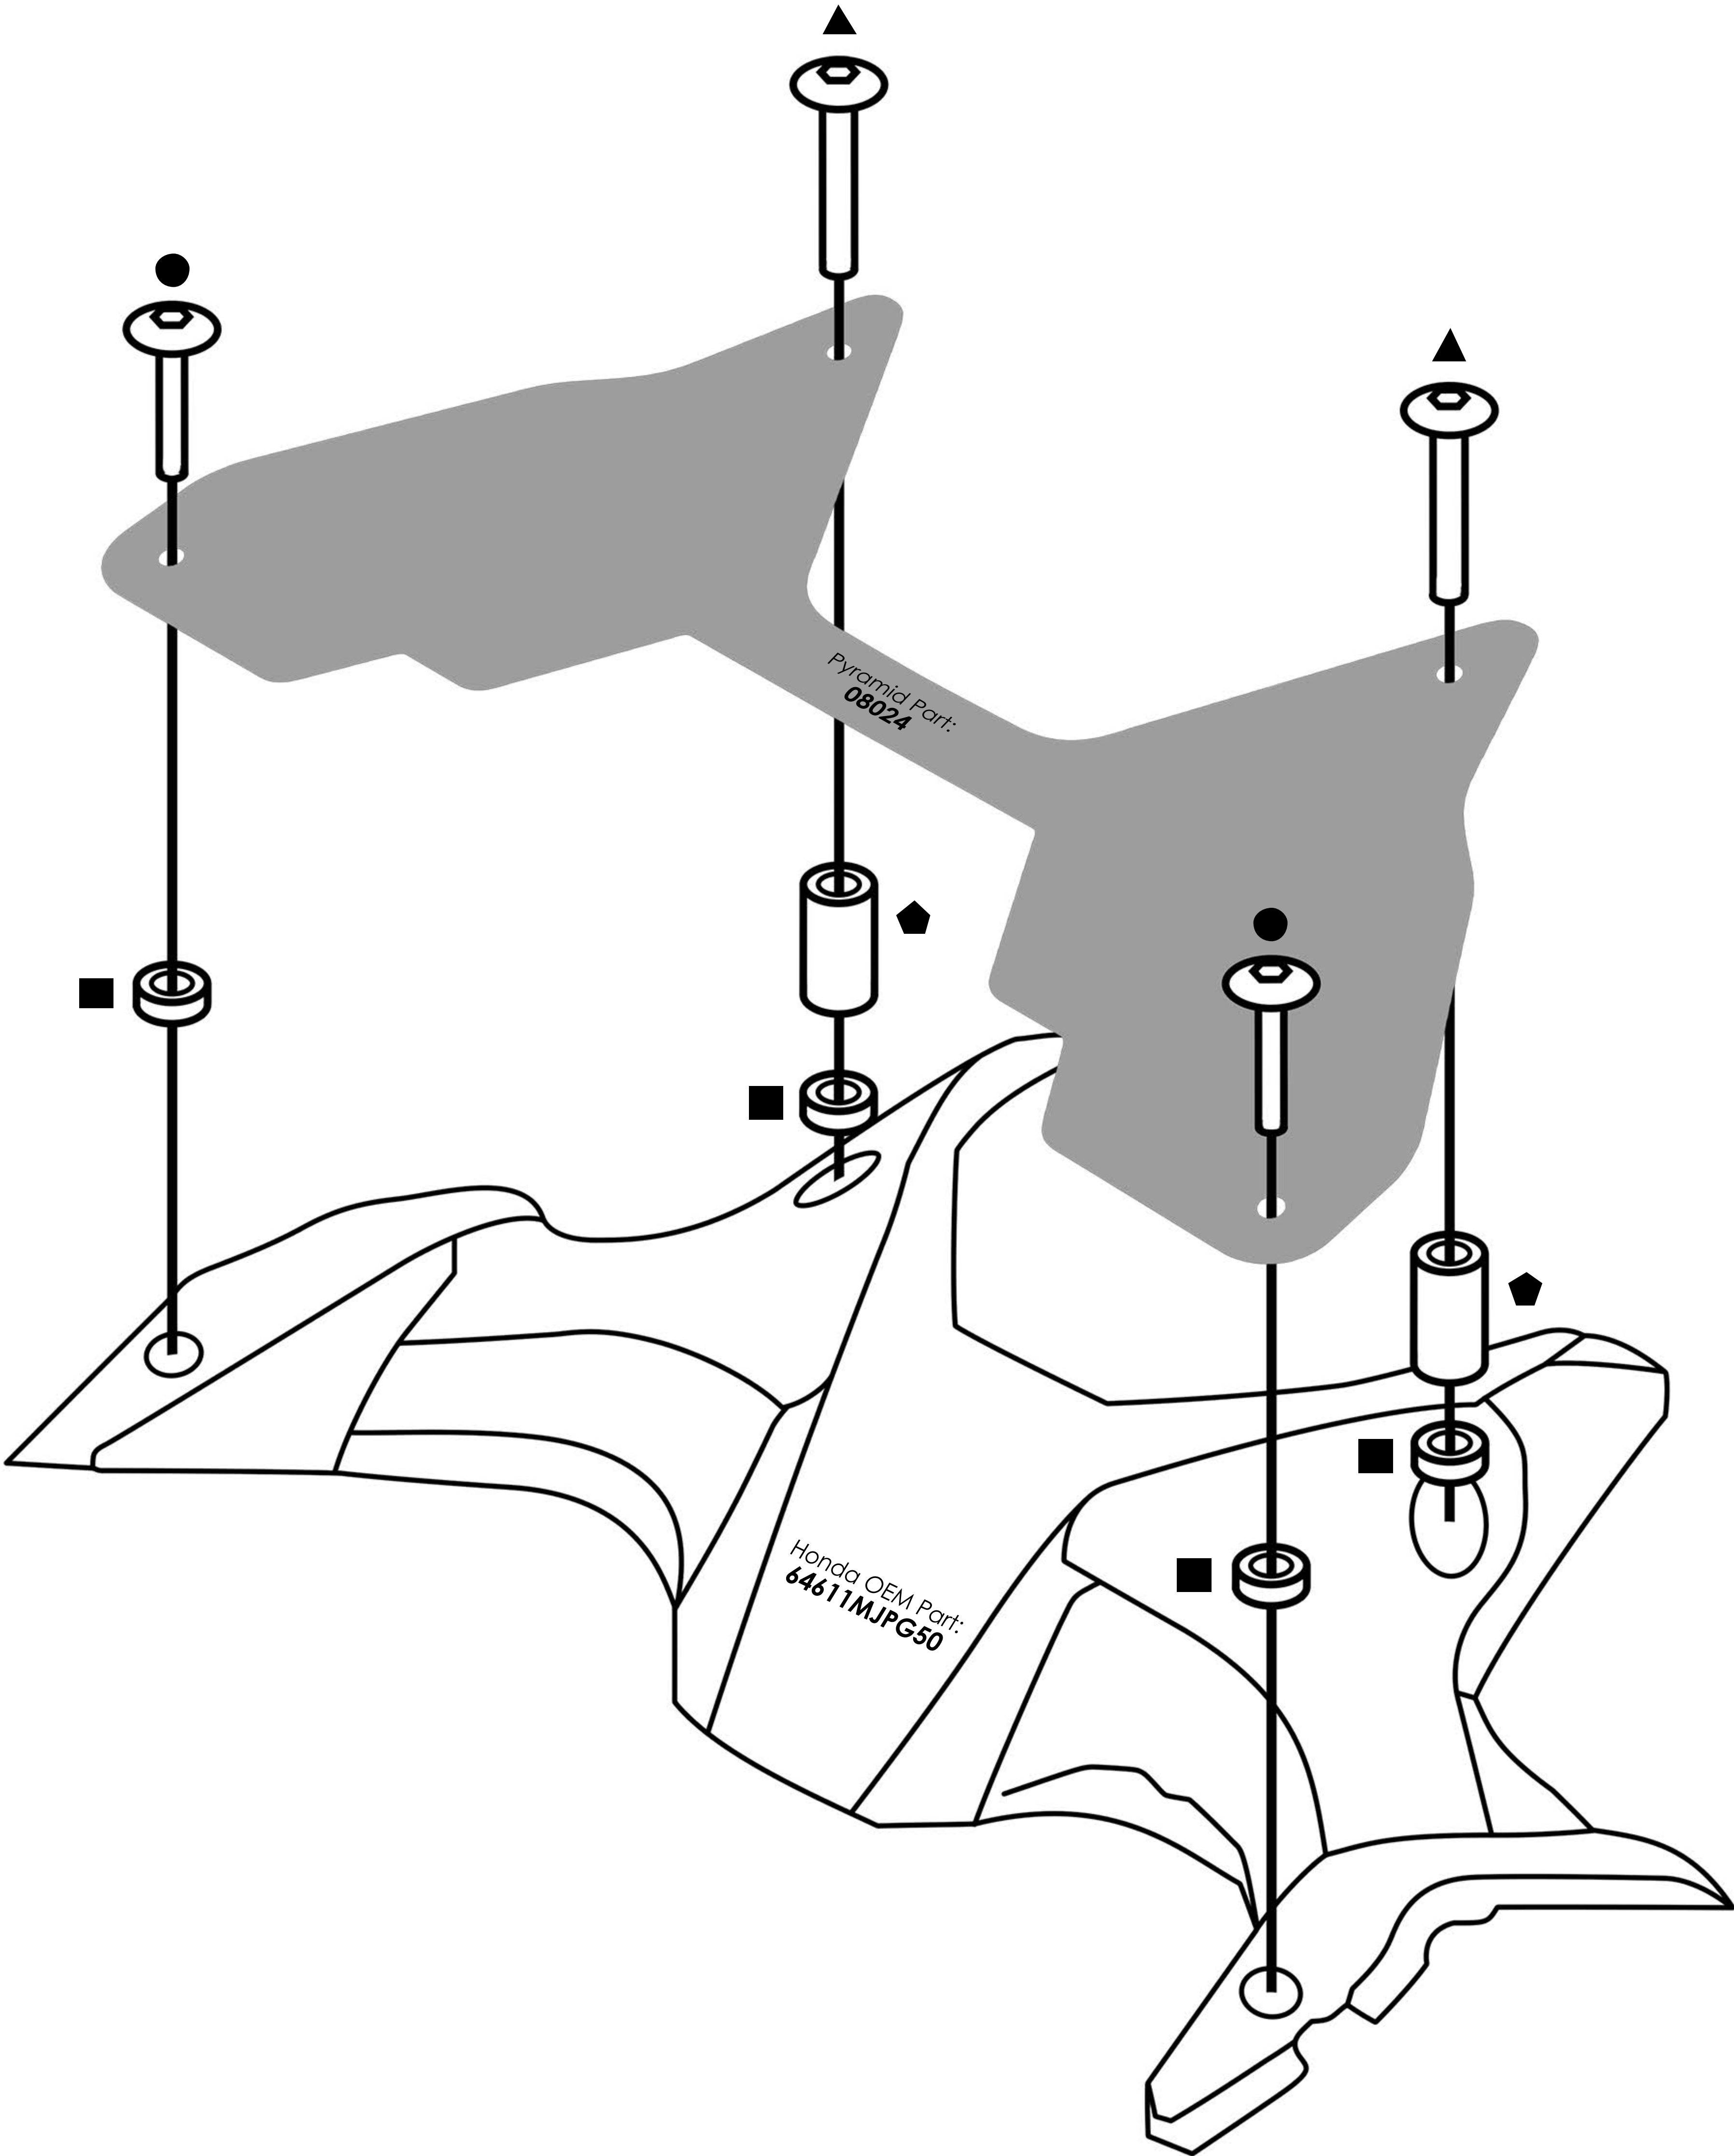

Contact us:  
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

