


DIRECTV® Under Eave Mount Installation Manual

For DIRECTV Slimline™ SYSTEMS, Model DTVUEM4


Contents

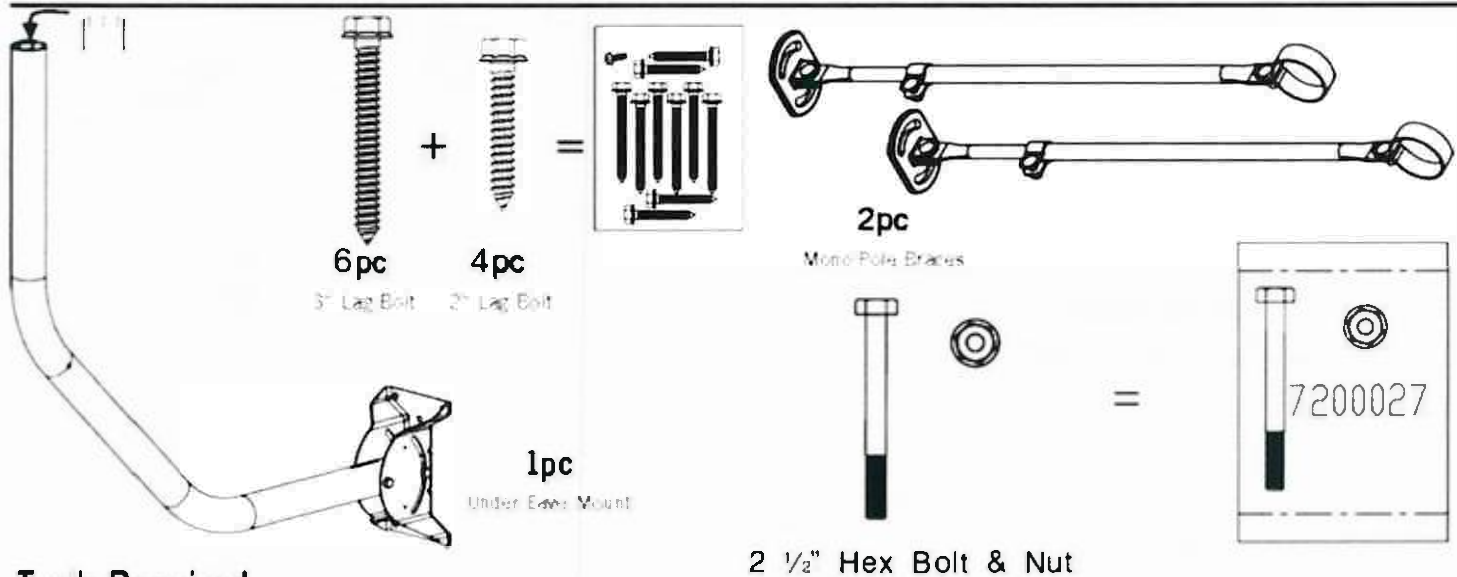


Tools Required



STEP 1 Finding Suitable Mounting Site

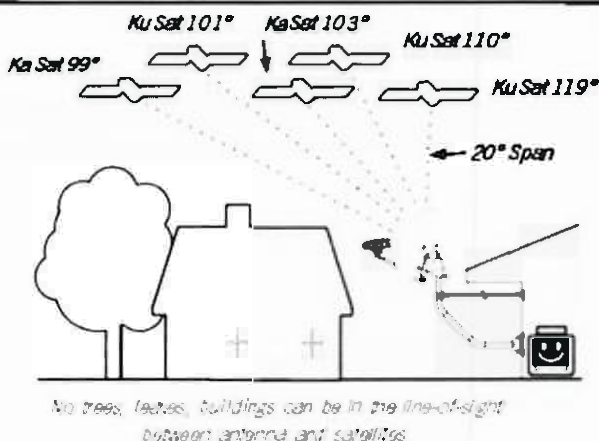


If you are on the West Coast, the satellites will be to the south-southeast.

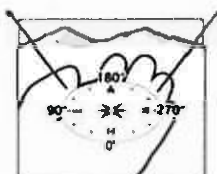

If you are on the East Coast, the satellites will be to the southwest.


STEP 2 Locate Wood Stud, Attach Base

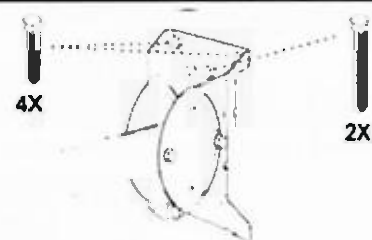

STEP 3 Align the Mast

View of bubble level on top of mast

Wrong
Right

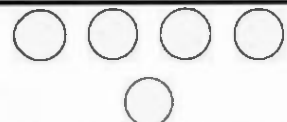


CAUTION!

If the mast is mounted in a location where it is difficult or dangerous to view the bubble level, use a small mirror or plumbing level instead.



DO NOT reach out and risk falling from roof or other high place.

STEP 4 Attach 2 Mono Pole Braces - Mount Braces As High On Mast As Possible


*****BRACES MUST BE USED TO ENSURE SAFETY*****

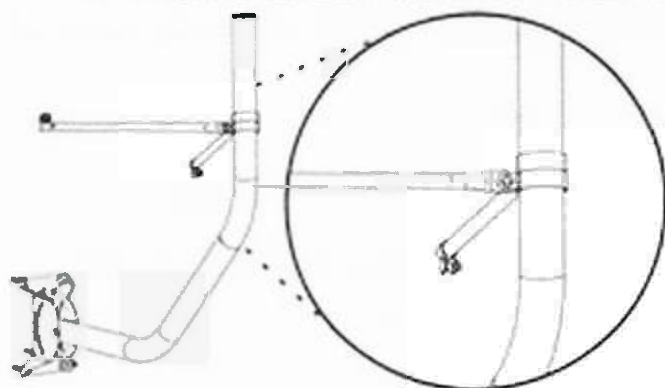



**ABOVE BEND
USE BRACE CLAMPS**

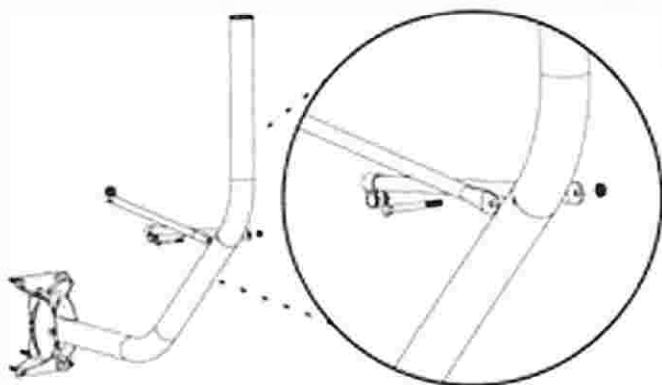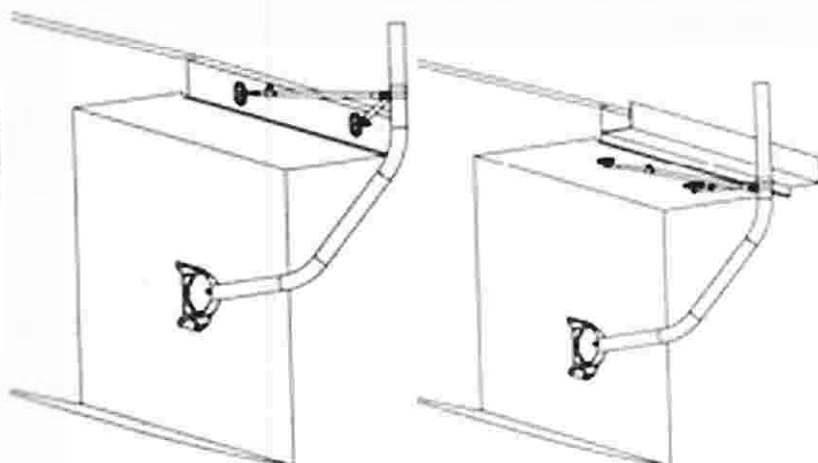

**BELOW BEND
REMOVE CLAMP(S) AND BOLT END(S) OF
MONO POLE(S) DIRECTLY TO MAST**

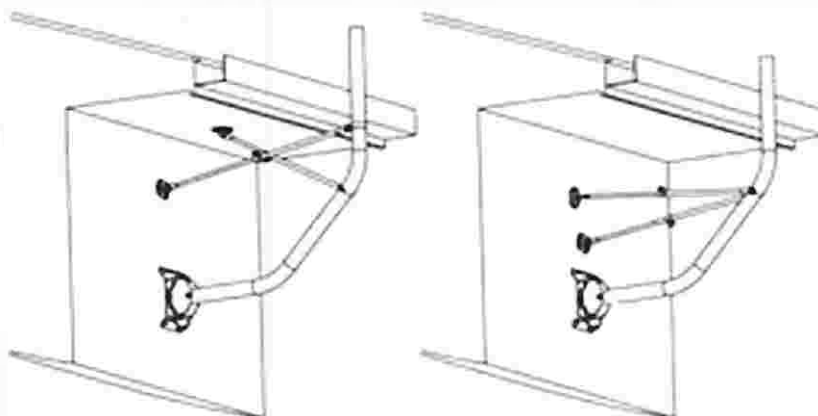

STEP 5 Mount *Slimline™* System onto Under Eave Mast, Proceed with Antenna Alignment

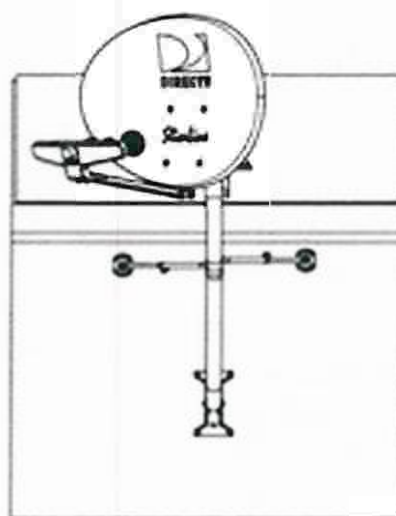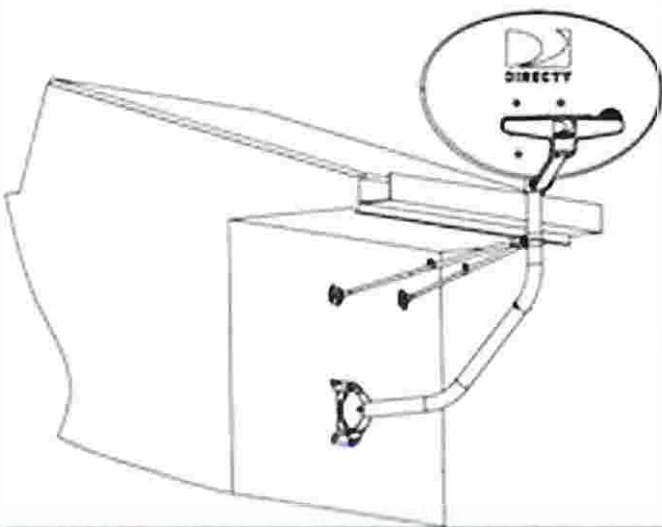

DIRECTV Under Eave Mount