



Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.

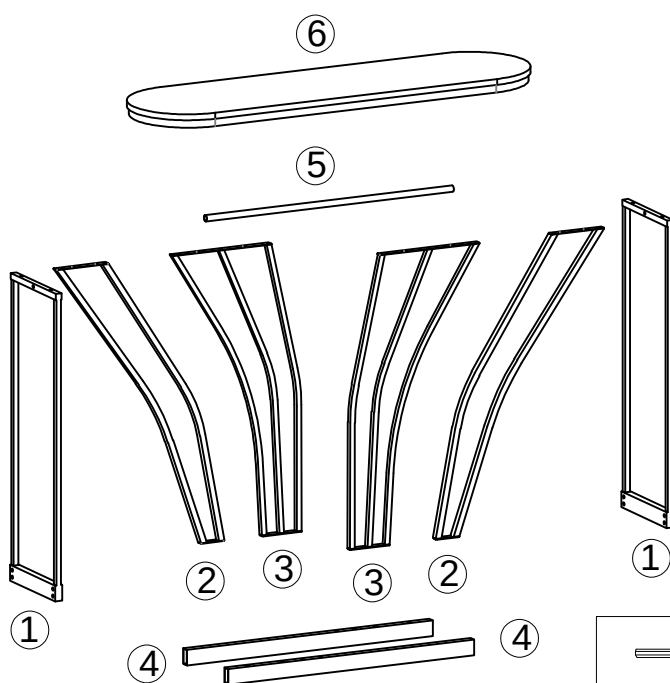

 M6×12mm (A) ×8pcs+1pc	 M6×48mm (B) ×8pcs+1pc	 M6×25mm (C) ×6pcs+1pc	 4×35mm (D) ×2pcs+1pc	 (E) ×4pcs	 (H) ×1pc	 M6×40mm (I) ×8pcs+1pc
					 Ø6×30mm (F) ×2pcs	 180×20mm (G) ×2pcs

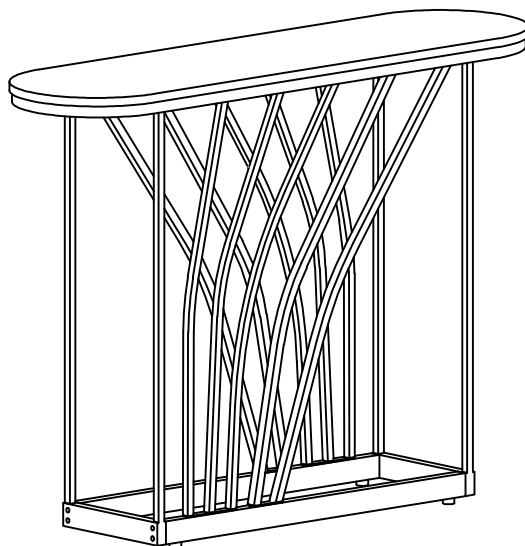


STEP 1

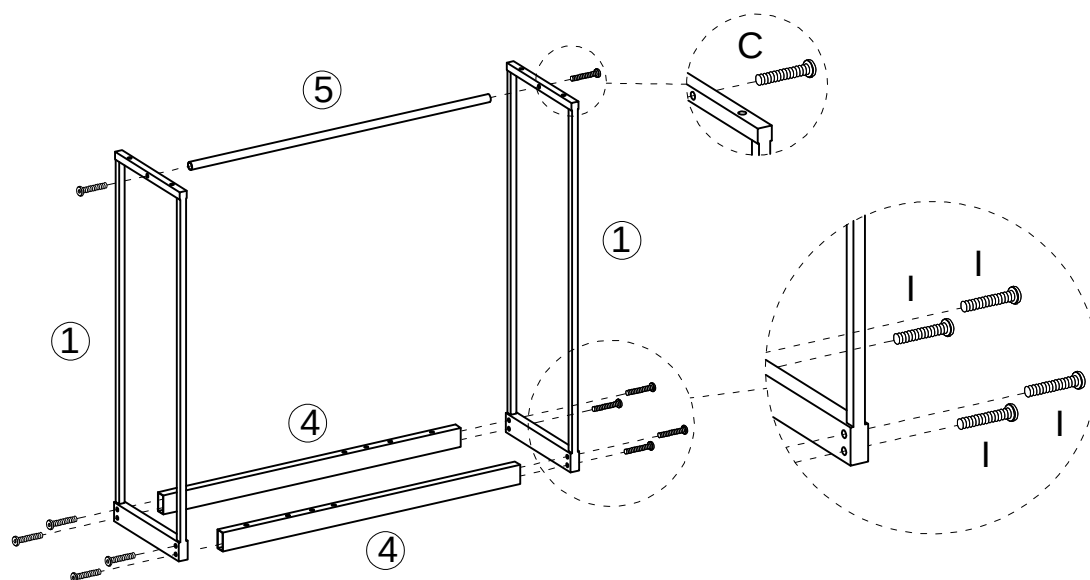

	
M6×40mm	M6×25mm
Ⓢ×8pcs	Ⓒ×2pcs


STEP 2

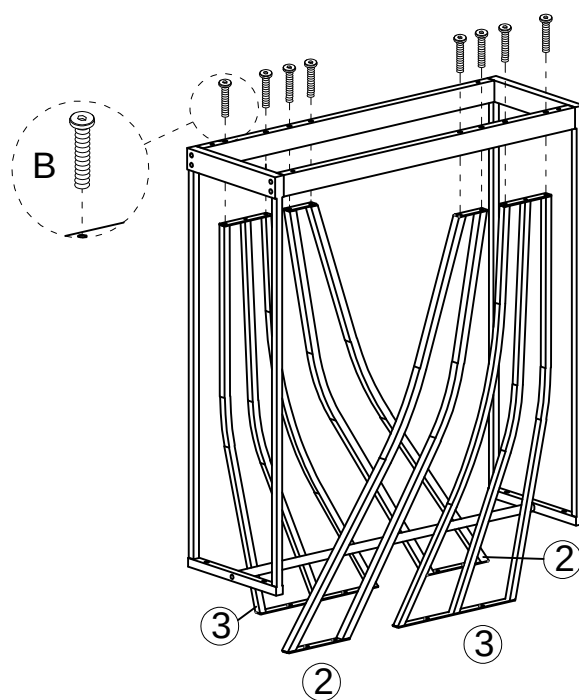


M6×48mm
Ⓑ×8pcs





STEP3

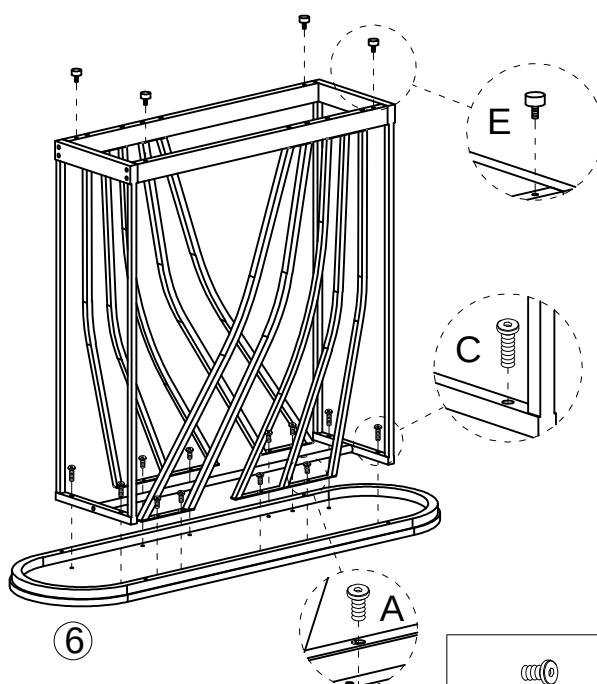

		
M6×12mm	M6×25mm	
Ⓐ×8pcs	Ⓒ×4pcs	Ⓔ×4pcs

STEP 4

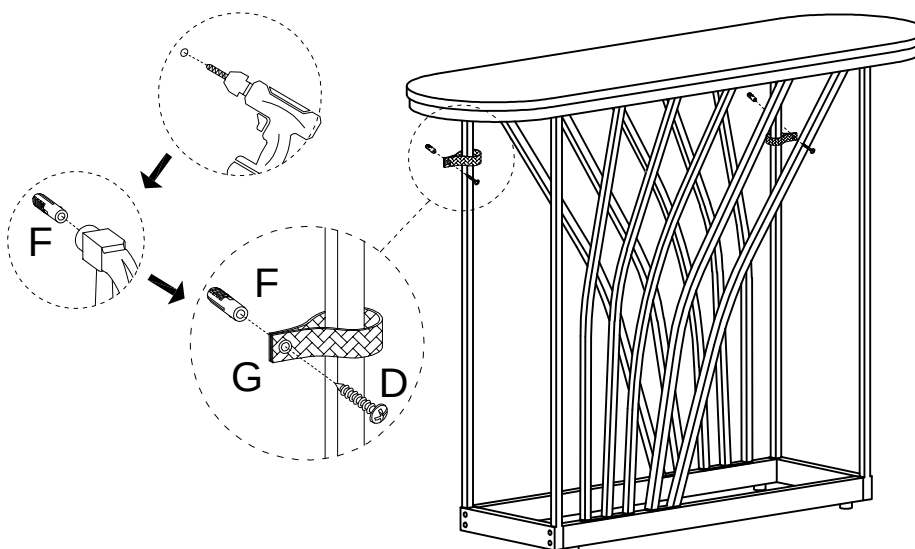

		
4×35mm	Ø6×30mm	180×20mm
Ⓓ×2pcs	Ⓕ×2pcs	Ⓖ×2pcs

We genuinely appreciate your purchase of our product. Any problem (installation or damage caused by shipping), please feel free to contact us. Our customer service will help to solve the problem for your ASAP, as your satisfaction is our final goal.

www.tribesigns.com

E-mail: support@tribesigns.com

