


HUBERT® Single-Sided Breakfast Cart

Item# 76306

ASSEMBLY INSTRUCTIONS

COMPONENTS

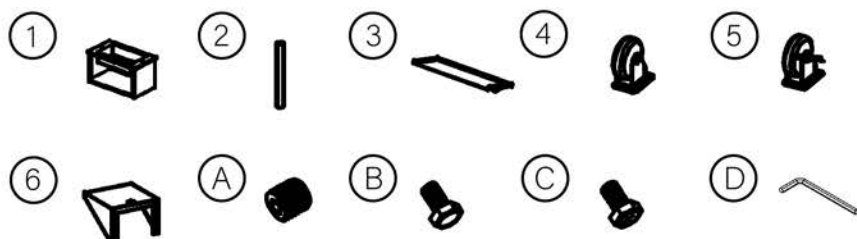


- | | |
|------------------------------|-------------------|
| 1. Cabinet | 6. Side Shelf |
| 2. Support Tubing x 2 | A. Bolt M8-A x 8 |
| 3. Slant Shelf | B. Bolt M8-B x 16 |
| 4. Swivel Caster x 2 | C. Bolt M6-C x 6 |
| 5. Locking Swivel Caster x 2 | D. Allen Wrench |

TOOLS NEEDED (NOT INCLUDED):


- | | |
|---------------------------|-------------|
| Phillips Head Screwdriver | 14mm Wrench |
| | |

Be sure to identify and confirm you have received all parts before assembly.


- 1 Lay Cabinet upside down and insert casters into the hat channel using Bolt B.

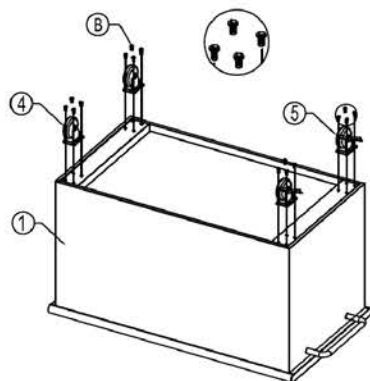

- 2 Turn the cart upright. Insert Support Tubing into counter and secure with Bolt A.

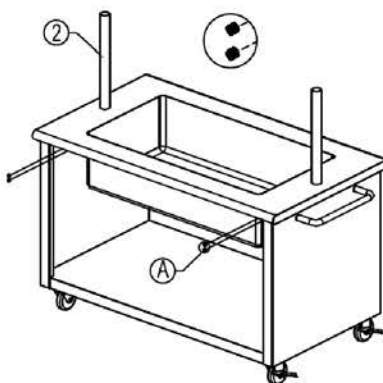

- 3 Insert Support Tubing into brackets on underside of Slant Shelf and secure with Bolt A.

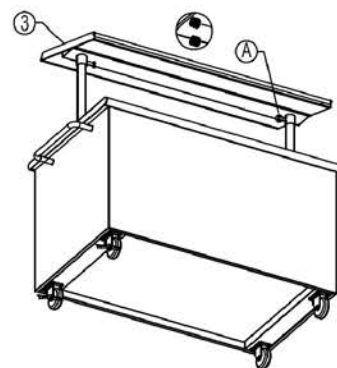

- 4 Install Side Shelf to side of Cabinet opposite handle, and secure with Bolt C.

