


IA3PR/FL KammBar





Instructions

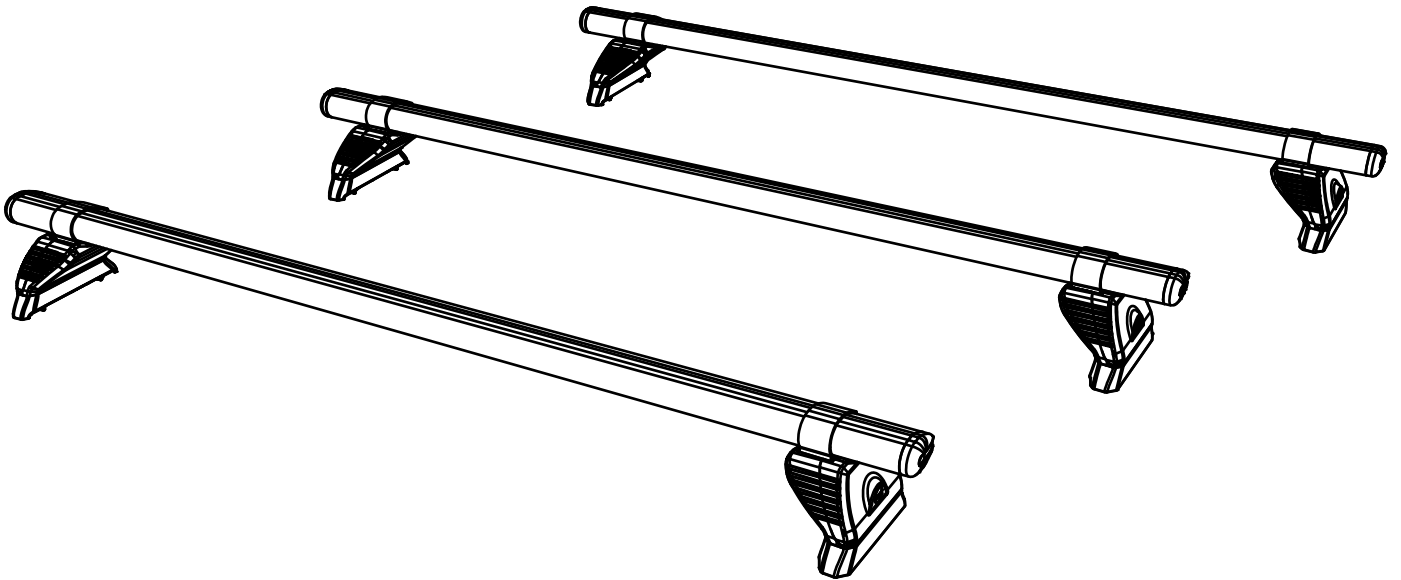


CITY CRASH (✓)

According to ISO/ PAS 11154:2006




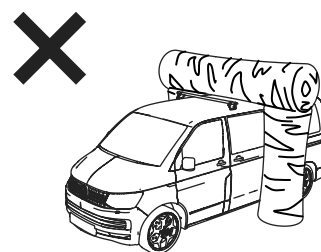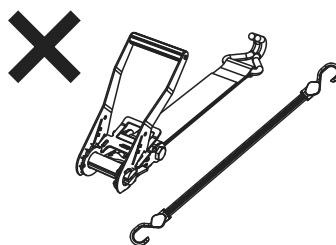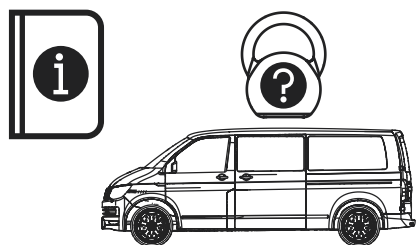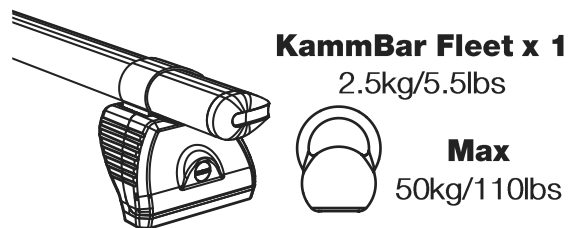


KammBar Pro

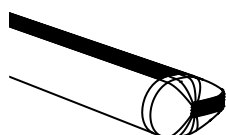


SA422 x 3 ☐



SA070 x 4 ☐

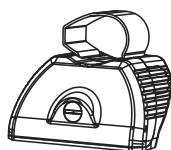


SA397 x 3 ☐

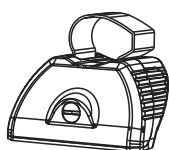


SA398 x 3 ☐


KammBar Fleet

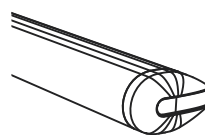


SA396 x 3 ☐



C04 x 3
optional upgrade

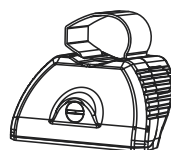


SA397 x 3 ☐

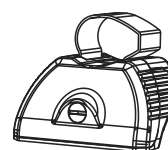


SA398 x 3 ☐


Fitting Kit




PS180 x 6 ☐

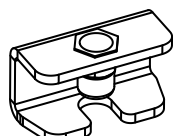


SA068 x 6 ☐




PS047 x 6 ☐

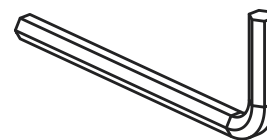


FT01 x 1 ☐

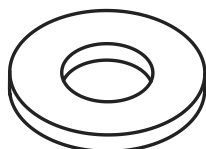

FW002 (M8) x 6 ☐

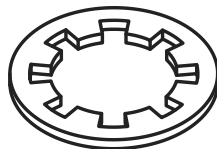

FW009 (M8) x 6 ☐




FS067
(M8 x 20) x 6


☐




1.

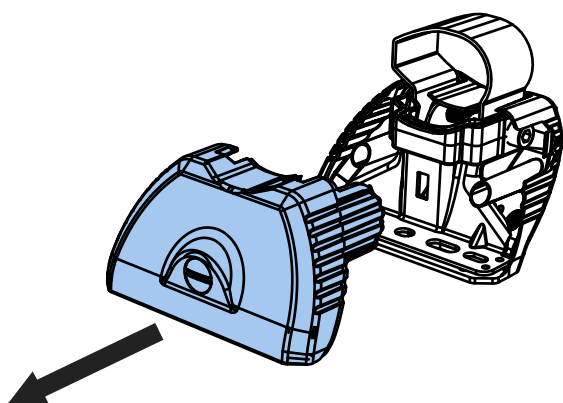


2.

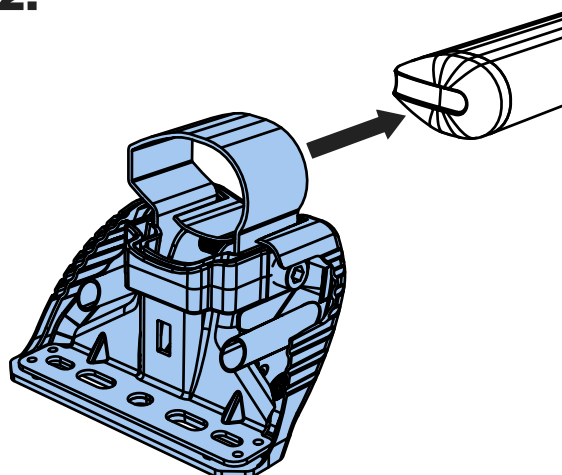


3.




SA397
PS180




SA397
PS180




SA397
PS180

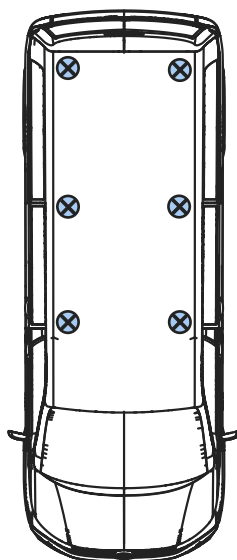


SA398
PS180




SA398
PS180




SA398
PS180




4.

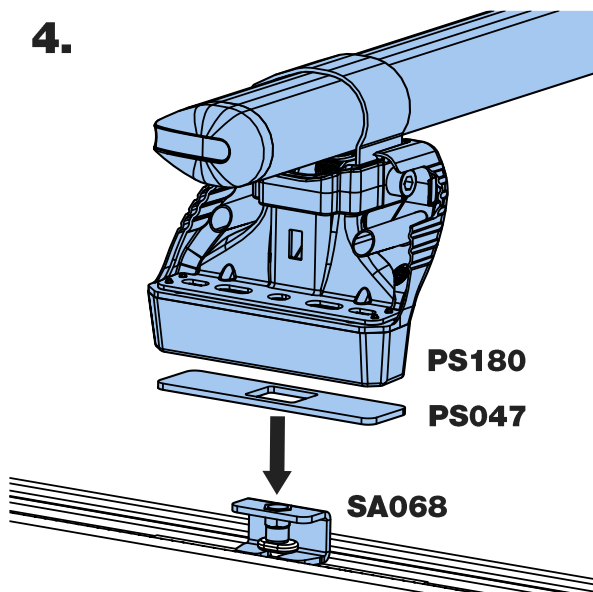

5.

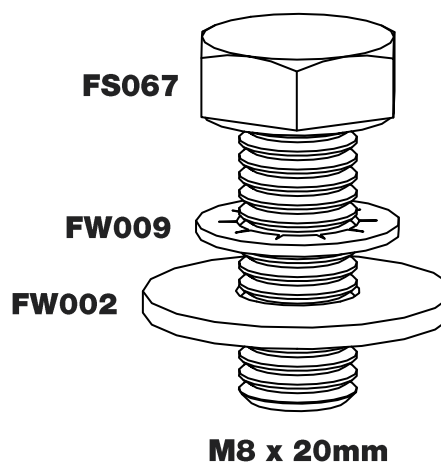


6.

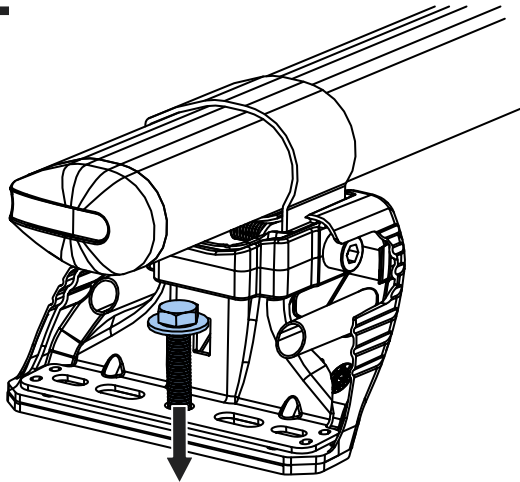


PS180 + M8 x 20mm


7.

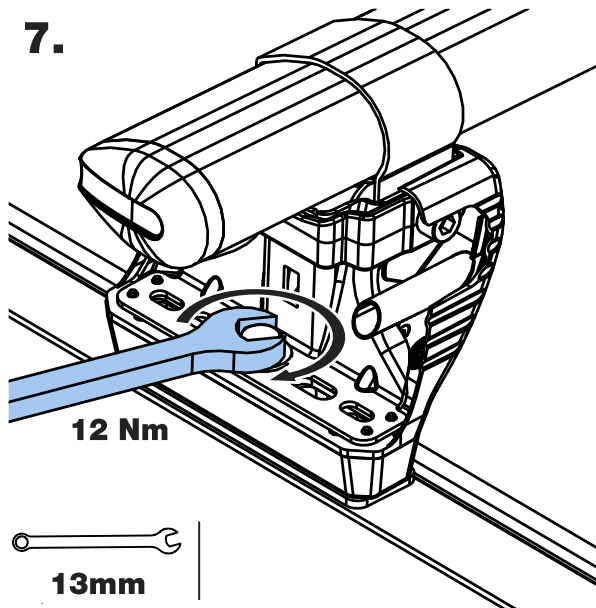


8.

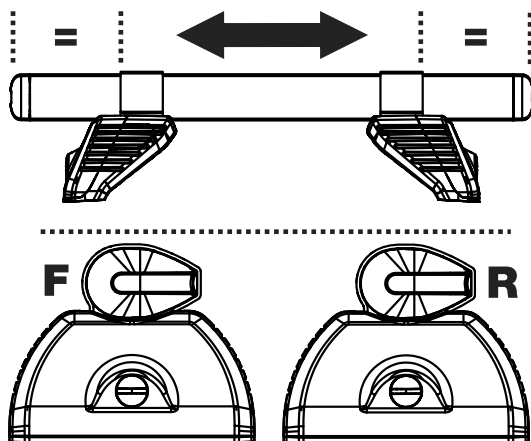

9.

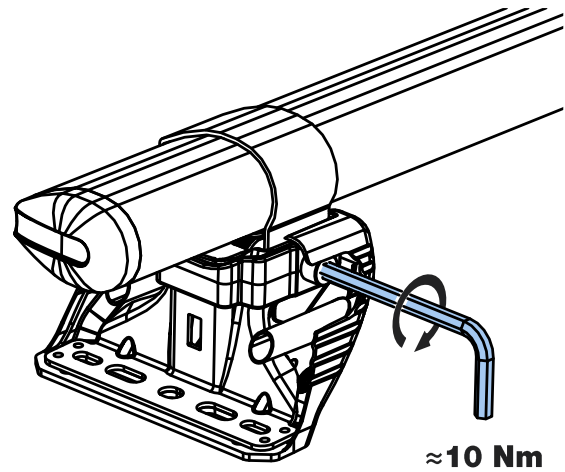

10.

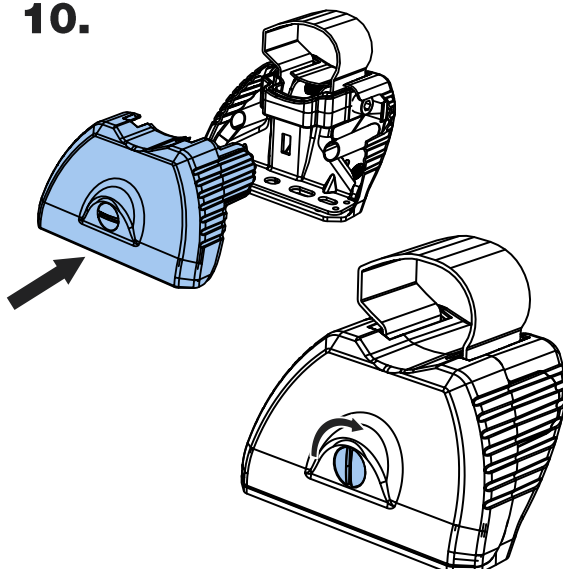

11.

