

ASSEMBLY INSTRUCTIONS



Fine Furniture for every stage of life

302
Bunkbed T/T/T



ITEM: 302

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

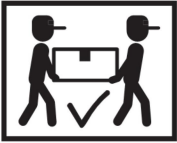

ASSEMBLY TIME

90 MINUTES

PARTS IDENTIFICATION

A-LEG 1		2PCS	B-LEG 2		2PCS
C-RAIL 1		1PC	D-RAIL 2		2PCS
E-RAIL 3		3PCS	F-LADDER 1		1PC
G-LADDER 2		1PC	H-TOP HEADBOARD		2PCS
I-GUARDRAIL 1		2PCS	J-GUARDRAIL 2		2PCS
K-SLAT		66PCS	L-GUARDRAIL 3		3PCS
M-GUARDRAIL 4		1PC	N-CONNECTING ROD 1		1PC
O-CONNECTING ROD 2		1PC	P-SLAT CONNECTOR		132PCS
Q-SLAT SPACER		42PCS			

HARDWARE IDENTIFICATION


Z - HARDWARE

1	BOLT (Ø 1/4"x20 MM)		48PCS	3	BOLT (Ø 1/4"x 65MM)		5PCS
2	BOLT (Ø 1/4"x35 MM)		22PCS	4	ALLEN WRENCH (1/4")		2PCS


ITEM: 302

ASSEMBLY INSTRUCTIONS


STEP 1

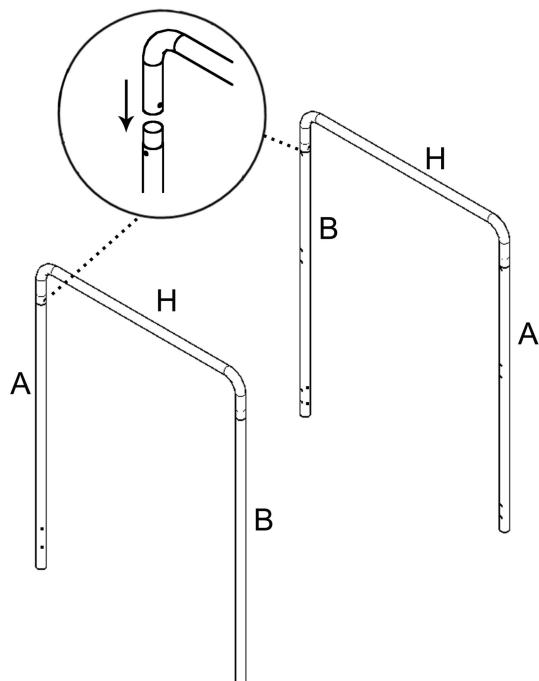


STEP 2

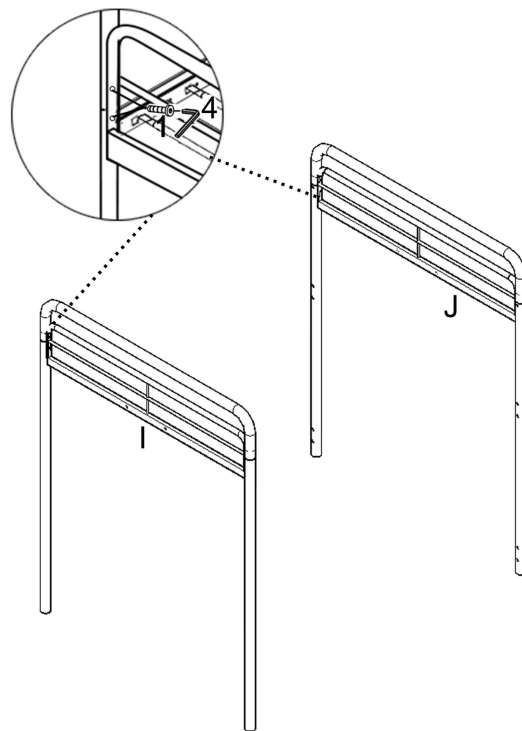

STEP 3

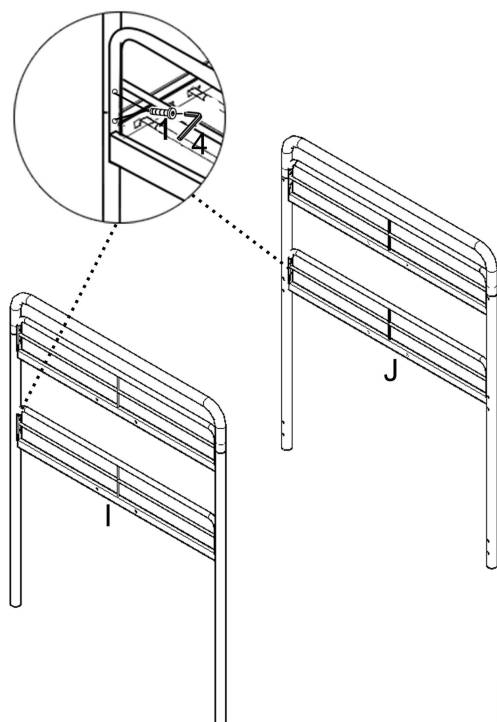


STEP 4

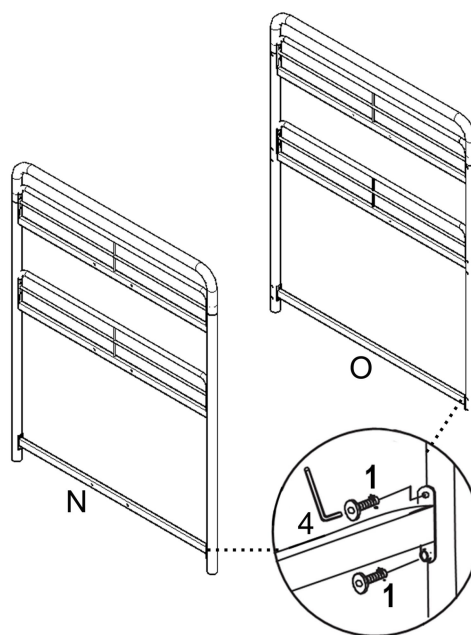


ITEM: 302

ASSEMBLY INSTRUCTIONS


STEP 5

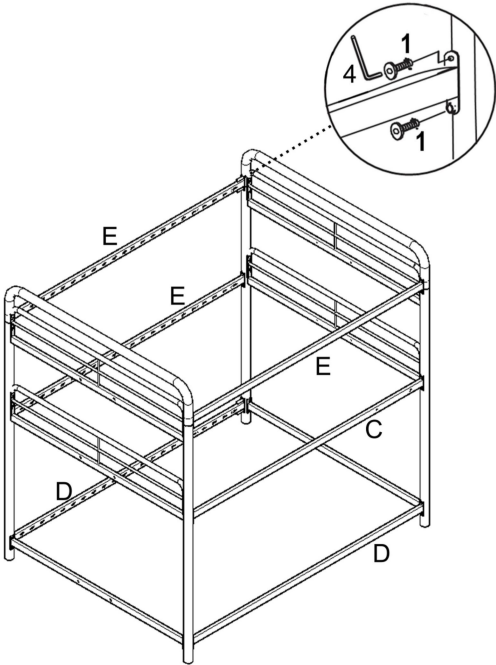


STEP 6

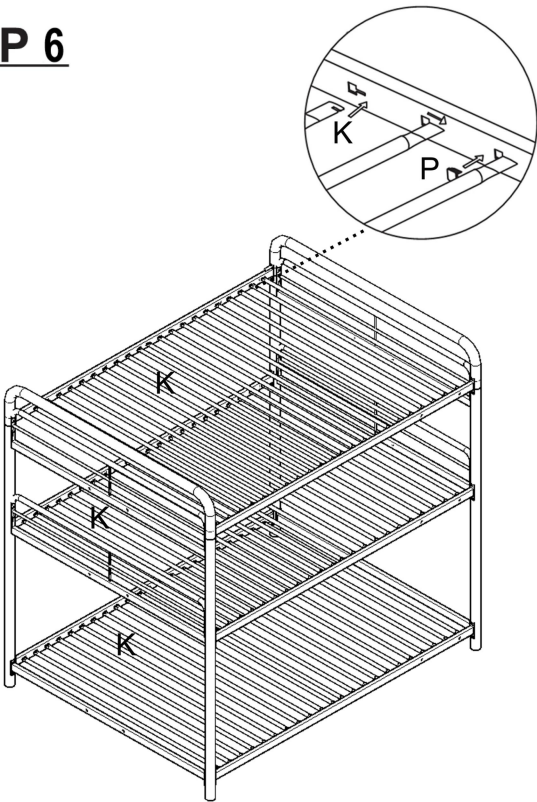

STEP 7

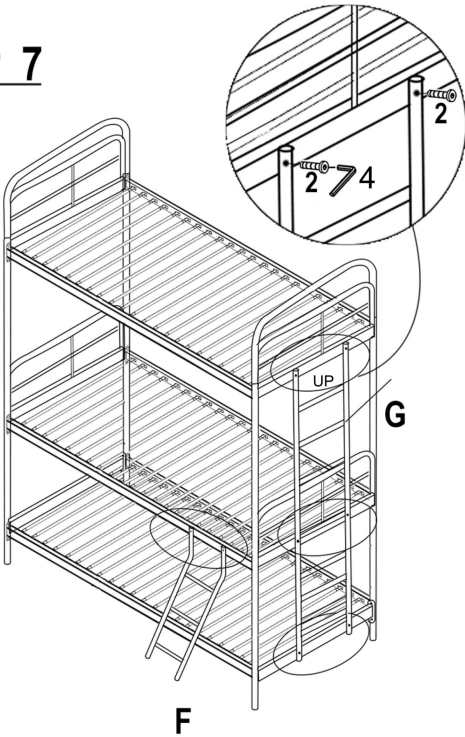


STEP 8

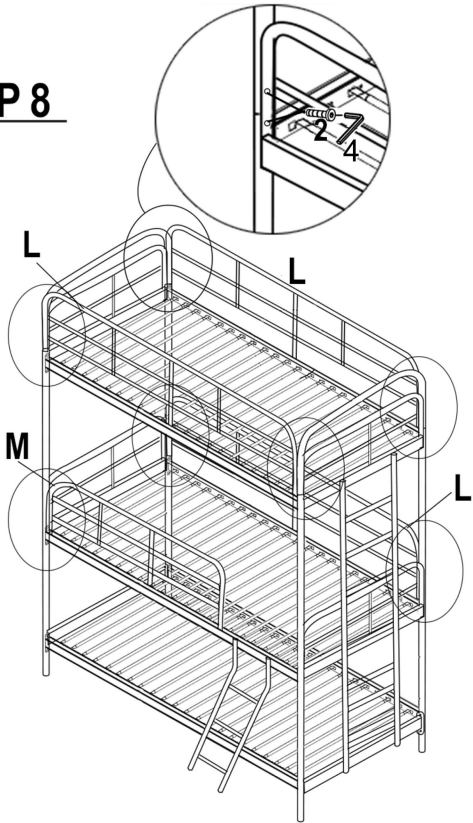


ITEM: 302

ASSEMBLY INSTRUCTIONS


STEP9

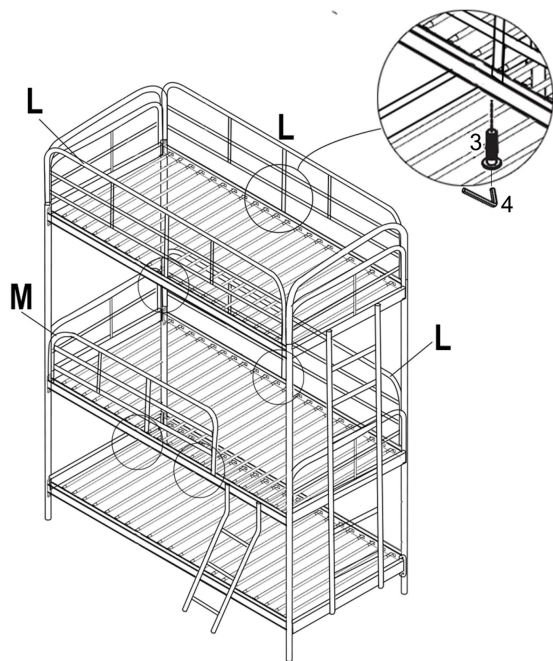

STEP10

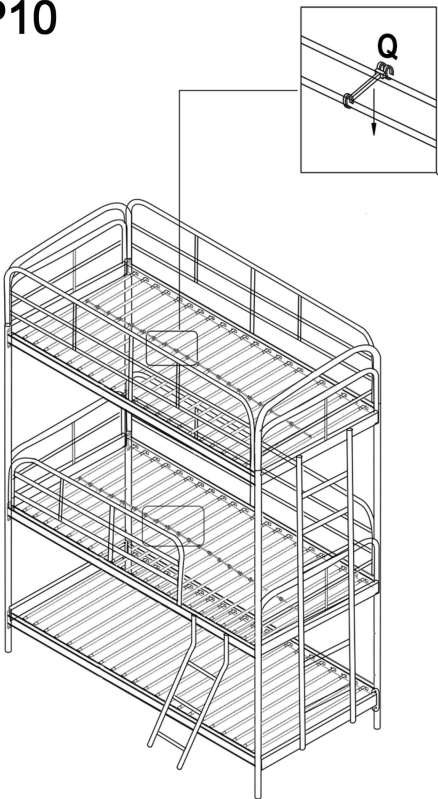


END

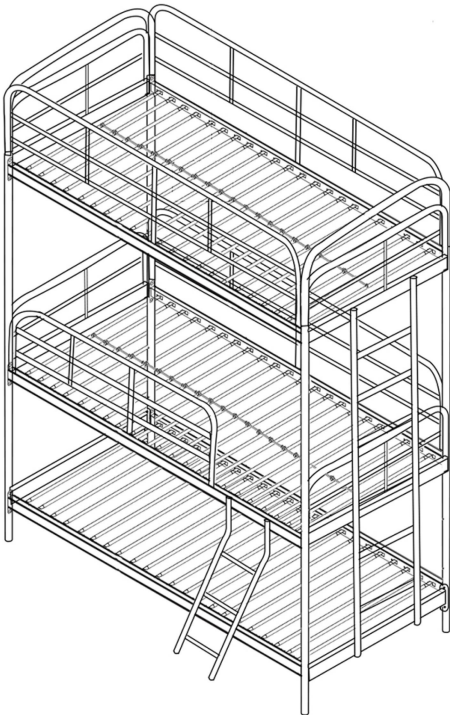

ITEM: 302

ASSEMBLY INSTRUCTIONS

DIMENSIONAL DRAWING

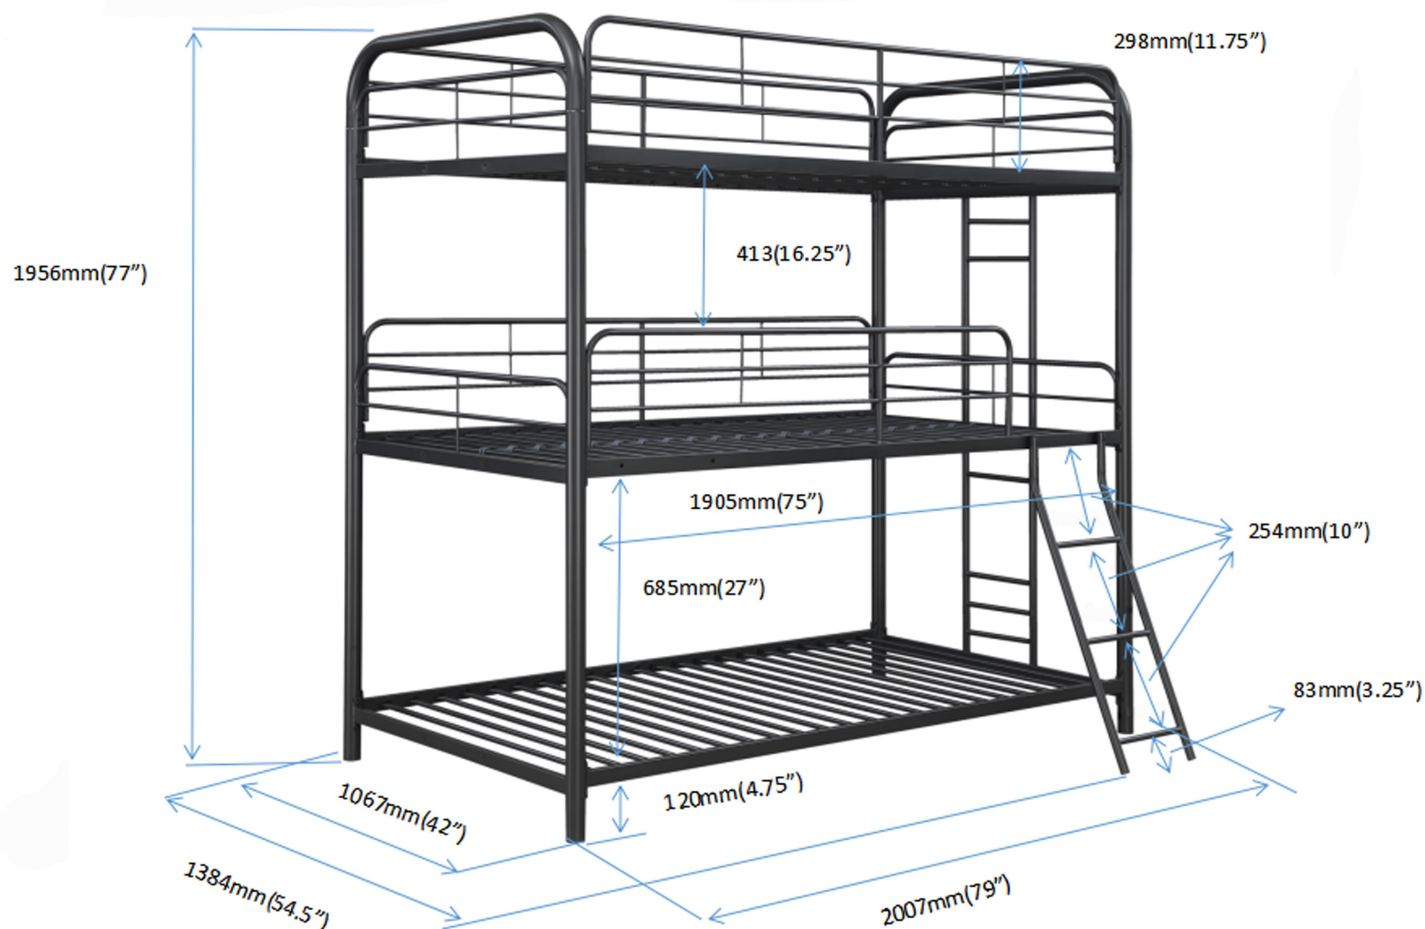

Note : Dimension tolerance $\pm 5\%$

