


ULINE

S-1959, S-1960, S-1961
S-1962, S-7884, S-8108
S-8109, S-13648


TRIANGLE TUBES

1-800-295-5510
uline.com

Para Español, vea página 2.
Pour le français, consulter la page 3.

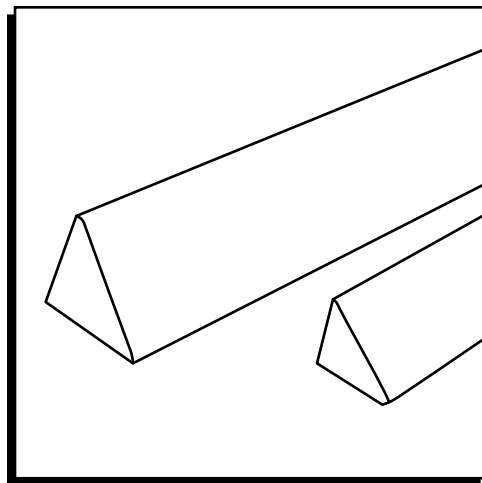

ASSEMBLY

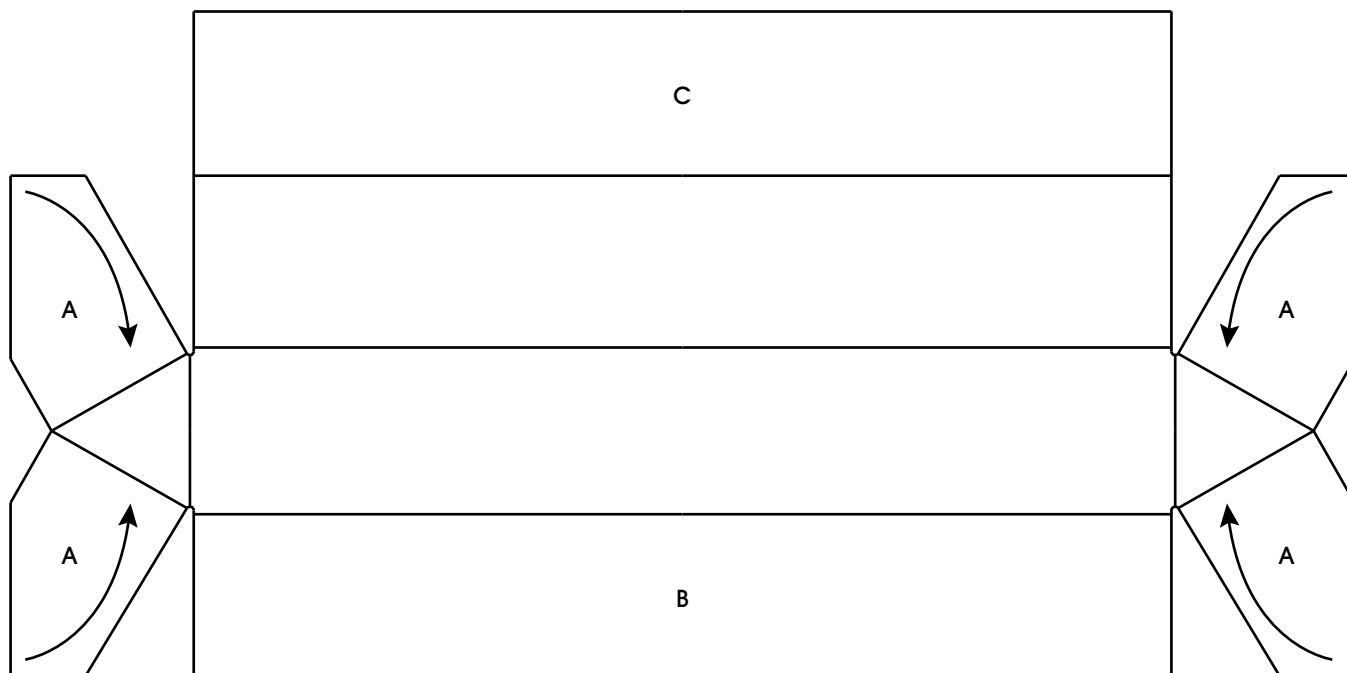

1. Fold A in towards center.
2. Roll panels around A.
3. Tape B and C together.




ULINE


S-1959, S-1960, S-1961
S-1962, S-7884, S-8108
S-8109, S-13648

TUBOS TRIANGULARES

800-295-5510
uline.mx


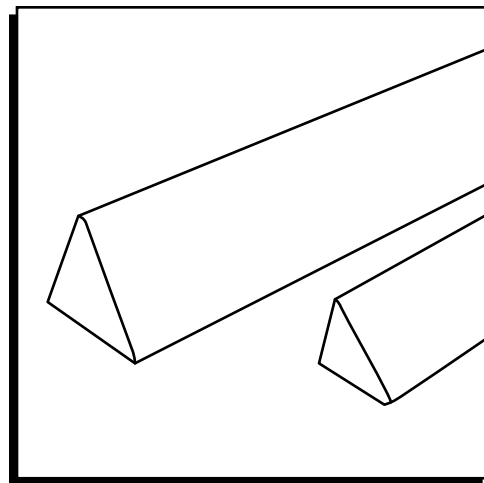


ENSAMBLE

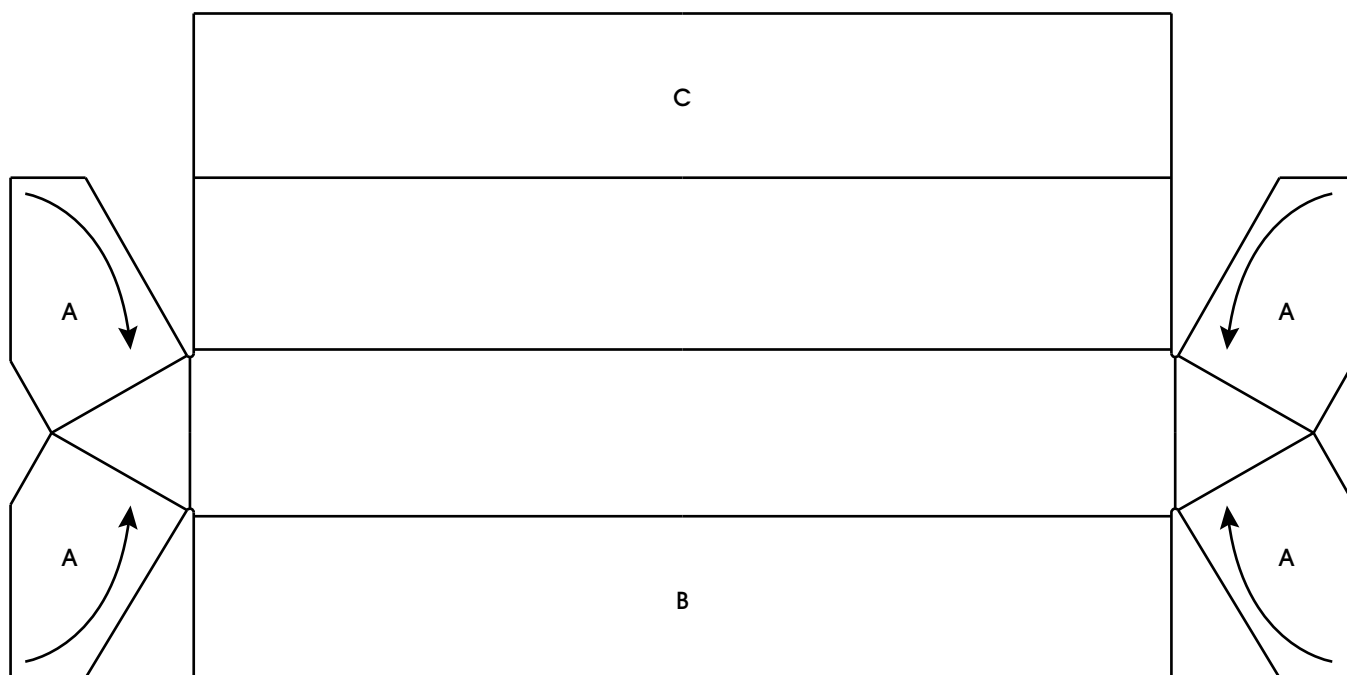

1. Doble A hacia el centro.
2. Enrolle los paneles alrededor de A.
3. Junte B y C y pegue con cinta adhesiva.

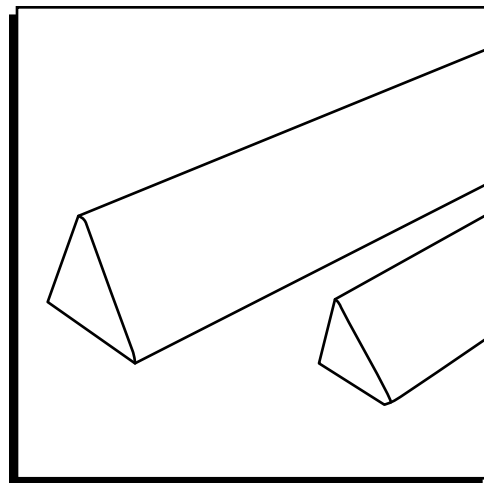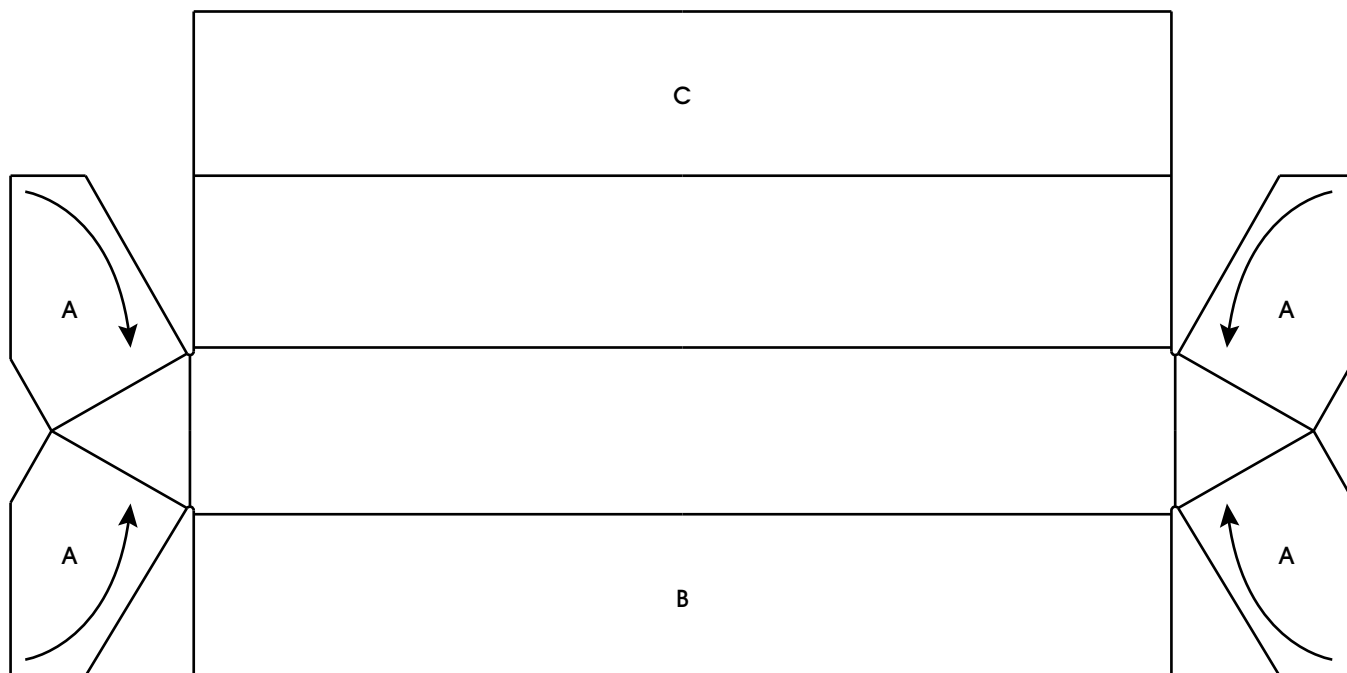

TUBES TRIANGULAIRES**MONTAGE**

1. Pliez les onglets A vers le centre.
2. Enroulez les panneaux autour des onglets A.
3. Pliez et collez les côtés B et C ensemble.

