


Under Counter Inline Conversion Kit

This kit is used specifically for converting a single stage countertop unit to an under counter unit that runs inline with the existing cold water line.

Contents

Your kit includes
the following:

- (a) bracket w/4 screws
- (b) brass fittings (2)
- (c) stainless steel 30" flex hose with 3/8" female ends

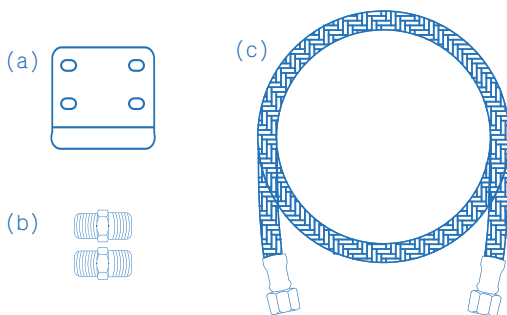


Installing Your Kit

1. Uninstall countertop unit from faucet.
2. Remove base from countertop unit.
3. Install bracket(a) in place of countertop base.

4. Remove spout and existing inlet fitting.
5. Install new lead free brass fittings(b) using Teflon tape (about 2 wraps per fitting)

6. Turn off cold water supply under sink.
7. Remove existing line from shutoff valve.
8. Install flex hose(c)
9. Reconnect line (d)

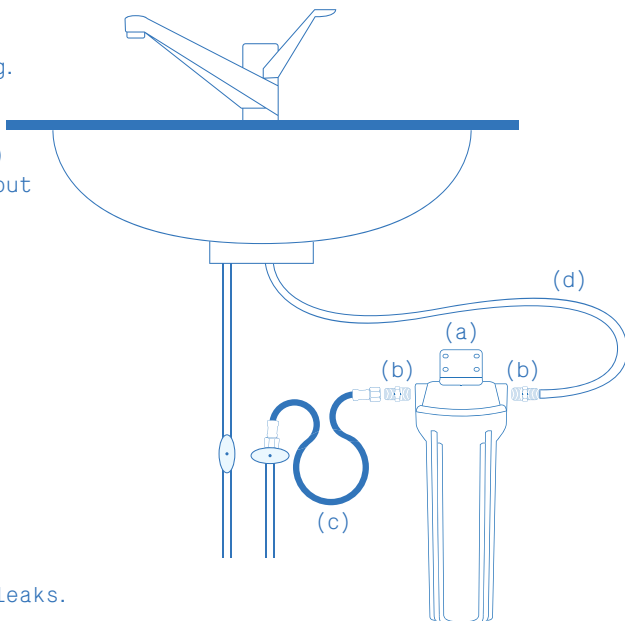

*Periodically check
installation for any leaks.