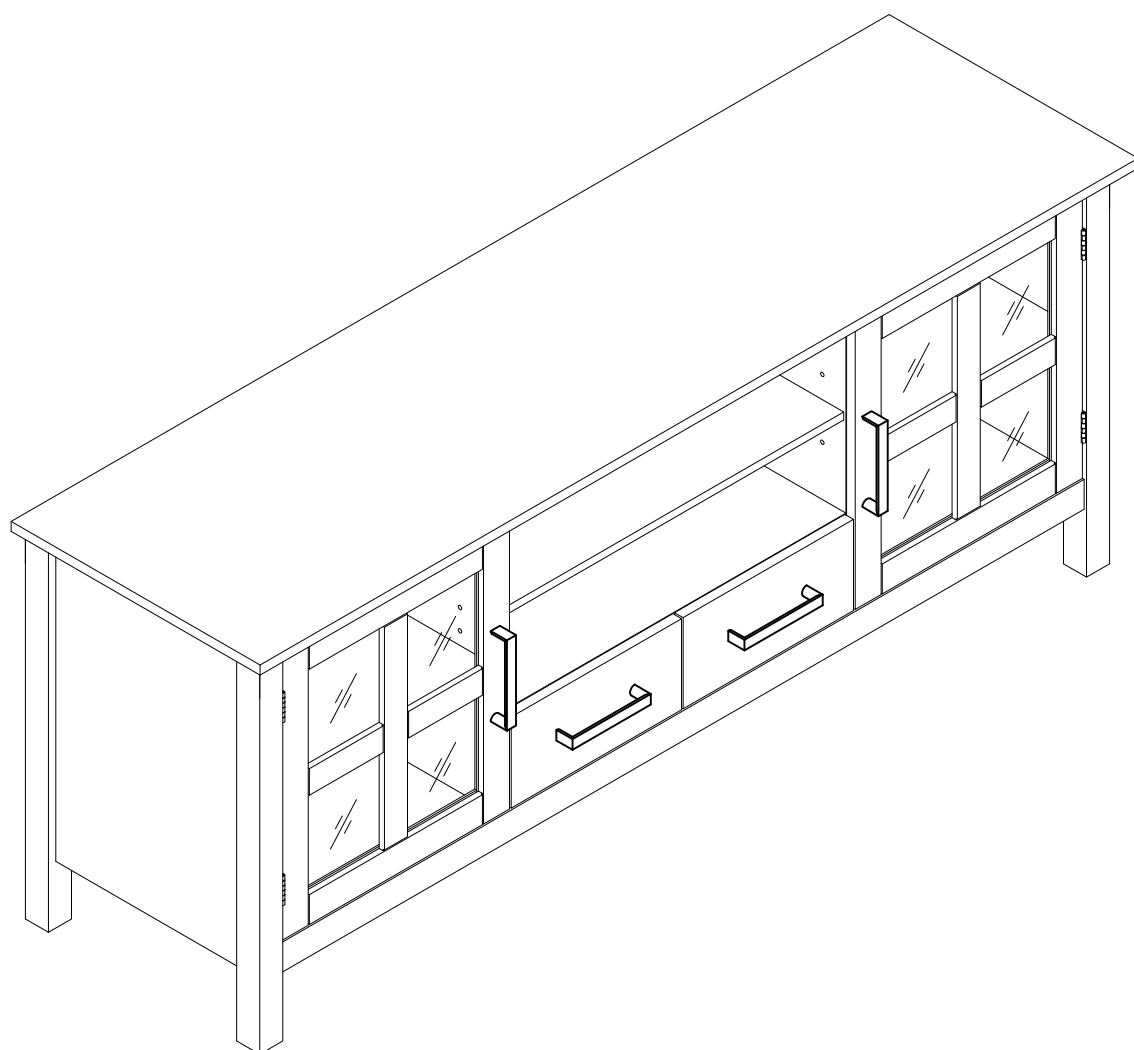


ASSEMBLY INSTRUCTION

Page 1 of 16



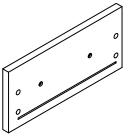


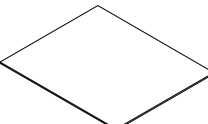

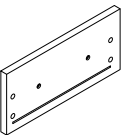
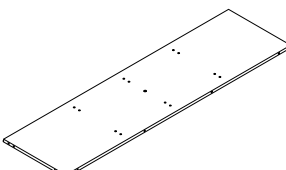
MADE IN CHINA



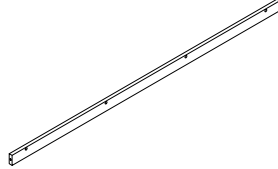
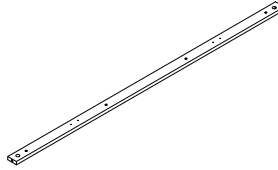
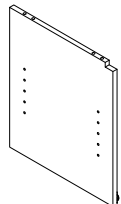
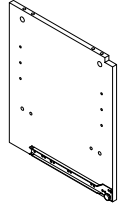
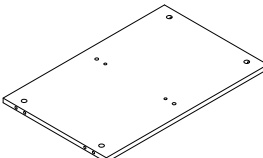
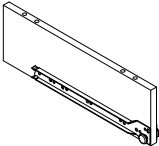
ASSEMBLY INSTRUCTION

Page 2 of 16

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Left drawer front		1
2	Drawer left side		2
3	Drawer right side		2
4	Drawer bottom		2
5	Drawer back		2
6	Right drawer front		1
7	Bottom panel		1

Part List:

ITEM	DESCRIPTION	PART	QTY
8	Apron		1
9	Crosspiece		1
10	Left middle panel		1
11	Right middle panel		1
12	Fixed shelf		1
13	Divider		1
14	Left side panel		1


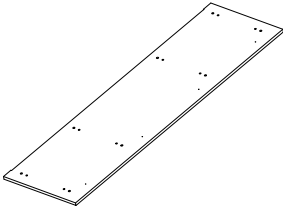
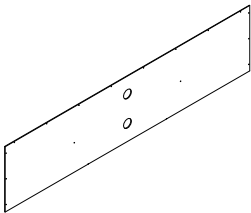
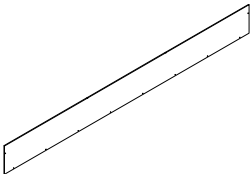

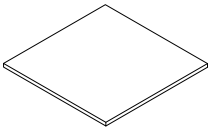
MADE IN CHINA



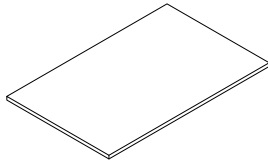
ASSEMBLY INSTRUCTION

Page 3 of 16

Part List:

ITEM	DESCRIPTION	PART	QTY
15	Right side panel		1
16	Top panel		1
17	Upper back panel		1
18	Lower back panel		1
19	Left door		1
20	Right door		1
21	Side adjustable shelf		2

Part List:

ITEM	DESCRIPTION	PART	QTY
22	Middle adjustable shelf		1
23	Leg		1
24	Left Leg (Front)		1
25	Left Leg (Back)		1
26	Right Leg (Front)		1
27	Right Leg (Back)		1




MADE IN CHINA




ASSEMBLY INSTRUCTION

Page 4 of 16

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		32
B	Camlock		32
C	Wooden dowel	 Φ8*30mm	26
D	Bolt	 Φ1/4"*1 1/8"	1
E	Allen wrench		1
F	Flat head screw	 Φ4*25mm	12
G	Handle		4

Hardware List:

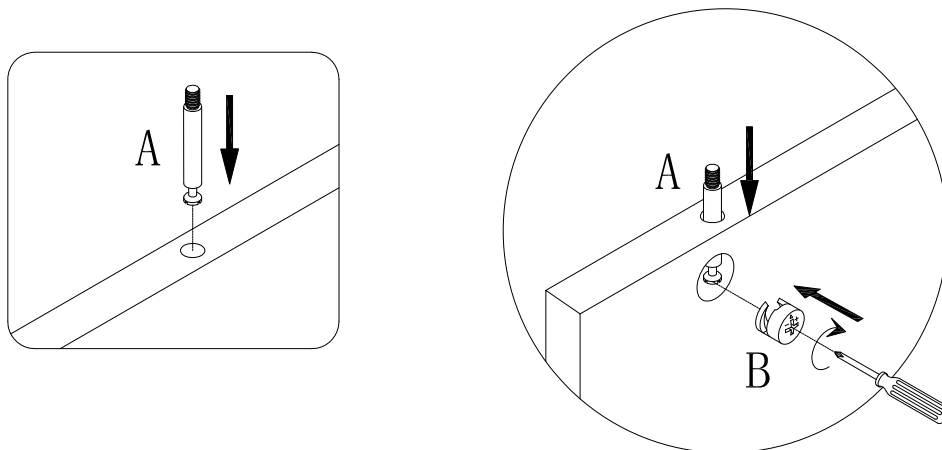
ITEM	DESCRIPTION	PART	QTY
H	Machine screw	 Φ5/32"*3/4"	8
I	Magnet		2
J	Wood screw	 Φ3*15mm	4
K	Wood screw	 Φ3*12mm	8
L	Back screw	 Φ3*12mm	28
M	Shelf support		12
N	Screw	 Φ4*45mm	6

MADE IN CHINA



- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)



Screw camlock bolt (A) to wood part.


Do not assemble camlock (B) unless instructed.

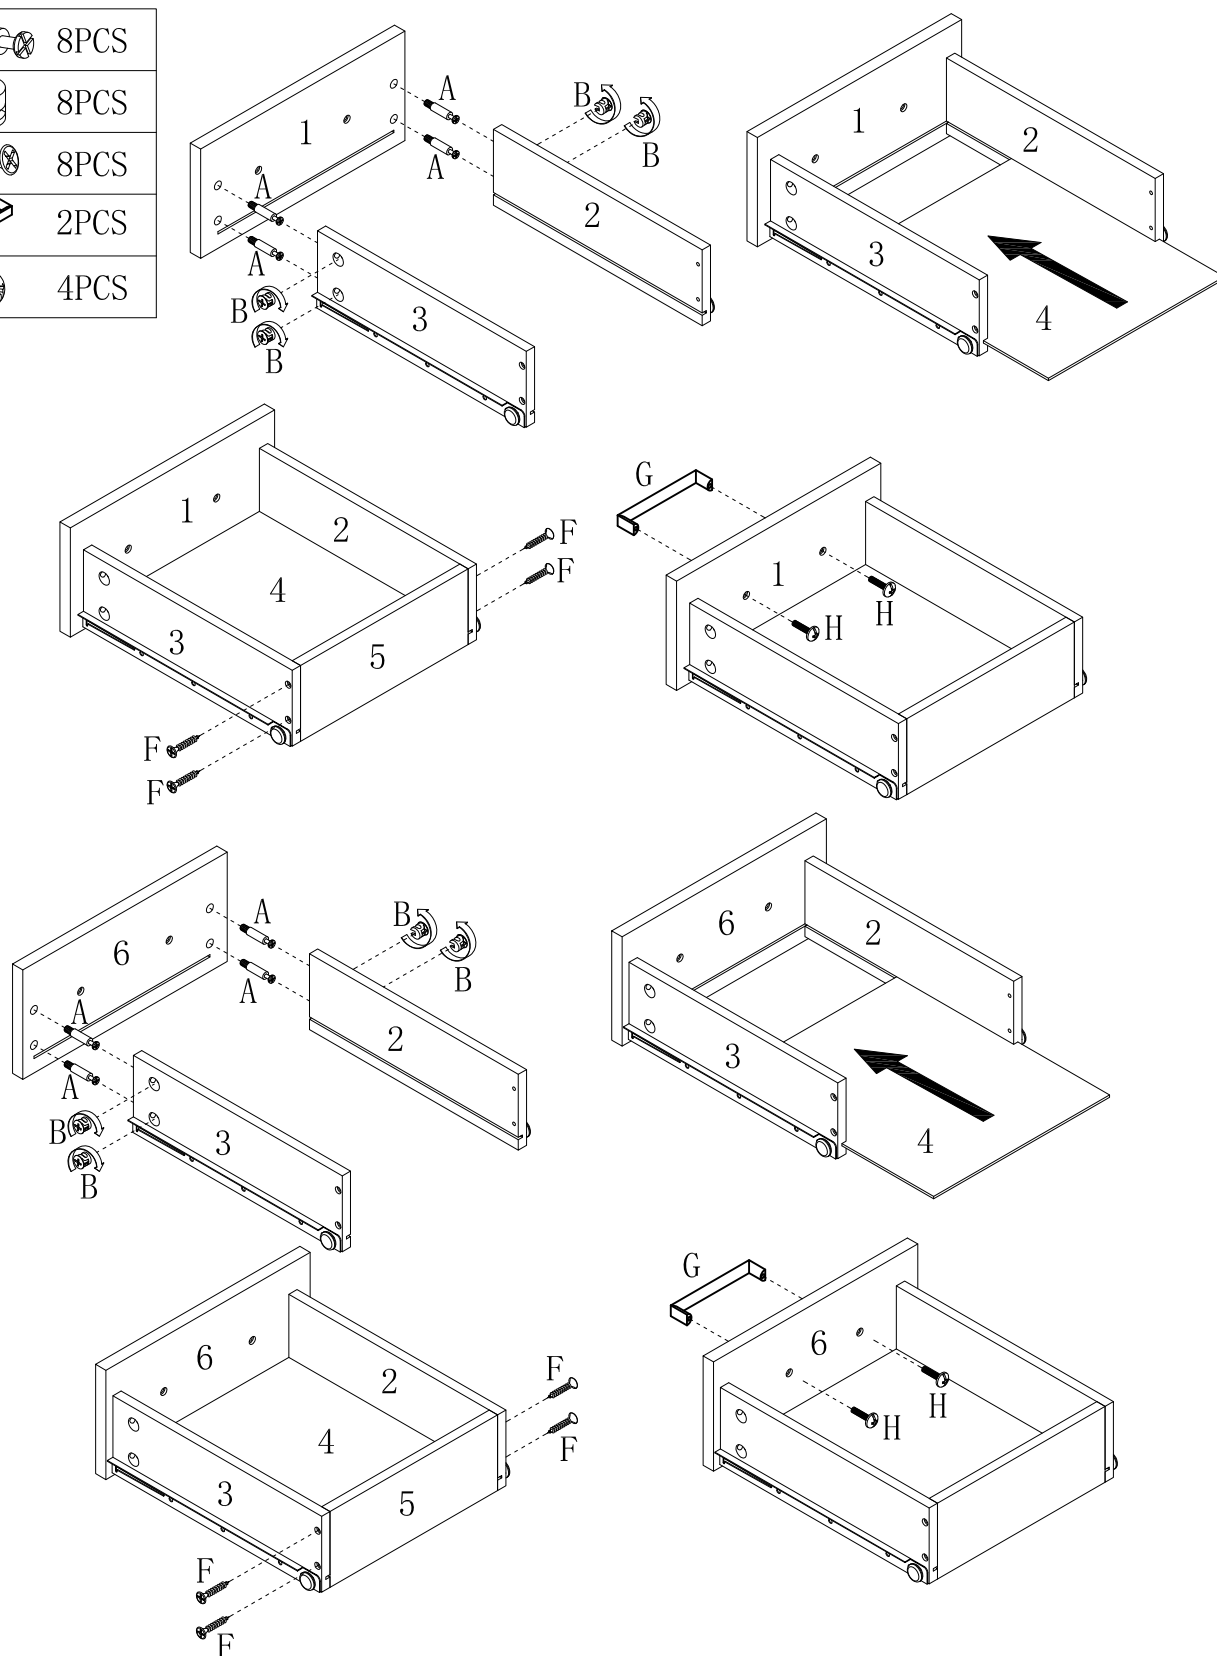
To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.



ASSEMBLY INSTRUCTION

STEP 1


A:		8PCS
B:		8PCS
F:		8PCS
G:		2PCS
H:		4PCS

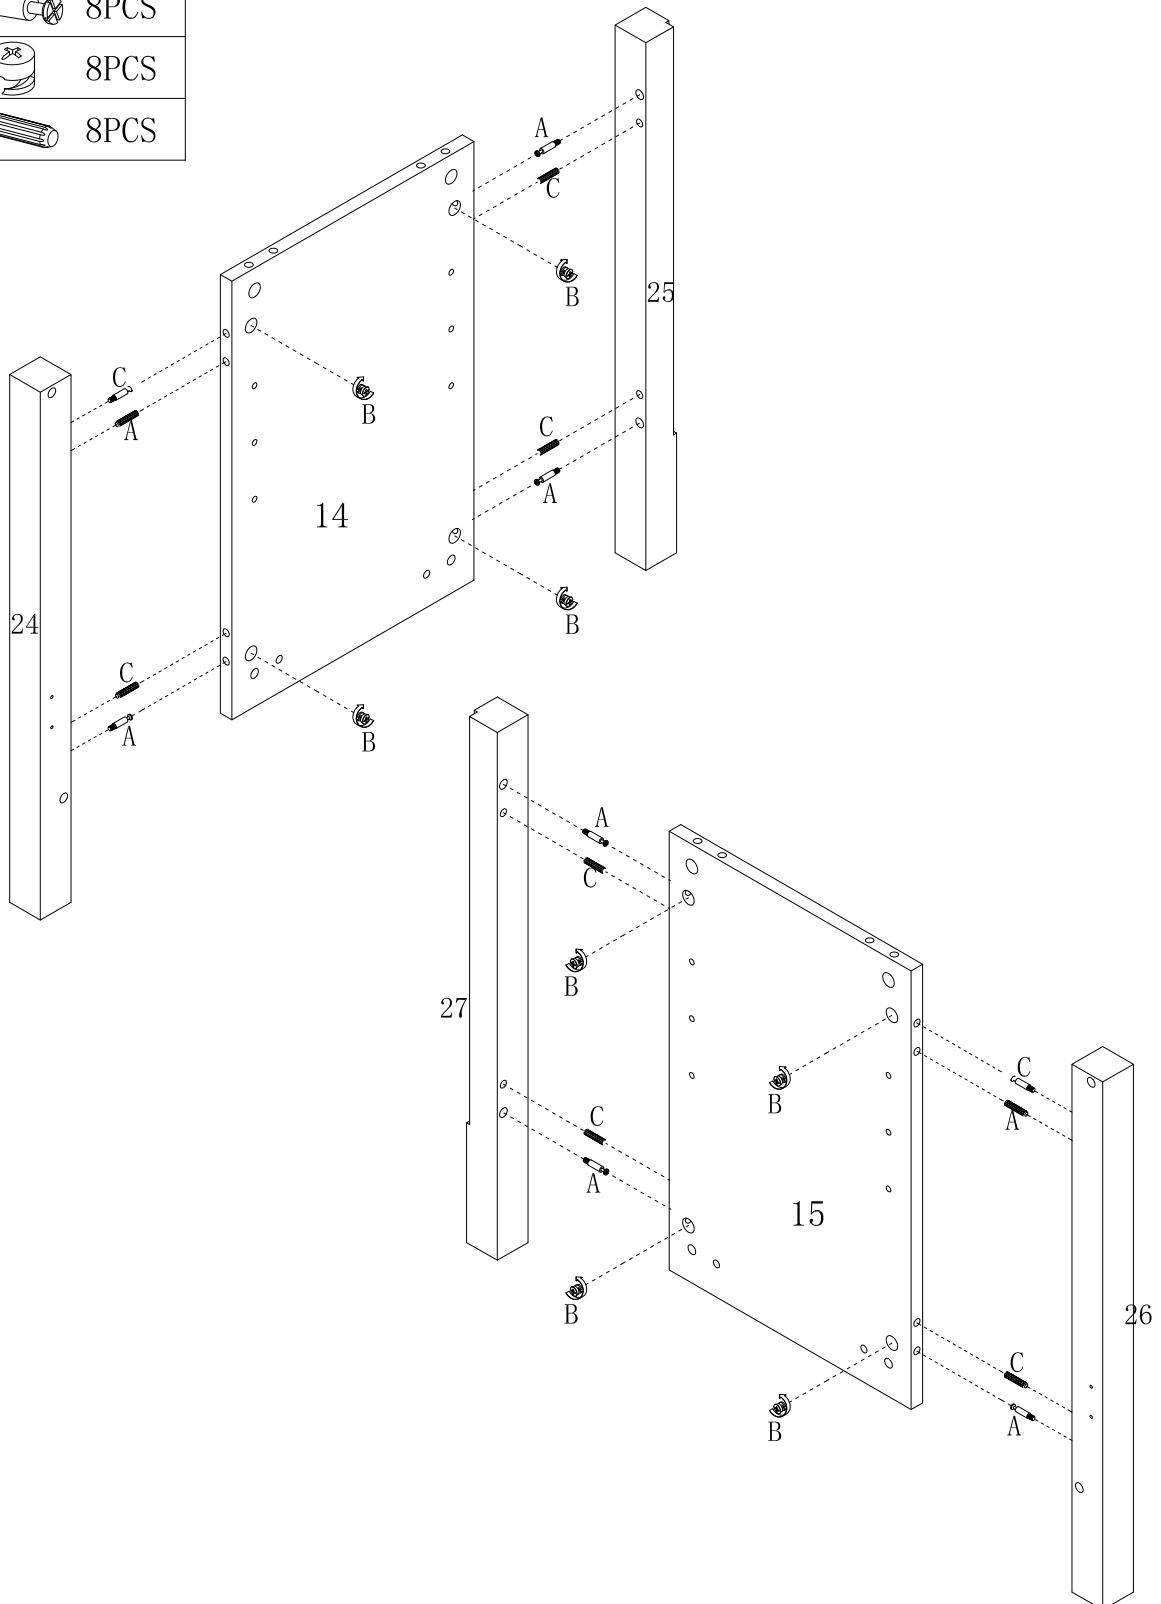


ASSEMBLY INSTRUCTION

Page 7 of 16

STEP 2

A:		8PCS
B:		8PCS
C:		8PCS




MADE IN CHINA

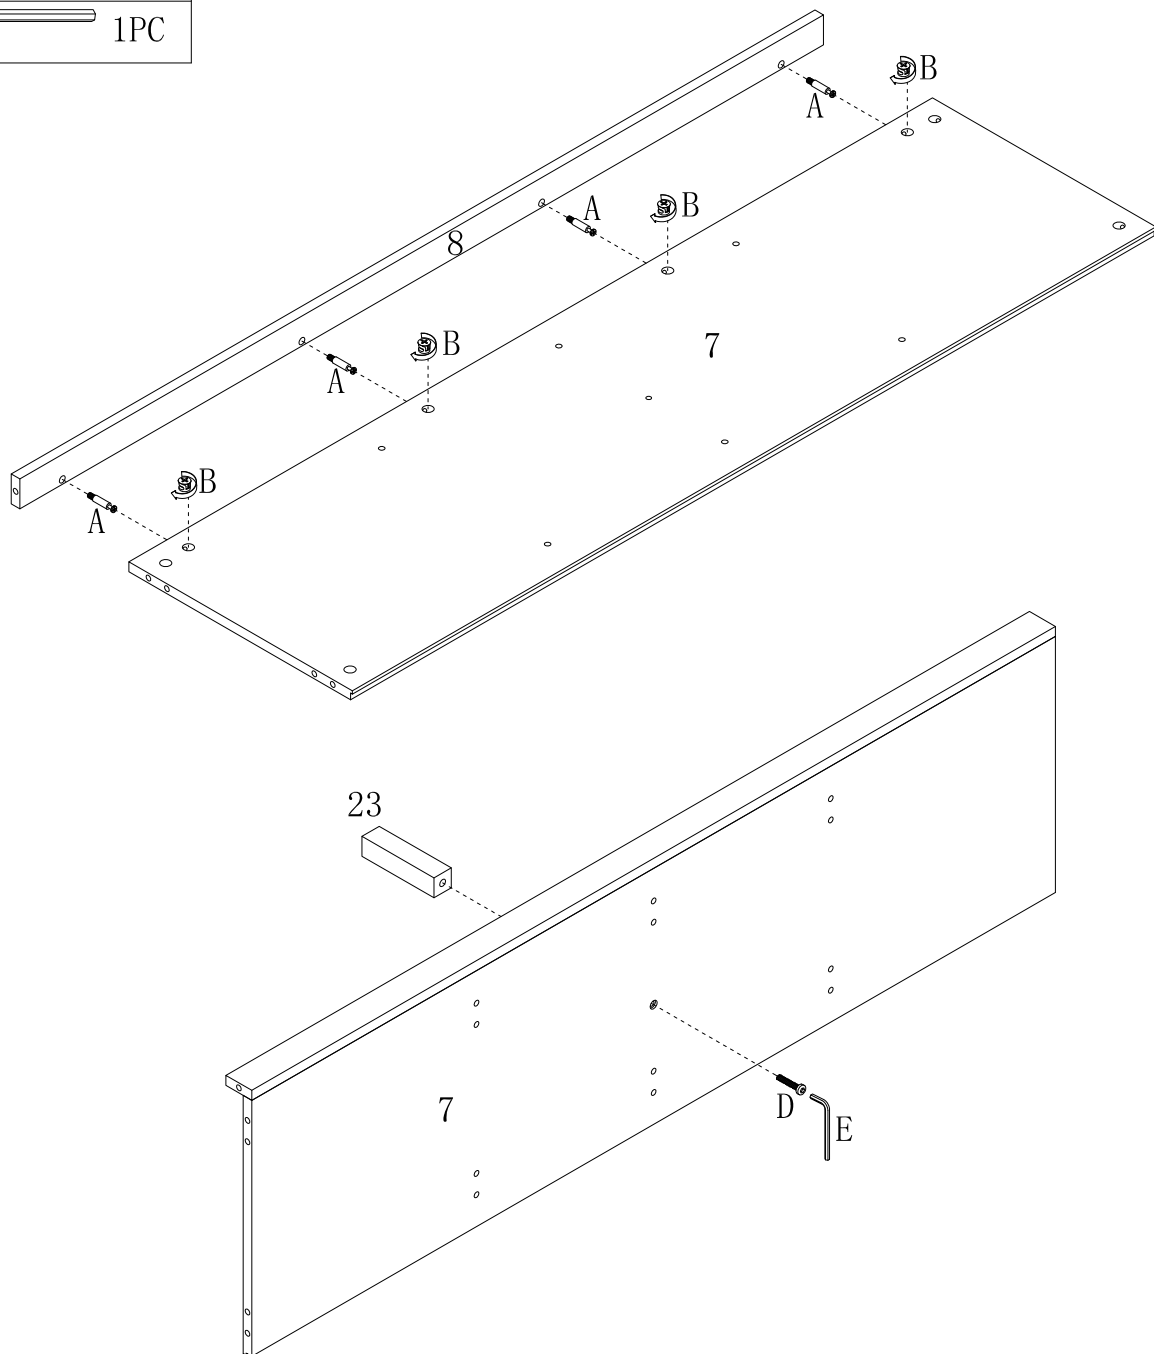


ASSEMBLY INSTRUCTION

Page 8 of 16

STEP 3


A:		4PCS
B:		4PCS
D:		1PC
E:		1PC

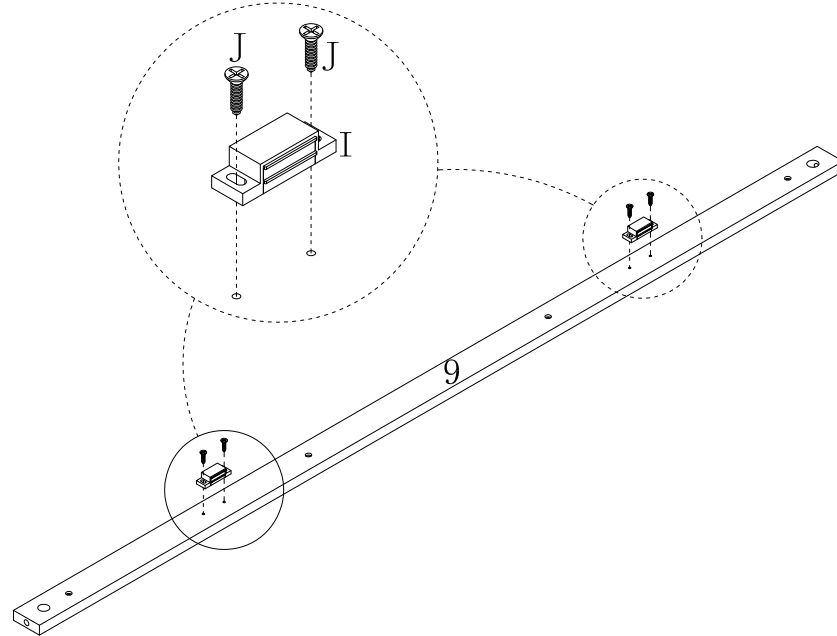


MADE IN CHINA




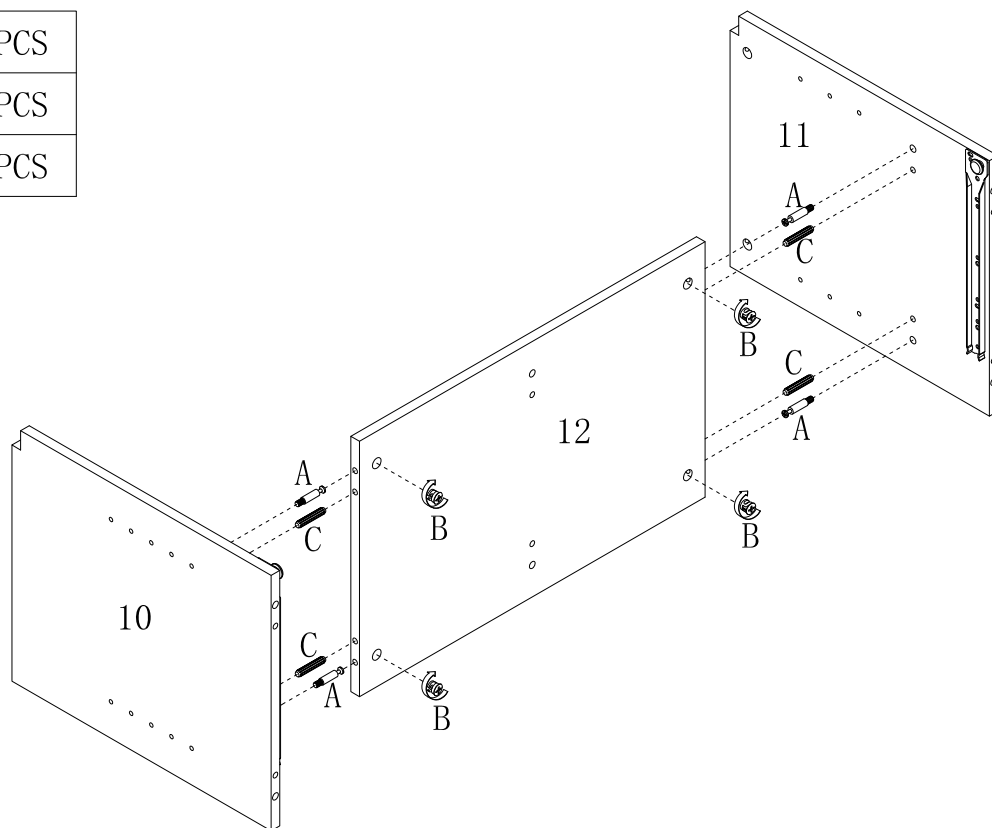
STEP 4

I:		2PCS
J:		4PCS





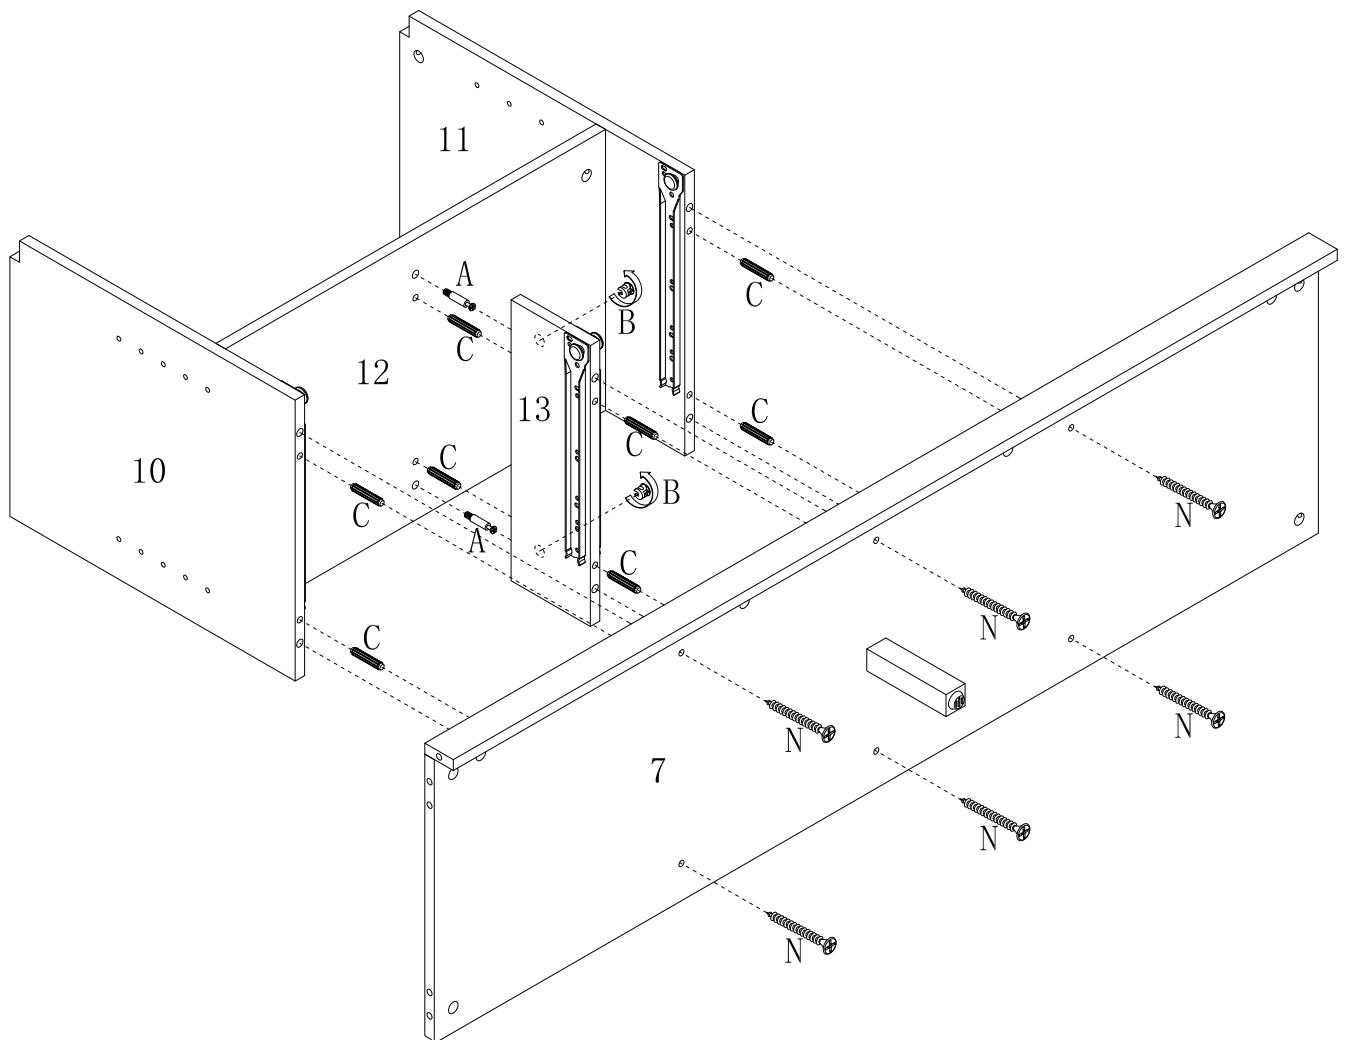
STEP 5

A:		4PCS
B:		4PCS
C:		4PCS





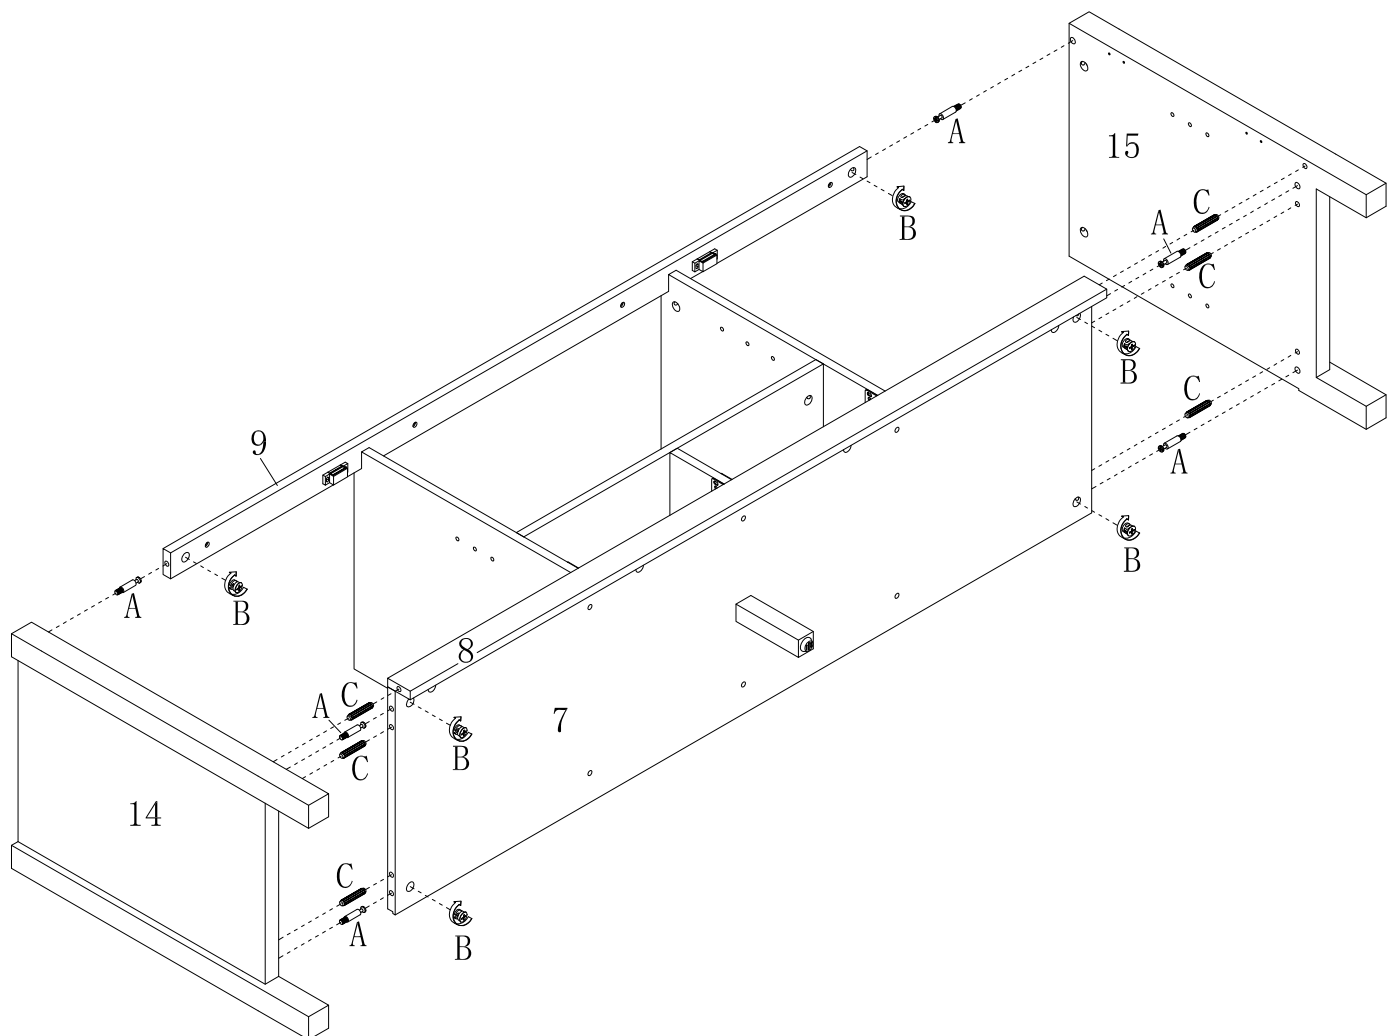
STEP 6

A:		2PCS
B:		2PCS
C:		8PCS
D:		6PCS





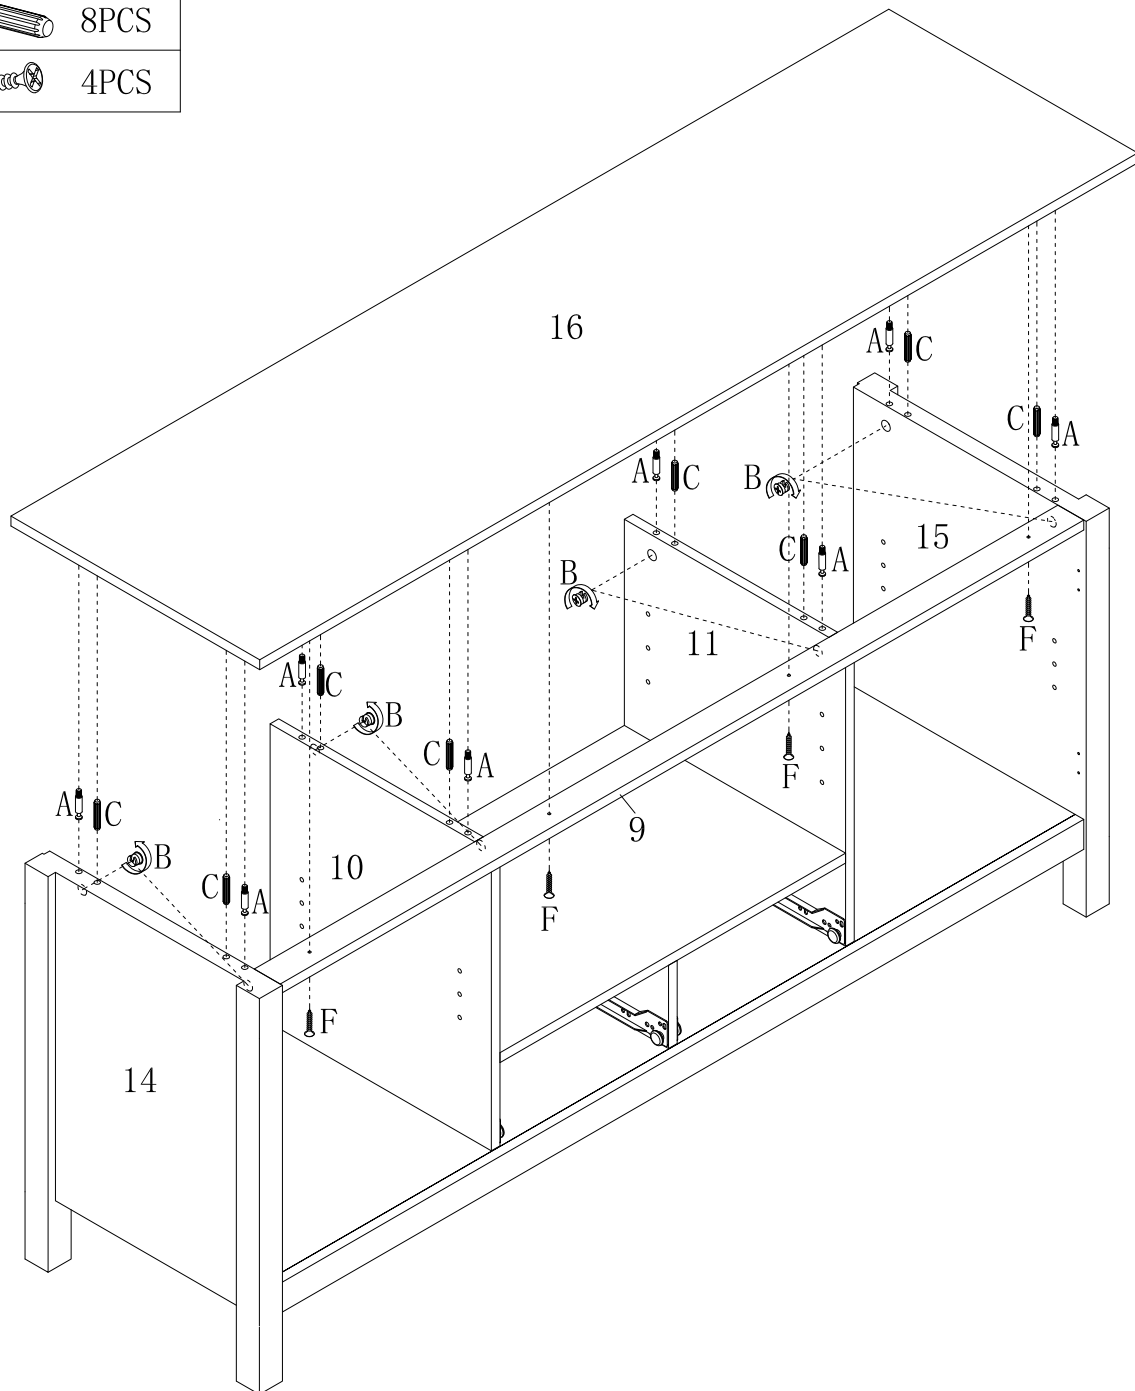
STEP 7

A:		6PCS
B:		6PCS
C:		6PCS



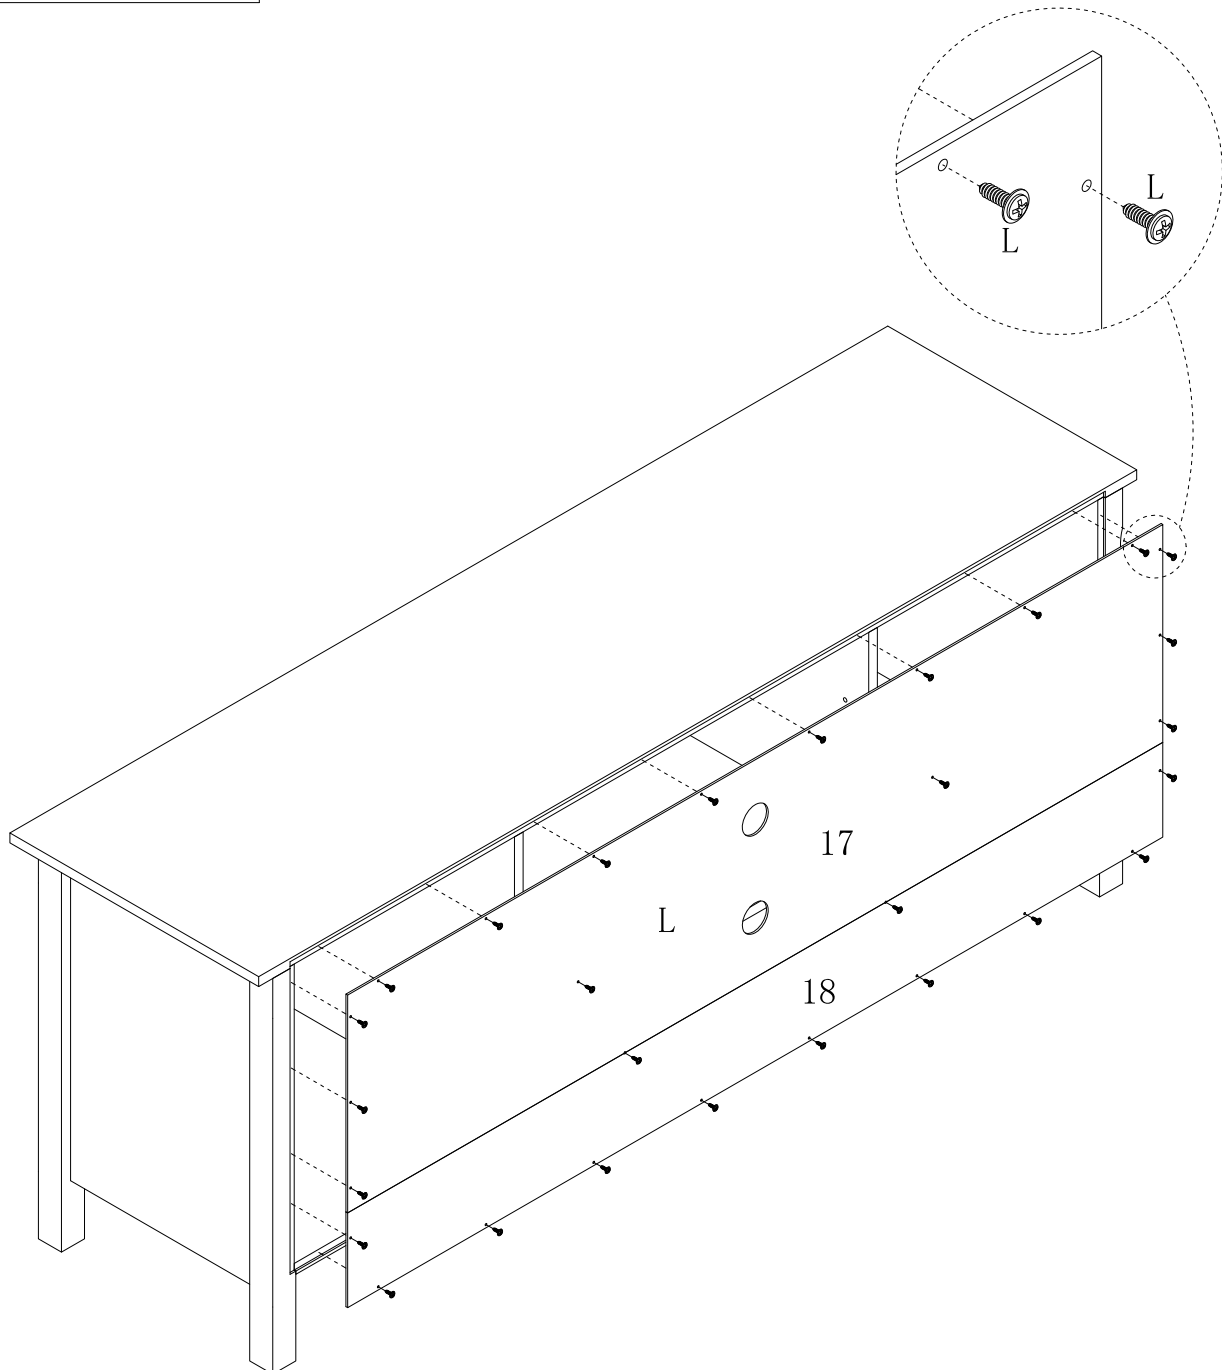
STEP 8

A:		8PCS
B:		8PCS
C:		8PCS
F:		4PCS



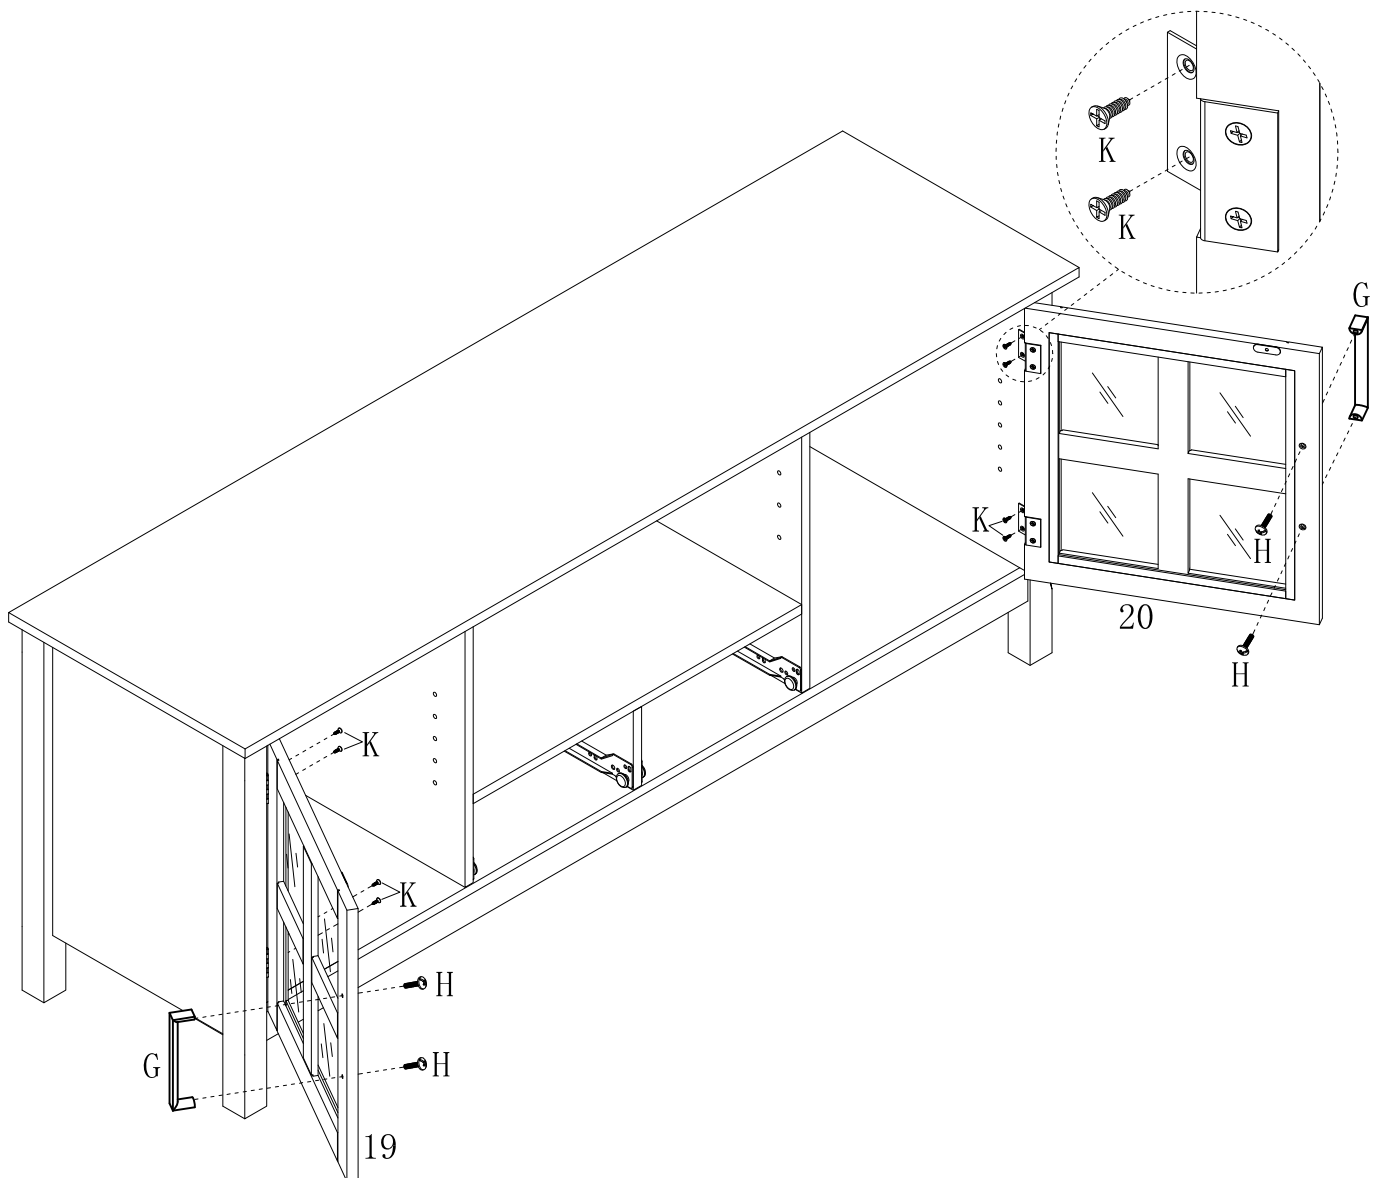
STEP 9

L:  28PCS



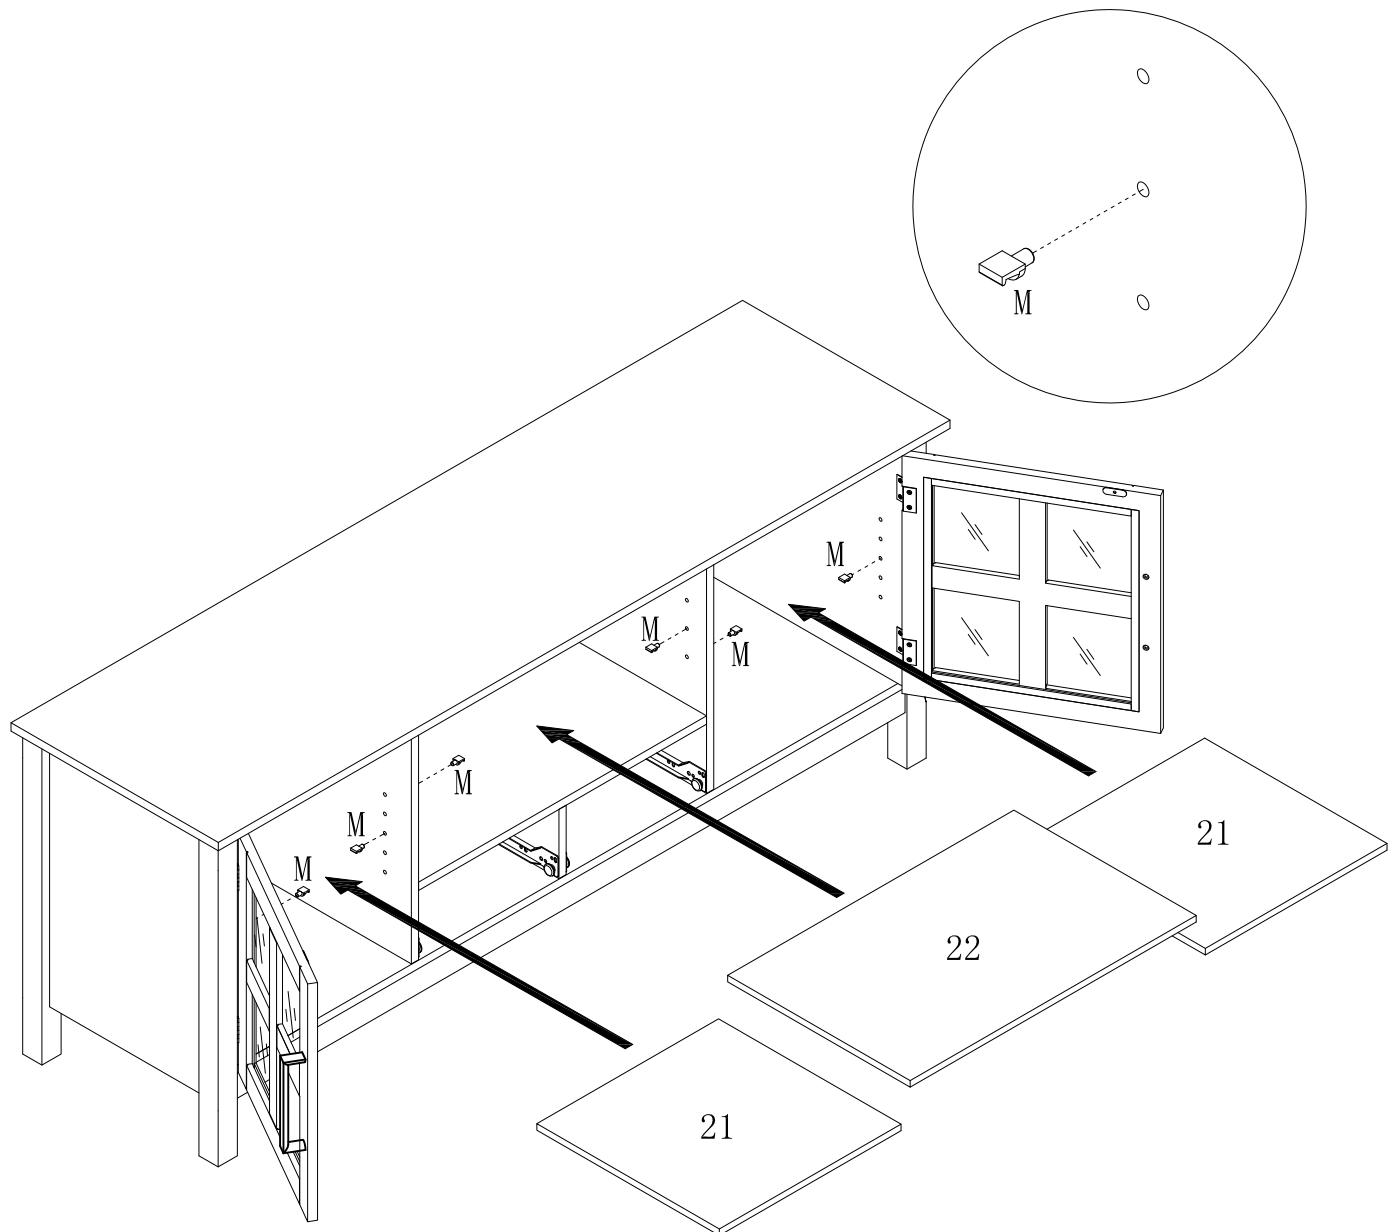
STEP 10

G:		2PCS
H:		4PCS
K:		8PCS



STEP 11

M:  12PCS



STEP 12

