


Instructions




FEMALE END

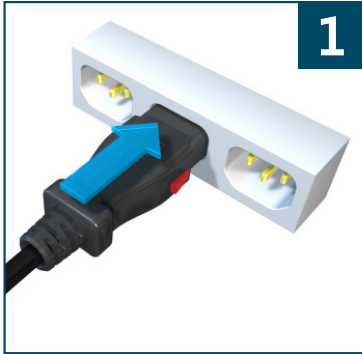


1
Insert cord
firmly into device



2
Cord is now locked

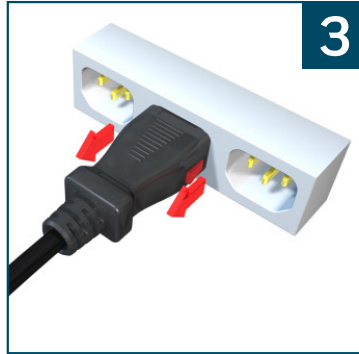

3
To release, pull on either
of the red tabs and
remove cord

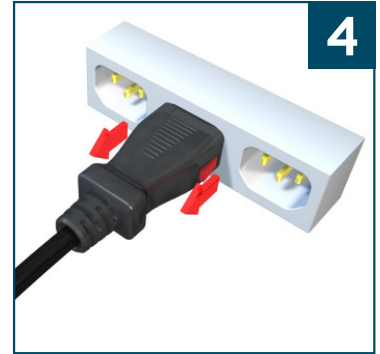


4
Cord will detach
from device

MALE END



1
Ensure nut is backed out
as far as possible

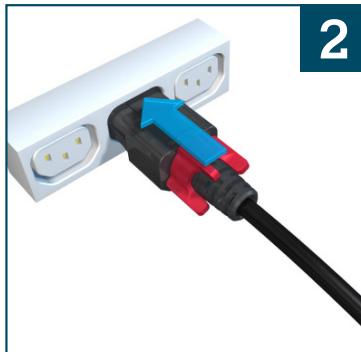


2
Insert cord
firmly into device




3
Push and tighten the nut to initial
resistance, then add 1/4 to 1/2
turn to secure.
(Do not over-tighten)




4
Cord is now locked. Visually
inspect to be sure connector
is fully inserted

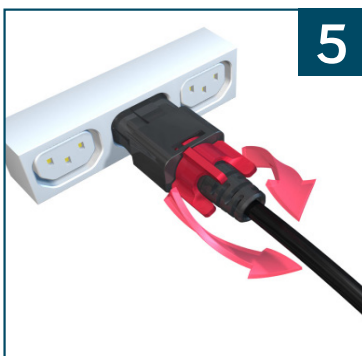


5
To release, loosen nut
as far as possible

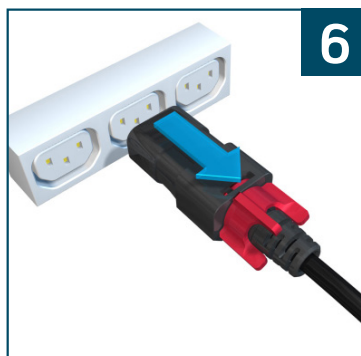

6
Cord will detach
from device

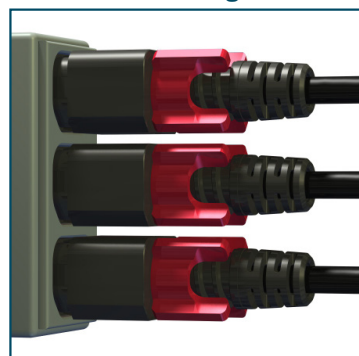

Align nuts as shown to maximize
clearance in ganged receptacles

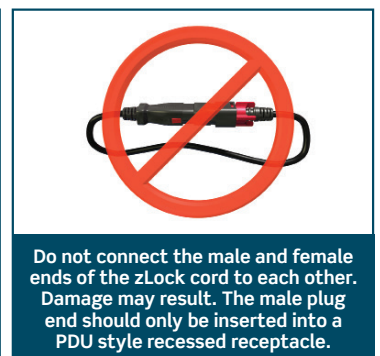

Do not connect the male and female
ends of the zLock cord to each other.
Damage may result. The male plug
end should only be inserted into a
PDU style recessed receptacle.

