



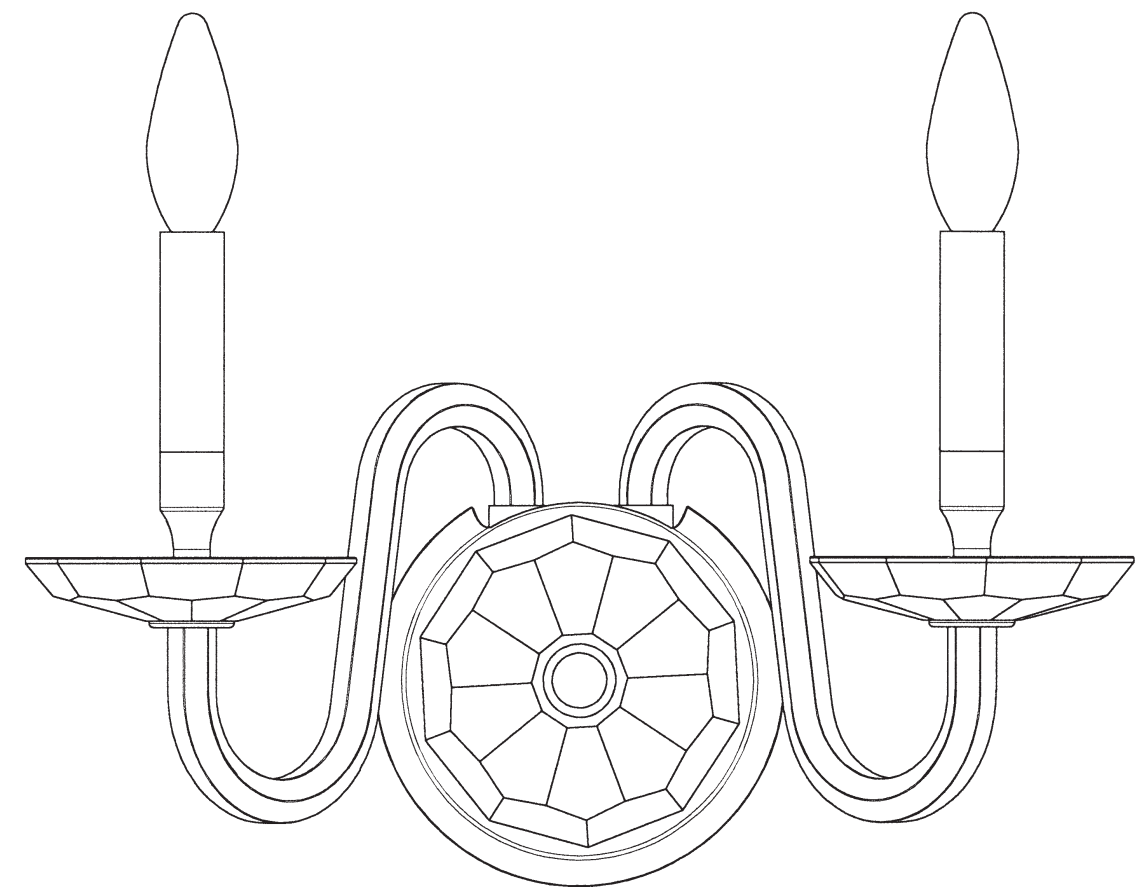

HABSBURG S9215- __ __ O



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
W SCHONBEK LLC.

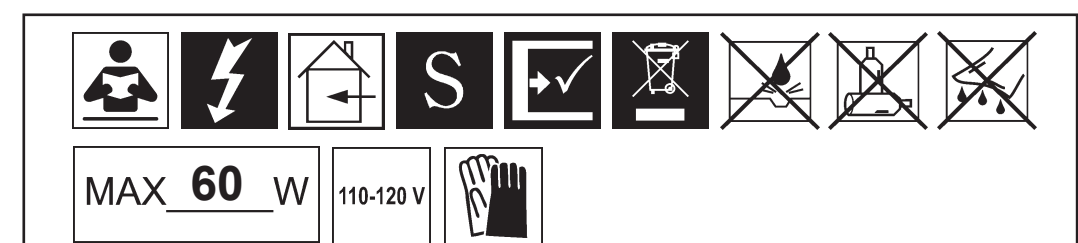


1

WARNING:

Electrical Danger

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

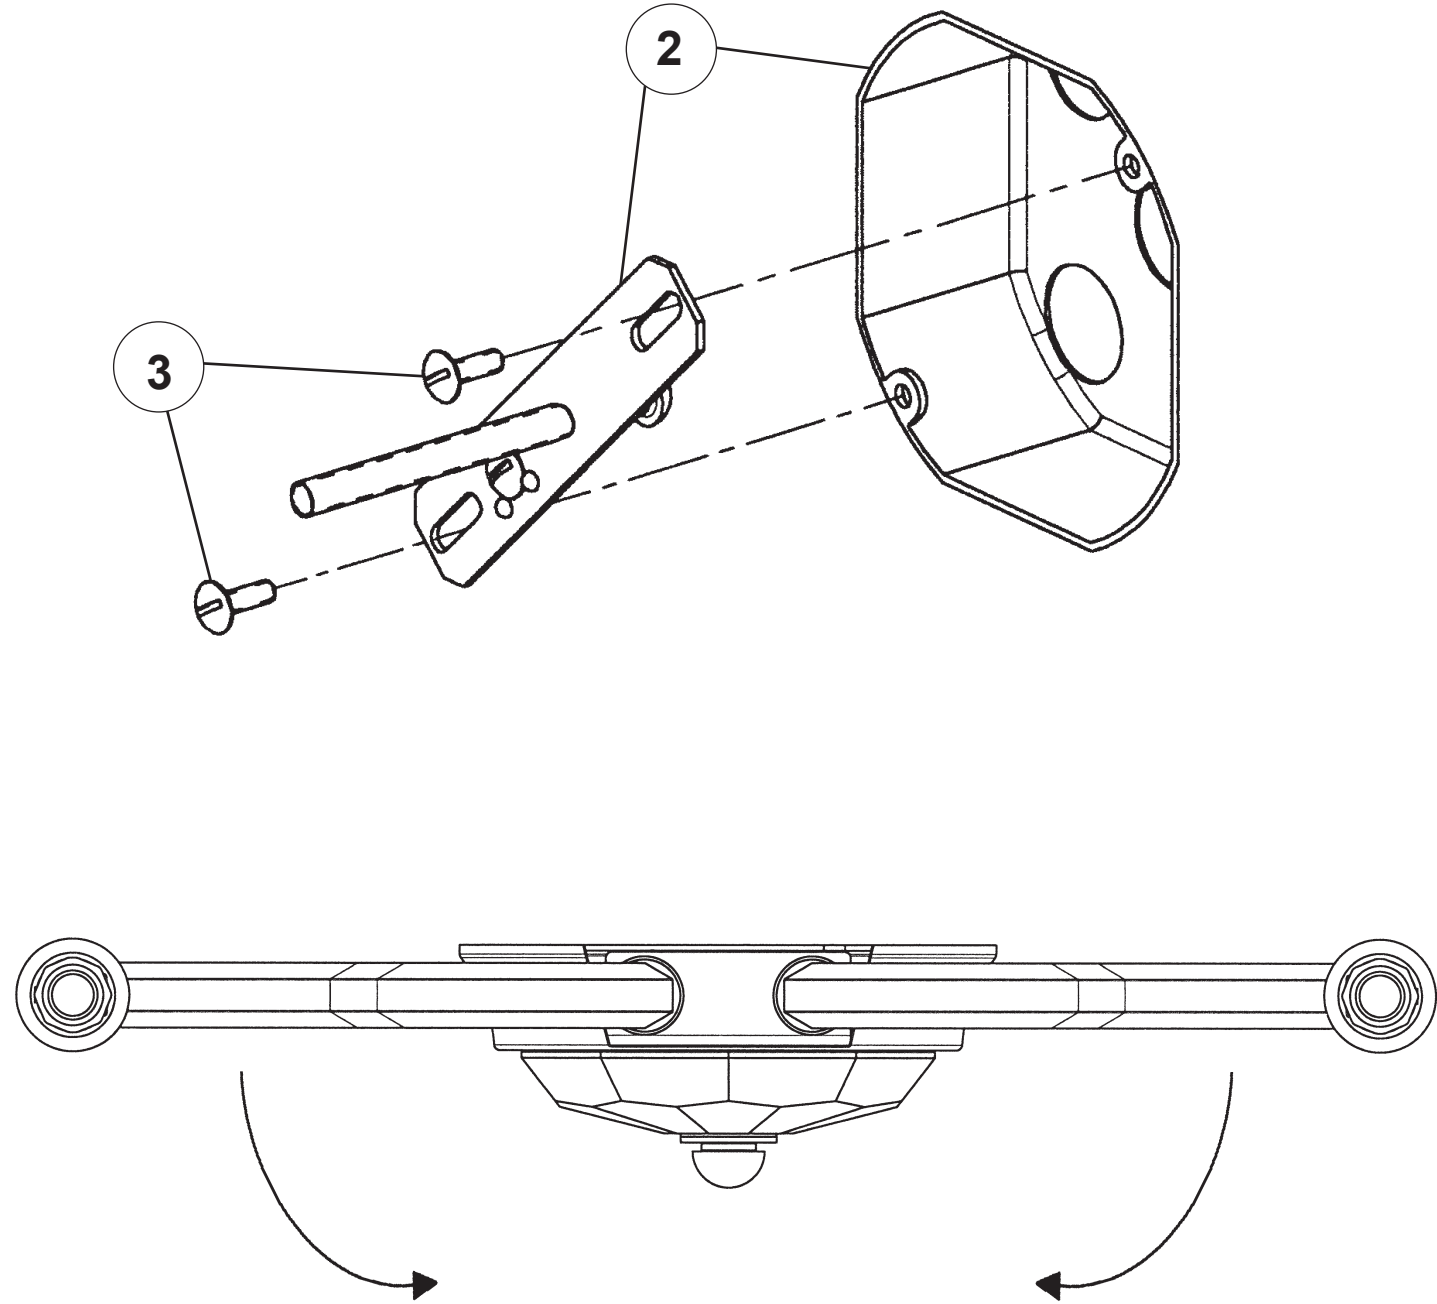




4


Turn arms to line up holes in arms with dimple in plate. Tighten lock washer and nut to secure arms in place.

HOLE

DIMPLE

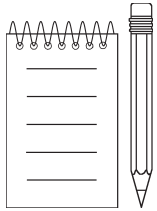

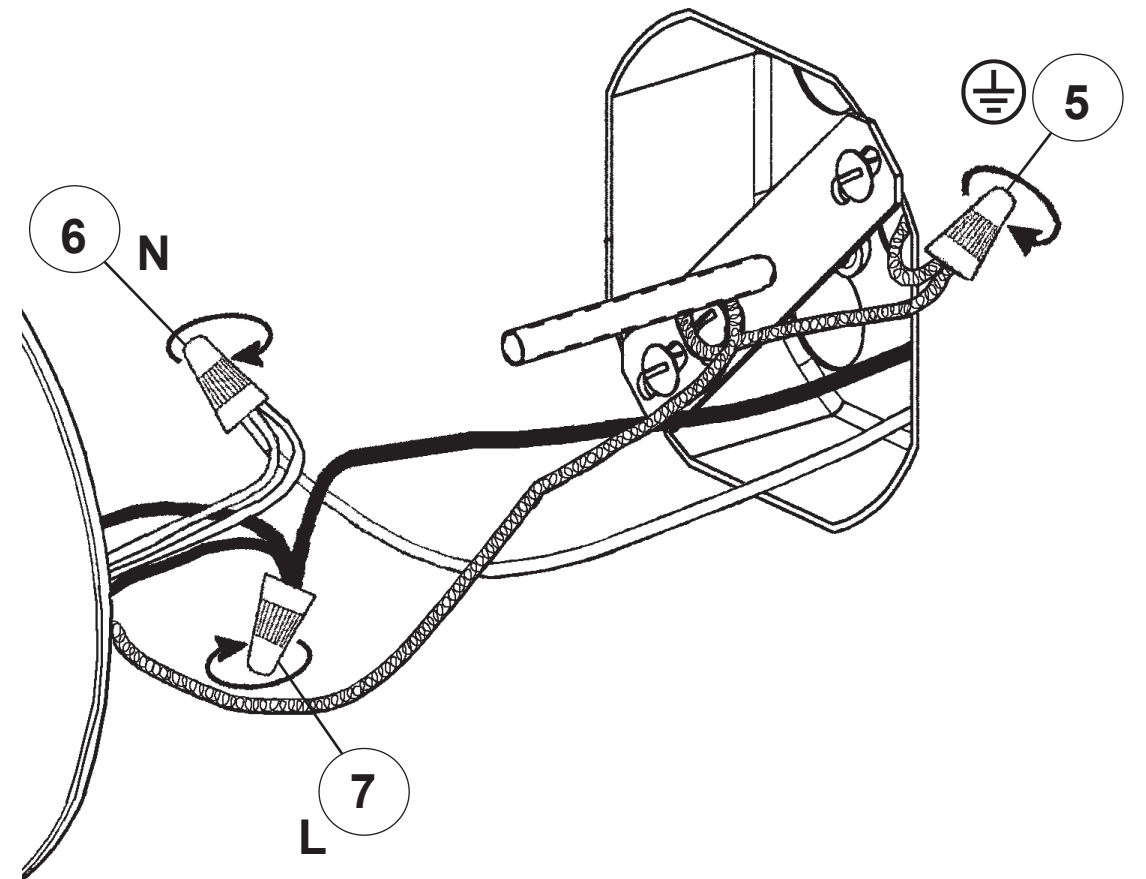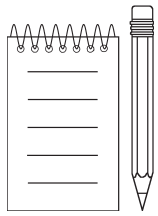



You will need 2 - B10
25 Watts Recommended
60 Watts Max

