

TECHNICAL BULLETIN TB05-2022

INSTALLING TRON 60AIS INTO FB-60 BRACKETS PREVIOUSLY USED FOR TRON 60S/GPS



Old float-free brackets FB-60 previously used for Tron 60S/GPS can be relabeled using a new label kit available: **P/N 104634**

FB-60/ Tron 60AIS:

If you need to supply a new EPIRB to be fitted into an older Float free bracket, remember to order the FB-60 Upgrade kit: (P/N 104634) when you order Tron 60AIS in Manual bracket (P/N 103180)

The label kit consists of three labels to be used as a relabeling kit for the FB-60 bracket. Two of these labels are white "cover" labels to put on top of existing labels on the sides of the FB-60, and one new label with text to be fitted.




Before attaching the labels, clean with Isopropanol / Isopropyl alcohol on the two labels on the sides of FB-60.

The example shows one of them before and after being fitted with a white cover label



Then attach the new label on top of the righthand cover label.

Now you can place your new Tron 60AIS in this bracket

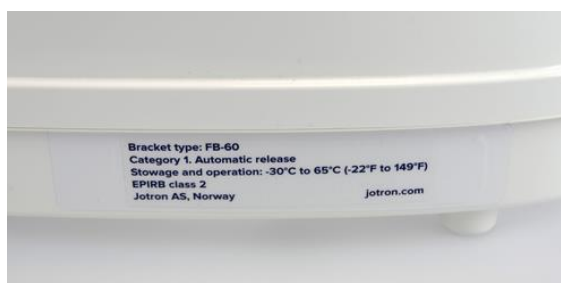

Jotron AS, October 10th, 2022

