


# SHAD

## HONDA REBEL CMX 1100 '21

H0RB11IF

**3P**  
SYSTEM

BCN

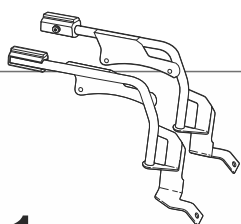

**1** 263002 x 1 →  
**5** 263003 x 1 ←



**2** 260213 x 2  
Ø16 Ø9 x 12



**6** 260417 x 2  
Ø16 Ø9 x 16



**3** 303045 x 8  
Ø8



**7** 304039 x 4  
M8 x 40 DIN 7380



**4** 304053 x 2  
M8 x 30 DIN 7380



**8** 260648 x 2  
Ø16 Ø9 x 5



**9** 302024 x 2  
M8

### WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.


**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.



**(F)** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

**ATTENTION:** For a full equip assembly, mount the 3p system after the KIT Sissy Bar.


**1**

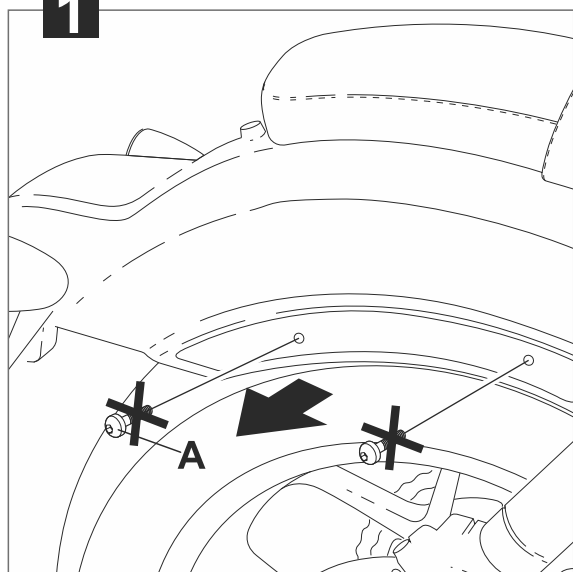

**2**

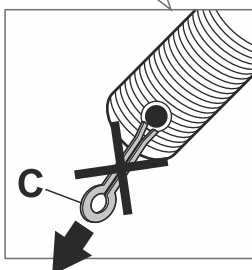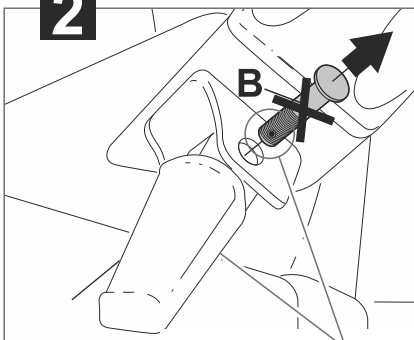

**4**

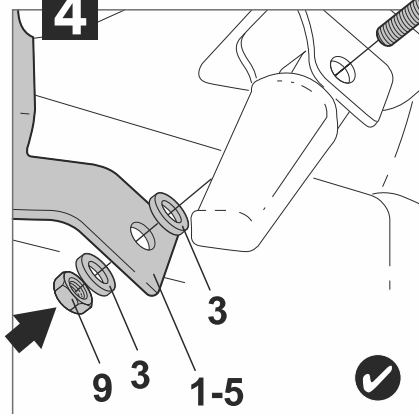

**5**

**1**

**4**

**3**

**2**

**3R**

**3L**

**1**

**5**


**6**

**3**

**5**

**3**

✓

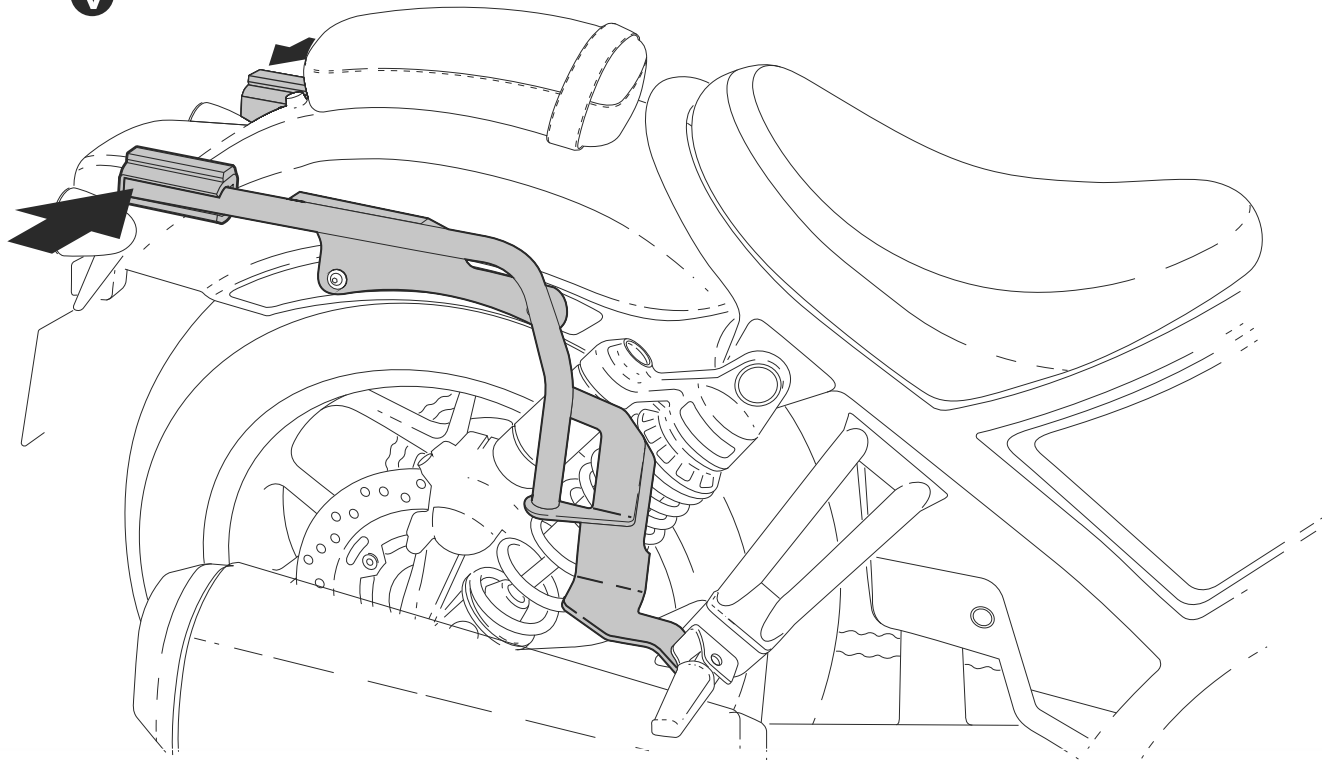

(L) 6 ~~✗~~ 8

KIT SISSY BAR

(R) 2 ~~✗~~

3P SYSTEM

