


SHAD

HONDA REBEL CMX 1100 '21-

H0RB11IF

3P
SYSTEM

BCN

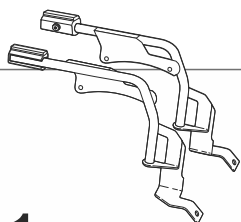

1 263002 x 1 →
5 263003 x 1 ←



2 260213 x 2
Ø16 Ø9 x 12



6 260417 x 2
Ø16 Ø9 x 16



3 303045 x 8
Ø8



7 304169 x 4
M8 x 50 DIN 7380



4 304053 x 2
M8 x 30 DIN 7380



8 260648 x 2
Ø16 Ø9 x 5



9 302024 x 2
M8

WARNING! ⚠

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.


(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.



(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system after the KIT Sissy Bar.


1

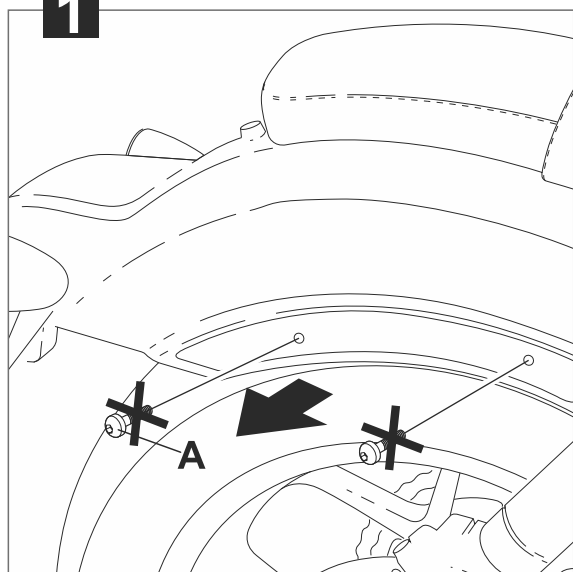


2

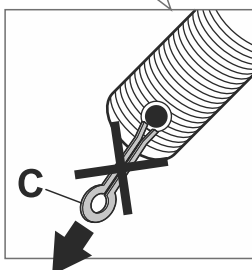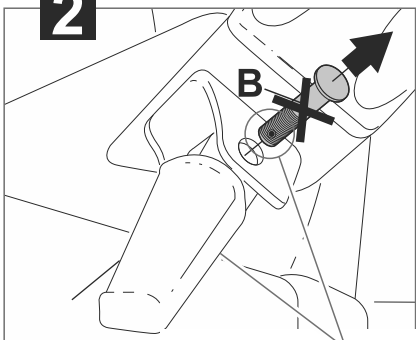

4

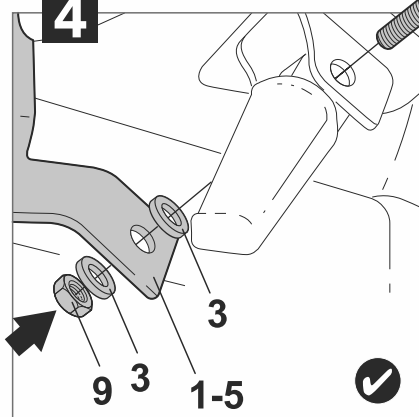


5

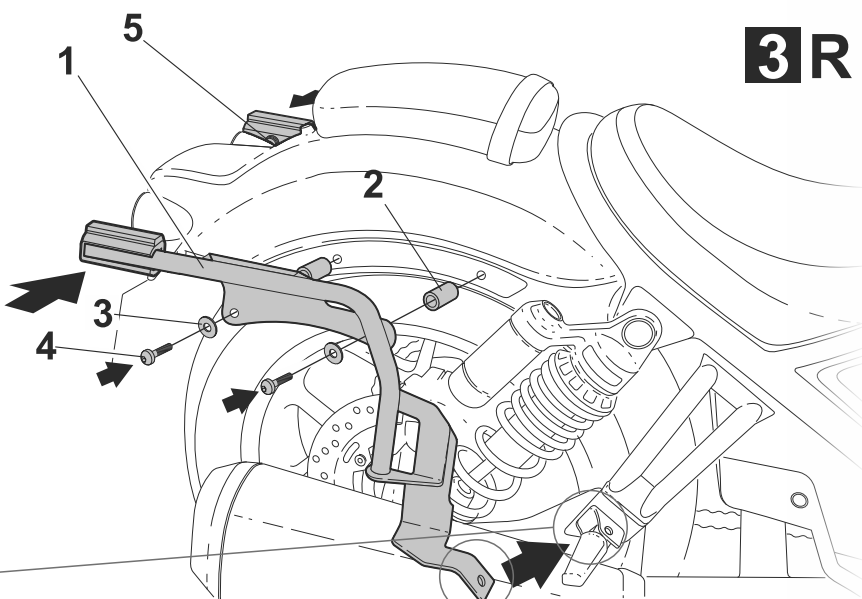


3R

3L

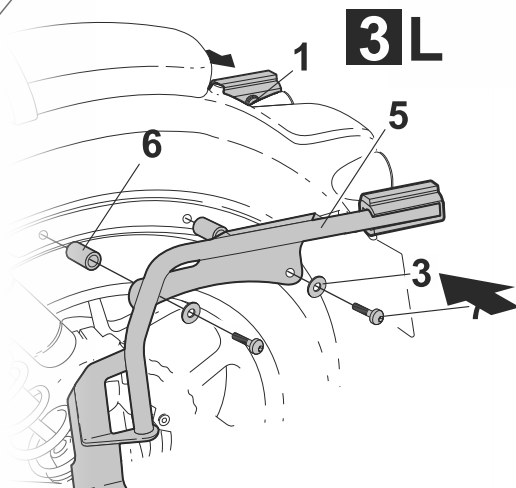

✓

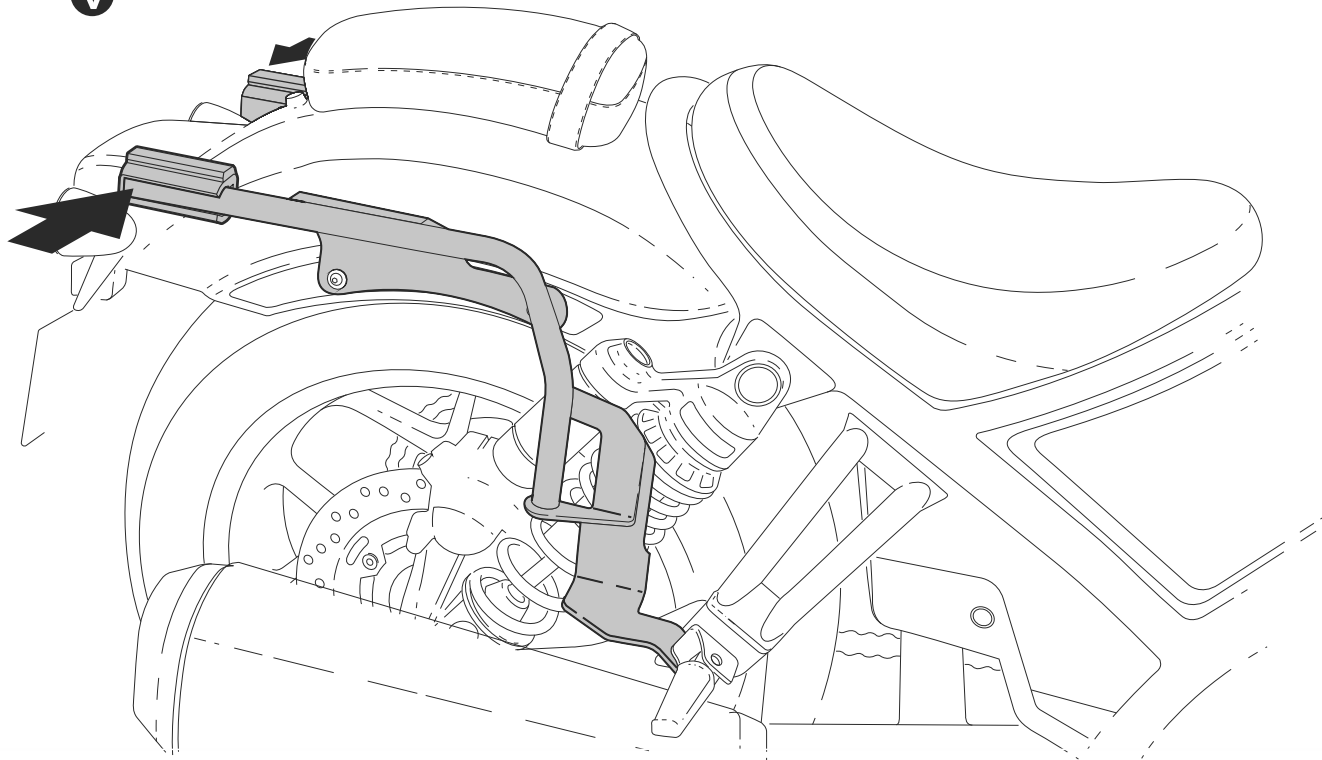

(L) 6 ~~✗~~ 8

KIT SISSY BAR

(R) 2 ~~✗~~

3P SYSTEM

