


ULINE

WOOD CRATE


1-800-295-5510
uline.com

TOOLS NEEDED

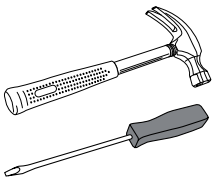


Hammer

Screwdriver

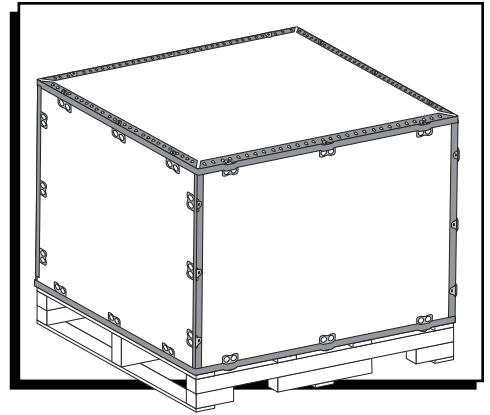


ASSEMBLY


1. Secure one long panel to base.

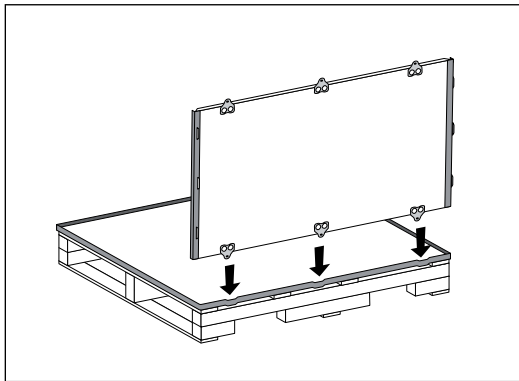


4. Ensure all panels are level, then place lid on top.

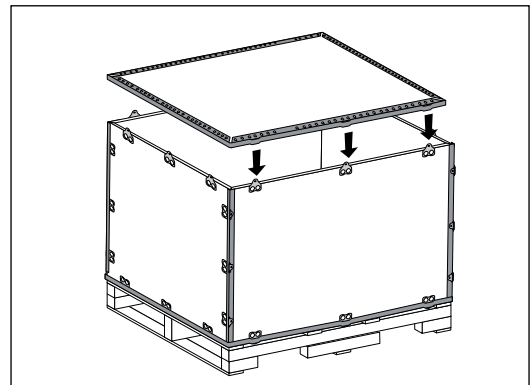


2. Secure short panels to base and sides of long panel.

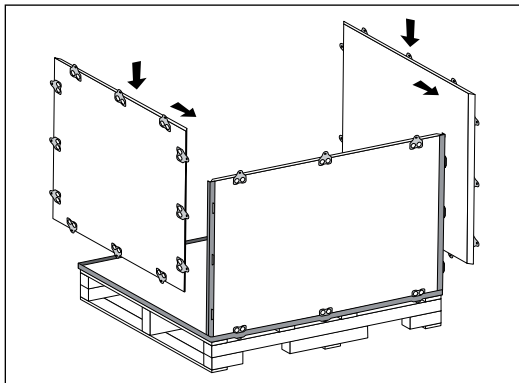


5. Bend back all tabs using a screwdriver or a hammer.

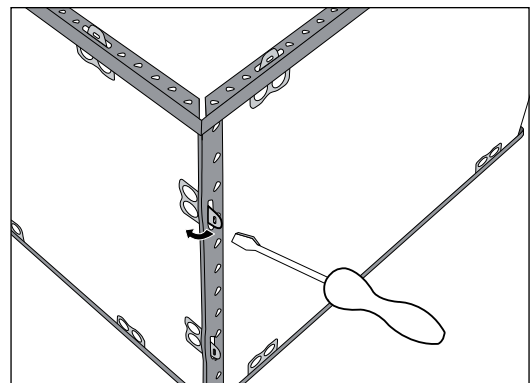


3. Secure second long panel to base and two short panels.

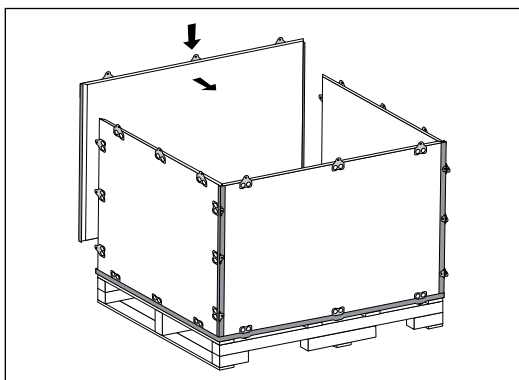

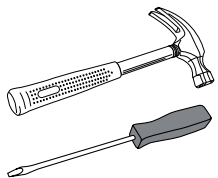
HERRAMIENTAS NECESARIAS

Martillo


Desarmador

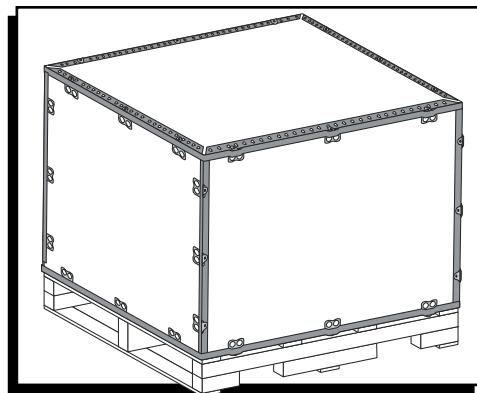**ENSAMBLE**


1. Asegure un panel largo a la base.

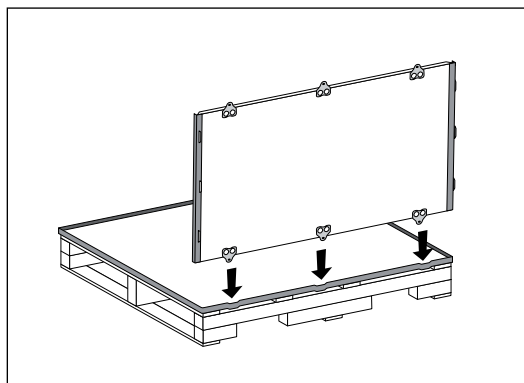


2. Asegure los paneles cortos a la base y a los laterales del panel largo.

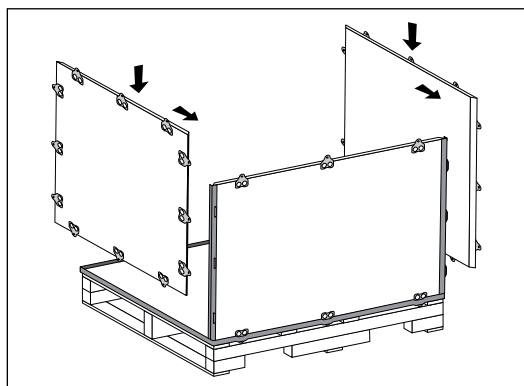


3. Asegure el segundo panel largo a la base y a los dos paneles cortos.

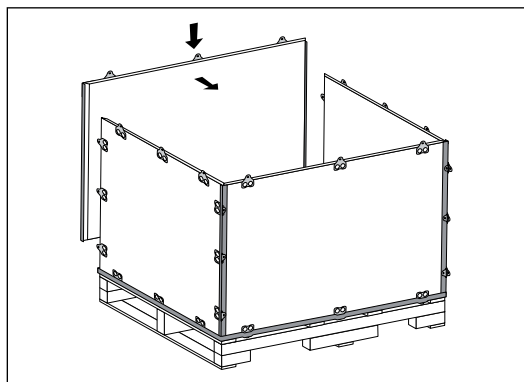


4. Asegúrese de que todos los paneles estén nivelados, luego coloque la tapa encima.

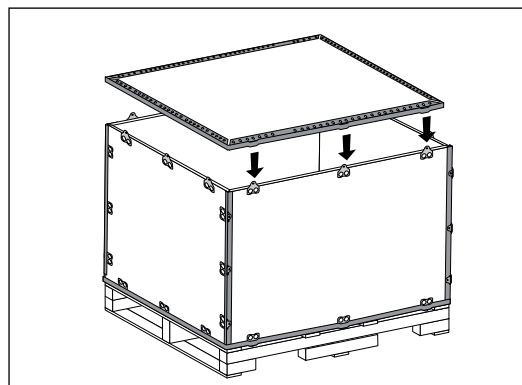


5. Doble hacia atrás todas las lengüetas usando un desarmador o martillo.

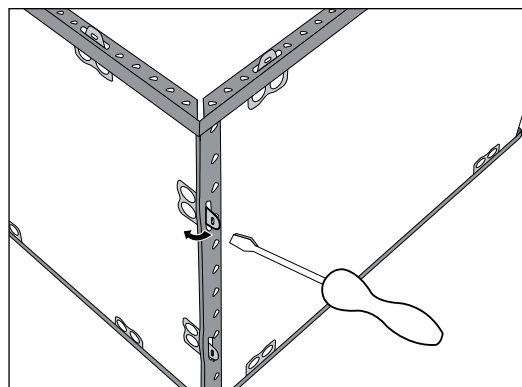

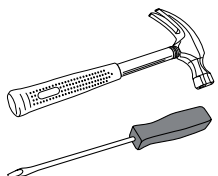
OUTILS REQUIS

Marteau


Tournevis

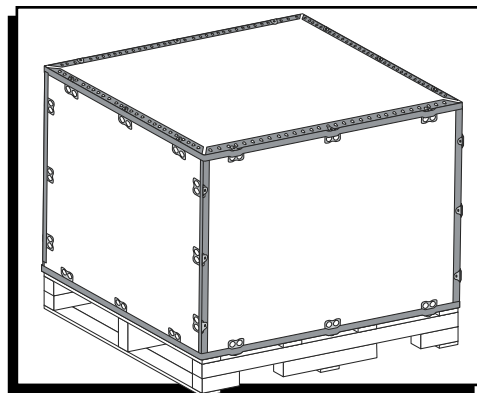**MONTAGE**


1. Placez un long panneau dans la base.

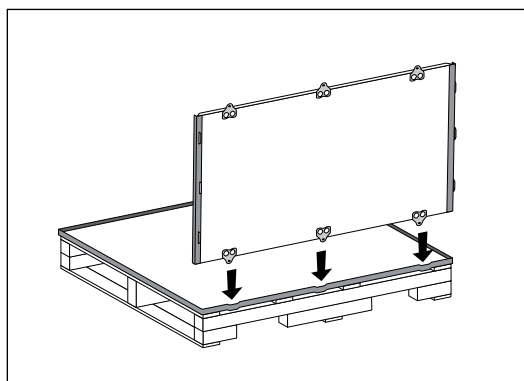


2. Fixez les panneaux courts à la base et au long panneau.

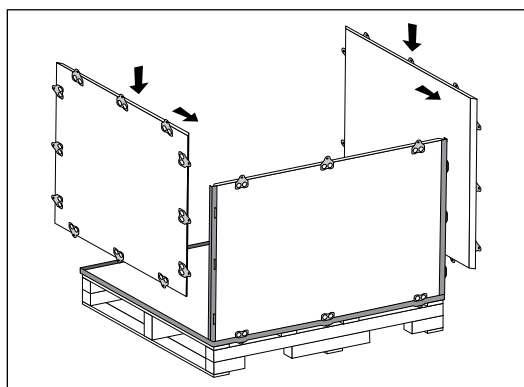

3. Fixez le deuxième long panneau à la base, puis au deux panneaux courts.

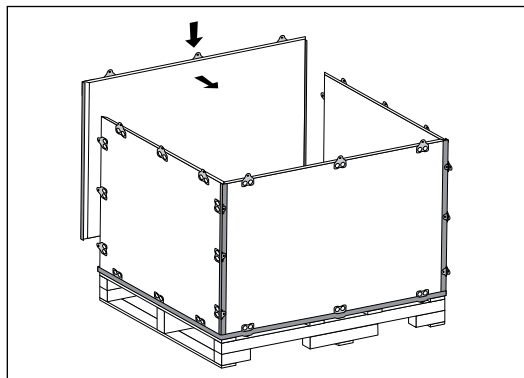

4. Assurez-vous que tous les panneaux sont de niveau, puis déposez le couvercle sur le dessus.

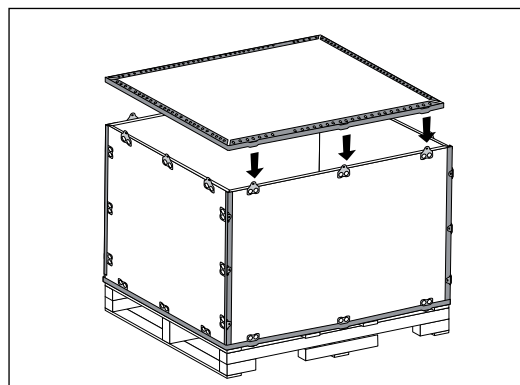

5. Repliez toutes les languettes à l'aide d'un tournevis ou d'un marteau.

