



THE EXCEPTIONAL[®]

EX60 Tool Toter™ Bucket

✉ - service@vertexproducts.com
📞 - vertexproducts.com
📱 - 612-709-9534


STEP 1

Before beginning assembly, you should have:

Product Components

Ⓐ Tool Toter™
Bucket Body

Ⓑ Support
Tubes (3X)

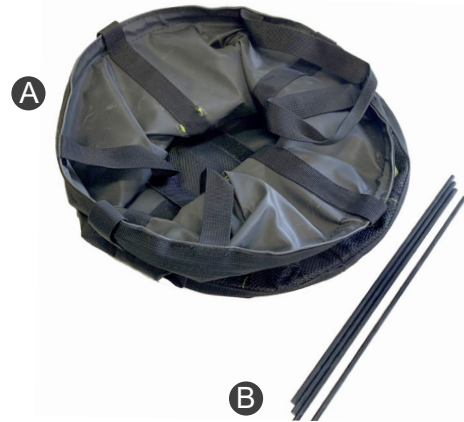

MISSING PARTS?

Send the following to
service@vertexproducts.com
or text 612-709-9534

1. Model Number & Place of Purchase
2. Letter & Description of missing part
3. Your Name and Address

Inquiries received by
2 PM CST will be
shipped same business day

STEP 2

A: Slide a support tube
into each slot sewn
inside tote body as shown



B: Tightly fold over strap
and attach the Velcro
hook & loop pads as shown



Note: You may need to push hard as the tube nears the bottom. There is a flap inside the slot that may feel like a blockage or like it is sewn shut. It may take a harder push for it to pass through.

