

27-241 – RETAIN ORIGINAL CAMERA ON FIAT U-CONNECT

InCarTec

DESIGNED FOR USE WITH OUR STEERING
WHEEL CONTROL INTERFACE 39-FIA-03

Installation Instructions



1. Check the wiring from the vehicle is correct for this adapter. The original camera should be pinned to pins 31, 32 and 33 on the male connection from the car, wiring colours may vary. (See image A)
2. Push the terminals of the 27-241 camera retention to the ISO lead or steering wheel control interface. Connect the yellow lead to pin 21 and the black to pin 22. (See image B), pin numbers on inside of connector.
3. Connect the ISO lead or steering wheel control interface to the connection in the vehicle.
4. Connect the yellow RCA plug to the reverse camera input of the after market radio and connect the reverse wire of the radio to the reverse output of the ISO lead or steering wheel control interface.

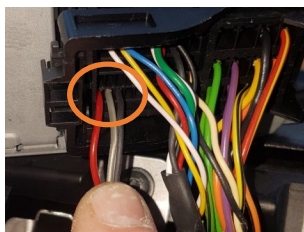


Image A



Image B

THE TERMINALS CAN ONLY BE INSERTED
ONE WAY. DO NOT FORCE THEM IN
UPSIDE DOWN


CHECK THEY ARE FULLY INSERTED. THEY
SHOULD CLICK INTO PLACE.

27-241 – RETAIN ORIGINAL CAMERA ON FIAT U-CONNECT

InCarTec

DESIGNED FOR USE WITH OUR STEERING
WHEEL CONTROL INTERFACE 39-FIA-03

Installation Instructions

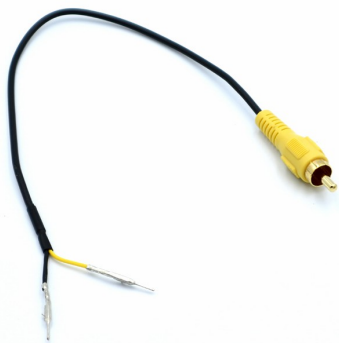

1. Check the wiring from the vehicle is correct for this adapter. The original camera should be pinned to pins 31, 32 and 33 on the male connection from the car, wiring colours may vary. (See image A)
2. Push the terminals of the 27-241 camera retention to the ISO lead or steering wheel control interface. Connect the yellow lead to pin 21 and the black to pin 22. (See image B), pin numbers on inside of connector.
3. Connect the ISO lead or steering wheel control interface to the connection in the vehicle.
4. Connect the yellow RCA plug to the reverse camera input of the after market radio and connect the reverse wire of the radio to the reverse output of the ISO lead or steering wheel control interface.

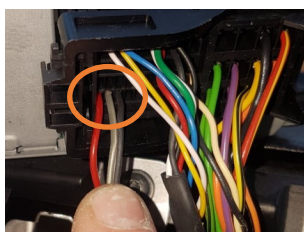


Image A



Image B

THE TERMINALS CAN ONLY BE INSERTED
ONE WAY. DO NOT FORCE THEM IN
UPSIDE DOWN

CHECK THEY ARE FULLY INSERTED. THEY
SHOULD CLICK INTO PLACE.

