

PENDANT LIGHT (ROD)

Assembly Instructions

MODEL#: PND-2206



CAUTION

•Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

•Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED



Ladder




Safety glasses



Electrical tape



Phillips screwdriver




Flat blade screwdriver



Pliers




Wire strippers

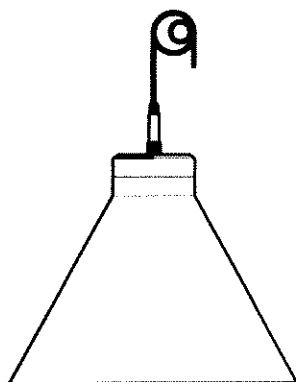

Fixture




Canopy

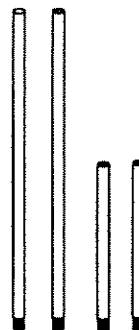

Rods




Glass

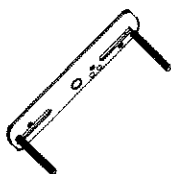

Mounting Unit



Mounting Screws

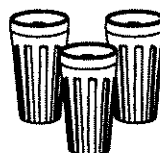

Wire Nuts



Cap Nuts

*PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE


PENDANT LIGHT (ROD)

Assembly Instructions

MODEL#: PND-2206


STEP 1

Screw the rods to the fixture. Make sure to feed the branchwires of the fixture through the rods during assembly. Remove or add rods to adjust the height.

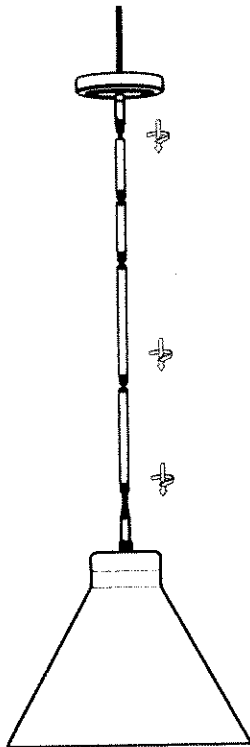

STEP 2


Use the mounting screws to attach the mounting unit to the junction box

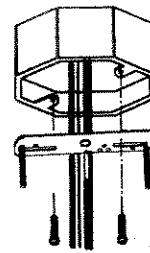


STEP 3

Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts. Secure with electrical tape

Connect Clean, Brown, Gold or Black Parallel Wire without tracer (ground & smooth) or Black Fixture Wire to
Black or Red Supply Wire or Insulated Wire (other than ground) with copper conductor




Connect Clean, Brown, Gold or Black Parallel Wire with tracer (ground & ridged) or White Fixture Wire to
White Supply Wire or Insulated Wire (other than ground) with silver conductor

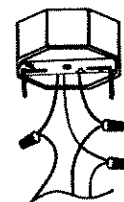

STEP 4


Place the canopy over the mounting unit and secure the fixture with the cap nuts.

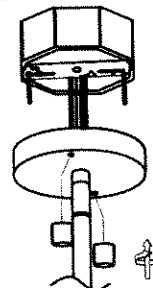

STEP 5


Install bulb (Not included) and Install glass

E26 TYPE A 60W

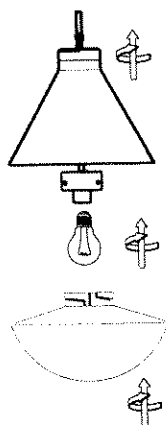

STEP 6

Slide the metal cover down and tighten the nut

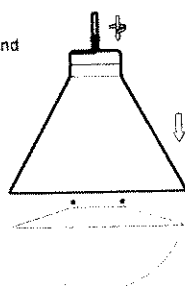

STEP 7

The installation is complete

