
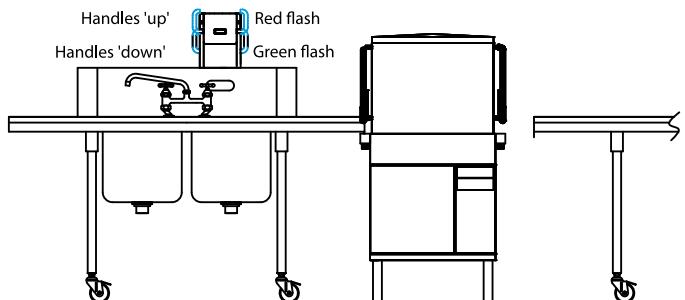
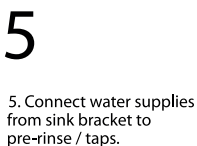
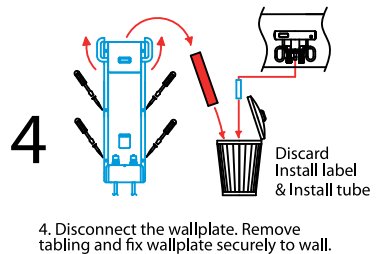
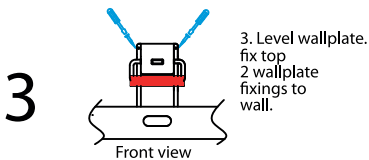
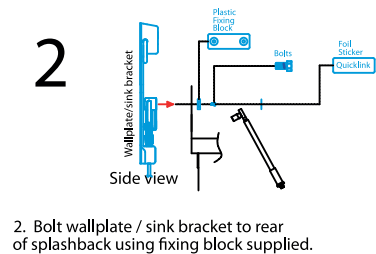
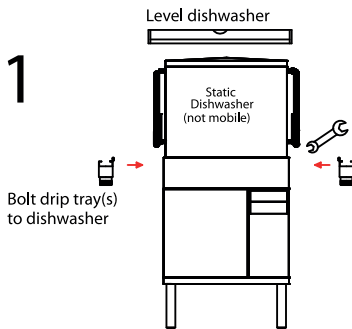


QUICKLINK

QuickLink D / Series 4 INSTALL INSTRUCTIONS


Mark out and drill the splashback at the required position.

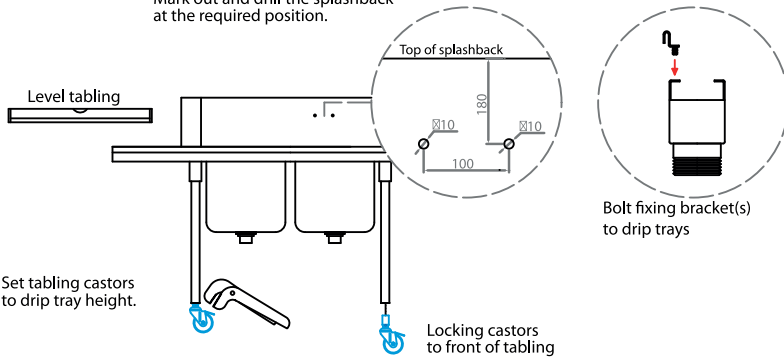

QuickLink D Drain Kit **INSTALL INSTRUCTIONS**


Do not fit drain kit until wallplate and sink bracket have been installed.

6. Apply jointing compound/ tape tighten drain tee onto sink boss so that outlet faces rear of tabling.

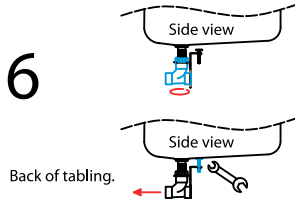

Tighten buffer against underside of bowl
Lock in place.



- 7 Push tapered pipe into drain fitting as far as it will go. Connect the tabling to the wallplate.

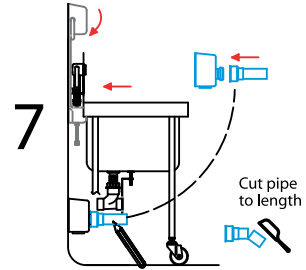

Offer drain fitting against wall.
Mark cut length - allow for socket.

8

- 8 Glue tapered pipe into tee, with shield end facing wall.
Connect tabling back to wallplate.
Mark drain fitting fixing holes and fix to wall.

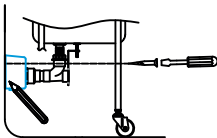


Rotate fitting to suit site drain.



9

- 9 Interconnect drains into open end of tee or cap.

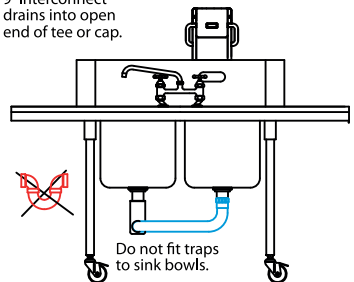


Do not fit traps to sink bowls.

Water / drain connections



Trap must be fitted to drain box.



Ensure all pipework is flushed clear of debris. Service valves should be fitted to supplies. Max. recommended water pressure 3 bar (44psi) Earth bonding connection required. Installation must comply with local authority requirements.

manufactured by **MECHLINE**

MECHLINE DEVELOPMENTS LIMITED | Telephone: +44 (0)1908 261511 | Email: info@mechline.com | Web: www.mechline.com

11/2021 [QL0003]