


JOOVV

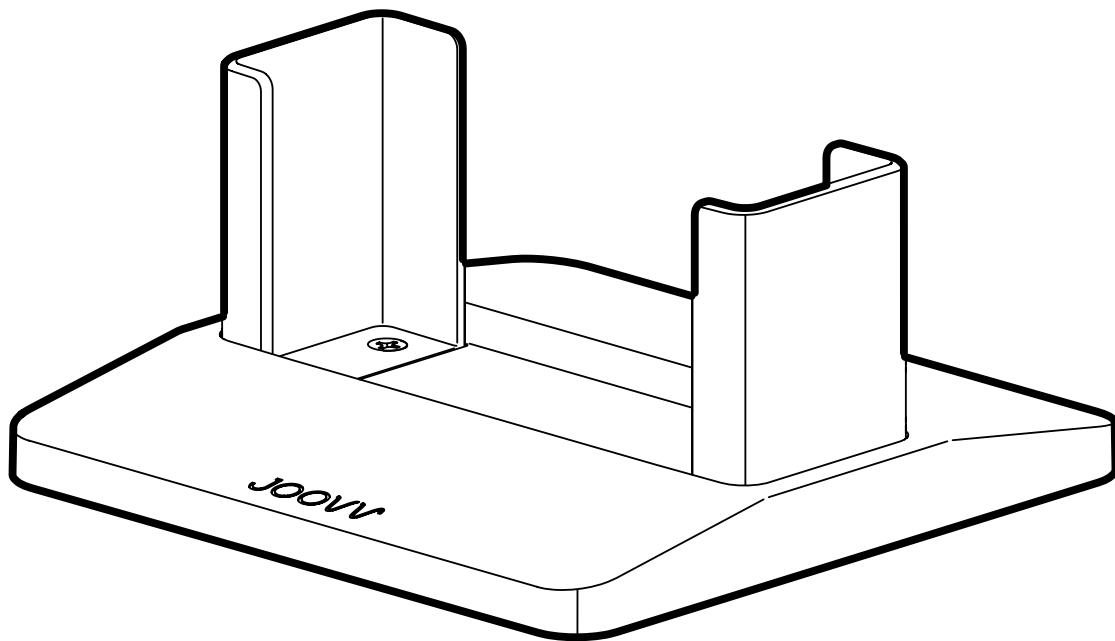


Retrofit Kit, Boot Floor Stand


Quickstart Guide



- A** Boot Spacer
- B** Rear Bumper
- C** 4 mm Screw
- D** Allen Key

3.0 Boot Adapter

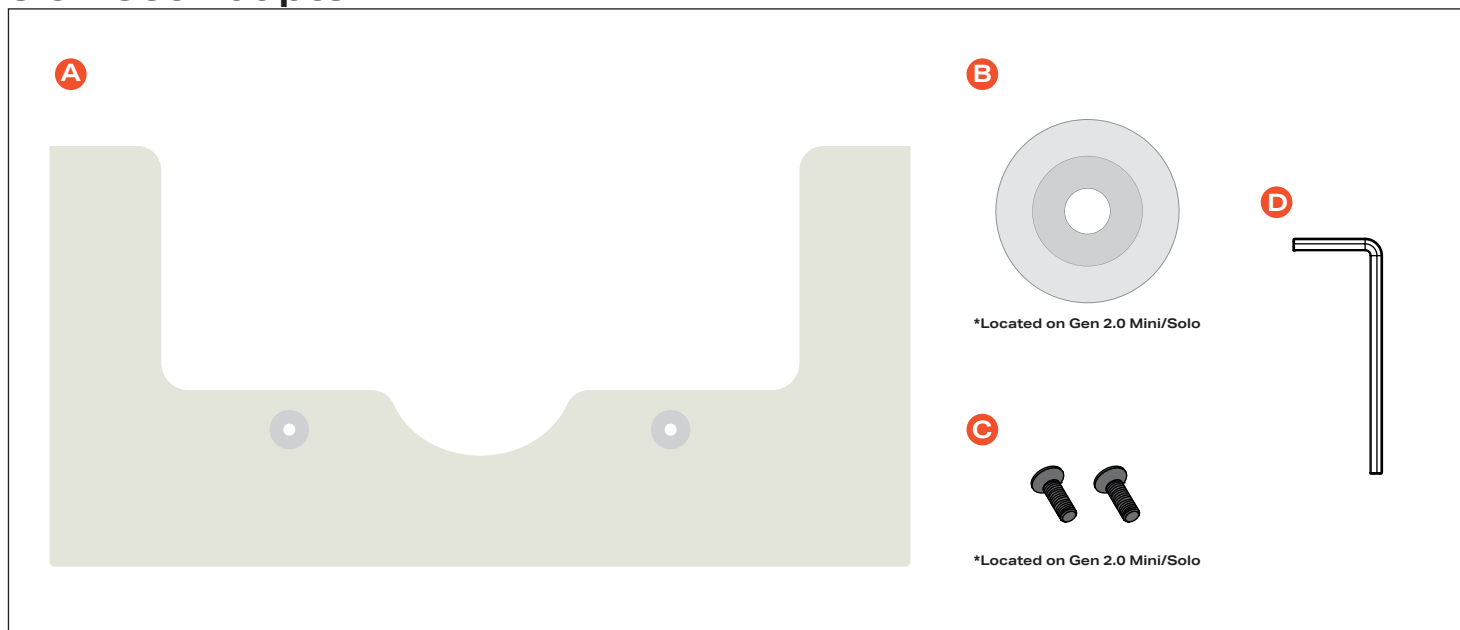

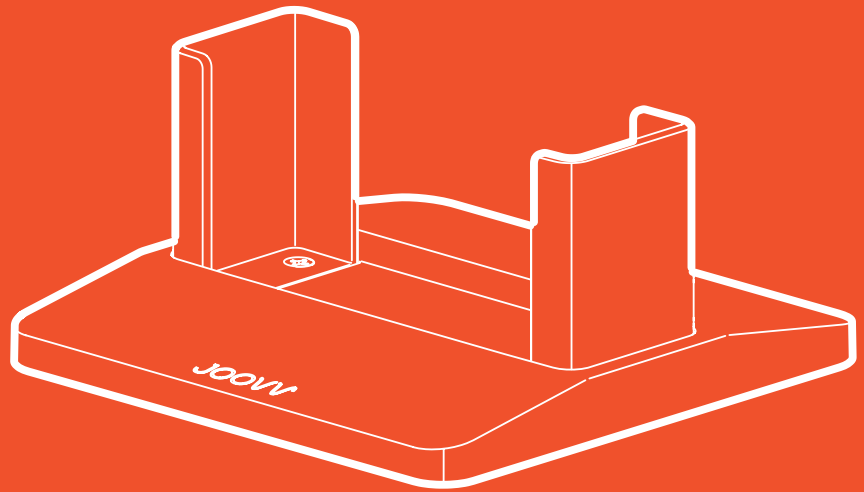

3.0 Boot Adapter

Install Boot Adapter



Step 1

Lay device face down on a scratch free surface. Locate the (2) Rear Bumpers located at the bottom of the device, as shown.



Step 2


Use the included 2.5 mm Allen Key and remove both bottom Rear Bumpers from the device as shown below and retain the two 4 mm screws.

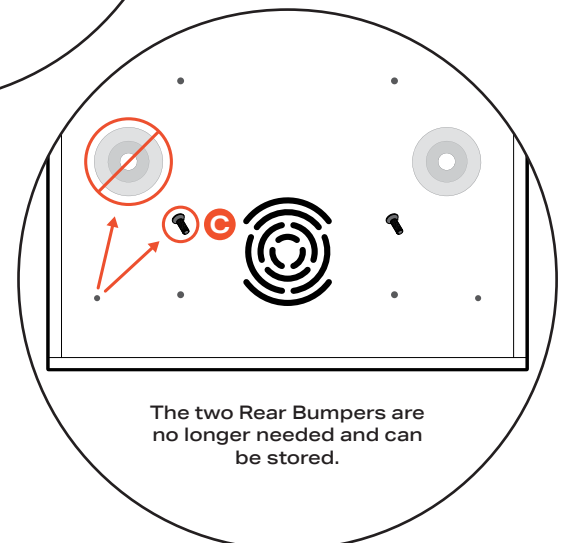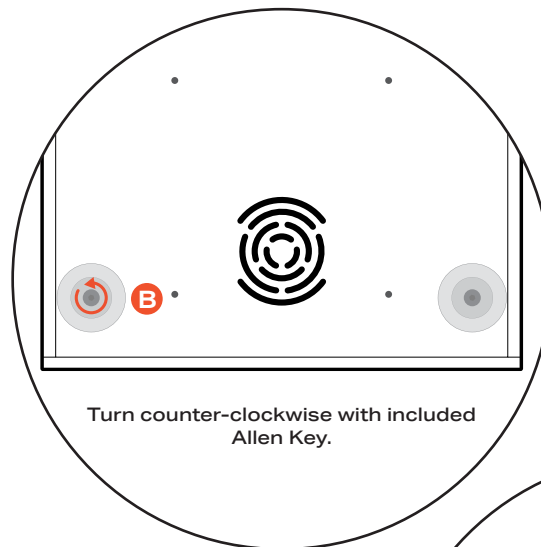

Step 3

Place Boot Spacer onto the bottom of device and align the Boot Spacer holes with the device's.


Using the screws from the Rear Bumpers and included Allen Key, attach Boot Spacer to device securely.

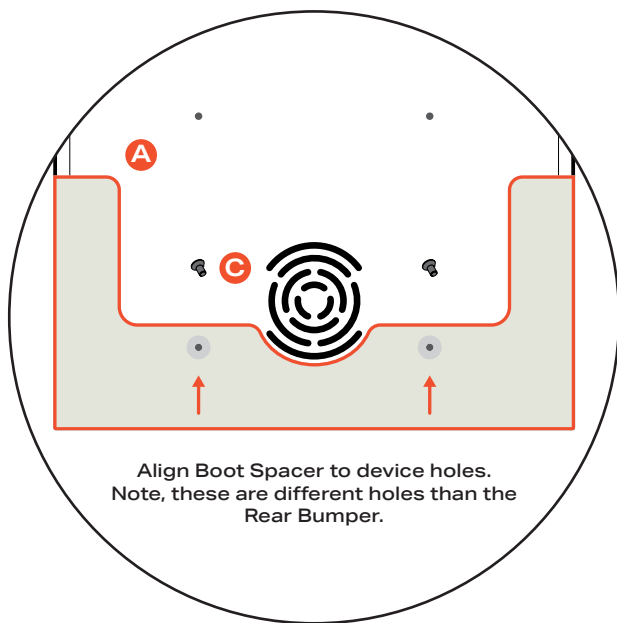


Step 4

Place the device into the Boot Floor Stand by sliding it down from above. The Joovv logo on the stand indicates the front side, and should be on the same side as the device LEDs.

Congratulations, you're now ready to begin using your Joovv device with Boot Floor Stand!

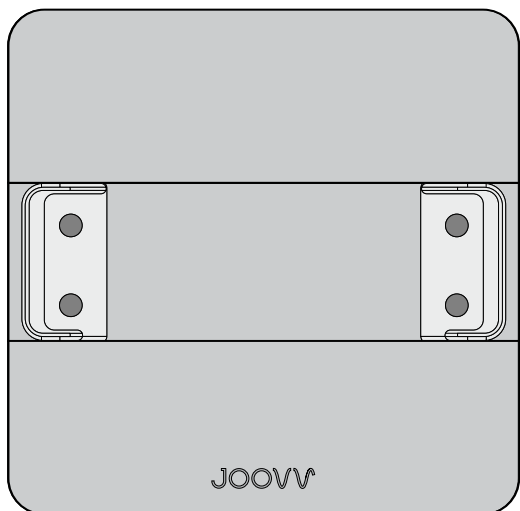

Front

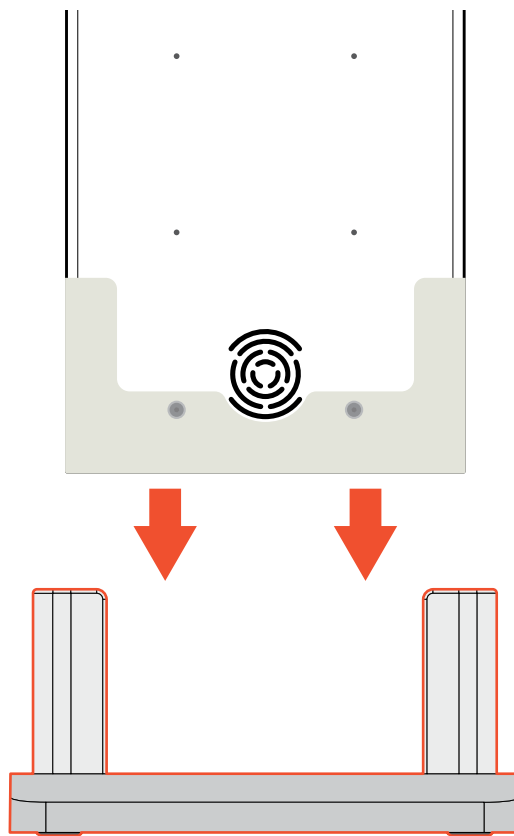

Back view

Revision History		
Date	Revision #	Description of Changes
April 2021	JV-MKT-DOC-3747 (Ver.0)	Ver.0 Release to market
October 2022	JV-MKT-DOC-3747 (Ver.1)	Updated contact information

Warranty

All Joovv mounting accessories are covered by a 2-year limited warranty. Please visit our website at <https://joovv.com/pages/warranty> for details of the limited warranty.

Return Policy

All mounting accessories come with a 14-day return period (60-day return period when purchased as part of a device kit). If you're not satisfied with your purchase within the first 14 days, please visit our website at <https://joovv.com/pages/returns> for additional details.

Contact Information



Joovv, Inc.
 3579 US-50, Suite 307
 Carson City, NV 89701
 USA
 Email us: help@joovv.com
 Website: www.joovv.com
 Online Setup instructions: www.joovv.com/setup

