

RAIN HARVESTING

by Blue Mountain Co

Flanged Tank

Overflow Kits



Installation and Specification Guide

PRODUCT DETAILS

An all-inclusive, flanged overflow kit for use with flat wall tanks. Keep out pests with the mosquito proof screen and keep your water flowing freely with the overflow fitting.

The straight-through design sets the overflow level at the base of the fitting, which connects directly to the supplied mosquito-proof screen.

Code	Size	Country
TATO64	50mm	Australia
TATO45	90mm	
TATO66	90mm	
TATO24	100mm	New Zealand
TATO24	100mm	



Installation

WHAT'S IN THE BOX?

- Mozzie Stoppa Original
- Standard Tank Overflow
- Rubber Gasket
- Stainless Steel screws

TOOLS/MATERIALS YOU MAY REQUIRE

- Marker pen
- Hole saw
- Drill
- Screwdriver
- Sealant
- Solvent Weld glue

NOTE: If space is available consider a High Level Tank Overflow to increase the storage in your rainwater tank.

TANK OVERFLOW KIT

1 - If you do not have an existing tank overflow hole in your tank, use your tank overflow outlet as a template to mark the size of the hole you need to cut in the side of your tank, then cut using a hole saw. Ensure that the bottom of the hole you cut sits lower than the bottom of the tank inlet and/or tank inlet screen.

2 - Ensure that the gasket is fitted firmly around the tank overflow fitting, then push it in place inside the tank overflow hole.


3 - Hold the overflow outlet as you screw it in place, applying equal force to each screw. We recommend alternating between each screw, screwing on opposite sides, and avoiding fully tightening the screws until the end. Be sure not to overtighten the gasket.

4 - To install your Mozzie Stoppa Original, simply press into your tank overflow outlet. DO NOT GLUE IT IN PLACE.



Product Specifications

Flanged Tank Overflow Kit

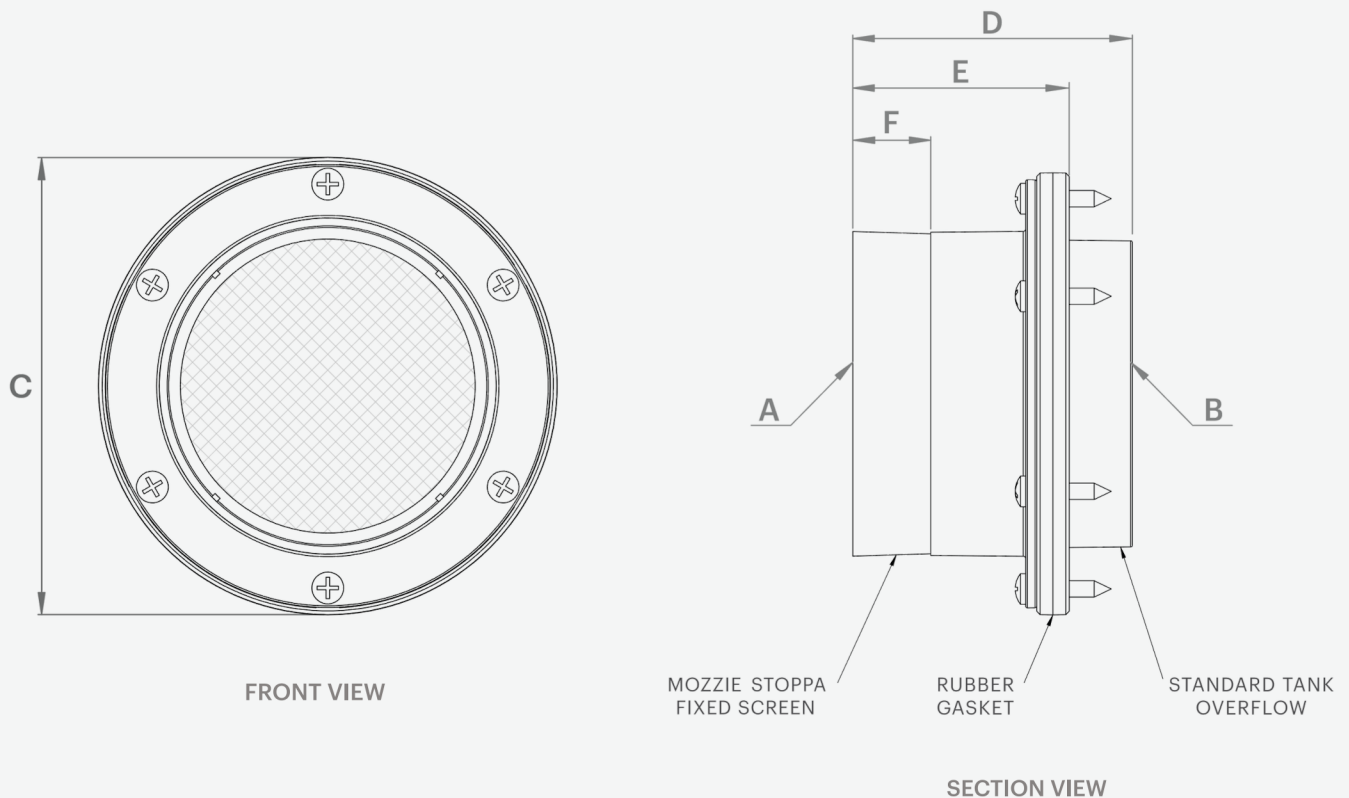

COUNTRY	CODE	A	B	C	D	E	F	Recommended Tank Hole Size
Australia	TATO64	50 F	50 M	91	82	64	21	59
	TATO45	90 F	90 M	129	82	63	23	95
	TATO66	90 F	90 F	129	82	63	23	95
	TATO24	100 F	100 F	147	110	78	55	121
New Zealand	TATO24	100 F	100 F	147	110	78	55	121

All dimensions are in mm unless otherwise stated.

Fitting guide:

F = Female / Socket Fitting

M = Male / Spigot Fitting (Pipe size)

IP = In-Pipe Fitting



Maintenance

We recommend regularly cleaning your Mozzie Stoppa Original to prevent the mosquito-proof screen from becoming clogged or blocked with sediments and debris.

To clean, remove your Mozzie Stoppa Original from your tank overflow outlet. Replace the Mozzie Stoppa Original immediately after cleaning by pressing it back into your tank overflow outlet.



A common misconception about collecting rainwater is that all you need is a roof, a tank and some rain. This 'tanking' approach cannot always be relied on to deliver the volume – or quality – of water that you require. That is where we can help.

With some thought, your rain harvesting system can provide you with cleaner water and lots of it. Whether you're completely reliant on tank water or wanting to keep the garden green, our simple steps will help you achieve your goal.

The Rain Harvesting approach to rainwater collection involves using tested and proven products to make quality rainwater available for use in and around your property. You don't need much to get started and you will be surprised how easy it is to get the most out of your rainwater system.

[How can we help you?](#)

DISCLAIMER This product specification is not a complete guide to product usage. Further information is available from Rain Harvesting Pty Ltd and from the Installation and Operating Instructions. This specification sheet must be read in conjunction with the Installation and Operating Instructions and all applicable statutory requirement. Product specifications may change without notice. © Rain Harvesting Pty Ltd



RAIN HARVESTING

by Blue Mountain Co

For more information or to find out
how we can help, just give us a call on

+61 7 3248 9600

Or visit our website at

rainharvesting.com

