


ES-ABD 21/22

White / Black

EN

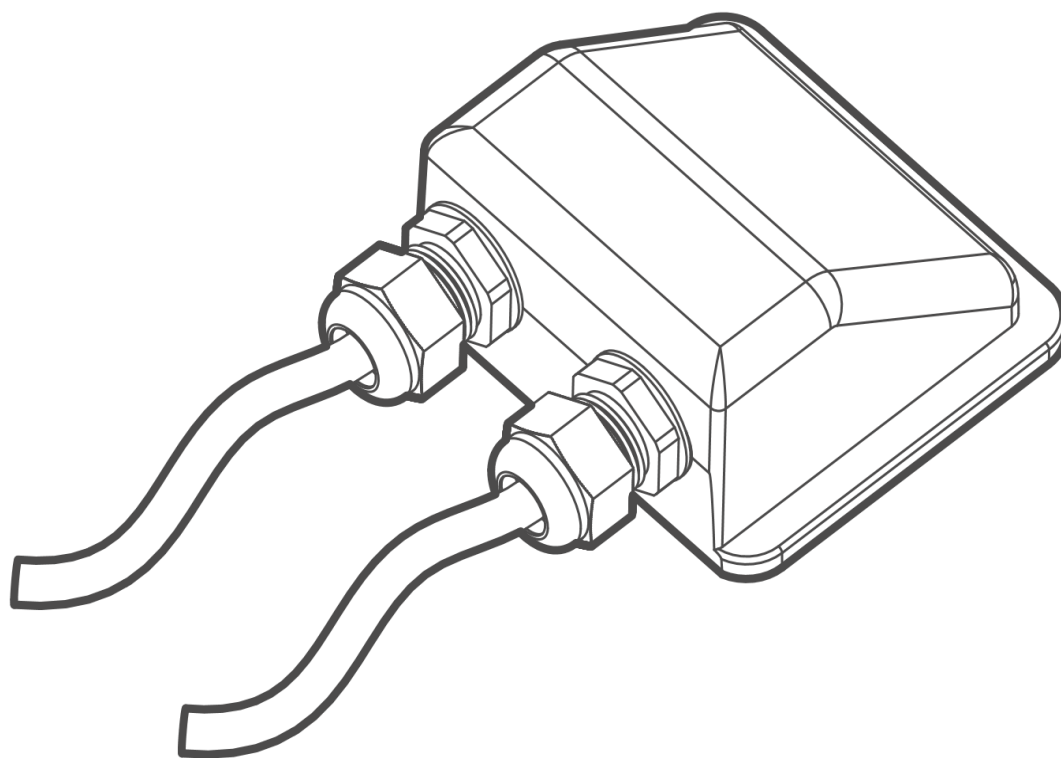

5301002


5302002



ES-ABD 21/22

enjoysolar® ABS double Cable Entry Gland

Dimension(mm)

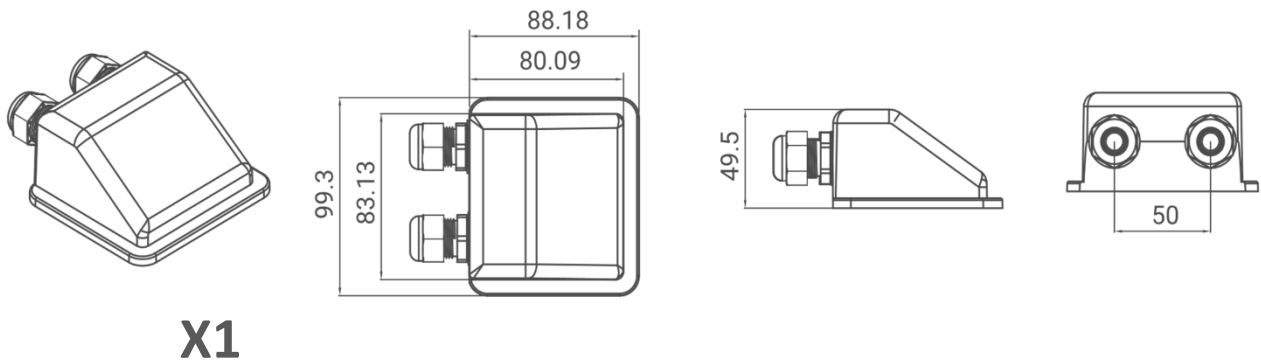

Prepare for assembly


Tools (not incl.)



Sikaflex® - 554 construction adhesive


Tipps:

Surfaces must be clean, dry and free from all traces of grease, oil, wax and dust.

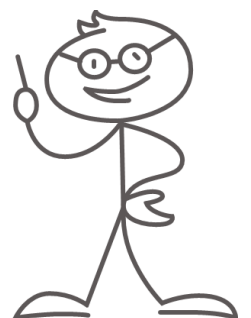


Assembly instructions

1 Remove the bolt head from casing

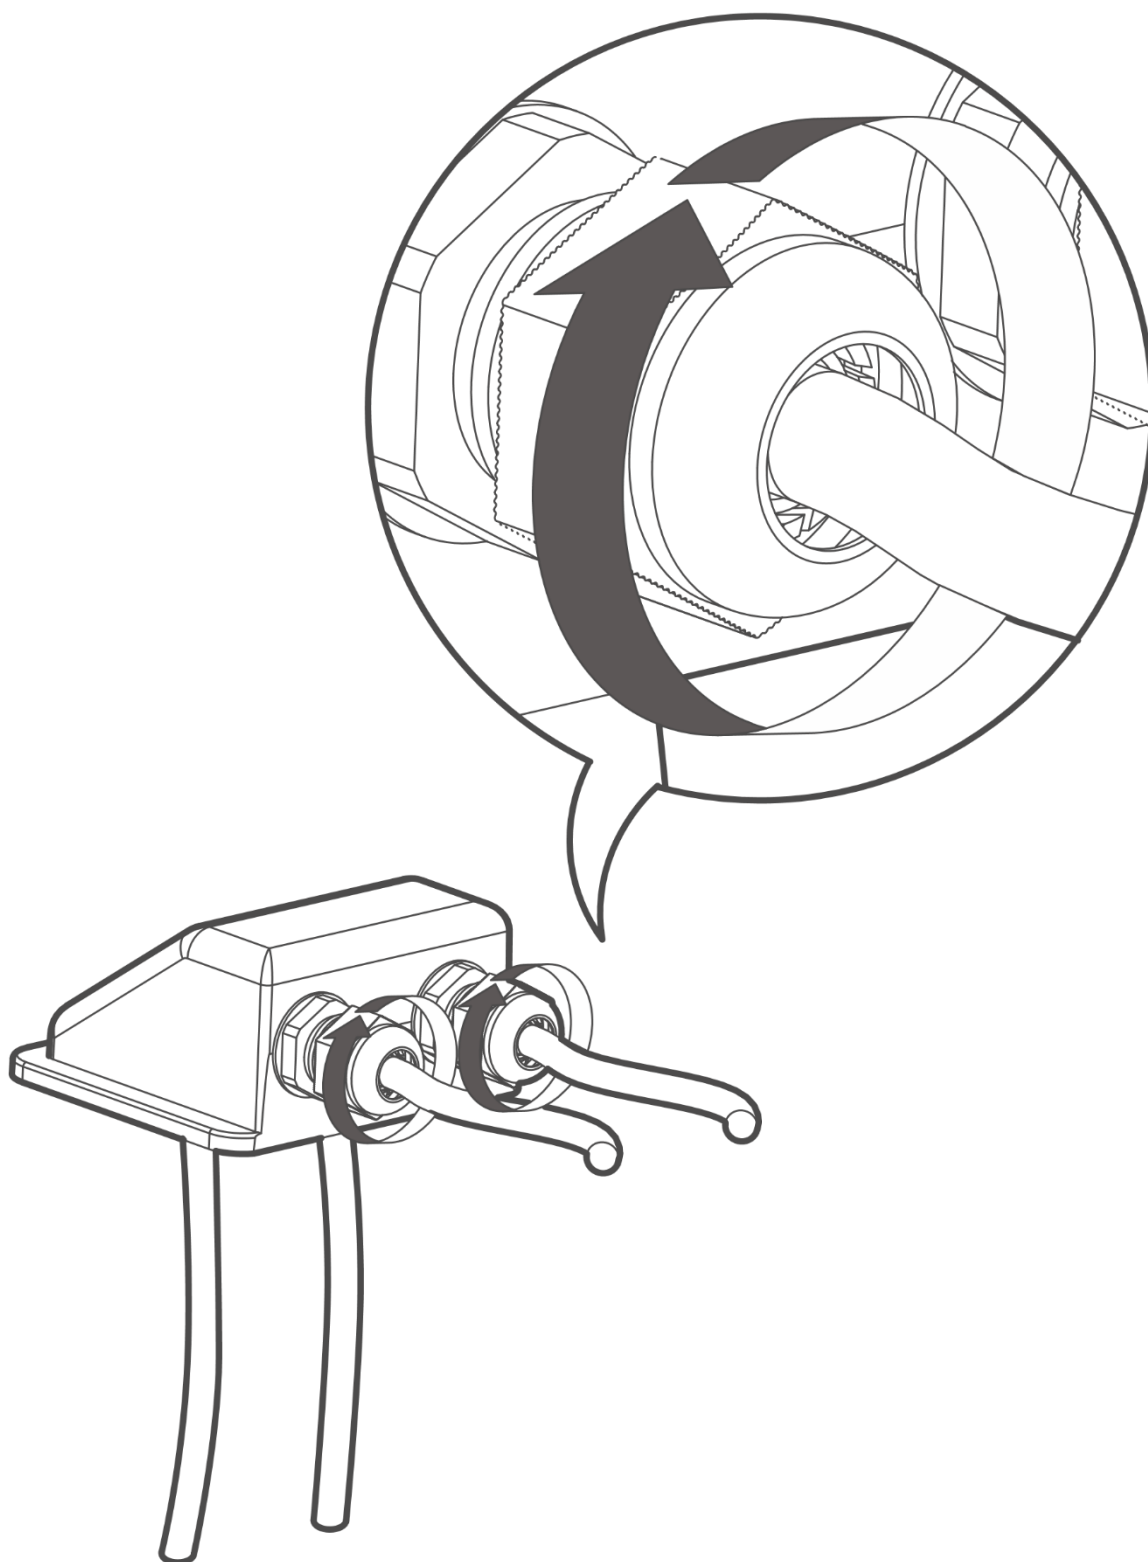


2

Apply the Sikaflex®-554 construction adhesive

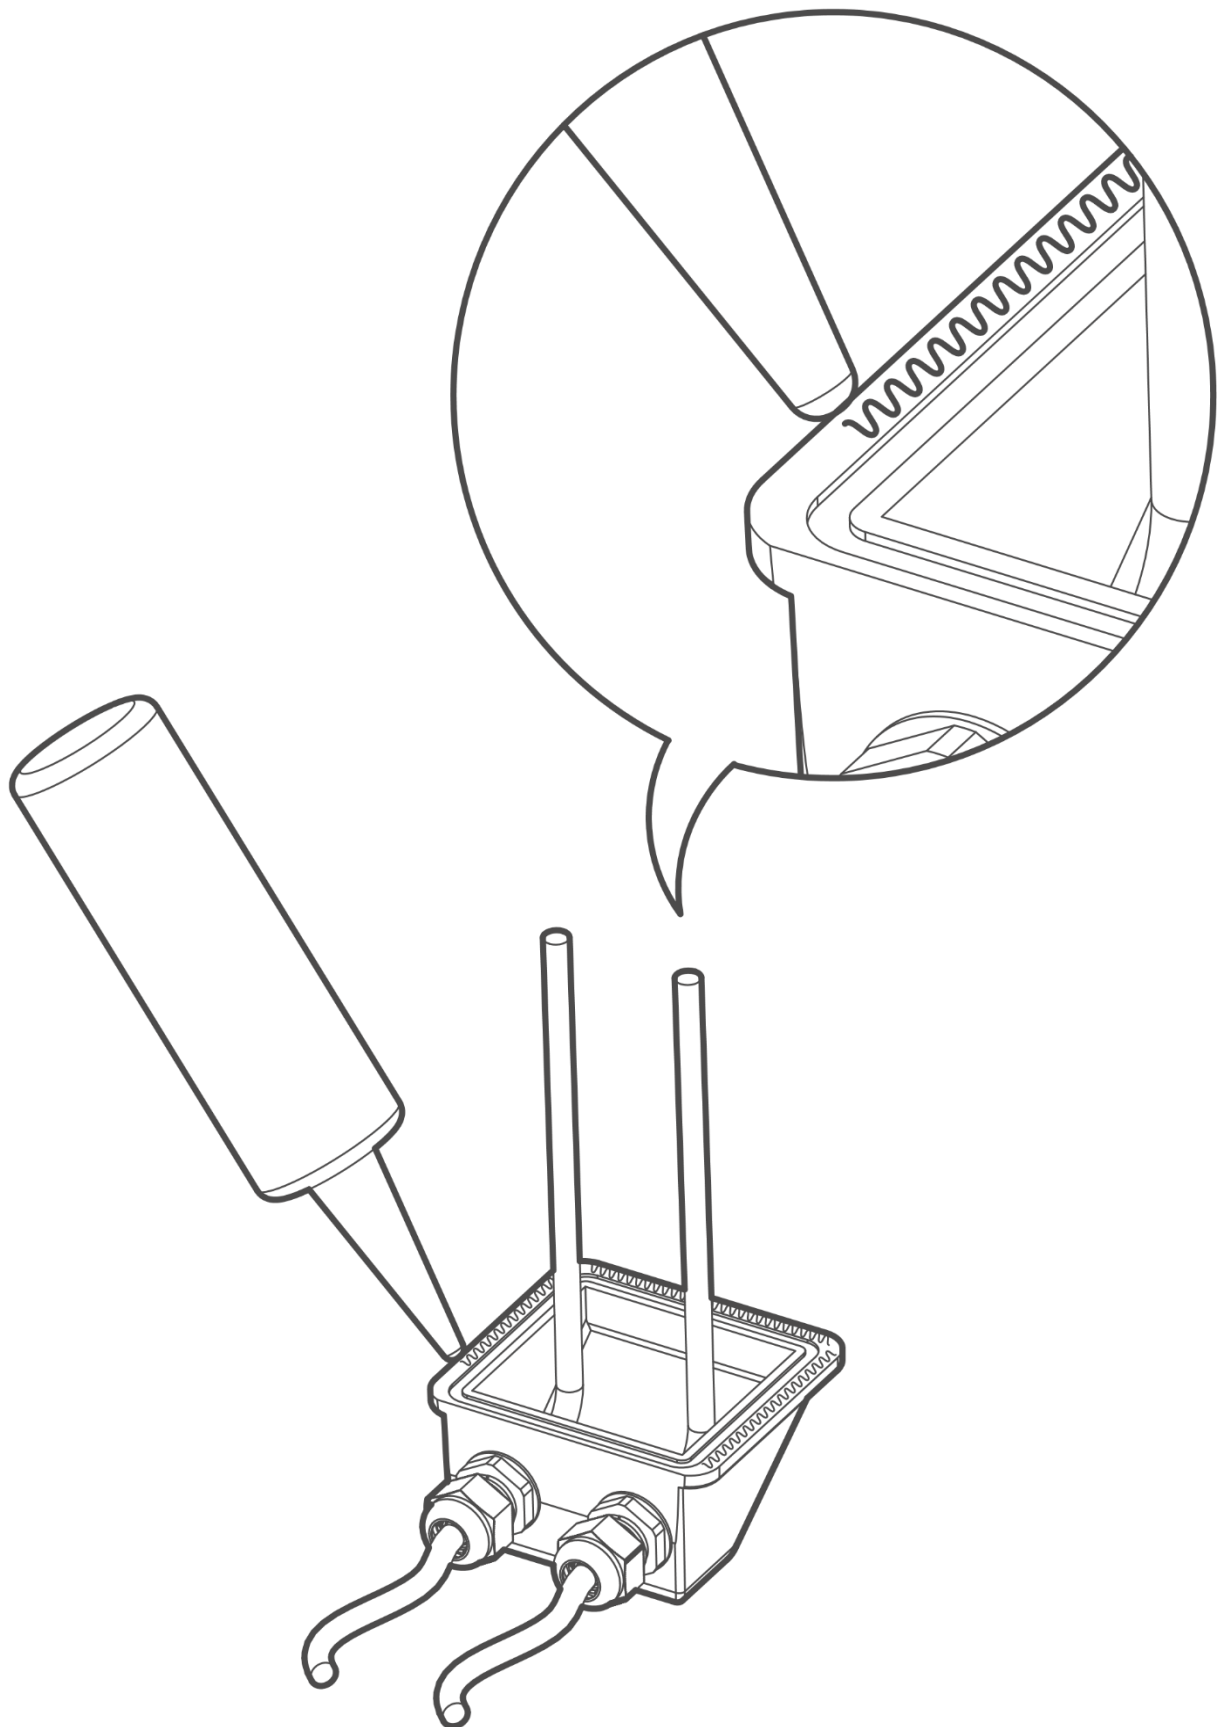


3

Draw the cables through then glue with Sikaflex-554 construction adhesive

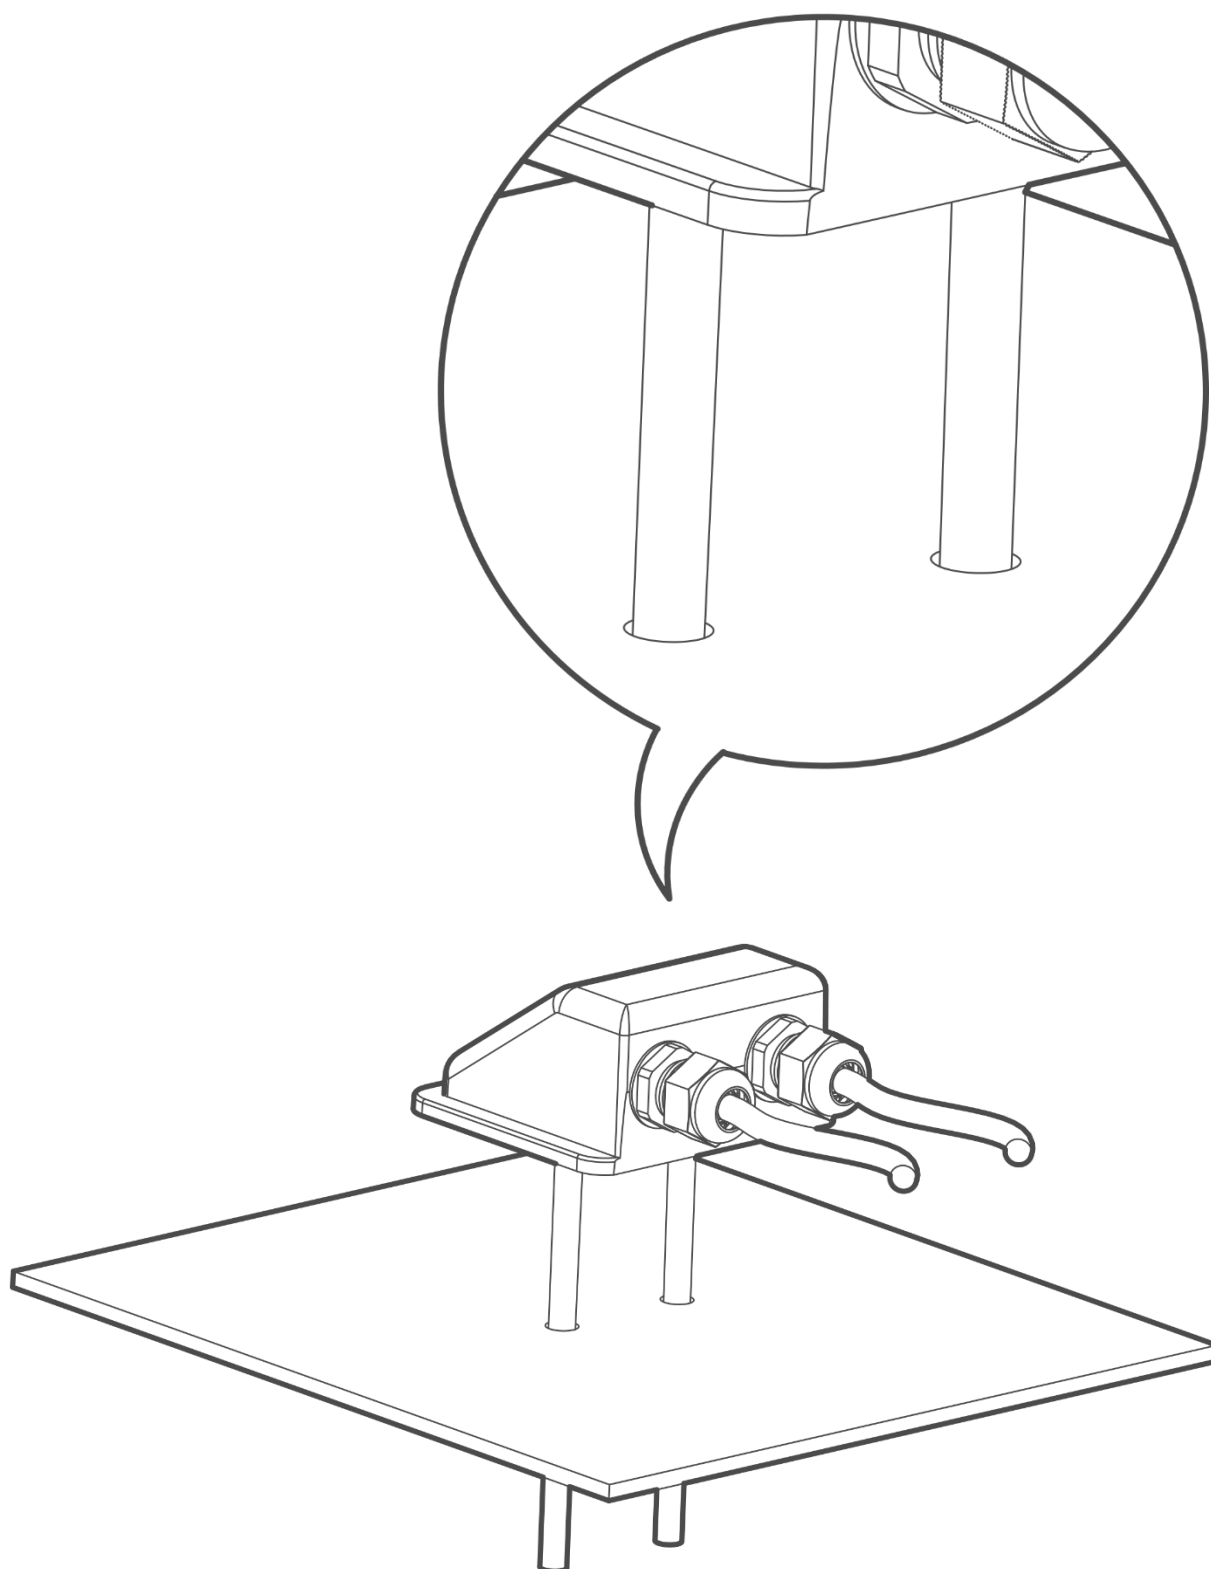

4

Done!

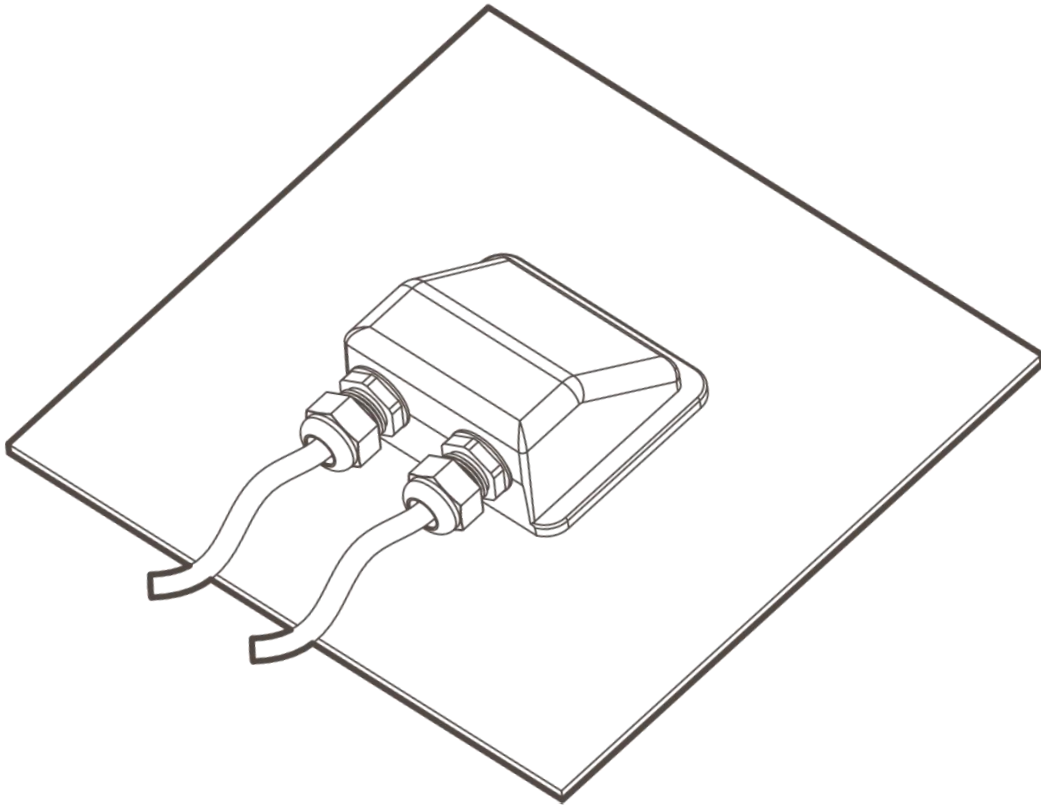

Power your life !



SolarV GmbH
info@solarv.de
www.solarv.de

