


5-1/4"W Capiz & Metal Tiered Wall Sconce, Matte Gold EC1251

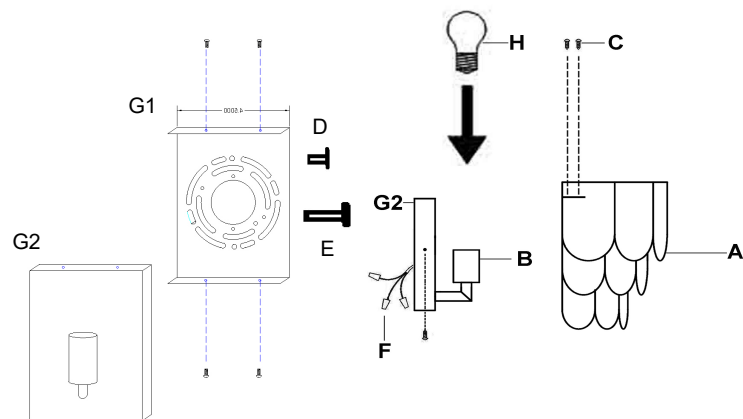

Parts required (all parts included inside package unless otherwise indicated. Please check packaging for parts.)

1 pc fixture (A)	2 pcs mounting screws (E)
1 pc lamp holder (B)	3 pcs plastic wire connectors (F)
3 pcs canopy screws (C)	1 set shoebox canopy G)- (G1 and G2)
1 pc ground screw (D)	1 pc bulb (H) - not included

Tools Required: (not included)

1. Electrical Tape
2. Philips Screwdriver
3. Wire Cutters
4. Pliers
5. Step Ladder

Before installing fixture, make sure the power to the circuit is TURNED OFF at the main FUSE BOX / CIRCUIT BREAKER utility box.

IMPORTANT SAFETY INSTRUCTIONS:

These instructions are provided for your safety. Read carefully and completely before beginning the assembly and installation.

- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- PROFESSIONAL INSTALLATION REQUIRED.** It is recommended that two (2) people install this lighting fixture.
- The lighting fixture is meant for indoor use, damp or dry location.
- It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- This fixture has been rated for one (1) 7watt maximum TYPE B standard incandescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.**
- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.

- Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

PRE-ASSEMBLY:

- Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents from the packaging until after assembly is complete, to avoid accidentally discarding small parts or hardware.
- Carefully unpack all fixture parts and hardware and lay out on a clear workspace.

INSTALLATION INSTRUCTIONS:

- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
- Separate Shoebox Canopy (G) from fixture (A) by removing the three small screws (C). Do not discard small screws (C), as these will be used later.
- Separate Shoebox Canopy (G), G1 and G2.
- Gently pull existing wire down from the wall junction box and allow it to hang.
- Attach the Shoebox Canopy (G2) to the ceiling outlet box using the J-box Mounting Screws (E). Tighten screws with a screwdriver.
- Carefully inspect the Fixture's wires. The **NEUTRAL FIXTURE WIRE** is White insulation. The **HOT FIXTURE WIRE** is Black insulation, and the **GROUND WIRE** is Green-Yellow insulation. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
- Attach the **GROUND WIRE** from the fixture to the GROUND JUNCTION BOX WIRE from the outlet junction box (J-box) (usually green insulation or bare wire). Fasten each together with a Plastic Wire Connector (F) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT have a GROUND WIRE, be sure to insert the Green Ground Screw (D) into Shoebox Canopy (G2) marked as "GND" and wrap the fixture's bare ground wire around the Green Ground Screw (D). **IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME IS PROPERLY GROUNDED!**
- Connect the **NEUTRAL FIXTURE WIRE** to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Plastic Wire Connector (F) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
- Connect the **HOT FIXTURE WIRE** to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Plastic Wire Connector (F) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- Gently tuck the wire connections neatly into the Shoebox Canopy (G).
- Attached shoebox Canopy (G1) at Shoebox canopy (G2), insert small screw (C) at the bottom and tighten with a screwdriver.
- Attached Shoebox Canopy (G) into Fixture (A). Insert the two small screws (C) and tighten with a screwdriver.
- Insert one (1) 7-watt bulb (not included).
- Restore power to junction box and test fixture.
- Installation is complete.

CARE INSTRUCTIONS:

- Always turn off power to fixture.
- Wipe clean with a soft, dry cloth or static duster.
- Do not use harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

MADE IN PHILIPPINES