


Anson - Deluxe Executive Desk

ANS-DRD




ASSEMBLY INSTRUCTIONS


Anson
Executive Desk &
Return Credenza

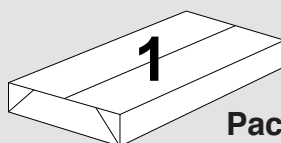


Pack 1:
Top Pack

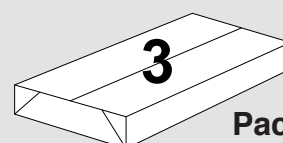


Pack 3:
Corner Kit

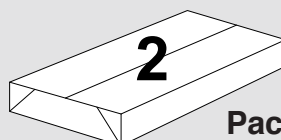


Pack 2:
Rail Kit

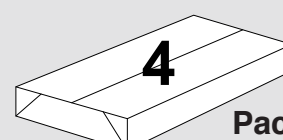


Pack 4:
1000 Leg
Kit

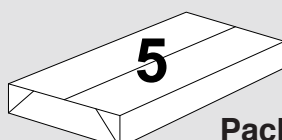

Pack 5:
600 Leg Kit

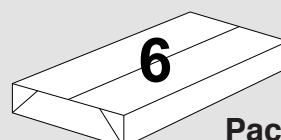


Pack 6:
Modesty Kit


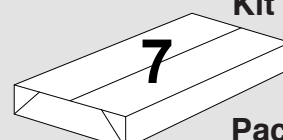


Pack 7:
Modesty
Pack



TOOLS REQUIRED
FOR ASSEMBLY

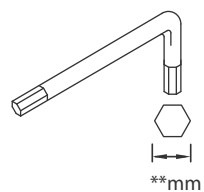


DONT STRUGGLE
2 MAN LIFT

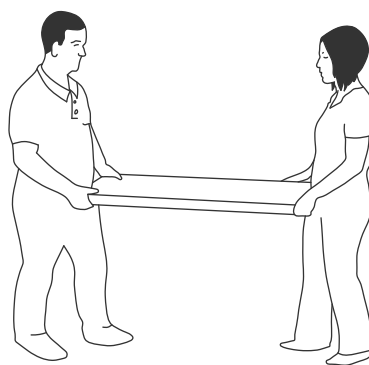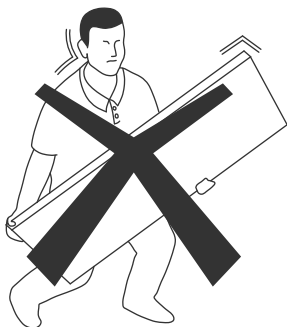


ALWAYS HANDLE
ITEMS WITH CARE

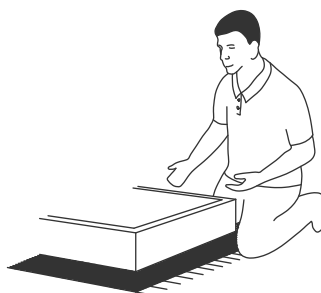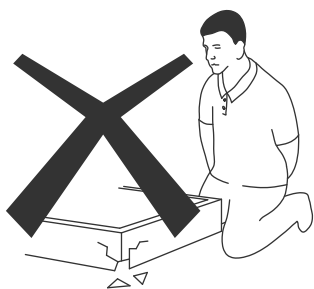

IF UNSURE CALL
FOR ASSISTANCE

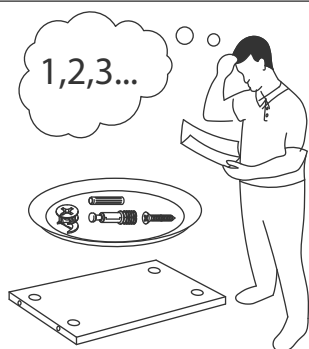


KEEP FITTINGS AWAY
FROM CHILDREN

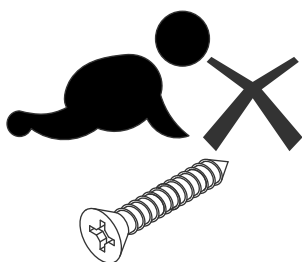




Please check that you have all the panels

ANS-EXEC-TOP

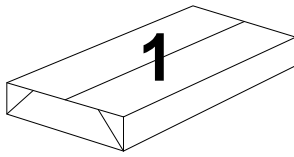


PACK 1:
1 x Top Panel


HN-RAIL-2200

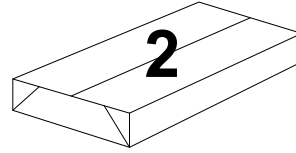

PACK 2:
1 x Rail Kit

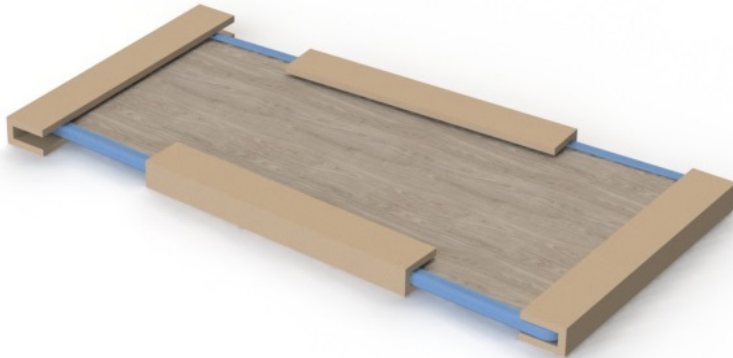


HN-CAST

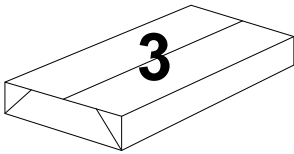


PACK 3:
1 x Corner Kit

HN-LEG10-KIT

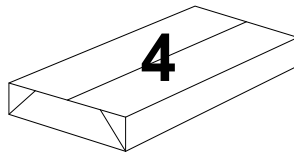


PACK 4:
1 x 1000 Leg Kit


HN-LEG6-KIT

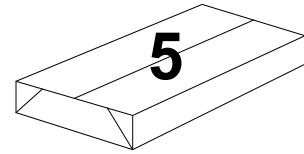

PACK 5:
1 x Support Kit

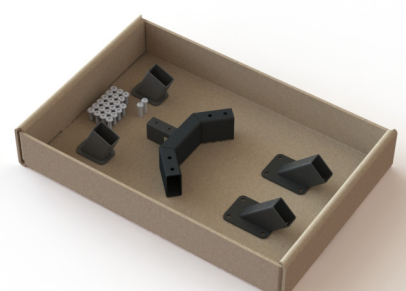


HN-MBKT-KIT

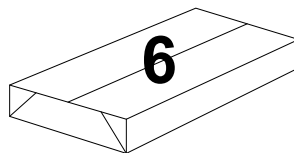


PACK 6:
1 x Modesty Kit

ANS-EXEC-DMOD

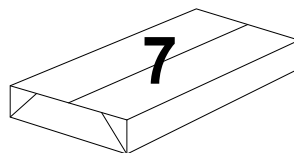

PACK 7:
1 x Modesty Panel

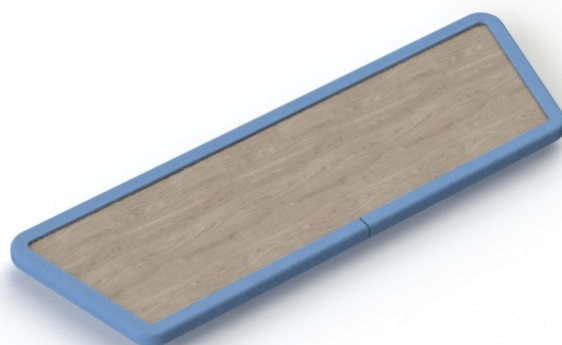



Please check that you have all the fittings

FITTINGS SUPPLIED



M6 Connector Bolt

Size
25mm

PCS
58



Adjustable Foot

Size
25mm dia.

PCS
4


1

ANSON DELUXE DESK & RETURN ASSEMBLY

Step 1

Unpack your Anson rectangular desk and please recycle all packaging.

Place the top face down so that the fixing holes are face-up.

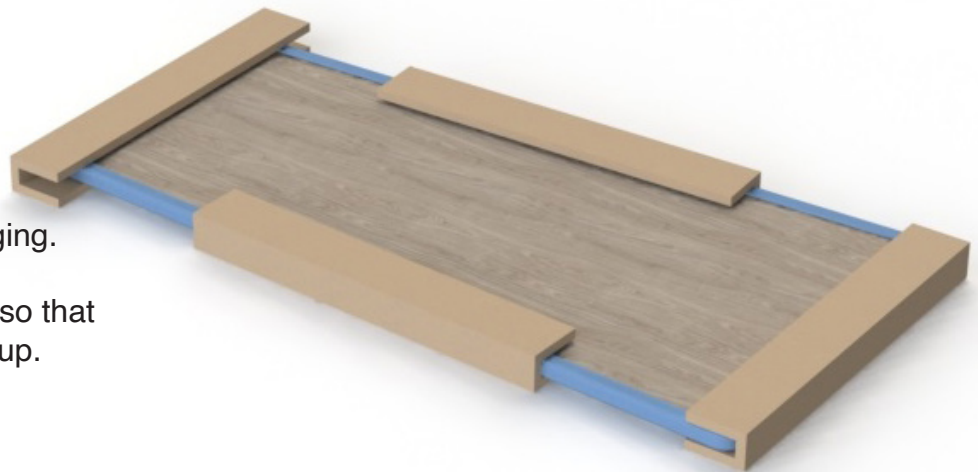

2

image 'a'.

image 'b'.

Step 2

Assemble the legs as per 'image a' using parts from both leg kit & corner kit.

Link all the legs together attaching them to the side rail as per 'image b'



ANSON DELUXE DESK & RETURN ASSEMBLY

3

Step 3

Link both the end leg & top support together attaching them with the rail kit as per image



Ensure all fixing bolts are tightened turning in a clockwise position.



4

Step 4


Once the frame is assembled place on the underside of the top and affix using the 16x M6 bolts as shown.

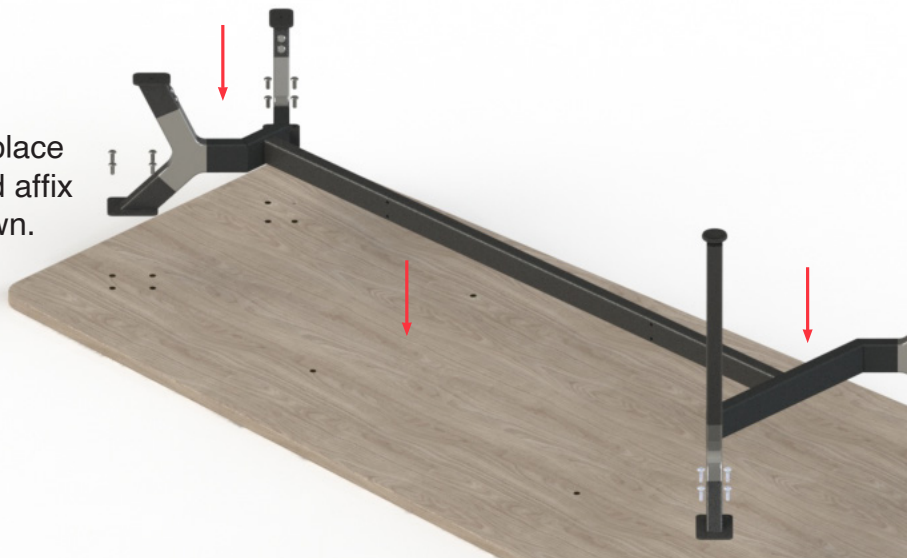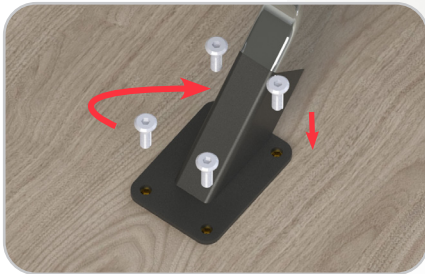

5

Step 5

Attach the modesty panel fixing brackets by hooking onto the cross rail and affix using the 4x M6 bolts as shown.

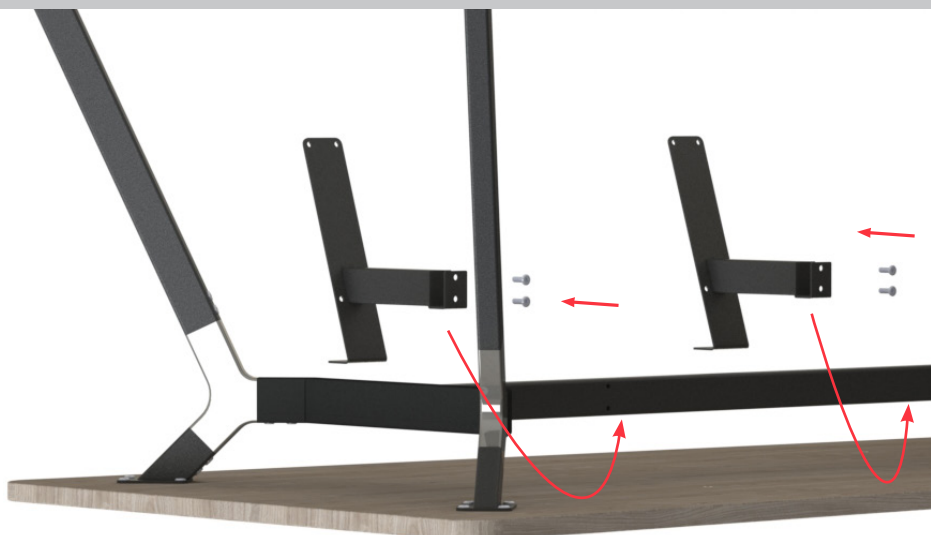


ANSON DELUXE DESK & RETURN ASSEMBLY

6

Step 6

Fix the modesty brackets to the underside of the top and affix using the 2x M6 bolts as shown.

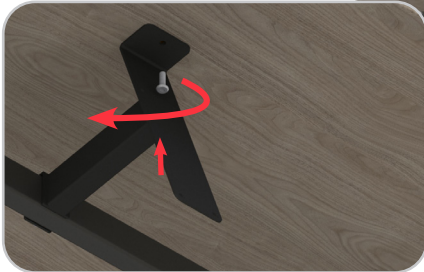

7

Step 7

Align the modesty panel to the modesty panel brackets and affix using the 8x M6 bolts as shown.



8

Step 8

Un-pack and place the return credenza unit into location, drill through the 2x holes located on the underside of the top panel as shown either:

R = Right handed
L = Left handed



ANSON DELUXE DESK & RETURN ASSEMBLY

9

Step 9


With 2x person(s) lift and turnover the desk into it's upright position and place on the top of the credenza.



10

Step 10

Align the support end with the desired holes located on the underside of the top and affix using the 2x M6 bolts provided.

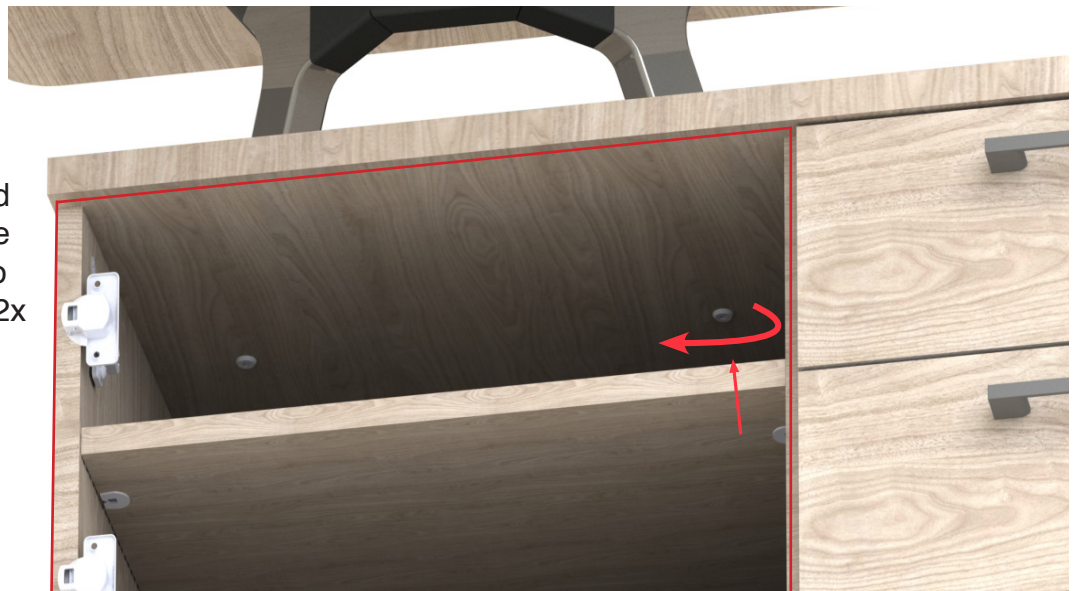

11

Step 11

Once complete ensure all fixings bolts are tightened.

