


Item# 1006 663 463

Model# A111016800

HAMPTON BAY®

USE AND CARE GUIDE

SEAGROVE REPLACEMENT CANOPY FOR 10 FT. X 12 FT. OCTAGONAL GAZEBO

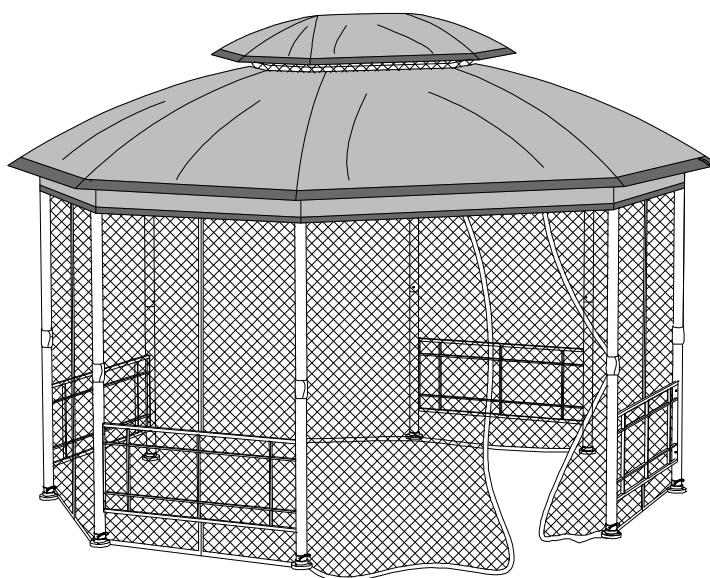

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this gazebo. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!




Assembly

1 Removing the Small Roof Oblique Beam

- Remove the small roof oblique beam (G) from the upper oblique beam (D1) (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

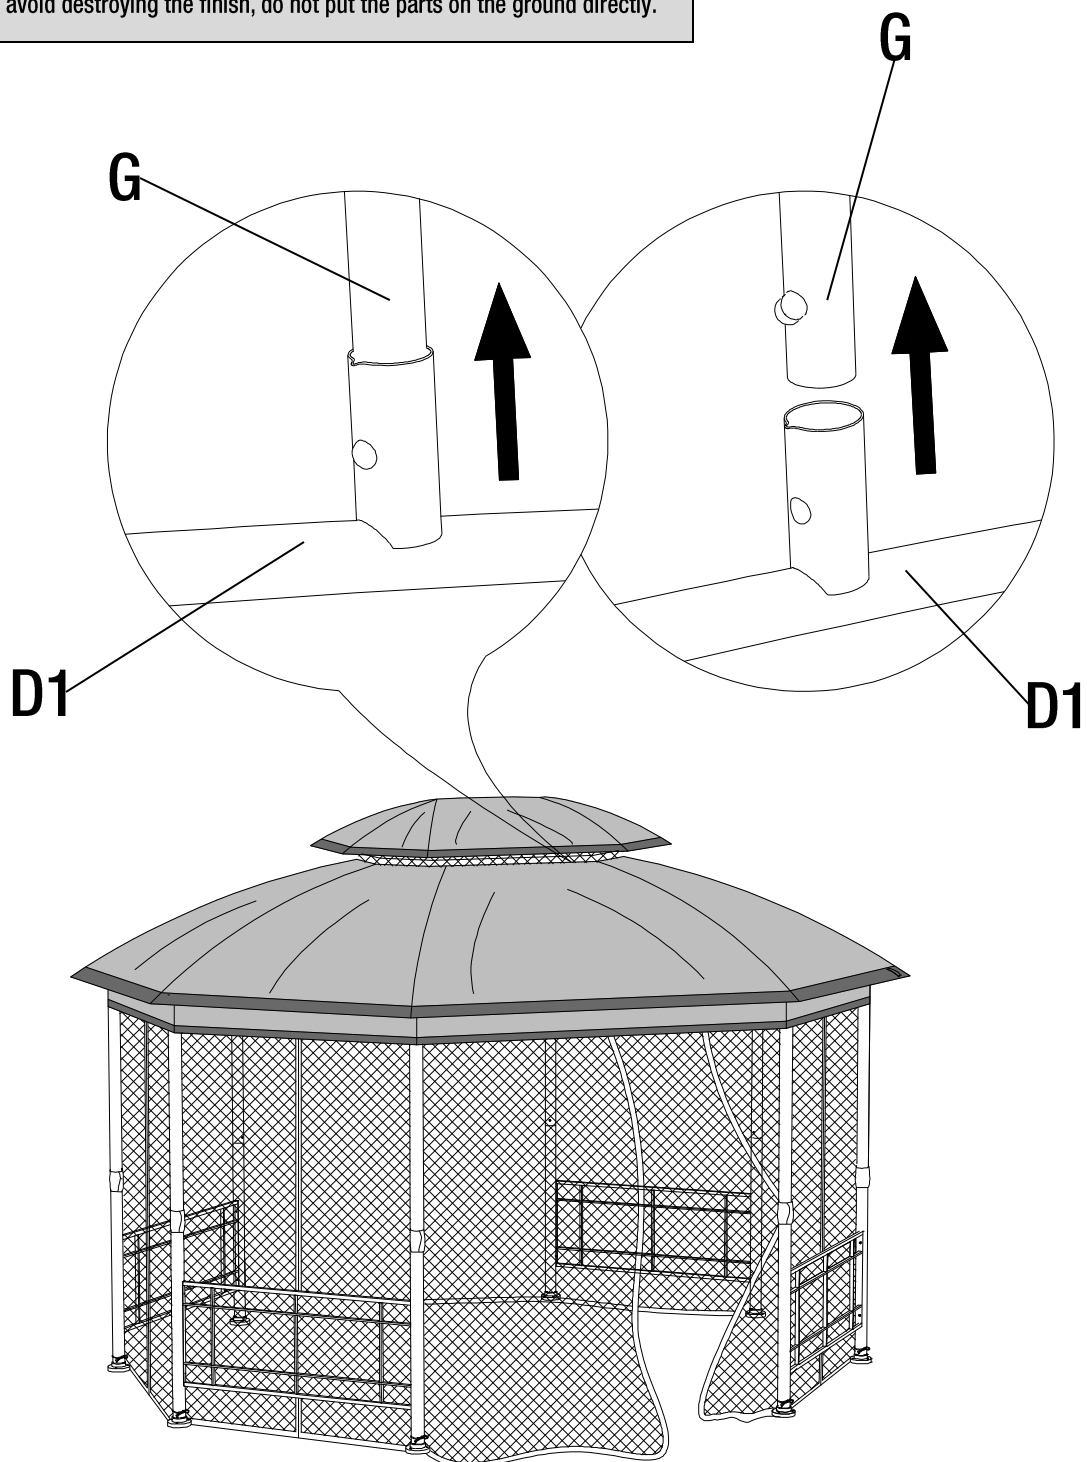


Assembly (continued)

2 Remove the Small Canopy

- Remove the old small roof canopy (M) from the small roof oblique beam (G), and untie the Velcro, (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

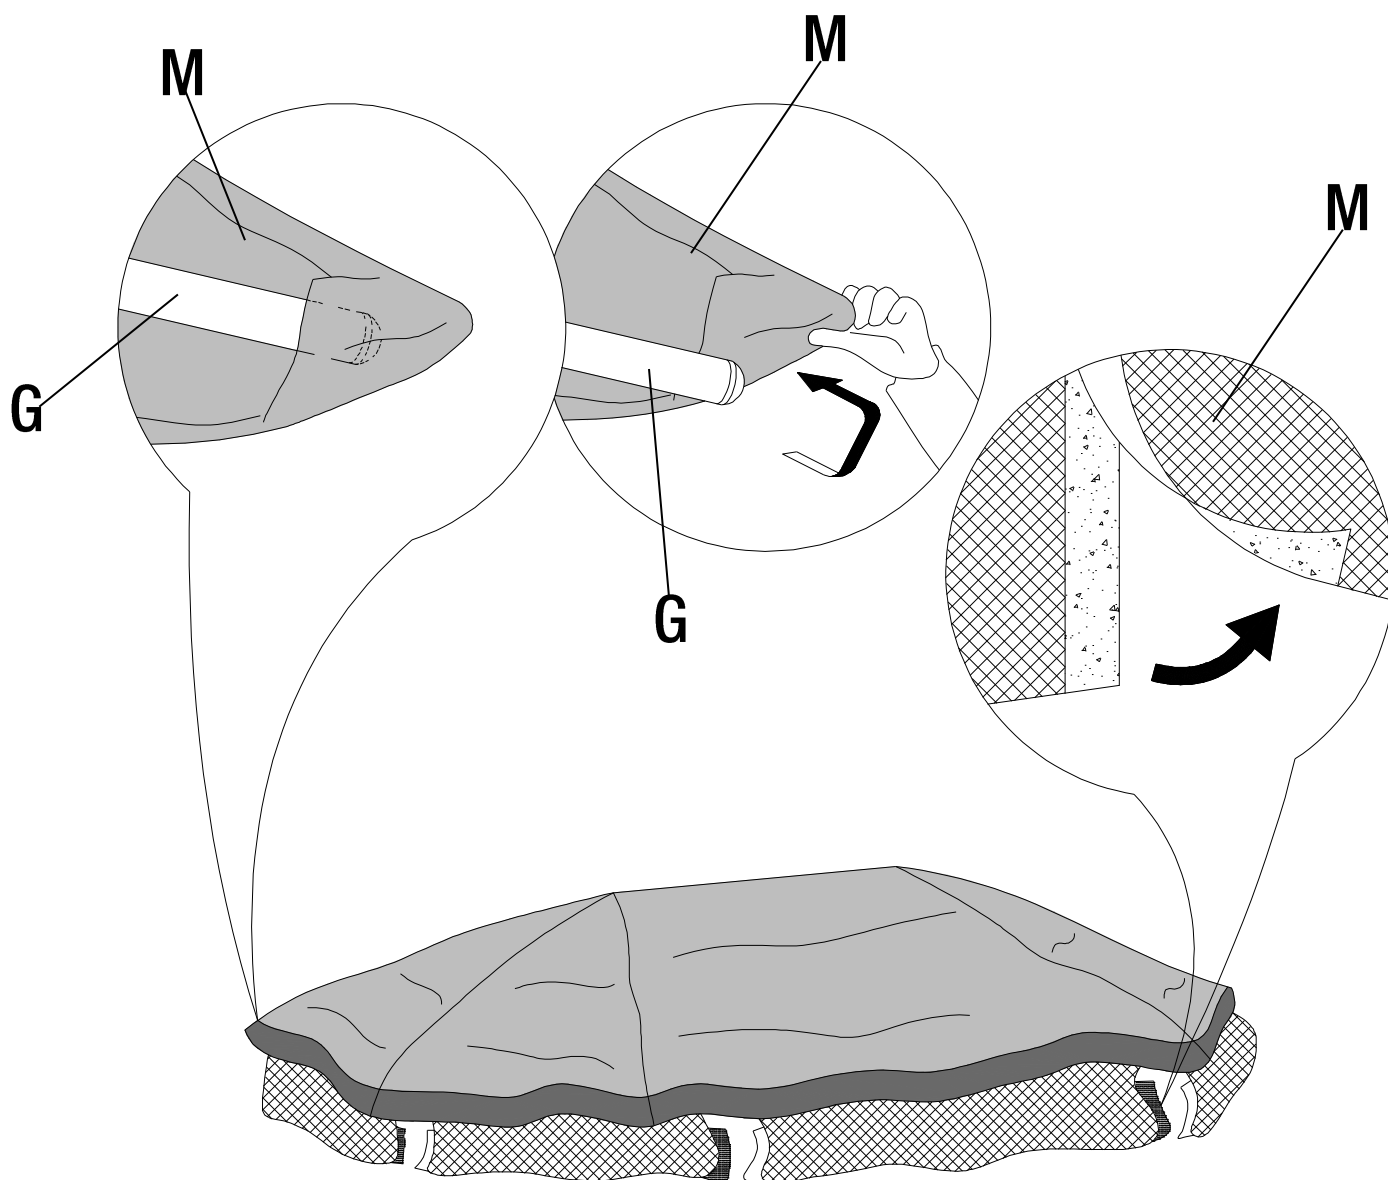


3 Assembling the Small Canopy

- Spread the new small roof canopy (M) on the small roof oblique beam (G) and put the eight corners of the new small roof canopy (M) on the small roof oblique beam (G), and then stick the Velcro, (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

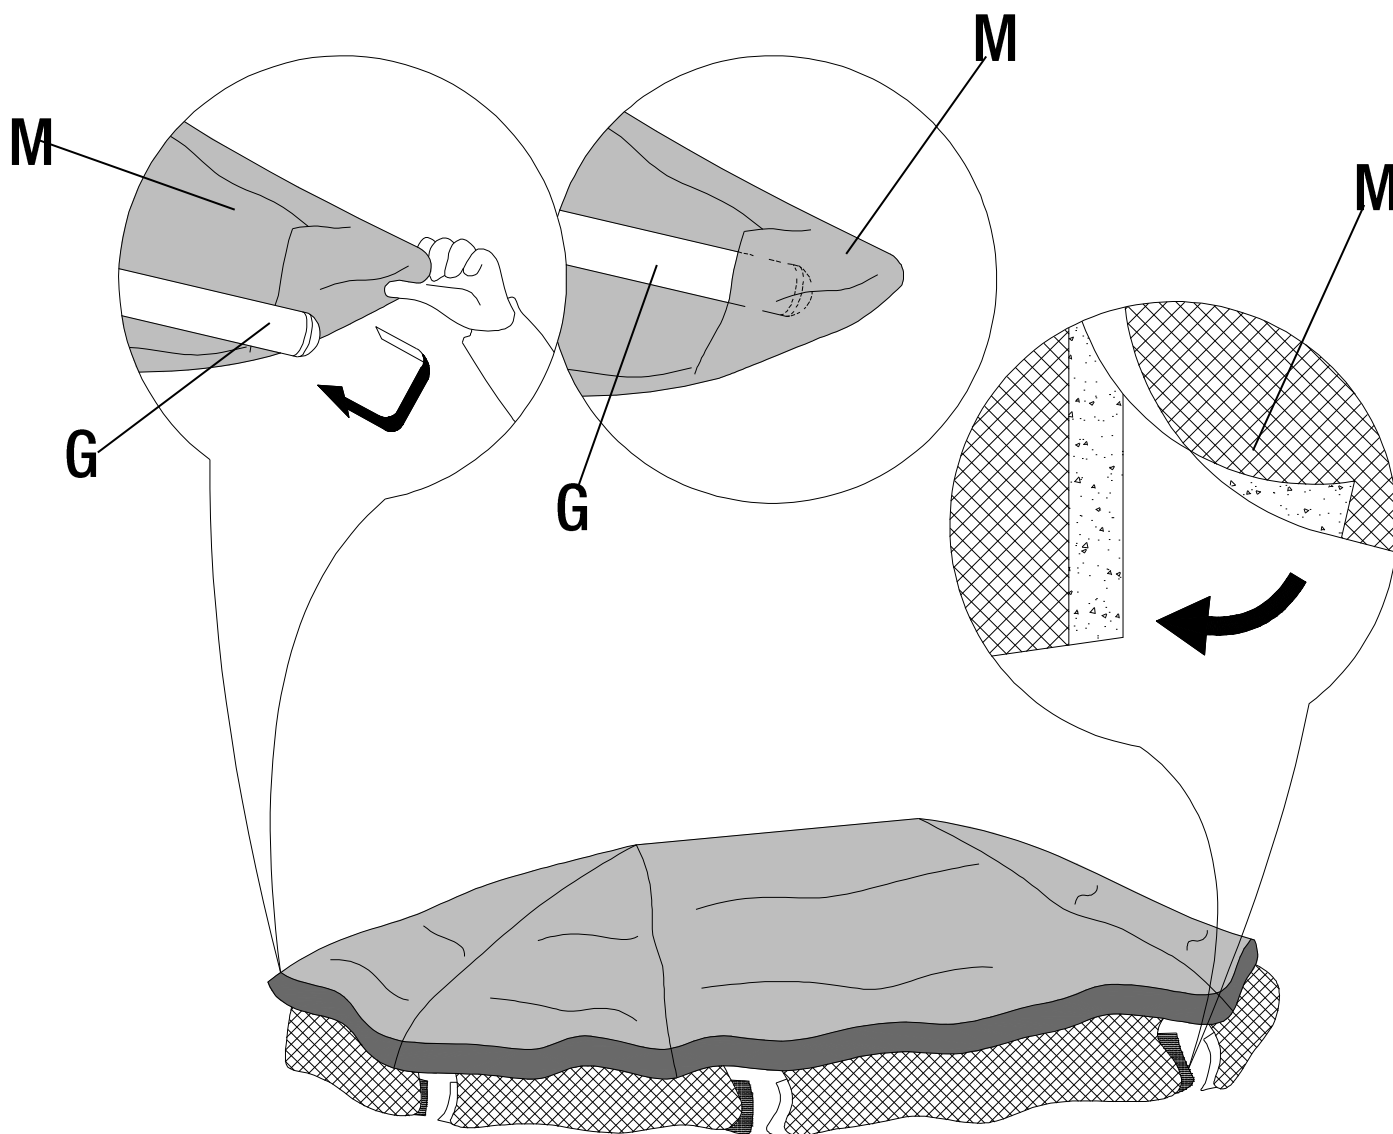


4 Removing the Large Canopy

- Remove the old large roof canopy (N) from the upper/bottom oblique beams (D1/D2), and at the same time untie the Velcro, (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

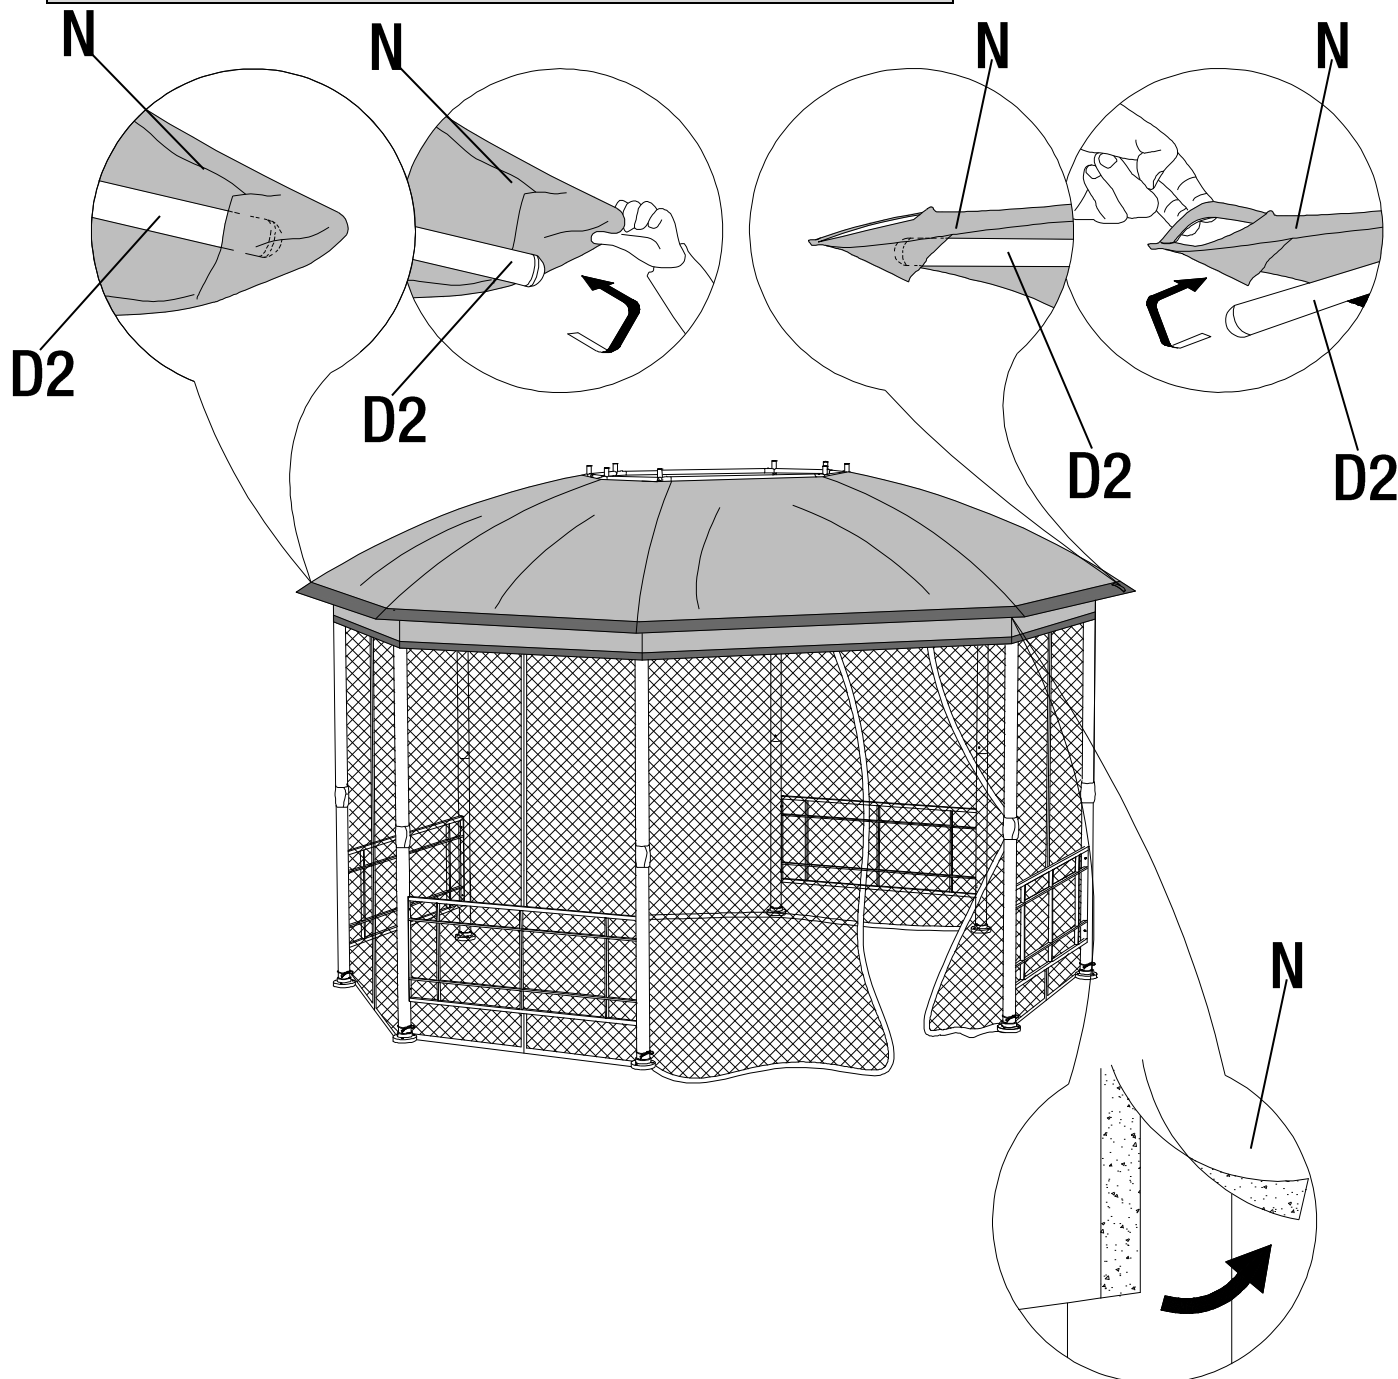


Assembly (continued)

5 Assembling the Large Canopy

- Spread the new large roof canopy (N) on the upper/bottom oblique beams (D1/D2) and put the eight corners of the new large roof canopy (N) on the bottom oblique beam (D2), and then stick the Velcro, (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

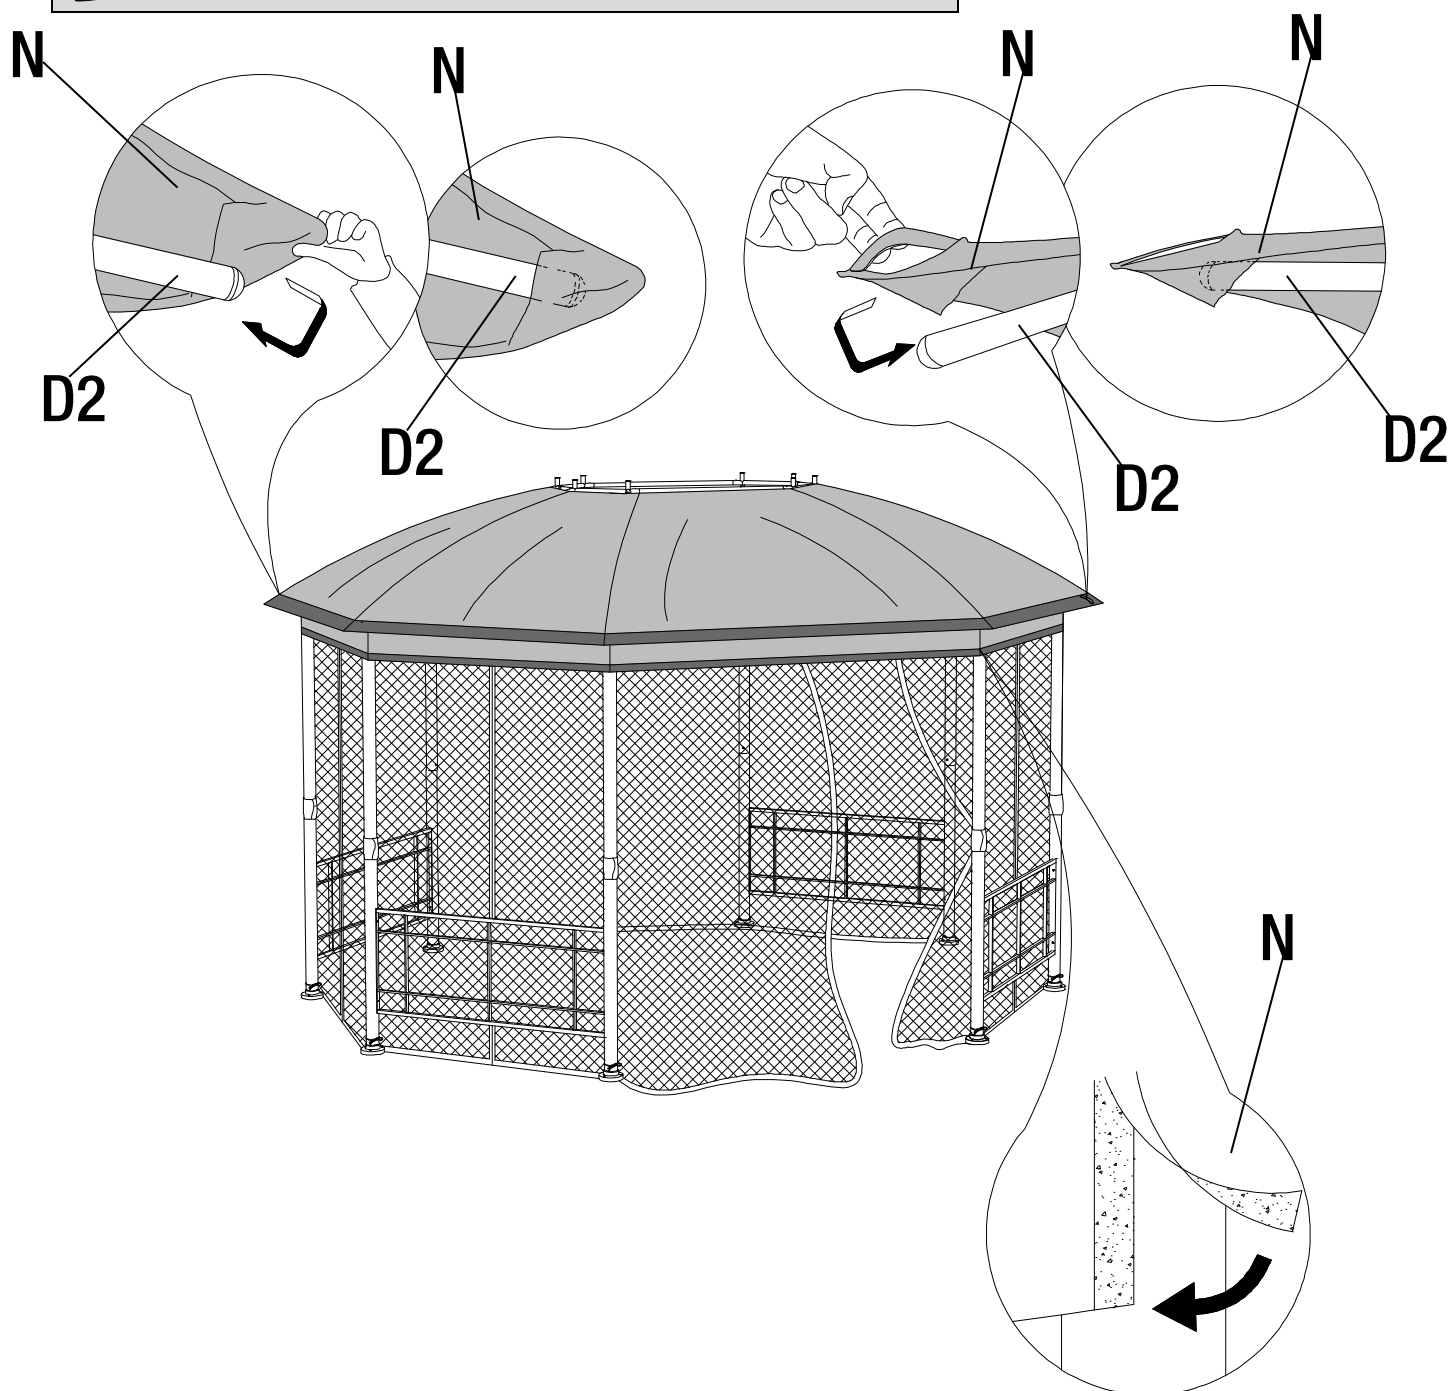


Assembly (continued)

6 Completing the Assembly

- Insert the small roof oblique beam (G) into the upper oblique beam (D1) and snap the snaps on the small roof oblique beam (G) into the holes of the upper oblique beam (D1) (As shown below).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

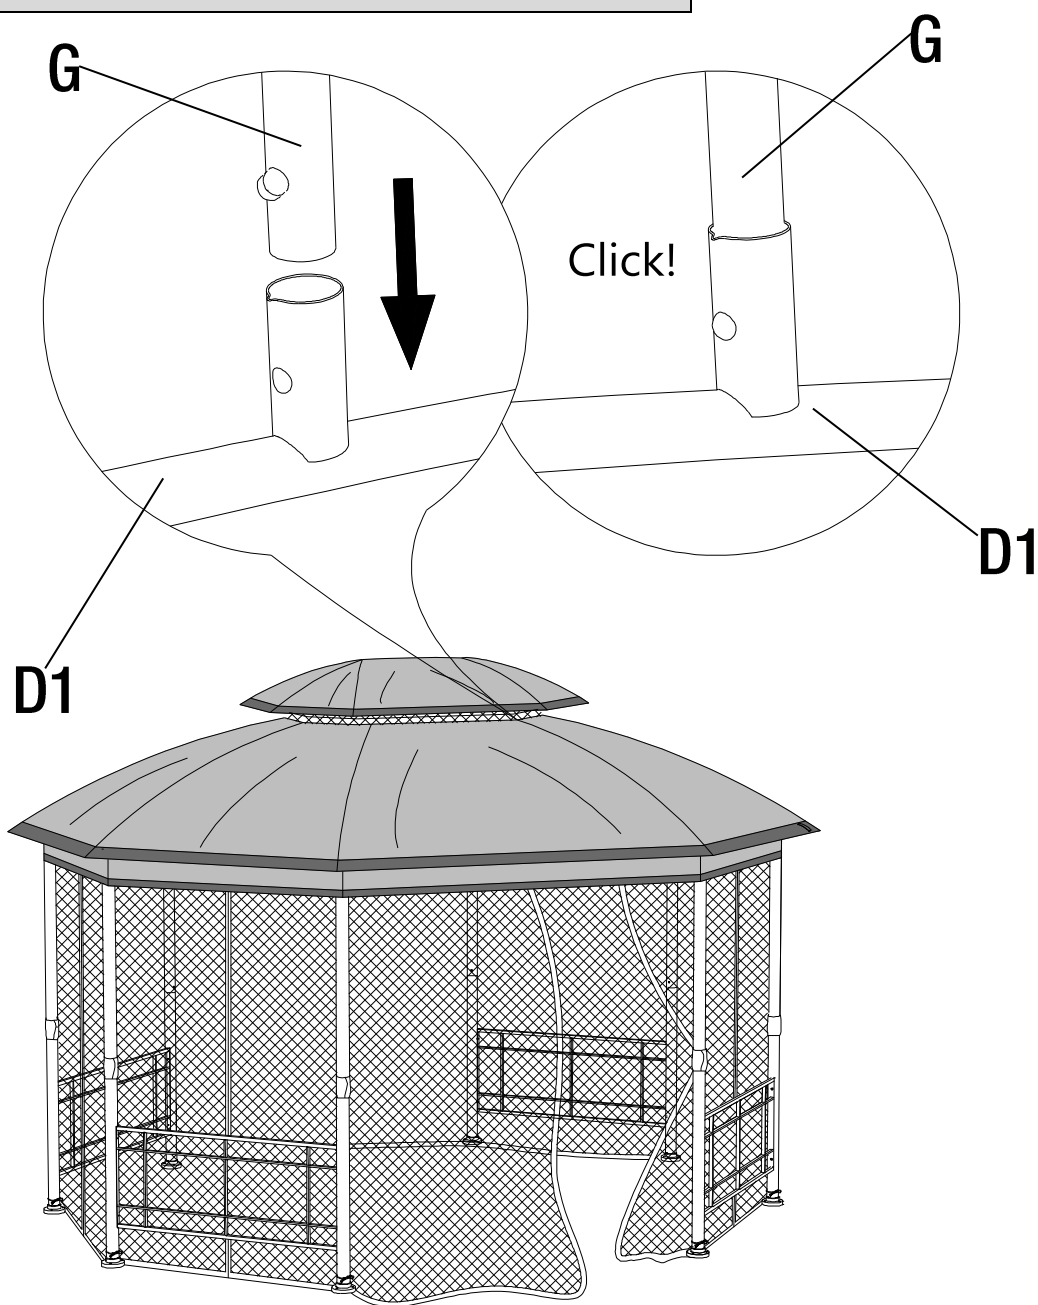

HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

