



Installation Instructions

For part #127053 Low Rider ST LP4 Headlight Bracket

Kit Contains:

- 1- Rear Bracket.....127053-1B
- 1- Front Trim Ring...127053-2B
- 1-10/32 x 1" screw to add for support
- 2- Sets of Stainless black 10/32 x 1/2" long screws to attach trim ring

Thanks for purchasing our Low Rider ST LP4 Headlight Kit. This kit consists of 2 basic parts.

1st is a back bracket that is secured using factory screws and then includes a 4th screw with nylock nut.

2nd is a trim ring that fits snug just inside the factory fairing.

1. First and most important. LOOK CAREFULLY how we ship the bracket kit. Its assembled the same way it needs to be installed on your bike.
2. Most Important are the 2 washers on the UNDER SIDE of the Trim ring on each side..
3. Remove 10/32 screws from front trim ring and set trim ring, screws and 4 washers aside.
4. Mount your LP4 Light to the rear bracket. Tighten the rear round hole decently tight and the swivel side just snug.
5. Remove your factory trim, light and light mount leaving just the plastic fairing.
6. Using the 3 factory screws, install the LP4 into the bike... NOTE.. The 2 mounting holes that are close together are the bottom.
7. We suggest you drill through the new rear mounting plate hole provided at the bottom just across from the other hole that has a factory screw in it. We do this so that it is secured with 4 mounting points.
Use the bracket as a template and using a 3/16 drill bit, drill through the plastic creating an addition hole for the provided 10/32 screw.. PUT ONLY THE 10/32 Screw through the front of bracket **DO NOT ADD WASHERS BEHIND THE FACE OF THIS SCREW.. IF YOU DO, THIS SCREW WILL MAKE FACE PLACE "NOT LEVEL"**
DO add a washer and nylock nut on the back side of the fairing and secure this screw.
8. After light is in, you're ready to install the final trim ring we provided (OR you can still choose to install factory trim ring)
Locate the Black coated stainless 10/32 button head screws and 4 washers. Using an Allen Wrench, insert the button head through trim ring and then on back side stack 2 washers on each side.
NOTE: This is a CRITICAL STEP! The washers are just a tiny bit thicker than the height of all the factory screws which will provide a level surface for the trim ring to tighten down firmly ..

ONCE AGAIN... You must have 2 - 10/32 washers behind each trim ring bezel button heads in order for trim ring to be level. IF this process is NOT done, the bezel will bend and/or NOT stay secure.

SEE PICTURES ON BACK SIDE

CONTINUED ON BACK

Cali Raised Moto

Phone: 714-534-6700

Part #: 127053

Rev # B


Low Rider ST LP4 Headlight Bracket

Install Instructions 127053B 7/24/22





Using this 10/32 screw and nylock nut and washer
Secure your rear bracket with this 4th mounting
point.

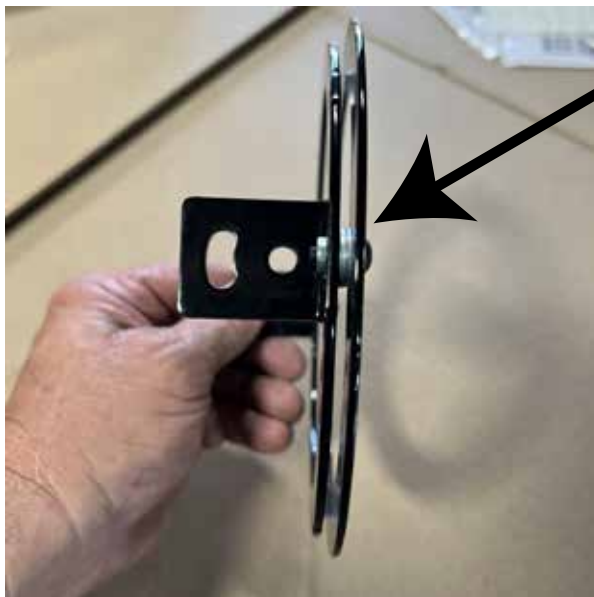

Pay close attention to how this is assembled.

The Trim Ring must be spaced using 2 washers.
We have provided rubber pads top and bottom.

Trim Ring Covers this exposed
Rear plate and trims it out nice.



Follow and Tag Us! @cali_raised_moto Share some pics of your finished Install
For Questions on this kit or other kits we sell.... Email us at info@Caliraisedmoto.com

