



Instruction Manual


5 -Light Chandelier

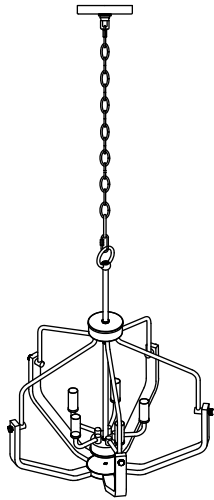


PACKAGE CONTENTS

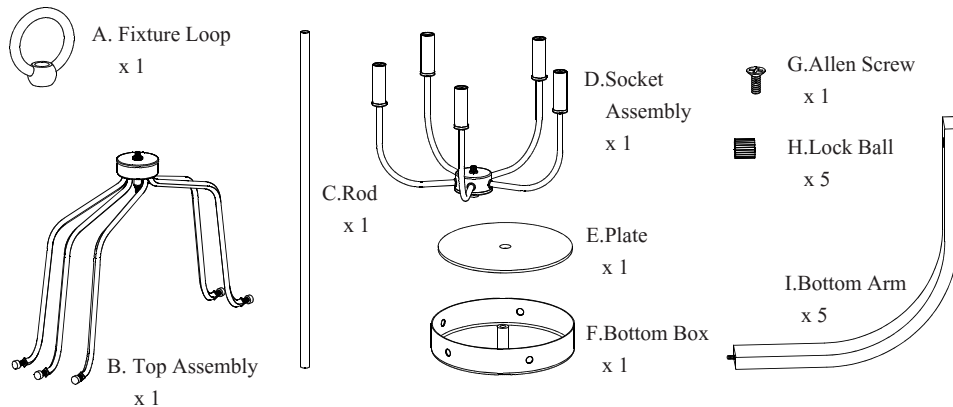

MOUNTING HARDWARE

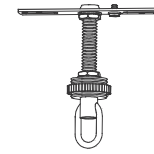

AA. Mounting strap
x 1



BB. Wire nuts
x 3



CC. Outlet Box Screw
x 2



DD. Canopy
x 1



EE. Quick link
x 2



FF. Fixture chain
x 1



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Times: 30 minnutes

Tools Required for Assembly (not included): Flathead screwdriver , Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.


Helpful Tools (not included): Wire strippers, Step ladder.

Customer Service: service@24h-reply.com




ASSEMBLY INSTRUCTIONS


1. Unfold the side arms in Top Assembly (B). Install Socket Assembly (D), Rod (C), Top Assembly (B), Fixture Loop (A) together.

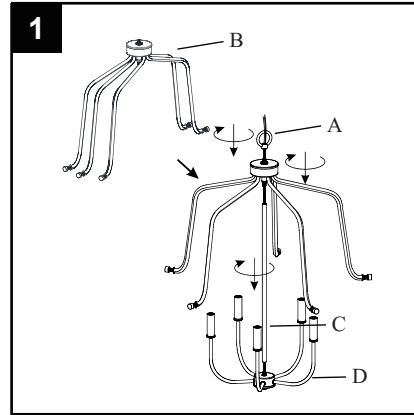

2. Install Bottom Arms (I) to Bottom Box (F), lock them with Lock Ball (H). Install Plate (E) to Bottom Box (F), lock it with Allen Screw (G).

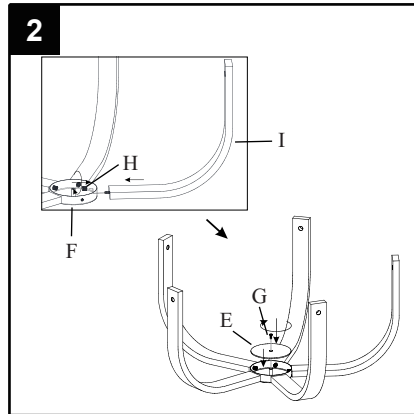


3. Unscrew the nuts on Top Assembly (B), Install Bottom Arm (I) to Top Assembly (B), then lock them with these nuts.

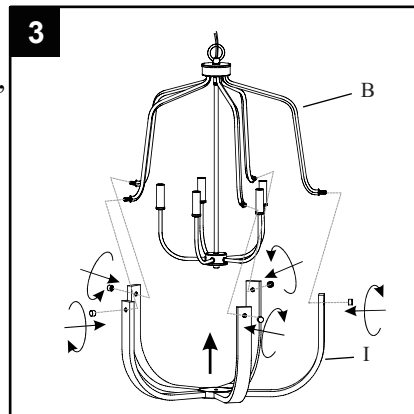


ASSEMBLY INSTRUCTIONS

4. Fix Mounting strap (AA) to outlet box with Screw (CC). Thread wire and Fixture chain (FF) through Canopy (DD). Link Loop (A) and Mounting Strap (AA) by Fixture chain (FF).

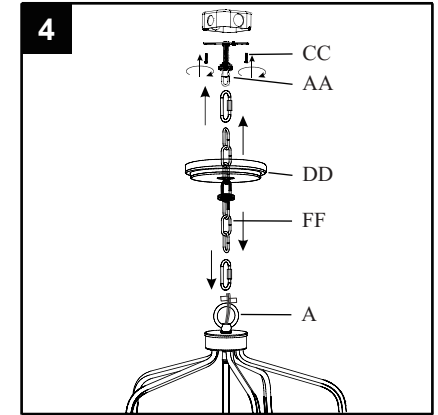

5. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. Helpful hint: If necessary, attach copper ground wire to grounded outlet box. Attach wire nuts. Tape wire nuts and wires together.

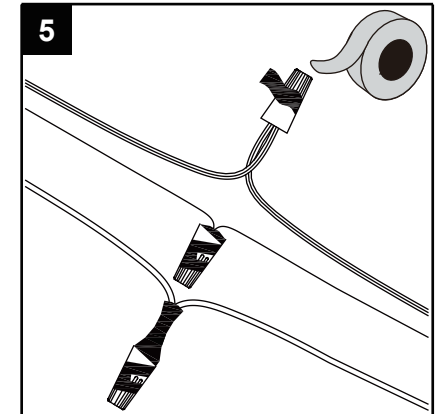

6. Fix Canopy (DD) to Mounting strap (AA) with canopy lock ring.

