


ASSEMBLY INSTRUCTIONS
Item No : WF290811-WF290812
Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

If you have any questions about the product,
please contact the email: Polibihd@outlook.com

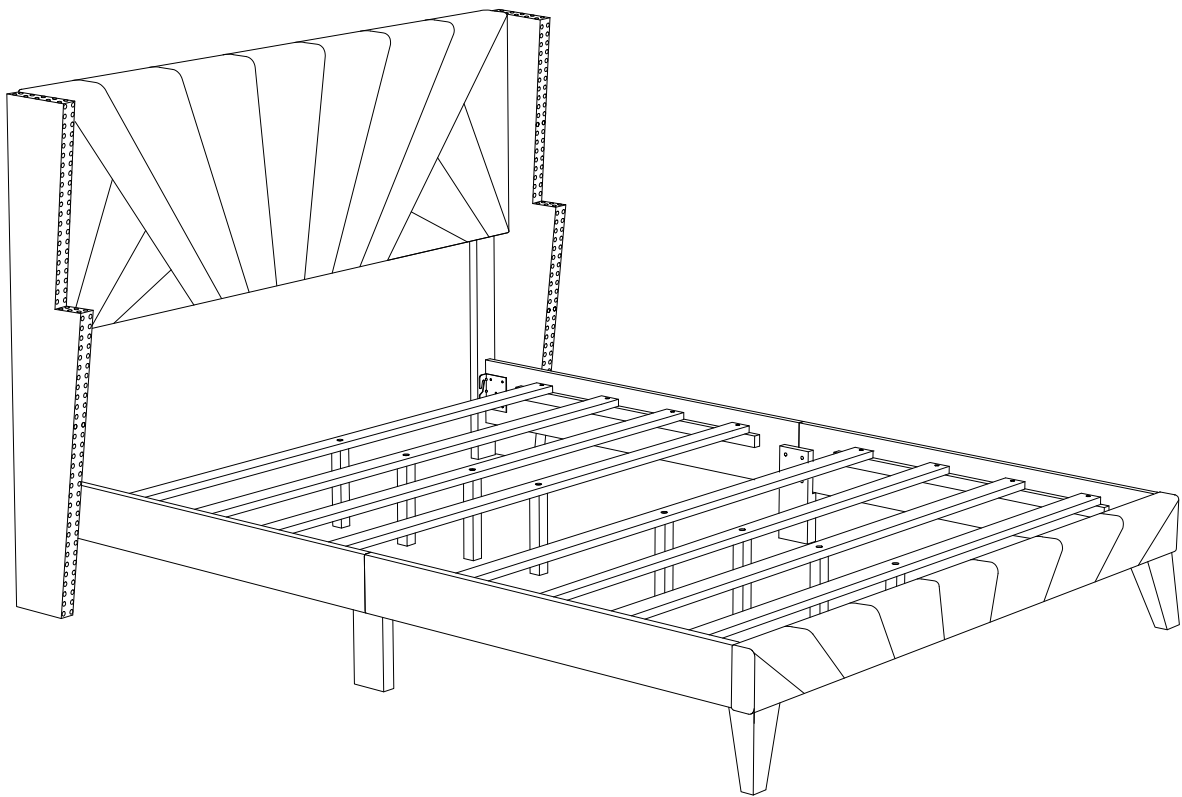

WF290811-WF290812




ASSEMBLY INSTRUCTIONS

Item No : WF290811-WF290812

Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

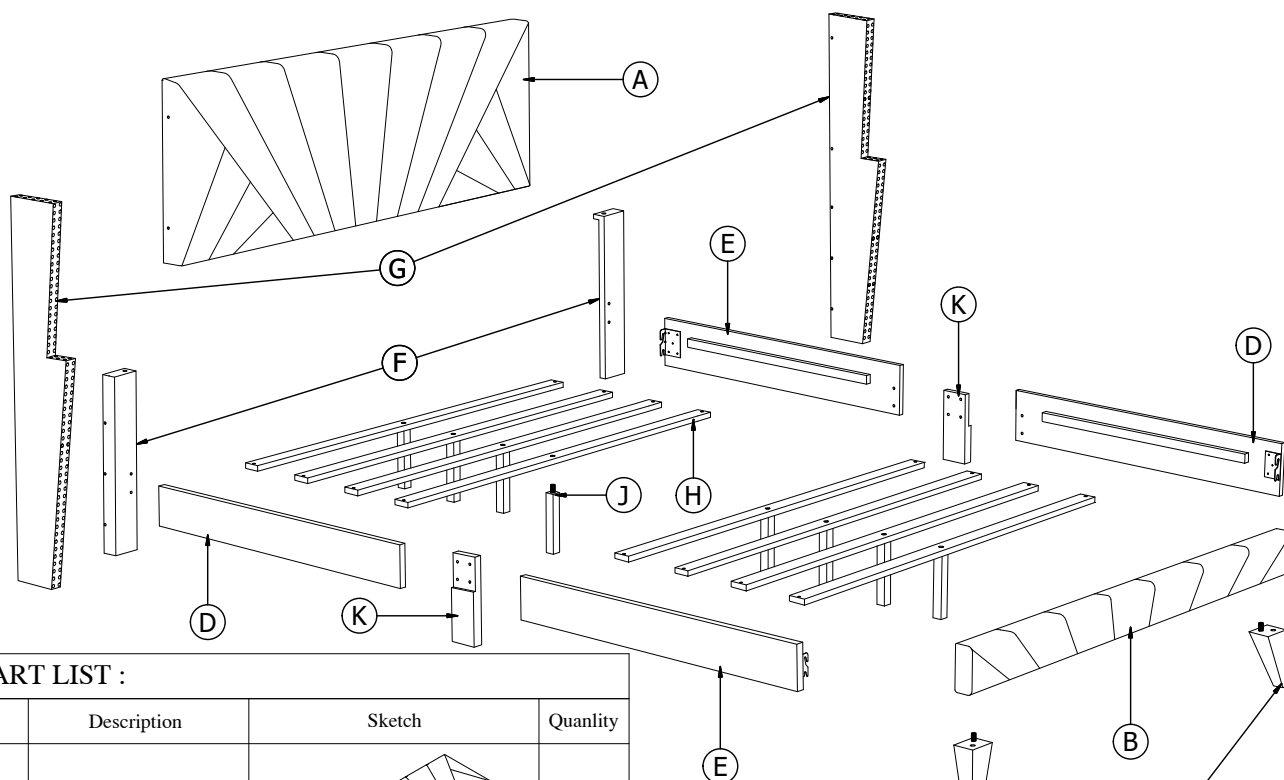

PART LIST :

No.	Description	Sketch	Quantity
A	Headboard		1PC
B	Footboard		1PC
C	Leg		2PCS
D	Side Rail "D"		2PCS
E	Side Rail "E"		2PCS
F	Leg Pillar L/R		2PCS
G	HB Posters L/R		2PCS
H	Slat		2PCS
J	Slat Support Leg		8PCS
K	Support Side Rail		2PCS

TOOLS REQUIRED (Not provided)




HARDWARE LIST :

No.	Description	Sketch	Size	Quantity
L	Bolt		$\varnothing \frac{5}{16} \times 3\frac{1}{2} \text{L}$	2PCS
M	Bolt		$\varnothing \frac{5}{16} \times 1\frac{1}{2} \text{L}$	16PCS
N	Thread Bolt		$\varnothing \frac{5}{16} \times 2\frac{3}{4} \text{L}$	4PCS
O	Hexagonal Nut		$\varnothing \frac{5}{16}$	4PCS
P	Spring Washer		$\varnothing \frac{5}{16}$	22PCS
Q	Flat Washer		$\varnothing \frac{5}{16}$	22PCS
R	Open Wrench		M12	1PC
S	Allen Key		M4*4"L	1PC
T	Screw		$\varnothing 8 \times 1\frac{1}{4} \text{L}$	16PCS


ASSEMBLY INSTRUCTIONS
Item No : WF290811-WF290812
Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carbon during shipment.

Step 1 : Attach the Thread Bolt(N) to the HB Posters L/R(G) cushion, onto pre-drilled holes and secure by hand. Then put, the Leg(C) with the Footboard(B) by using the Bolt(L), Spring Washer(P), Flat Washer(Q) and Allen Key(S).

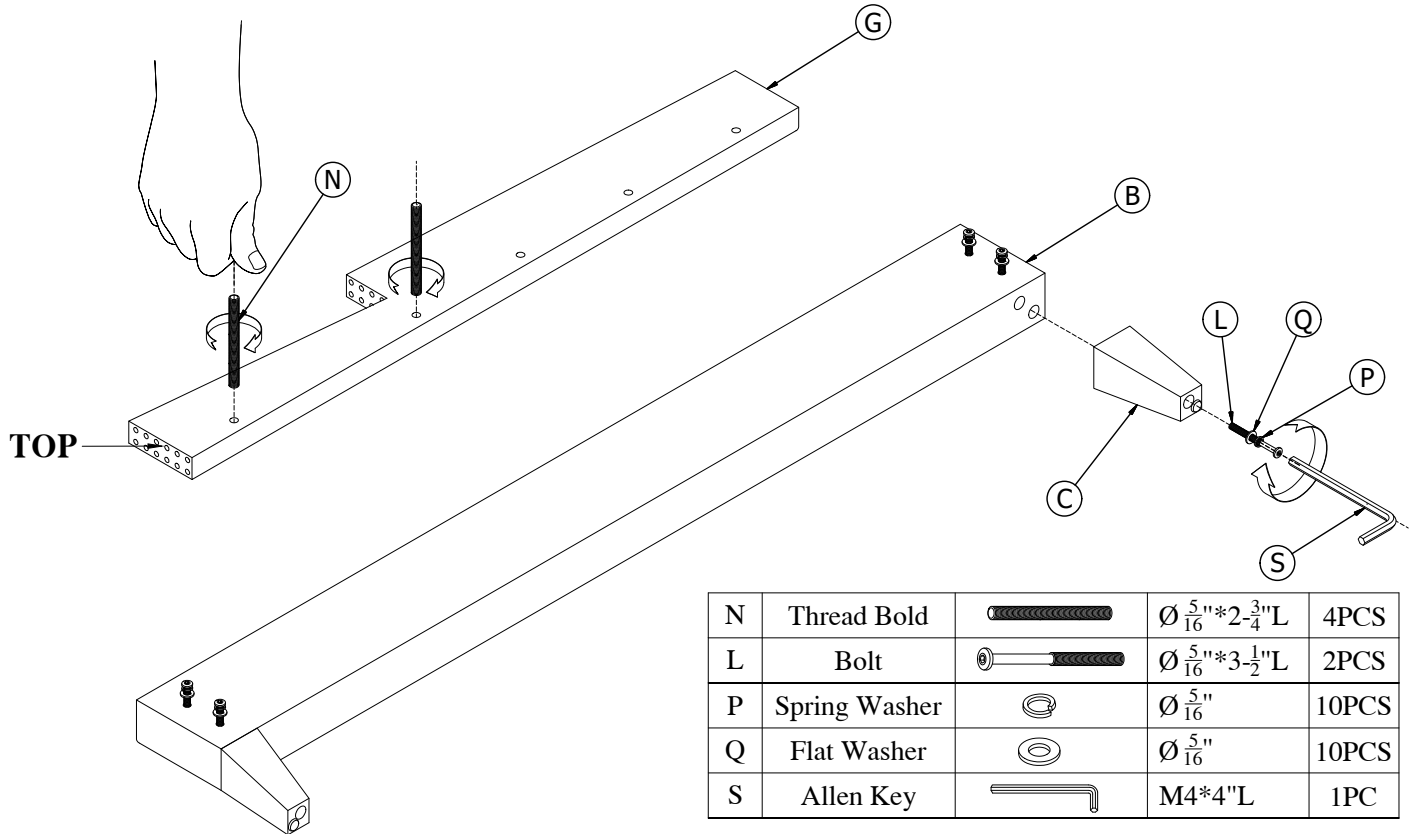

Step 2 : Put the Side Rail(D;E) symmetrical. Next put the Support Side Rail(K) them with the by using the Bolt(M),Spring Washer(P), Flat Washer(Q) and Allen Key(S).

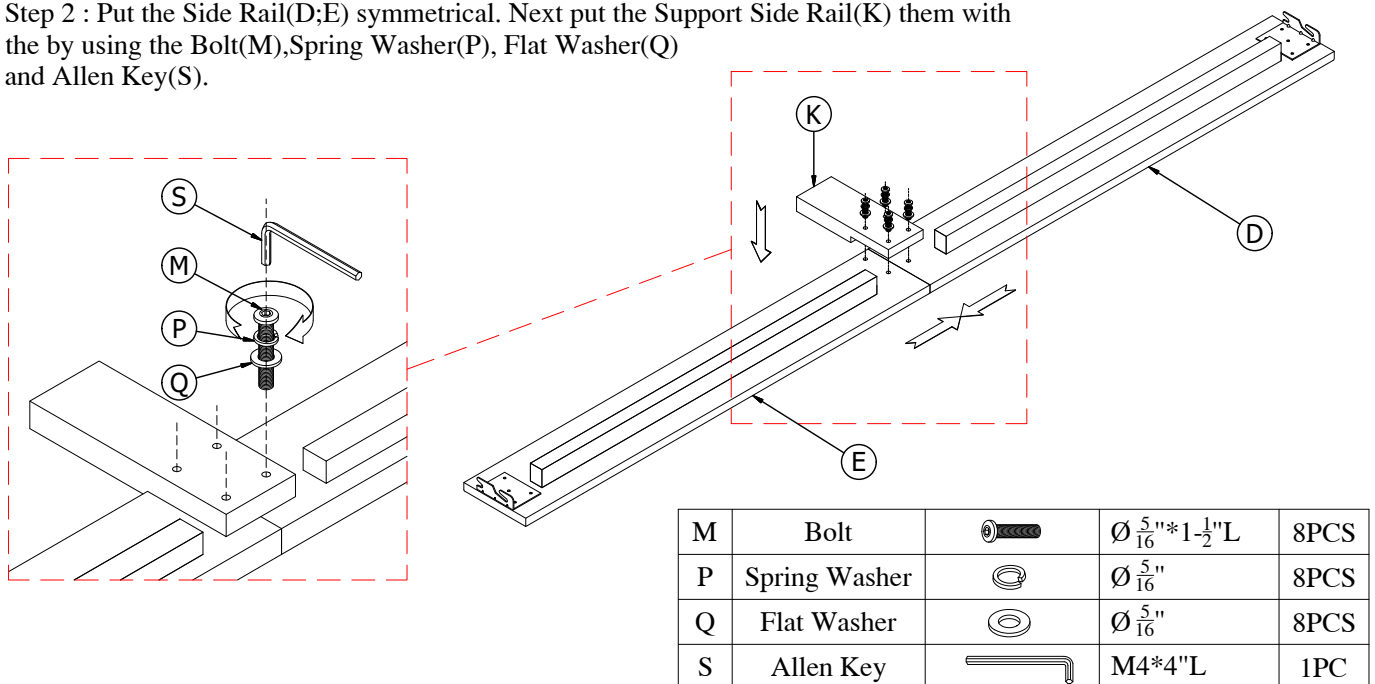


ASSEMBLY INSTRUCTIONS

Item No : WF290811-WF290812


Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 3 : Before performing this step, please loosen the Bolts of the Leg Pillar L/R(F) cushion and Footboard(B), intended to hook metal Rail(D;E) is securely inserted into the Bolts, then the tighten them with the Allen Key(S).

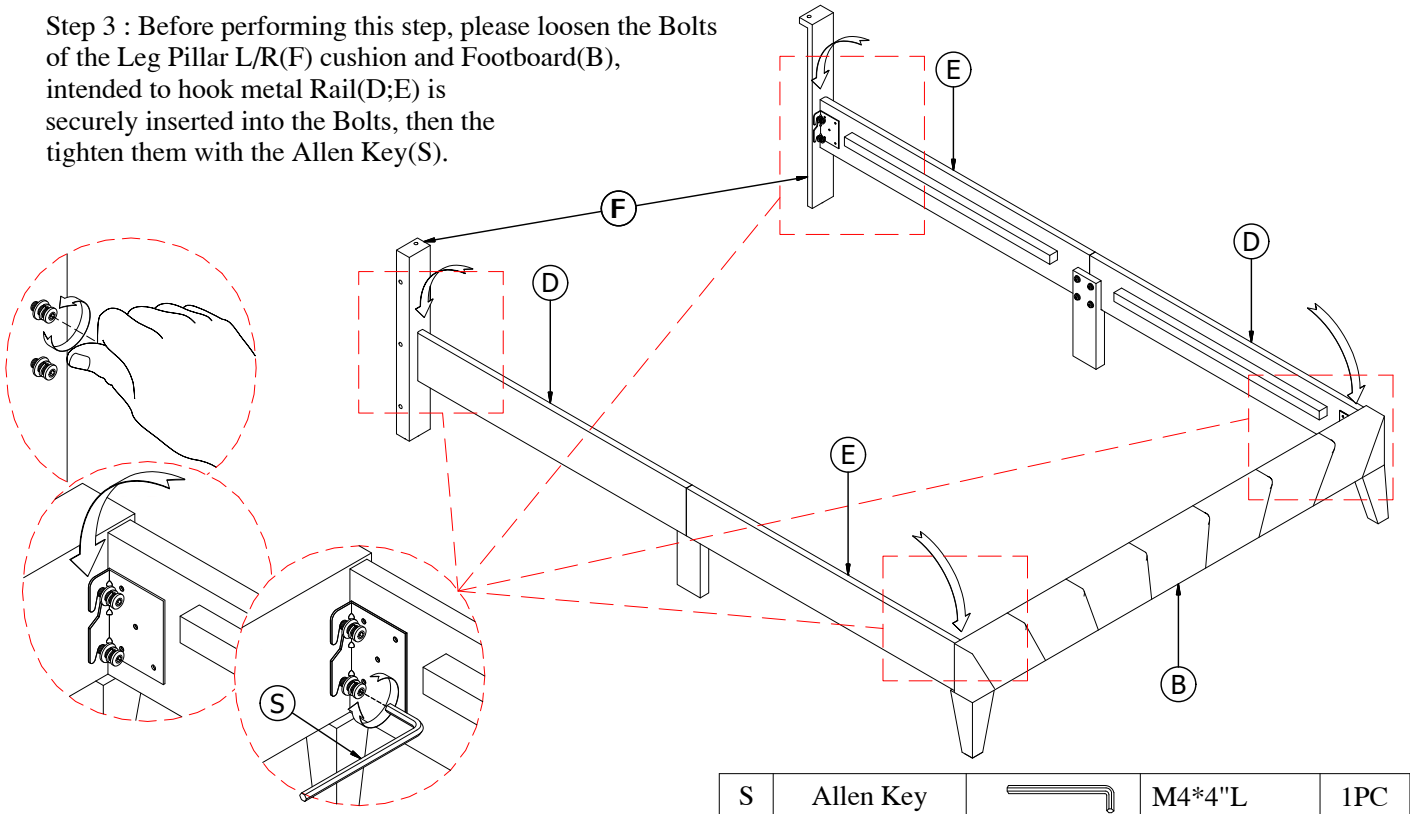

Step 4 : Put the Headboard(A) up Leg Pillar(F) Next the by using the Bolt(M), Spring Washer(P), Flat Washer(Q) and Allen Key(S). Note, in this step only use the hand to turn the bolt.

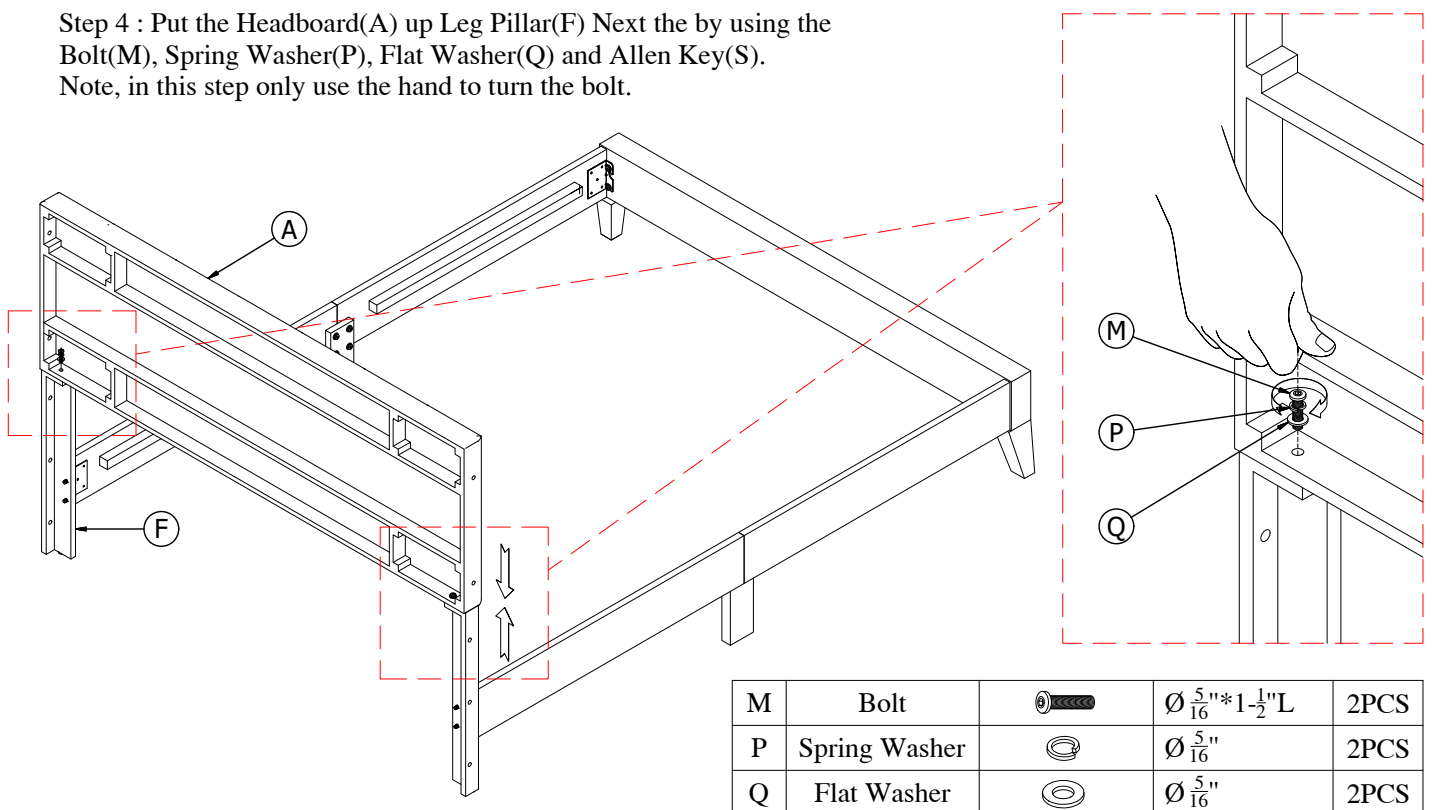


ASSEMBLY INSTRUCTIONS

Item No : WF290811-WF290812

Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 5 : Take HB Posters L/R(G) cushion already installed the Thread Bolt(N). Put and align the drill holes to link with Headboard(A), by using the Flat Washer(Q), Spring Washer(P), Hexagonal Nut(O). At the same time, use the Bolt(M), Spring Washer(P), Flat Washer(Q). Finally, then tighten them with by using use the Open Wrench(R) and Allen Key(S).

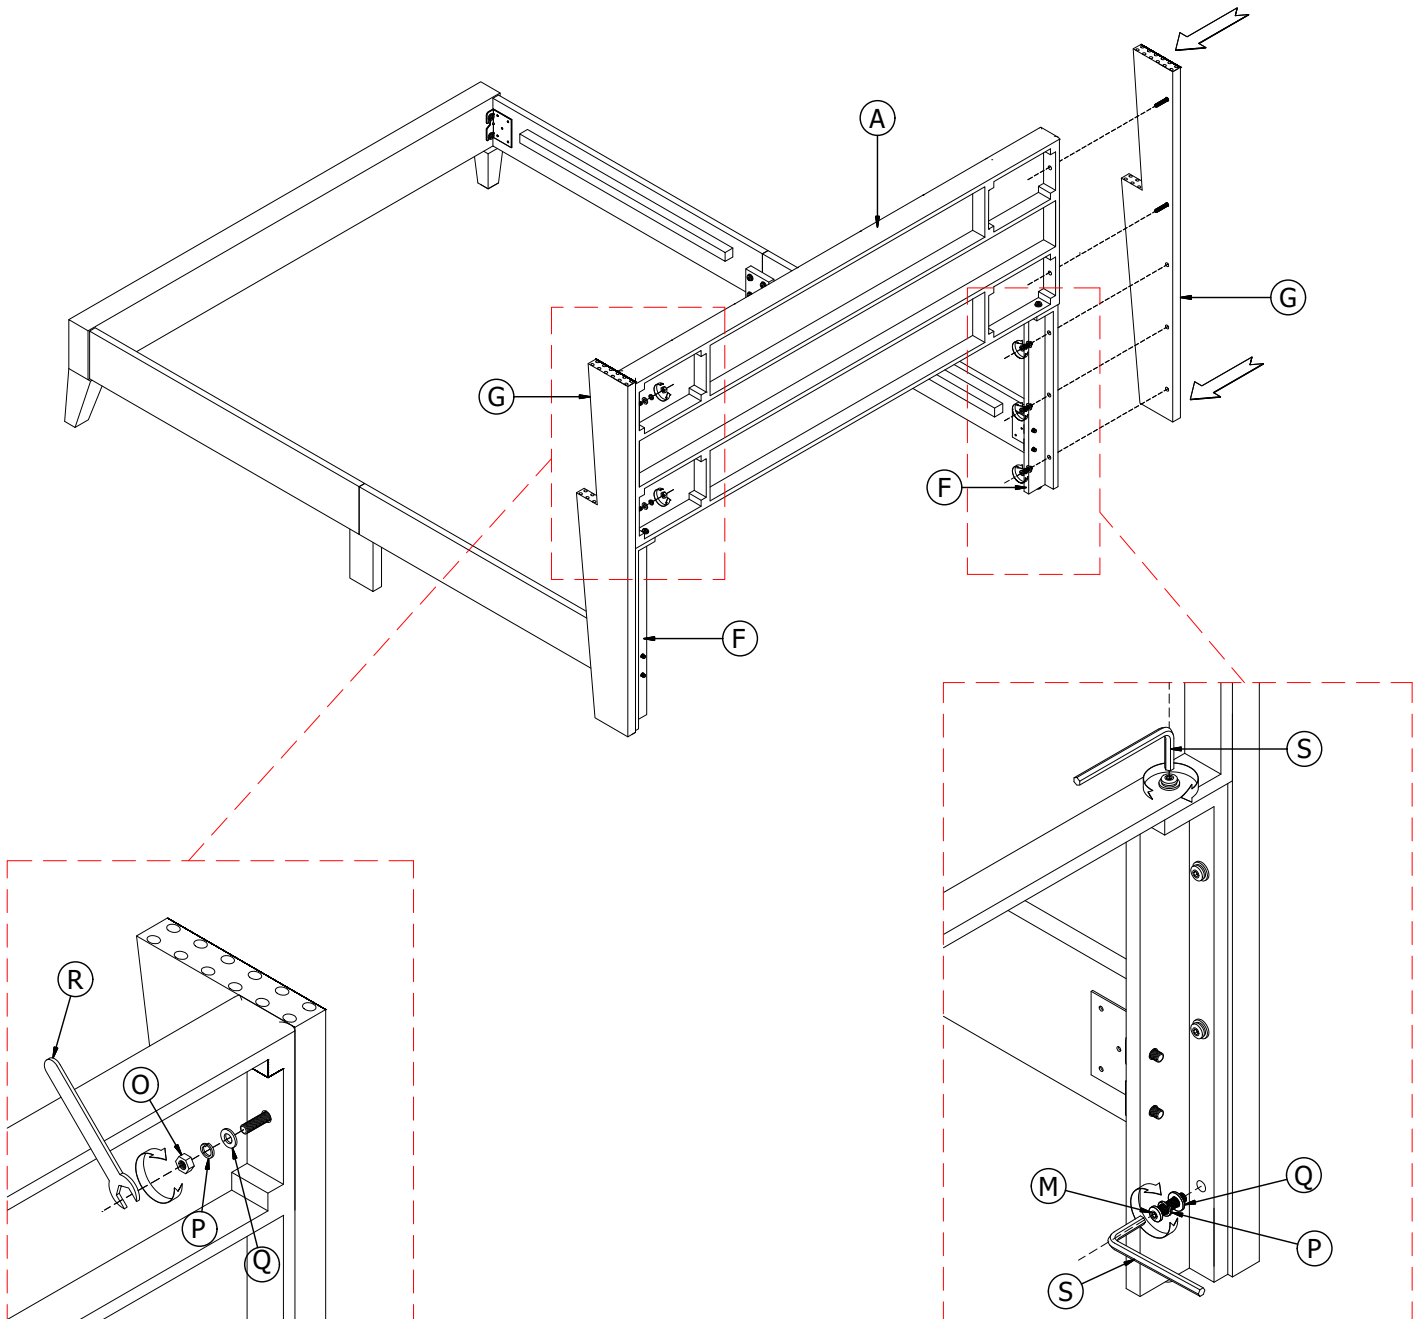


O	Hexagonal Nut		$\varnothing \frac{5}{16}$ "	4PCS
P	Spring Washer		$\varnothing \frac{5}{16}$ "	4PCS
Q	Flat Washer		$\varnothing \frac{5}{16}$ "	4PCS
R	Open Wrench		M12	1PC

M	Bolt		$\varnothing \frac{5}{16}$ "*1- $\frac{1}{2}$ "L	6PCS
P	Spring Washer		$\varnothing \frac{5}{16}$ "	6PCS
Q	Flat Washer		$\varnothing \frac{5}{16}$ "	6PCS
S	Allen Key		M4*4"L	1PC


ASSEMBLY INSTRUCTIONS
Item No : WF290811-WF290812
Description : UPHOLSTERED BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

Step 5. Take use the Support leg(J) to the hole center of the Slats(H) one by one, and tighten them together.

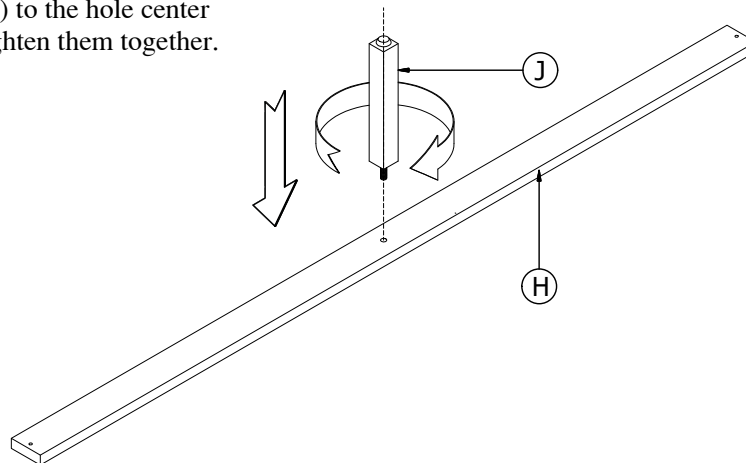

Step 6 : Put the Slat clusters on the Side rail(D;E) of the bed to be neat, then tighten they are by Screws(T).

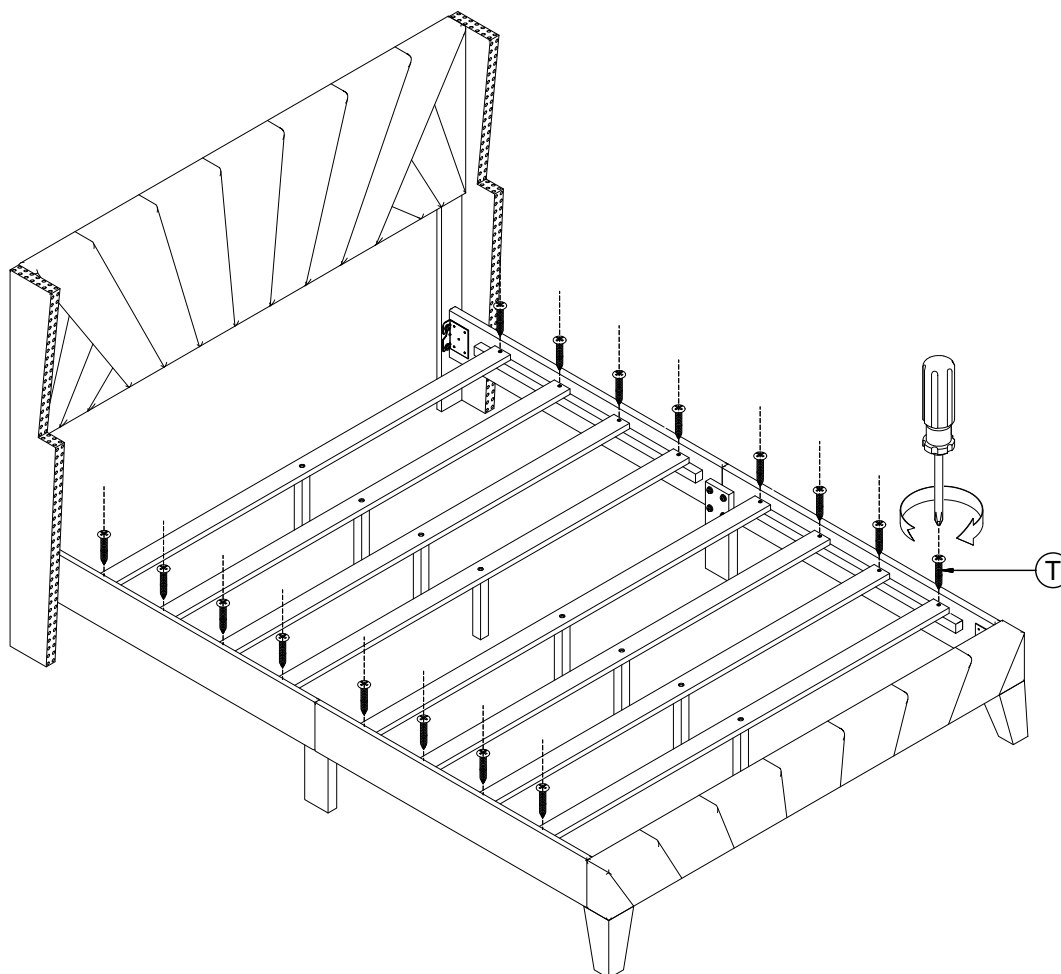

T	Screw		Ø 8*1-¼"L	16PCS
---	-------	---	-----------	-------

