



Important Safety Instructions

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!
SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Installation and service of luminaires should be performed by a **qualified licensed electrician**.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.
- It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry. Should optical assembly become dirty on the inside, wipe refractor/lens and clean in above manner, replacing damaged gaskets as necessary.
- **DO NOT INSTALL DAMAGED PRODUCT!** This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- Recycle: For information on how to recycle LED electronic products, please visit www.epa.gov.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be referred to Acuity Brands Lighting, Inc.



WARNING RISK OF ELECTRIC SHOCK

- ✓ Disconnect or turn off power before installation or servicing.
- ✓ Verify that supply voltage is correct by comparing it with the luminaire label information.
- ✓ Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.
- ✓ All wiring connections should be capped with UL approved recognized wire connectors.



WARNING RISK OF BURN

- ✓ Allow lamp/fixture to cool before handling. Do not touch enclosure or light source.
- ✓ Do not exceed maximum wattage marked on luminaire label.
- ✓ Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.



Important Safety Instructions



CAUTION RISK OF INJURY

- ✓ Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- ✓ Avoid direct eye exposure to the light source while it is on.



CAUTION RISK OF FIRE

- ✓ Keep combustible and other materials that can burn, away from lamp/lens.
- ✓ Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.



CAUTION: RISK OF PRODUCT DAMAGE

- ✓ Never connect components under load.
- ✓ Do not mount or support these fixtures in a manner that can cut the outer jacket or damage wire insulation.
- ✓ Controls for dimming, auto-sensing, or remote control of a luminaire that are not factory-wired to the luminaire must be checked for compatibility with the luminaire prior to installation. LED fixtures must be powered directly off a switched circuit.
- ✓ Unless individual product specifications deem otherwise: Do not restrict fixture ventilation. Allow for some volume of airspace around fixture. Avoid covering LED fixtures with insulation, foam, or other material that will prevent convection or conduction cooling.
- ✓ Unless individual product specifications deem otherwise: Do not exceed fixtures maximum ambient temperature.
- ✓ Only use fixture in its intended location.
- ✓ LED products are Polarity Sensitive. Ensure proper Polarity before installation.
- ✓ Electrostatic Discharge (ESD): ESD can damage LED fixtures. Personal grounding equipment must be worn during all installation or servicing of the unit.
- ✓ Do not touch individual electrical components as this can cause ESD, shorten lamp life, or alter performance.
- ✓ Some components inside the fixture may not be serviceable. In the unlikely event your unit may require service, stop using the unit immediately and contact an ABL representative for assistance.
- ✓ Always read the fixtures complete installation instructions prior to installation for any additional fixture specific warnings.
- ✓ Always ensure that the electrical distribution system is up to NEC (and any applicable local code) requirements.
- ✓ Verify that power distribution system has proper grounding. Lack of proper earth ground can lead to fixture failure and may void warranty.

Choose either Part 15 OR Part 18 and move to Page 3 Installation Instructions under Delivery. Lithonia Outdoor will always use Part 15.

All luminaires that contain electronic devices that generate frequencies above 9kHz from any component within the luminaire comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation



Important Safety Instructions

This device complies with Part 18 of the FCC Rules but may cause interference with cordless and cell phones, radios, televisions, and other electronic devices. To correct the problem, move the device away from the luminaire or plug into a different outlet. This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communications equipment operating between 0.45-30MHz.

Failure to follow any of these instructions could void product warranties. For a complete listing of product Terms and Conditions, please visit www.acuitybrands.com.

Acuity Brands Lighting, Inc. assumes no responsibility for claims arising out of improper or careless installation or handling of its products.

ABL LED General Warnings, Form No. 503.203

© 2021, 2010, 2016 Acuity Brands Lighting, Inc. All rights reserved. 12/01/10

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!
SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Installation and service should be performed by a **qualified licensed electrician**.
- Maintenance should be performed by qualified person(s) familiar with the products' construction and operation and any hazards involved. Regular maintenance programs are recommended.
- **DO NOT INSTALL DAMAGED PRODUCT!** This product has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be referred to Acuity Brands Lighting, Inc.



Important Safety Instructions



WARNING RISK OF ELECTRIC SHOCK

- ✓ Disconnect or turn off power before installation or servicing.
- ✓ Verify that supply voltage is correct by comparing it with the luminaire label information.
- ✓ Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.
- ✓ All wiring connections should be capped with UL approved recognized wire connectors.



WARNING RISK OF BURN

- ✓ Allow lamp/fixture to cool before handling. Do not touch enclosure or light source.
- ✓ Do not exceed maximum wattage marked on luminaire label.
- ✓ Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.



CAUTION RISK OF INJURY

- ✓ Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- ✓ Avoid direct eye exposure to the light source while it is on.



CAUTION RISK OF FIRE

- ✓ Keep combustible and other materials that can burn, away from lamp/lens.
- ✓ Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.

Always read the fixtures complete installation instructions prior to installation for any additional fixture specific warnings.

Failure to follow any of these instructions could void product warranties. For a complete listing of product Terms and Conditions, please visit www.acuitybrands.com.

Acuity Brands Lighting, Inc. assumes no responsibility for claims arising out of improper or careless installation or handling of its products.

ABL LED General Warnings, Form No. 503.203

© 2021, 2010, 2016 Acuity Brands Lighting, Inc. All rights reserved. 12/01/10

Important Safety Instructions



CAUTION: RISK OF PRODUCT DAMAGE

- ✓ Electrostatic Discharge (ESD): ESD can damage product(s). Personal grounding equipment must be worn during all installation or servicing of the unit.
- ✓ Do not touch individual electrical components as this can cause ESD and affect product Performance.
- ✓ Do not stretch or use cable sets that are too short or are of insufficient length.
- ✓ Do not tamper with contacts.
- ✓ Do not modify the product.
- ✓ Do not change or alter internal wiring or installation circuitry.
- ✓ Do not use product for anything other than its intended use.
- ✓ If installing latching springs: ensure that the springs are fully engaged prior to moving to next connection.
- ✓ If installing wiring systems: Materials and component parts of a manufacturing wiring system as described in Article 604 of the National Electric Code and Underwriters Laboratories Standard for Safety #183 **MUST BE** installed.

Please see product specific installation instructions for additional warnings or any applicable FCC or other regulatory statements.

Failure to follow any of these instructions could void product warranties. For a complete listing of product Terms and Conditions, please visit www.acuitybrands.com.

Our Brands	Indoor/Outdoor	Indoor Lighting	Outdoor Lighting	Controls	Daylighting
	Lithonia Lighting	Gotham	American Electric Lighting	DARK TO LIGHT	SunOptics
	Carandini	Mark Architectural Lighting	Antique Street Lamps	LC&D	
	Holophane	Peerless	Hydrel	ROAM	
	RELOC	Renaissance Lighting	Tersen	Sensor Switch	
	Light Concepts	Winona Lighting		Synergy	

Acuity Brands Lighting, Inc. assumes no responsibility for claims arising out of improper or careless installation or handling of its products.

ABL LED General Warnings, Form No. 503.203

© 2021, 2010, 2016 Acuity Brands Lighting, Inc. All rights reserved. 12/01/10


Safety
p.1Overview
p.6Prep
p.8Set Up Wall
p.9Open Fixtures
p.10Mount First Fixture
p.11Join Sections
p.12Close Fixtures
p.13Supplemental
p.14Contractor's Resources
p.16

A. Overview - Fixture




- Do not join fixtures together on the floor.

NOTE: Illustrations are used for reference only and can differ slightly from the actual lighting system installed. However, key components addressed in this information are represented as accurately as possible.

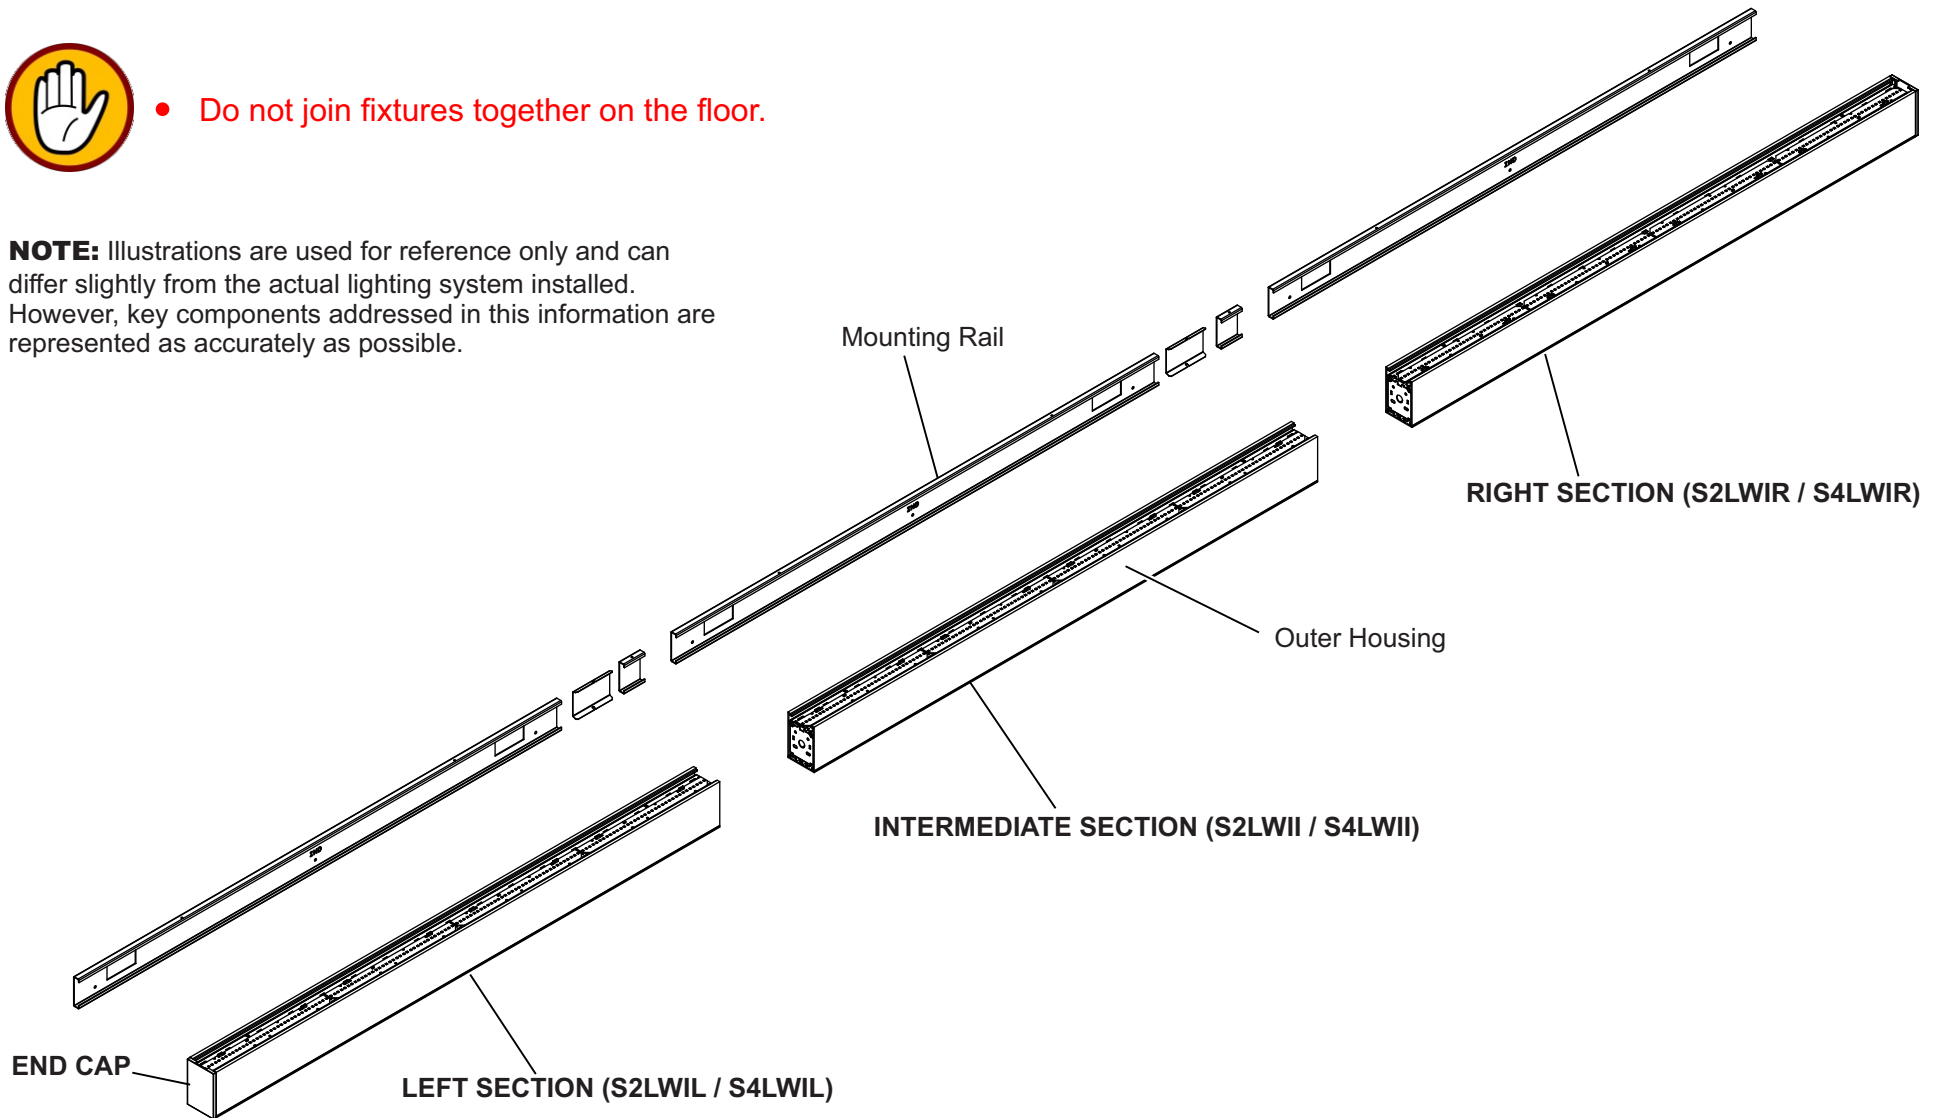


B. Overview Mounting


Individual Fixture Configurations

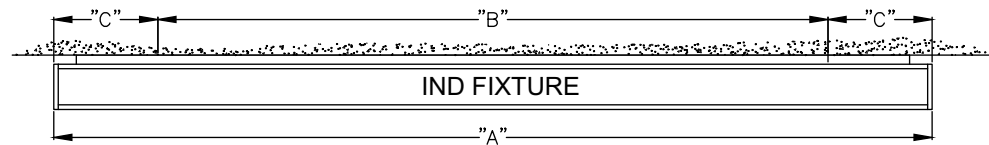

INDIVIDUAL UNITS (MOUNTING)			
LENGTH	"A" O.A.L	"B" FEED POINTS	"C" FROM END
2FT	2'-5/8	1'-1'	5 13/16"
3FT	3'-5/8	2'-1'	5 13/16"
4FT	4'-5/8	3'-1'	5 13/16"
5FT	5'-5/8	4'-1'	5 13/16"
6FT	6'-5/8	5'-1'	5 13/16"
7FT	7'-5/8	6'-1'	5 13/16"
8FT	8'-5/8	7'-1'	5 13/16"

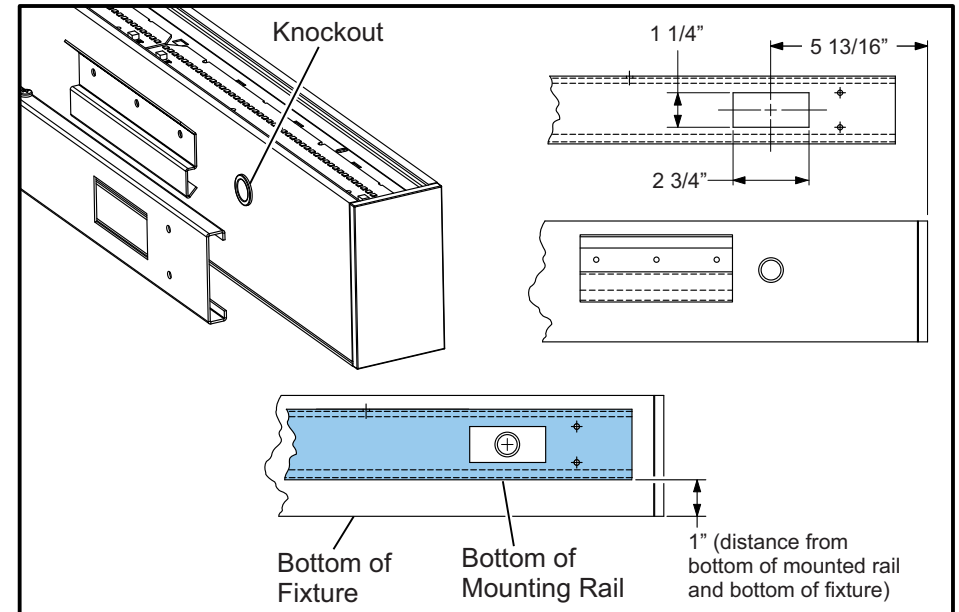

Run Configurations

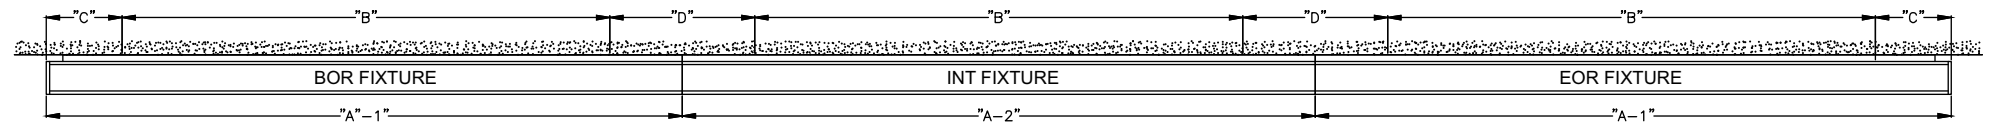

RUN LAYOUT (MOUNTING)					
LENGTH	"A-1" O.A.L	"A-2" O.A.L	"B" FEED POINT	"C" FROM END	"D" FROM END
4FT	4'-0 5/16"	4'-0"	3'-1"	5 13/16"	11"
5FT	5'-0 5/16"	5'-0"	4'-1"	5 13/16"	11"
6FT	6'-0 5/16"	6'-0"	5'-1"	5 13/16"	11"
7FT	7'-0 5/16"	7'-0"	6'-1"	5 13/16"	11"
8FT	8'-0 5/16"	8'-0"	7'-1"	5 13/16"	11"

C. Prep Fixtures and Parts

1



FIXTURES MUST BE INSTALLED IN ORDER AS SHOWN ON RECORD DRAWINGS.

Unique Run/Pattern # Section #

Mark as Field → F-08-32FT

ID: 2.001


A427-40250-0-LLA-1.001 ← Order #

LEFT	INTERMEDIATE	INTERMEDIATE	RIGHT
2.000	2.001	2.001	2.002


- Labels are located on the carton, on the fixture, and on the lens.
- Each section is identified by and ID#.
- Section position starting with X.000 for the first fixture.
- Same fixture configuration can carry identical ID# and are interchangeable.
- Individual fixtures have whole number Y.
- For replacement parts, provide ID# and order #.

2


Mounting Hardware




Screw/Fasteners
(by others)



Flex Conduit
(by others)

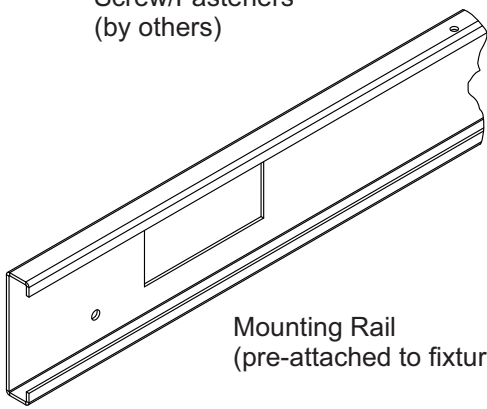

Mounting Rail
(pre-attached to fixture)

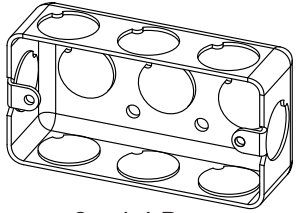


2 x 4 J-Box
(by others)

Mounting Hardware:


- Mounting rails are attached to each fixture section. Unscrew the mounting rails from the fixture to install rails to the wall first.

D. Set Up Wall

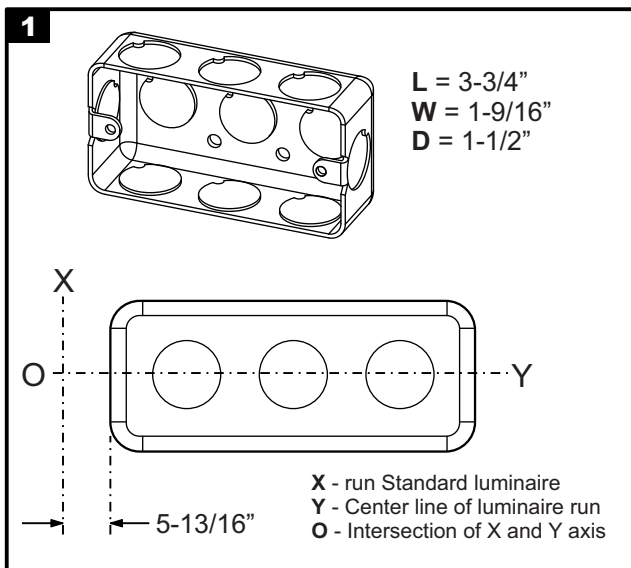


At power feed locations:

Mount the J-box on the wall at distanced 5-13/16" from the start of run. The center line of J-box and luminaire run should align with each other.

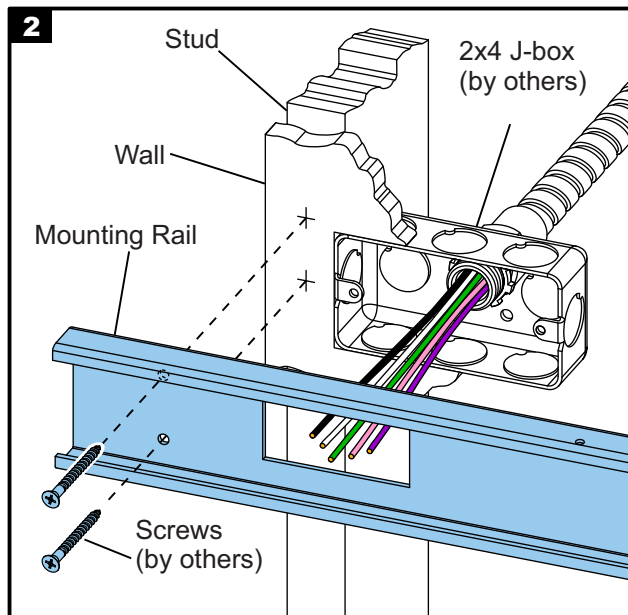


Secure mounting rails for the first fixture per pattern/row layout. Leave approximately 1-1/4" space from edge of the wall to mount the rail for the first section.

Note: Contractor should provide blocking behind wall to adequately support fixture weight.

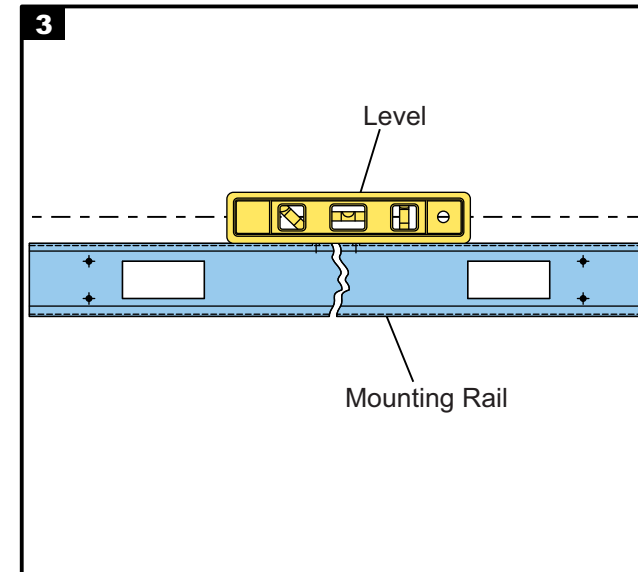

Level mounting rail to ensure proper mounting.

E. Opening Fixtures

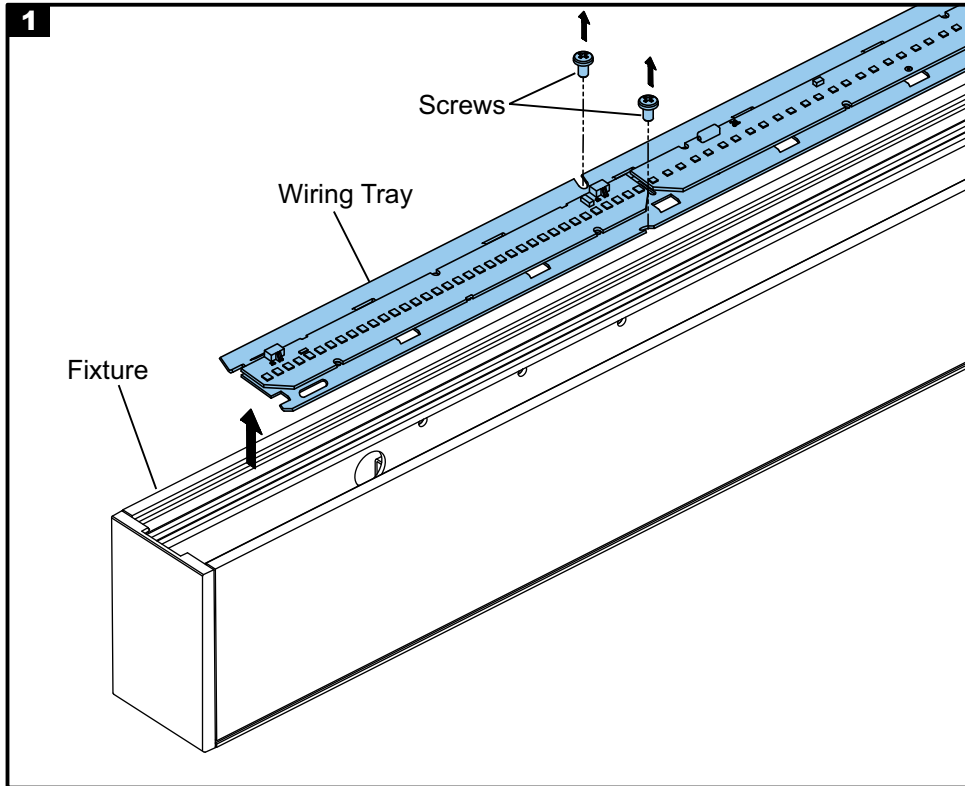


Remove the wiring trays completely by removing screws from the side of the tray and disconnect the wiring harness from the fixture.

NOTE: Do not discard removed screws. Save to secure the trays back in the fixture.

F. Mount Fixtures


 **All power connections should be installed according to local/national codes by a Certified Electrician.**

1

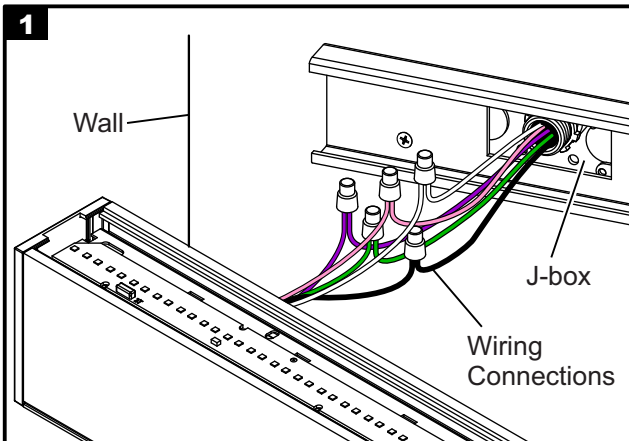

Option	Fixture Wire Color	
All	Black	Hot
	White	Neutral
	Green	Ground
ZT	Purple	Dimming
	Gray or Pink	Dimming
ECOD/ECOD5	Purple	Dimming
	Purple White	Dimming
DALI	Orange	Dimming
	Cap Gray or Cap Pink	Dimming
NODIM, ECOD2 NLIGHT, NLTAIR2	Cap Purple	Not Used
	Cap Gray or Cap Pink	Not Used

2

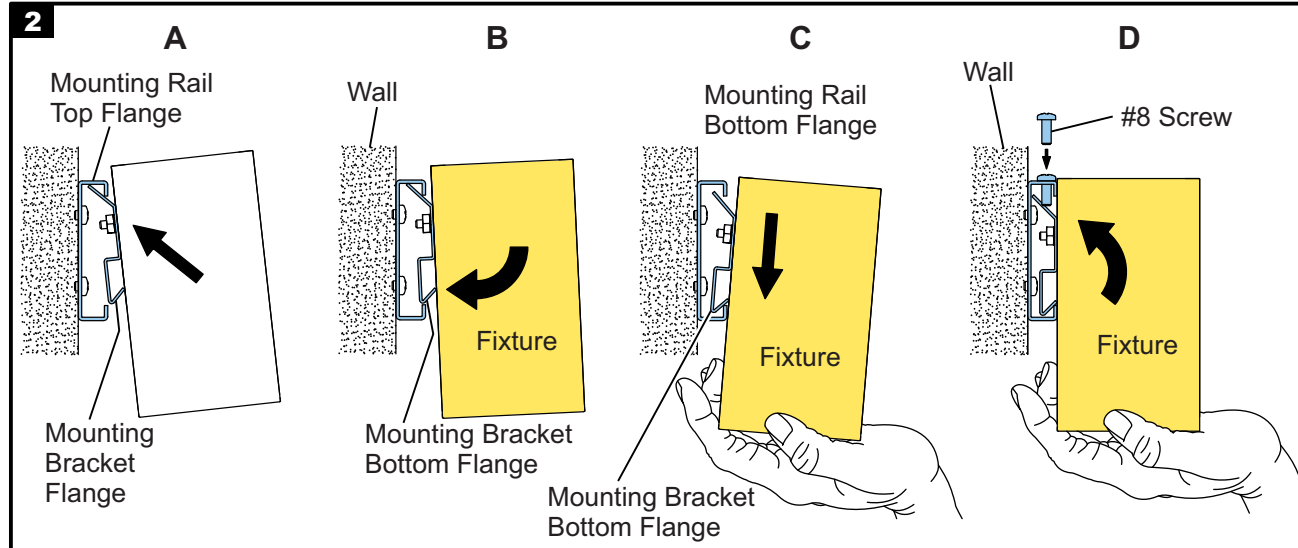


- Slide top flange of mounting bracket underneath top flange of mounting rail.
- Rotate fixture toward wall until bottom flange of the mounting bracket passes bottom flange of mounting rail.
- While supporting fixture, rest bottom flange of the mounting bracket on bottom flange of mounting rail.
- Rotate fixture up toward wall and secure at mounting points with #8 screw provided.


Make wiring connections with wires from J-box.

G. Join Sections

(NOTE: Joining hardware parts provided in a separate yellow bag.)

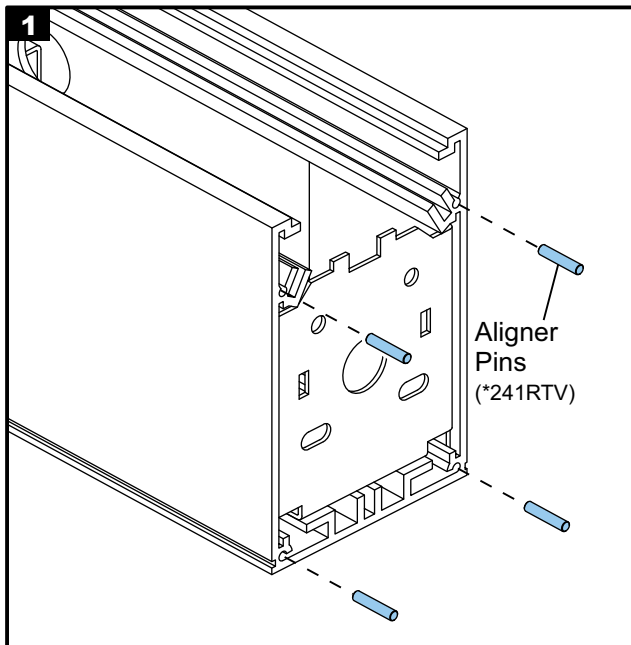


- Repeat mounting steps from step F.
- Install (4) aligner pins onto secured section of the run. Half of the aligner pin should be exposed to insert into the next section.
- Slide unsecured joining section toward the secured section.
- Secure mounting brackets at mounting points with #8 screws provided. **DO NOT FULLY TIGHTEN.**

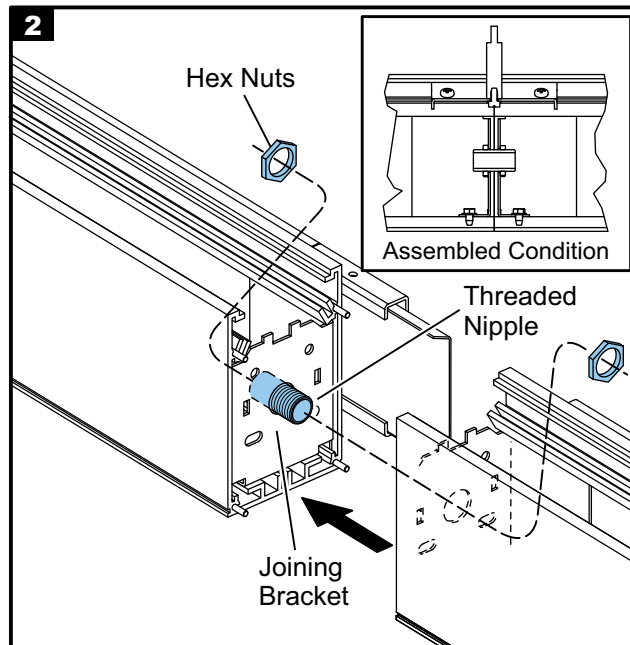

- Install 1" long threaded nipple through 1/2" diameter hole in joining bracket and secure with hex nuts. Tighten hex nuts until sections are secure.
- Tighten #8 screws at mounting points on mounting brackets.

CAUTION: Do not over tighten hex nuts to prevent deformation of the joining brackets.

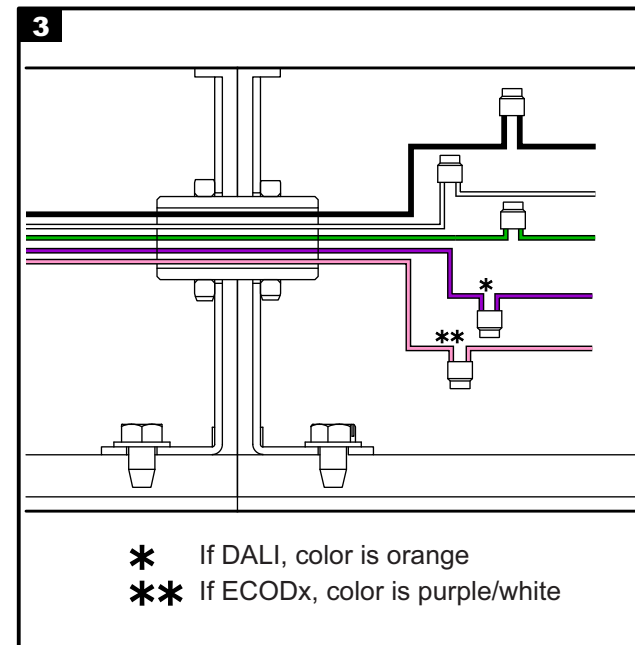


For a Run:

Pull wires through the 1" nipple and make connections at the section closest to end of run.


Safety
p.1Overview
p.6Prep
p.8Set Up Wall
p.9Open Fixtures
p.10Mount First Fixture
p.11Join Sections
p.12Close Fixtures
p.13Supplemental
p.14Contractor's Resources
p.16

H. Close Fixtures

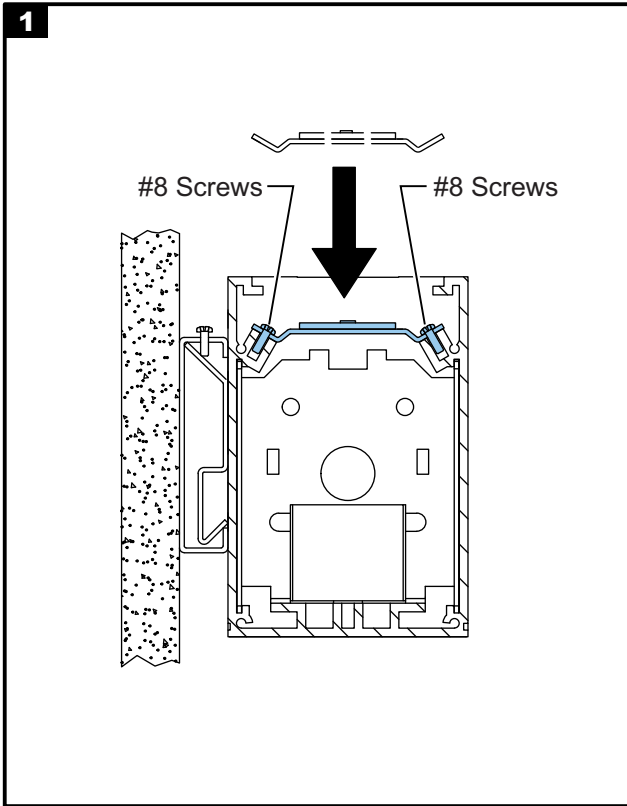


Once all electrical connections are made, reinstall wiring trays by reattaching wire harness to LED boards and secure with previously removed #8 screws.

I. Supplemental


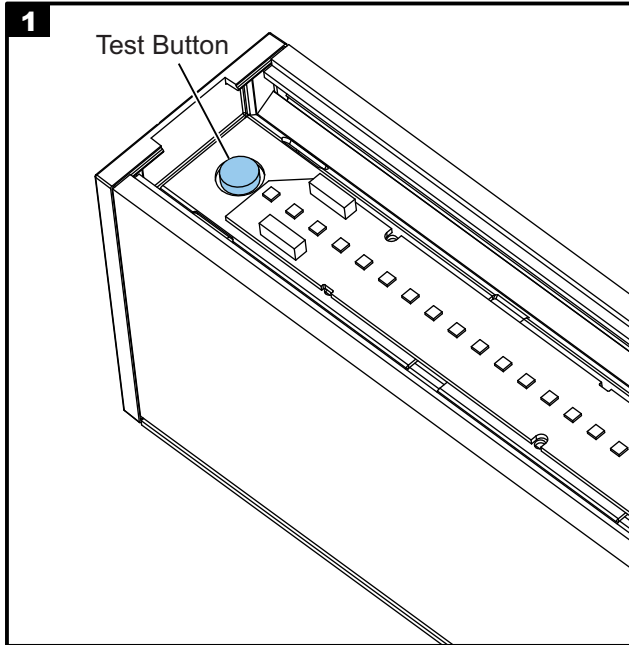
**Battery Pack/Test Switch (E10WLCP):**

- a. If battery pack option is selected (E10WLCP), then an un-switched normal hot is required for power and sensing.
- b. Standard battery drop is on the right side of the section with the battery. See above diagram for location of test button.

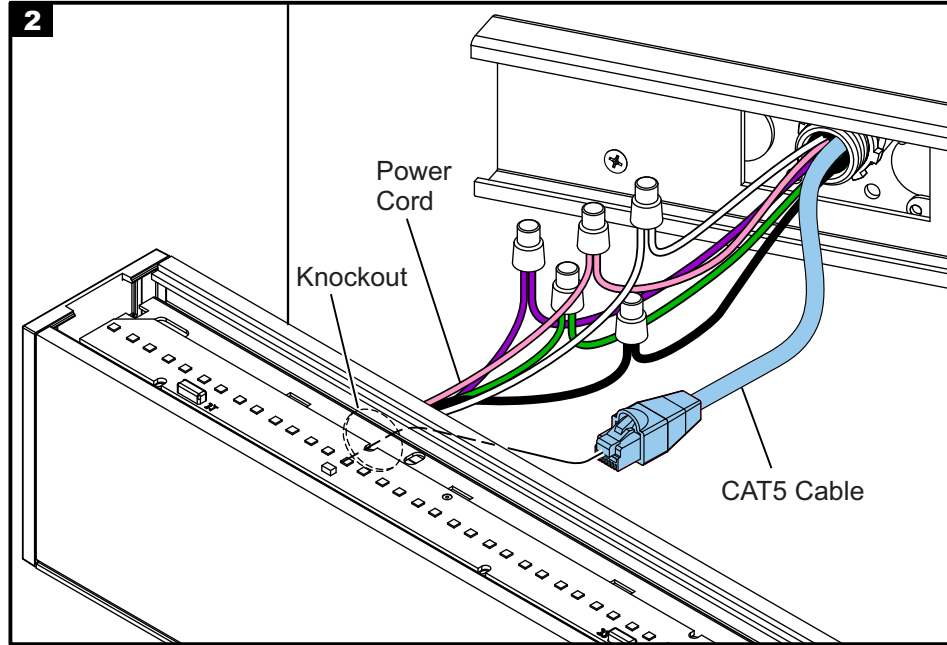**For nLight option (NLIGHT):**


Pull CAT5 cable through the knockout with the power cord and connect to the nLight device within the fixture.

I. Supplemental

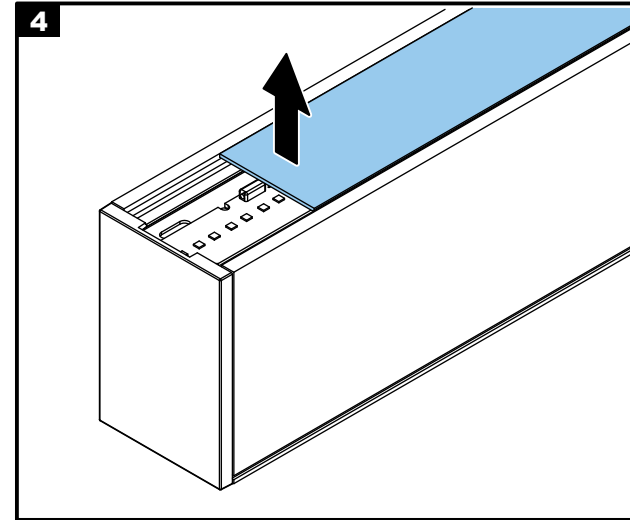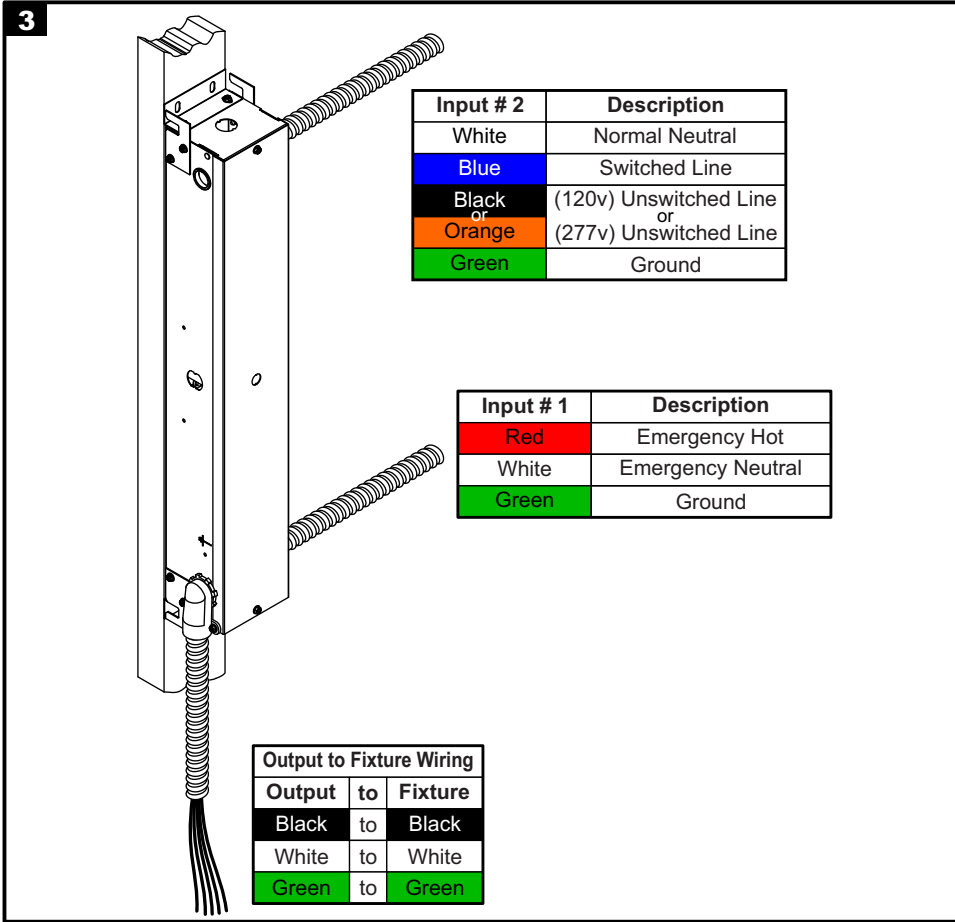

Dust Cover Removal (DC/DCF):

To remove, lift dust cover.

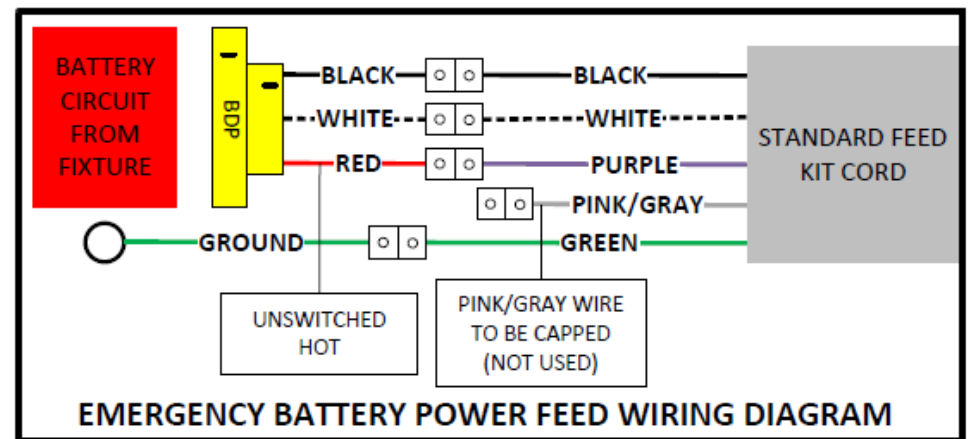

Remote BGTD Mounting Option:

- Suggested to mount in an accessible location for maintenance. To be installed in ceiling or to structure according to local and NEC code.
- 6 foot flexible conduit is attached. The remote BGTD should be mounted within 6 feet of the J-box above the fixture.

J. Contractor's Resources

Check out helpful programs, tools, installation videos and more.

