




AOC Ergonomic Monitor Arm Model: AD110D0

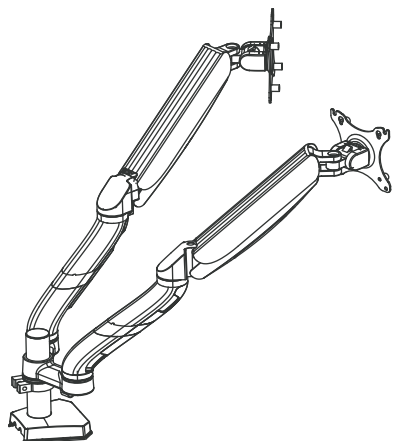


Monitor Size: 13~32"
Weight Capacity: 2~9kg (4.09~19.84 LB)
VESA Size: 75x75mm, 100x100mm

Installation Manual


A: Clamp-Mounting
B: Hole-Mounting
C: Cable-Management
D: VESA Mount installation
E: Monitor angles adjustment

Packaging List

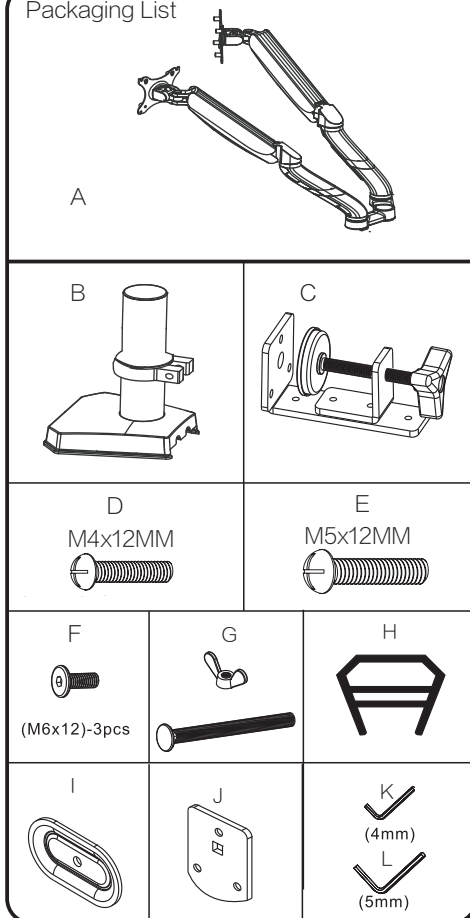


A: Clamp-Mounting Procedures:

Step 1

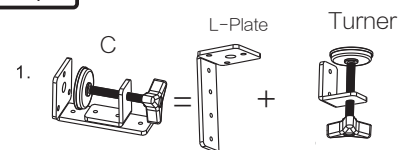


Tighten the 3pcs of screws (black only) to the arm base.

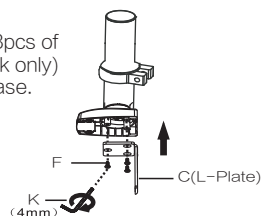


2.

Once you have secured the L-Shaped bracket to the base, attach the turner apparatus to the bracket.

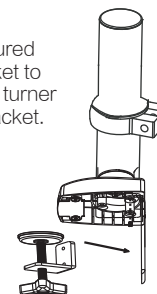


Step 2

Place (H) plastic plate on the desk surface before placing arm base

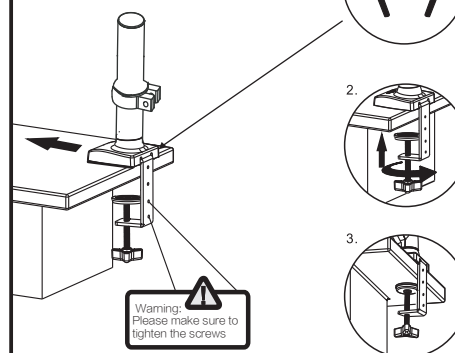

Step 3

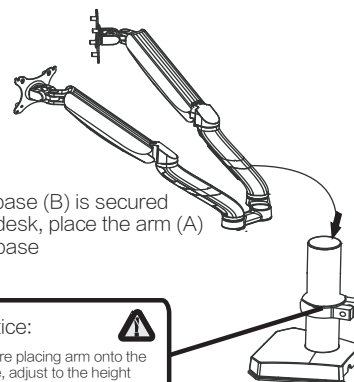

Once base (B) is secured to the desk, place the arm (A) to the base


Notice:

Before placing arm onto the base, adjust to the height desired and lock into place by tightening security screws.

B: Hole-Mounting Procedure


Step 1

1. Insert screws from (G) into (J) Plate, tighten the 3 screws (F) onto the arm base.

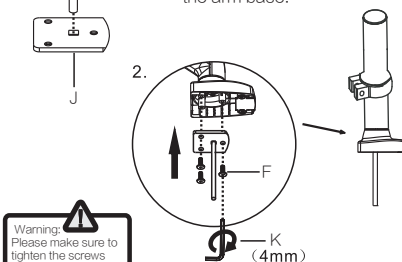


Step 2

Place piece (I) onto the long screw (G) first, then utilize the wingnut provided to secure the base to the surface you are attaching the arm(s) to.

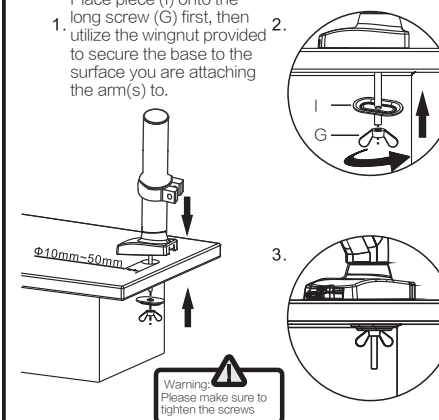

Step 3

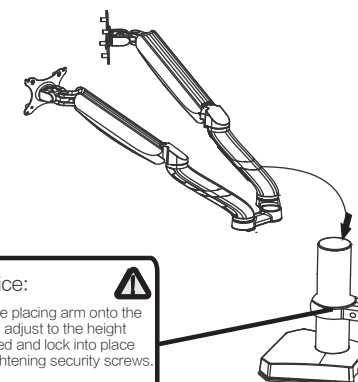


Notice:


Before placing arm onto the base, adjust to the height desired and lock into place by tightening security screws.

Step 4

When monitor arms are placed in correct position, tighten the hidden screw to lock in monitor's arm from shifting.

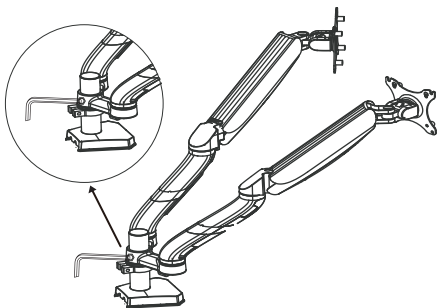


C: Cable Management.

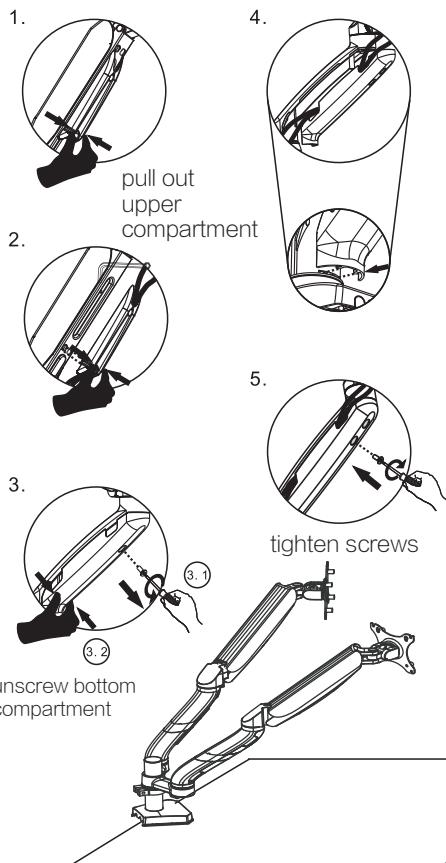


D: Installing VESA Mount

Step 1

VESA: 75x75mm, 100x100mm

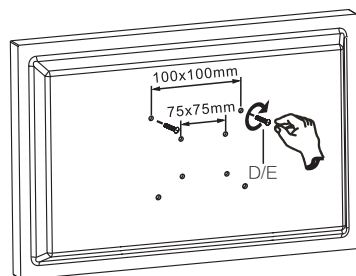


Step 2

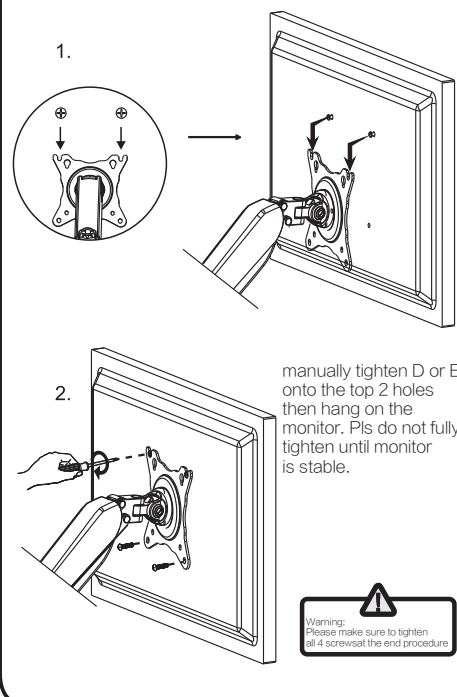

Monitor Weight Adjustment

"+" Increase holding capacity
"-" Decrease holding capacity

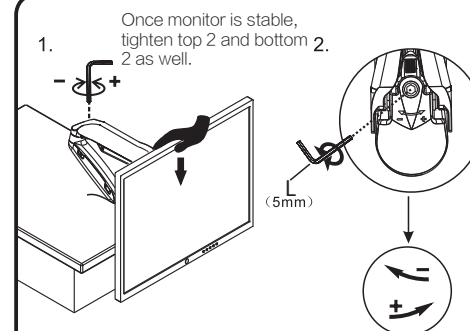


Noted: Please ensure monitor is within 2-9kg weight range

Condition 1: After attached monitor, your monitor is freely moveable in any direction without adjustment.

Condition 2: After monitor is attached, if screen will bounce up, pls use rench provided and turn "-" clockwise direction until stabilized.

Condition 3: After monitor is attached, if screen will sink, pls use rench provided and turn "+" clockwise direction until stabilized.

E: Adjust Monitor angles

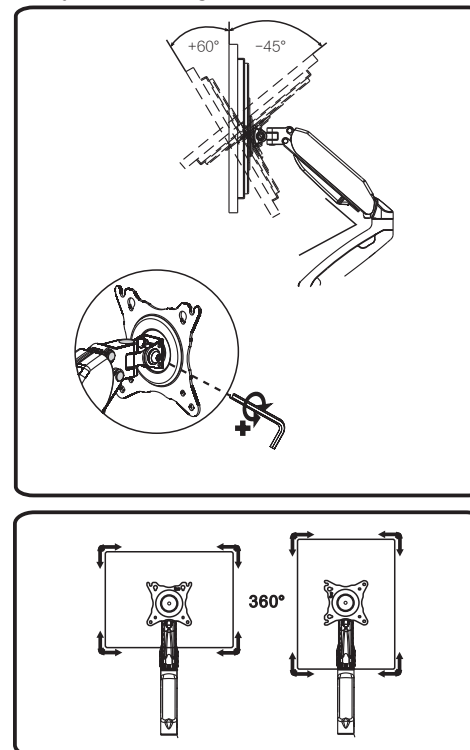

AFTER INSTALLATION, ADJUST GAS-SPRING POWER



1. Ensure Monitor is tighten to Monitor Arm

2. Ensure Monitor is not over-weighted (2-9kg)

Weight Adjustment



Reduce Arm Weight Capacity

Increase Arm Weight Capacity

Warning



Envision Peripherals, Inc.
490 N. McCarthy Blvd. Suite #120
Milpitas, CA 95035

www.aoc.com

Made in China