

Avigilon NVR5 10G Base-T Kit Installation Guide

Installation Guide

NVR5-10GBASET-A1

For

NVR5 STD 16TB-64TB

NVR5 PRM 96TB-160TB



© 2022, Avigilon Corporation. All rights reserved. AVIGILON, the AVIGILON logo, AVIGILON are trademarks of Avigilon Corporation. Intel is a trademark of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Other names or logos mentioned herein may be the trademarks of their respective owners. The absence of the symbols ™ and ® in proximity to each trademark in this document or at all is not a disclaimer of ownership of the related trademark.

This document has been compiled and published using product descriptions and specifications available at the time of publication. The contents of this document and the specifications of the products discussed herein are subject to change without notice. Avigilon Corporation reserves the right to make any such changes without notice. Neither Avigilon Corporation nor any of its affiliated companies: (1) guarantees the completeness or accuracy of the information contained in this document; or (2) is responsible for your use of, or reliance on, the information. Avigilon Corporation shall not be responsible for any losses or damages (including consequential damages) caused by reliance on the information presented herein.

Avigilon Corporation
avigilon.com

20221109



Table of Contents

- Introduction 4
 - Confirm Package Contents 4
 - Recommended Tools 4
- Installing the NVR5 10G Base-T Kit 5
 - Opening the Cover 6
 - Installing the 10G Base-T Card 8
 - Reattaching the Cover 9
 - Confirming the Installation 10
- For More Information 11



Introduction

Avigilon provides an optional 10G Base-T Kit for the NVR5 Standard 16-64 TB and Premium 96-160 TB. This kit provides you with high-speed Ethernet ports for faster connections to your security network of ACC Servers and Clients.

Part Number	Description
NVR5-10GBASET-A1	NVR5 Standard/Premium 10G Base-T Upgrade Kit

Confirm Package Contents

Confirm that the kit you are installing contains the following components:

- 1 × 4-port 10G Base-T PCIe card

Recommended Tools

The following tools are not included in the kit package, but are needed to complete the installation:

- Phillips #2 screwdriver
- Wrist-grounding strap connected to the ground
- ESD Mat

Important: It is recommended that you always use an antistatic mat and antistatic strap while working on components inside the system.

Installing the NVR5 10G Base-T Kit

Note: If the NVR5 is an operating part of your security system, be aware that it must be shut down to complete this procedure.

Before starting to install the kit:

1. Turn off the NVR5, including all attached peripherals. Press the power button on the front panel, and wait for the light to stop blinking to indicate shutdown is complete.



WARNING — Opening or removing the system cover while the system is powered on may expose you to a risk of electric shock.

2. Disconnect the NVR5 from the electrical outlet and disconnect the peripherals.
3. Remove all network, power and peripheral cables from the NVR5.
4. If applicable, remove the NVR5 from the rack.

Important: Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.




Opening the Cover

1. At the top of the NVR5, unlock the latch release then lift and rotate the latch towards the back of the unit. The cover slides back and is released from the body.

Tip: Use a Phillips #2 screwdriver to remove the shipping screws before unlatching the cover if you are removing the cover of an NVR5 for the first time.



2. Remove the air shroud by holding it at both ends and lifting it away from the system.

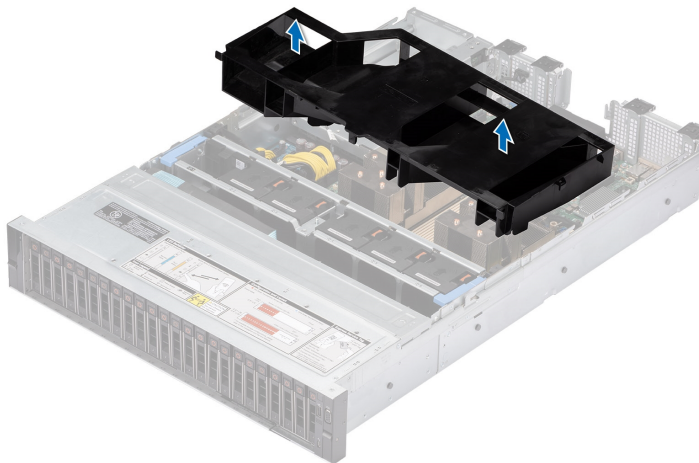


3. View the interior of the NVR5 and identify the locations where the components of the kit will be installed.

The view below shows the details of an NVR5 with all of the covers and cards removed, and important components labeled with numbers.

The components affected by the NVR5 10G Base-T Upgrade Kit are:

- 6—Expansion card riser


The 10G Base-T card will be installed in one of the empty expansion slots to the left of this riser (either slot 5 or 6 depending on your NVR5 model).

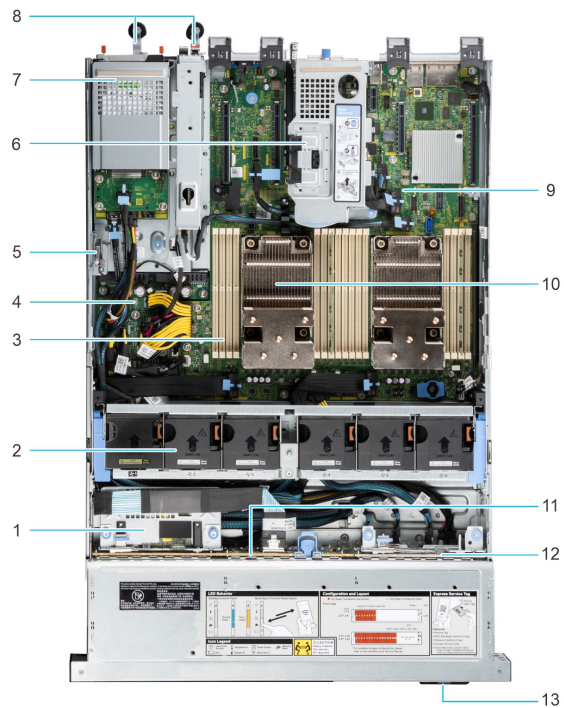

Installing the 10G Base-T Card

With the NVR5 open:

1. Unpack the 10G Base-T card.
2. Locate the slot in which the Base-T card will be installed and remove the PCI expansion slot cover from the back panel of the NVR5:
 - For an NVR5 Premium system, the card will be installed in slot 5.
 - For an NVR5 Standard system, the card will be installed in slot 6.

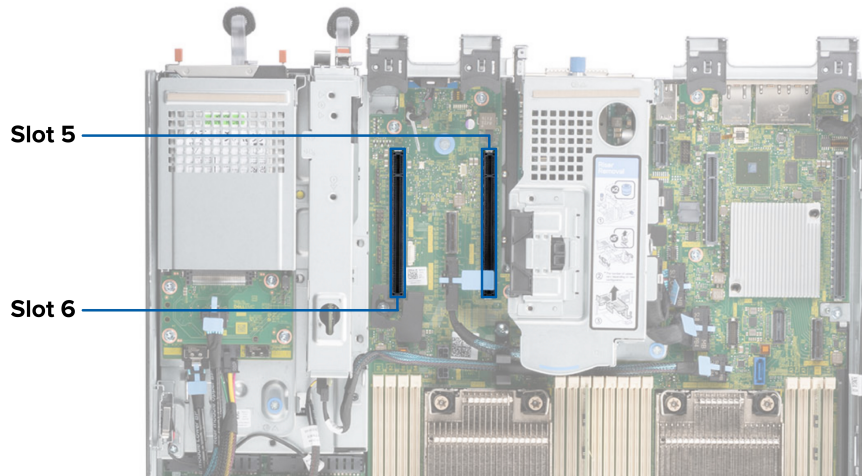


3. Insert the card edge connector firmly into the appropriate expansion card slot until the card is fully seated.

Reattaching the Cover

When all the components of the kit have been installed:

1. Reinstall the top of the cooling shroud:
 - a. Align the slot on the air shroud with the standoff in the system.
 - b. Lower the air shroud into the system until it is firmly seated.

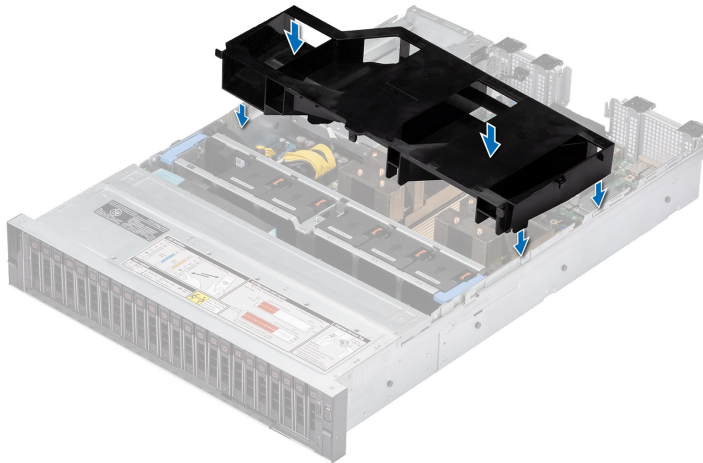

2. Close and lock the NVR5 cover.
3. If the NVR5 was rack mounted and removed to install the kit, remount it into the rack.
4. Reconnect all the peripherals and cables.

Important: Ensure that both of the power supplies are connected to main power. The upgraded NVR5 requires both power supplies to properly function.

5. Power on the NVR5.

Confirming the Installation

From an ACC Client running on a workstation with a network connection to the ACC site associated with the NVR5:

1. Log in to ACC site.
2. Click  in the menu bar and scroll down and click **Site Setup**.
3. In the Search panel, click  to expand the site containing the NVR5 in which the 10G Base-T card is installed.
4. Navigate to (or search for) the upgraded NVR5 and click  .
5. Verify that the NVR5 has one additional 10GbE adapter with four ports available:
 - a. In the System Explorer, select the upgraded NVR5 server.
 - b. In the New Task menu  , click **Site Health**.
 - c. Under the Network Adapters heading, there should be four new ports installed in PCIe slot 5 or 6 (depending on Premium or Standard). These new ports should have a Link Speed of 10Gbps.

Limited Warranty

Avigilon warranty terms for this product are provided at [avigilon.com/warranty](https://www.avigilon.com/warranty).



For More Information

For additional product documentation and software and firmware upgrades, visit support.avigilon.com.

Technical Support

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

