


Inflatable Neck Massage Cushion

Item no: 2498118

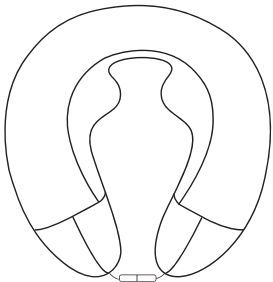

User's manual

Directory

Precautions.....01

Essential knowledge.....02

Charging method.....03

Instructions.....04

Product parameters.....05-06

Warranty.....07

Warranty Card.....08

Precautions

To ensure that you use this product correctly and safely, be sure to read the Manual. For incorrect use or failure to follow the instructions The company is not responsible for the consequences.

1. Do not use this product while driving.
2. When using, please remove the accessories or items that may affect the massage.
3. Do not use in a humid environment such as a bathroom.
4. Keep this product away from water, fire and corrosive environment
5. When used in a specific environment, observe safety regulations.
6. Do not use it on the massage site.
7. Do not use if the massage area has discomfort such as skin damage, redness, inflammation, and congestion.
8. Do not use it if you have a history of heart disease or illness, patients with acute illness, patients with skin disease, patients with malignant tumors, or those with physical abnormalities.
9. Do not use for patients with blood diseases such as bleeding tendency, osteoporosis, soft tissue disease, and stroke
10. Do not use if you have a slow movement, mental or physical discomfort, or mental retardation. If you need to use it, please follow your doctor's advice.
11. Please stop using if discomfort during use
Pregnant women and menstrual women should not use the massager.
12. Use by children under 6 years of age is prohibited. Children 6-12 years of age must be used under the guidance and care of their parents or persons with supervision.
13. If you need to clean the appearance, you should use alcohol cotton to avoid cleaning with water.
14. Keep sharp objects away. Sharp objects can damage the product.
15. This product is a home electronic health care product, it is not intended as a medical device and is not intended for diagnostic, therapeutic, and other commercial uses.
16. Please use the charging equipment configured by our company to charge the product and pay attention to the safety of electricity use.
17. If an abnormal phenomenon occurs during use, please cut off the power immediately.
18. Do not disassemble or repair it by yourself.
19. The product has a hot moxibustion function, and the device has a heating surface, so people who are not sensitive to heat must pay attention when using it,

Essential knowledge

* About use frequency
Use as needed, it is recommended to control the massage time for each use within 10-30 minutes and use it at appropriate intervals, Excessive use may cause physical discomfort, neck and skin injuries. Therefore, when using for the first time, you need to observe the physical condition and the changes of the shoulder, neck and skin to minimize the use time.

* About suitable size
This product is suitable for a neck circumference of about 30 to 40 cm.

* About usage
When using this product, please lean on the back of your chair and relax your body completely.
Please remove jewelry such as necklaces, neck-hook headphones, and neck-tags.
If you feel pain or discomfort around the shoulder and neck, stop using it and consult a doctor immediately.

* About the state after use
The neck and surrounding area may turn red for a short time, but will recover after a period of time as is.

* Other
During use, it will make a special sound, which is the rotation of the massage head and the sound made when adjusting the airflow is not an abnormality of the product.

5

1

2

4

3

When the storage period exceeds 3 months, the machine should be unpacked and stored in a dry, ventilated place. Please keep it away from water, fire or wet space. Inspected to recharge the machine before use.

Light exposure and corrosive gas attack.

Transport

The product packaging is equipped with simple shockproof facilities, which is suitable for air, rail, road and ship transportation.

Avoid rain, snow, splashing and collision.

Power check

Check the power supply. If the power supply voltage exceeds the specified range, do not use it.

maintenance

Take measures to prevent moisture, rodents and pollution. Cleaning should be performed with the power off. The instrument should be placed in a safe place after use. Do not place heavy objects on the instrument. When a fault occurs, professional technicians should be asked to repair it. Non-professionals cannot disassemble the product by themselves.

Dispose and recycling

This product should not be discarded with household waste. When you decide to discard this product, Dispose in accordance with local environmental laws and guidelines.

Model	FE-4003
Rated power	5 W
Rated voltage	5 V~ 1 A
Battery capacity	2200 mah
Charging interface	USB-C™

Product parameters

This product cannot be used while charging. After charging is complete, turn the power on.

Use after removing the adapter.

Timing function

10 min timing, when the time is up, the buzzer will turn off automatically after three times.

2. short "didi" beeps.

Long press [Switch Button] (≥2s) to turn on or off.

Turn on: The buzzer will sound a short "drop1"; Shut down: the buzzer will short three "drops";

3. Message function

There are 2 modes of massage head rotation. Press the [Switch Button] shortly to switch modes and the buzzer sounds.

4. Inflatable function

The product is inflated when the product is turned on. After the air bag is full, the message head starts to rotate;

5. LED indication

Two-color light, normal operation when booting-LED flashes green, low voltage-LED flashes red.

6. Heating function

The heating is on by default when the machine is turned on.

Instructions for inflation and deflation

Compressed air valve design

Deflate by pressing the air valve

Please check if the air valve is open when starting the inflation

* For the first time use, or people with sensitive skin, please observe the changes in the neck and skin during use

Charging time

1. It takes about 3.5 hours to fully charge.

2. When fully charged, use it for 10 minutes each time (mode 1 and mode 2).

3. When the red-light flashes, please charge immediately.

How to wear

1. Press the button in the middle of the pull buckle to separate the pull buckle

2. Hold the hands at both ends of the host, wrap from the top of the head to the back

The maximum neck circumference for this product is about 40 cm

Operation panel may be left or right after wearing

You can tell the position and type of the keys by touch.

Both the power button and the mode button are recessed, with a little bump next to the power button.

1. Connect the USB charging cable to the host

2. Plug the power adapter into the socket.

The main unit emits a beep sound, and then the charging lamp on the control panel flashes. After charging is completed, the charging lamp is on.

* It is normal for the main unit and power adapter to heat up slightly during charging.

Correct use

