


First Degree Fitness




Speed Sensor Trouble Shooting and Replacement Guide for Apollo AR and Apollo PRO

Sensor Troubleshooting


1. Check the gap between sensor and magnetic ring should be 2-3mm

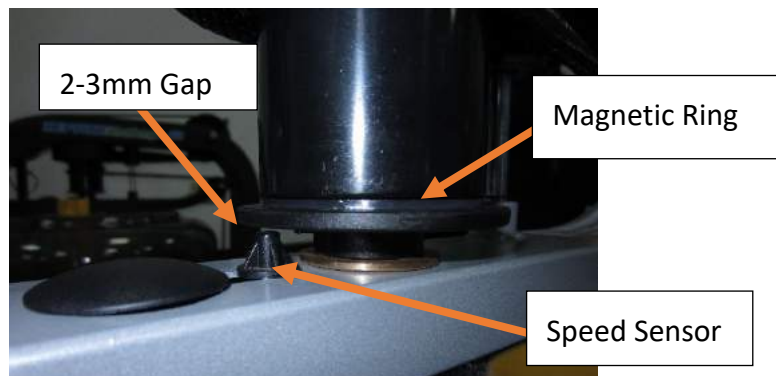

2. Visually check all 6 magnets in the magnetic ring are present and flush (no need to remove the ring)

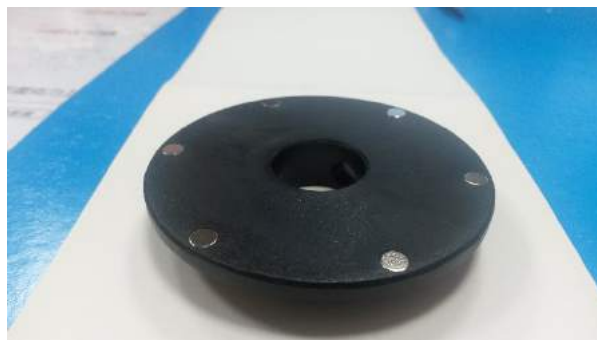


3. Check sensor head – the internal sensor should be no more than a few millimeters inside the hole

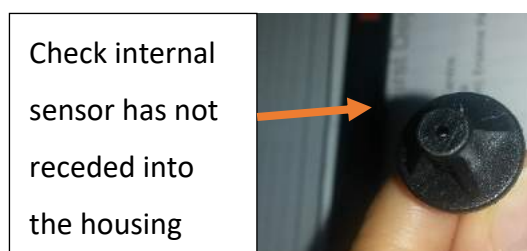


4. If the above checks fail to resolve the issue continue to the next section

Sensor Removal

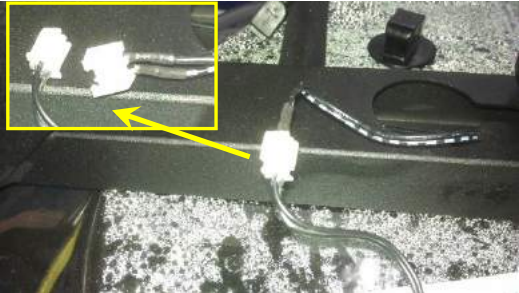	Remove the Frame Plug
	Pull the Speed Sensor out of the frame
	Disconnect the sensor cables
	Remove the washer from the Speed Sensor

Sensor Re-Installation

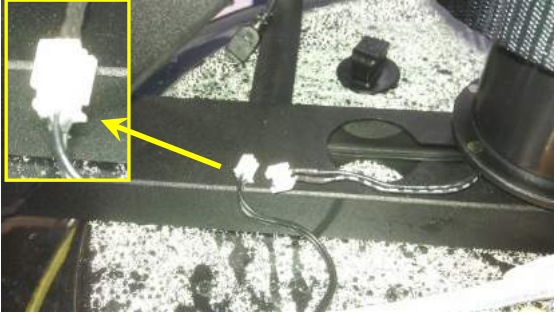	Fit washer onto the new Sensor
	Connect the cables.
	Install the Speed Sensor as shown.
	Replace the Frame Plug.