


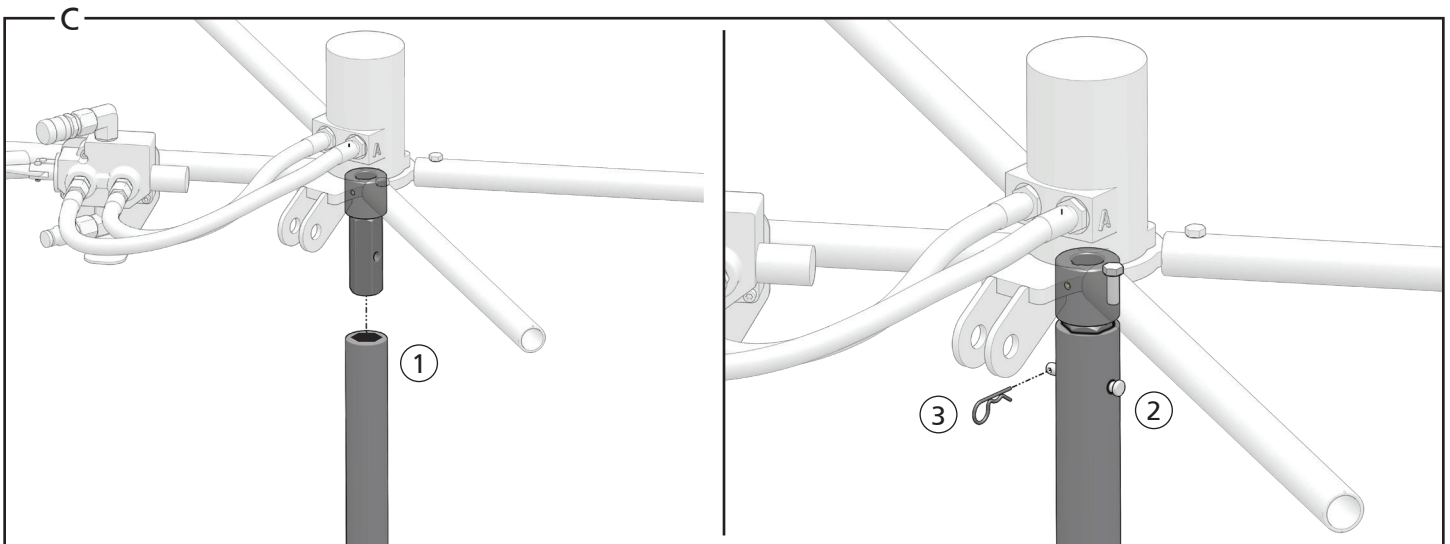
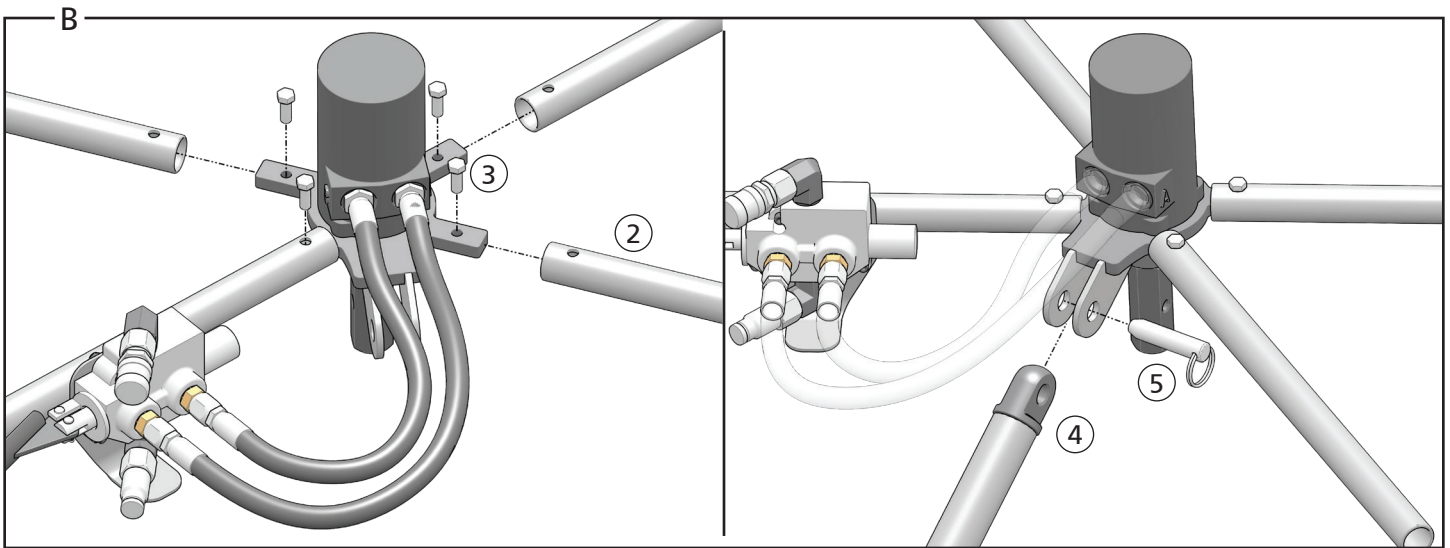
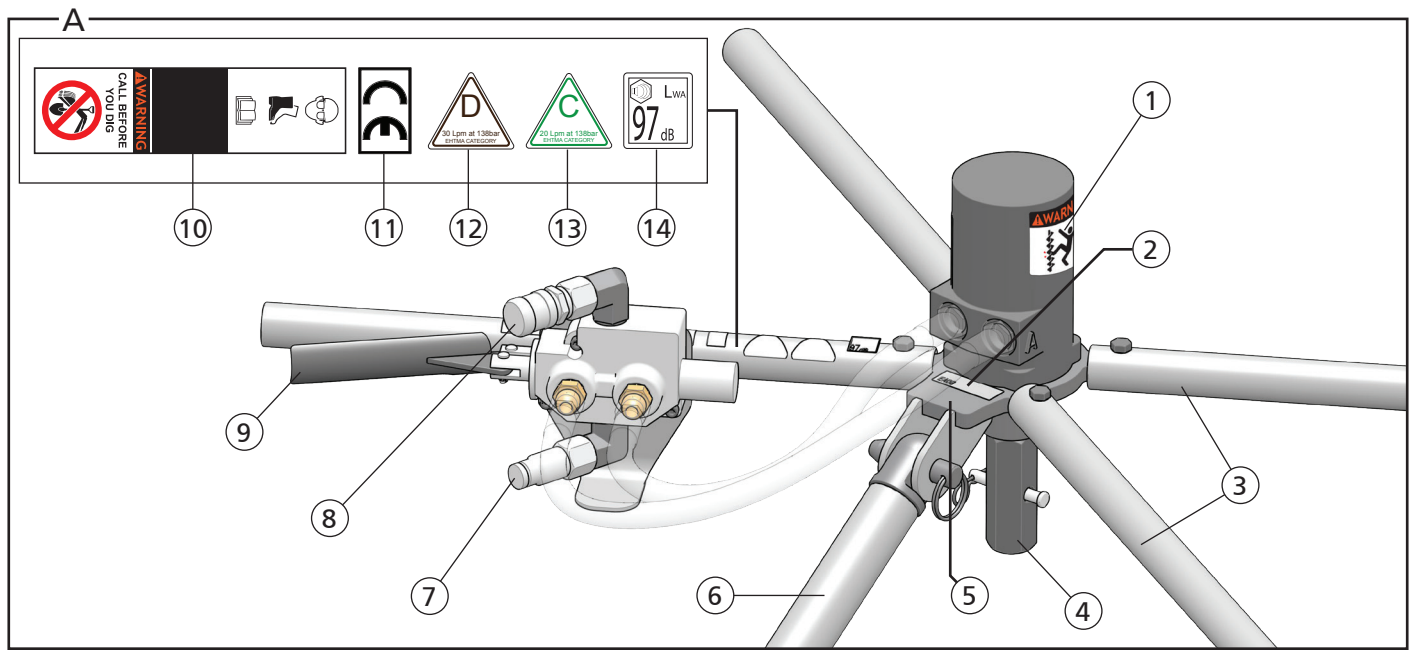
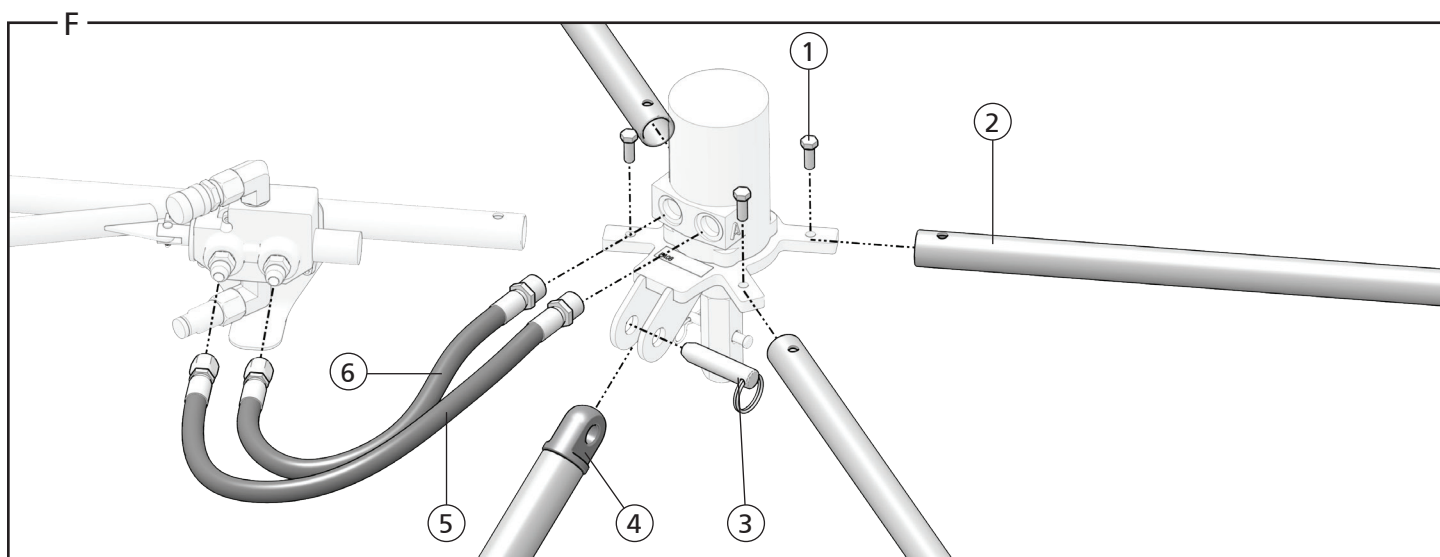
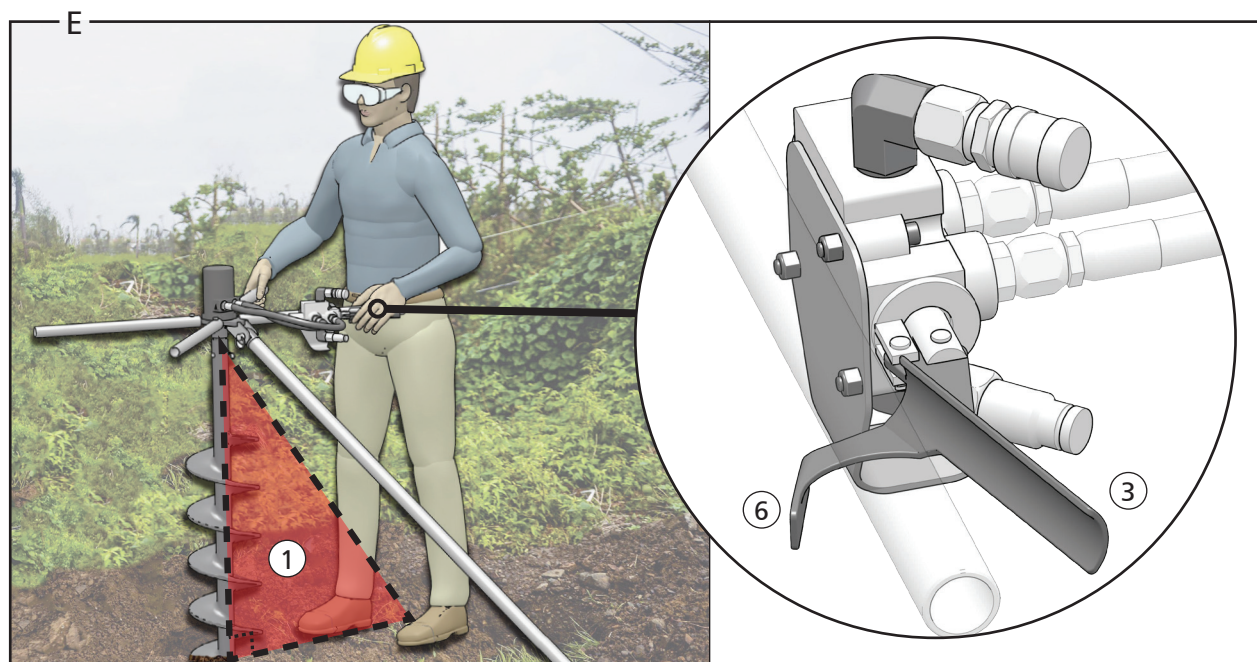


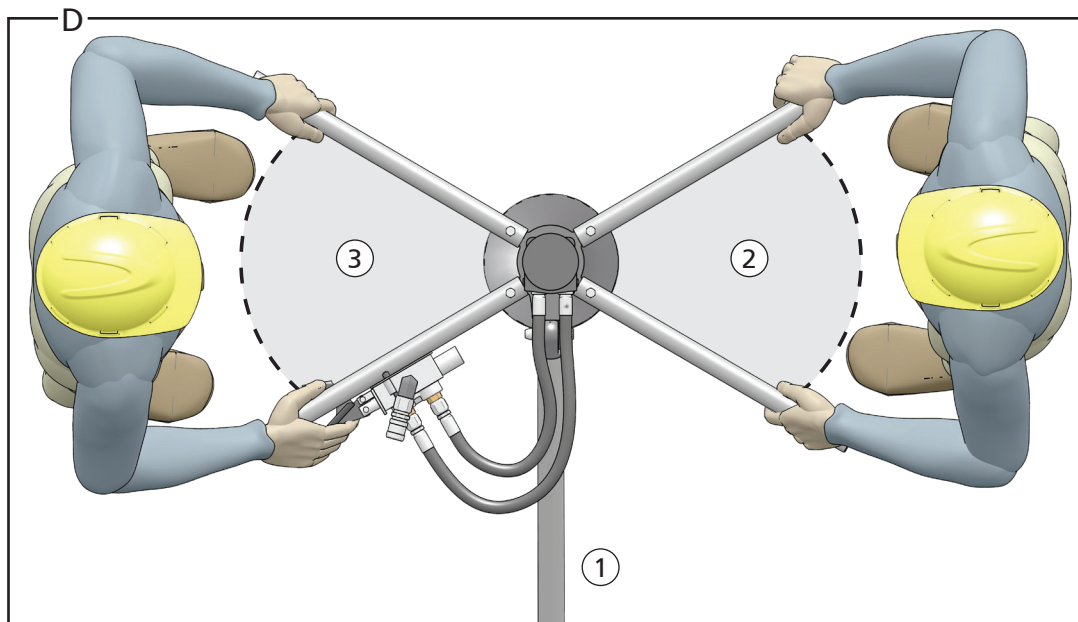

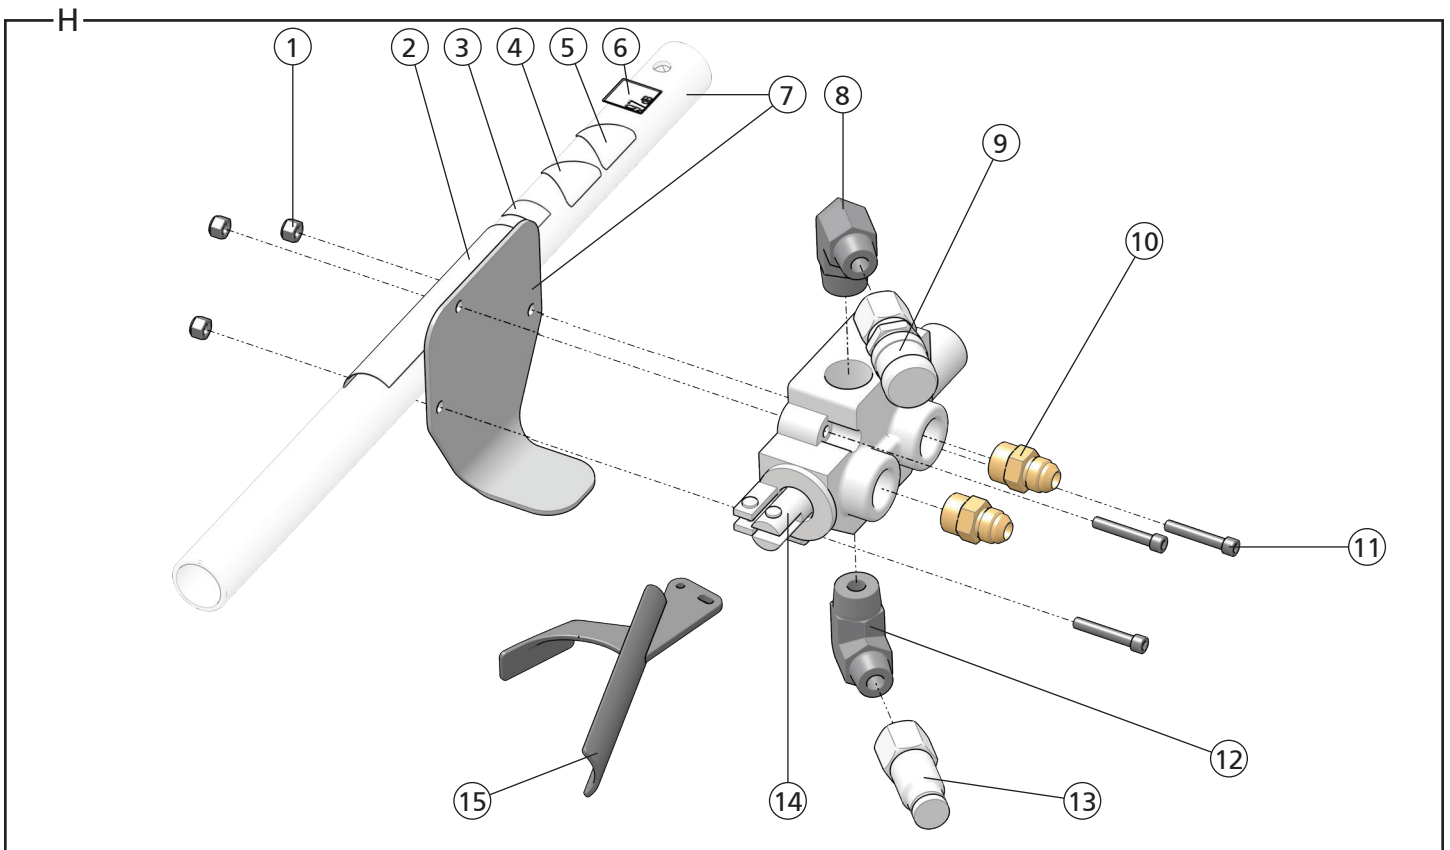

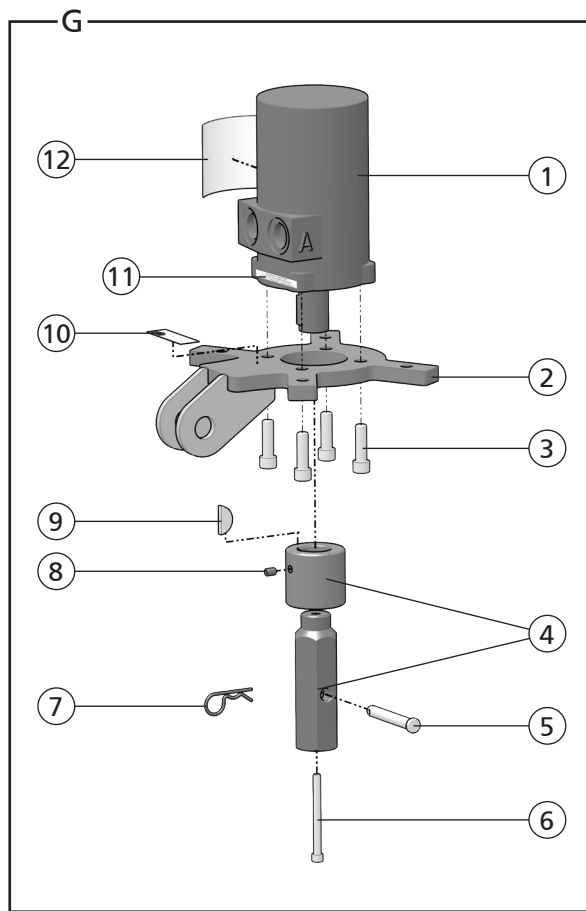

EA08 Handles Part Illustration - Detail F		
ITEM	P/N	DESCRIPTION
1	39415	Cap Screw - Torque to 40 Ft. Lbs. (54 Nm)
2	37919	Handle
3	21181	Quick Release Pin
4	37923	Torque Tube Assembly
5	39283	Long Hose Assembly
6	39282	Short Hose Assembly

EA08 Motor & Bit Retainer Illustration - Detail G		
ITEM	P/N	DESCRIPTION
1	39276	Motor
2	37917	Motor Base
3	06151	Cap Screw - Apply Loctite 242 and torque to 45 Ft. Lbs. (61 Nm)
4	43662	Coupler Assembly
5	44908	Clevis Pin
6	00718	Cap Screw - Apply Loctite 242 and torque to 12 Ft. Lbs. (16 Nm).
7	44909	Cotter Pin
8	00720	Set Screw
9	-	Woodruff Key (Included with 39276)
10	23139	Tool Name Tag
11	88344	Importer Decal
12	39424	Auger Warning Decal

EA08 Trigger Illustration - Detail H		
ITEM	P/N	DESCRIPTION
1	00719	Nut
2	88349	Composite Safety Decal
3	28323	CE Decal
4	11206	Circuit Type "C" Decal
5	11207	Circuit Type "D" Decal
6	81440	Sound Power Decal
7	39277	Valve Mount Handle
8	39404	Elbow Adapter
9	03975	Female Coupler
10	10351	Adapter
11	08253	Cap Screw
12	39404	Elbow Adapter
13	03976	Male Coupler
14	39278	Valve Assembly (Includes 2 Clevis Pins and 2 Cotter Pins)
15	39279	Trigger
16	03974	Coupler Set (not shown)

