



ET7-1 TWIN OUTPUT WEEKLY PROGRAMMABLE TIMER User's Manual


RESTRICTIONS ON USE

When using this product in applications that require particular safety or when using this product in important facilities, please pay attention to the safety of the overall system and equipment. Install fail-safe mechanisms, perform redundancy checks and periodic inspections and adopt other appropriate safety measures when it is necessary. This product is rated at Class II □.

SPECIFICATIONS


Operating voltage	AC/DC : 100 - 240V
Allowable operating voltage range	85 ~ 110% of rated operating voltage
Rated frequency	50 / 60 Hz
Contact rating	240VAC 7A(N.O.), 240VAC 5A(N.C.) Resistive load
Status Indicator	POWER - Green, Out1/Out2 - Green
Power consumption	Approx. 5.6VA (at 220VAC)
Life	Mechanical : 5,000,000 times / Electrical : 100,000 times
Ambient temperature	-10 ~ +50°C (without condensation & freezing)
Ambient humidity	MAX 85% RH (without condensation)
Altitude	MAX 2000m
Weight	Approx. 200g

BUTTON, SWITCH and LCD FUNCTIONS

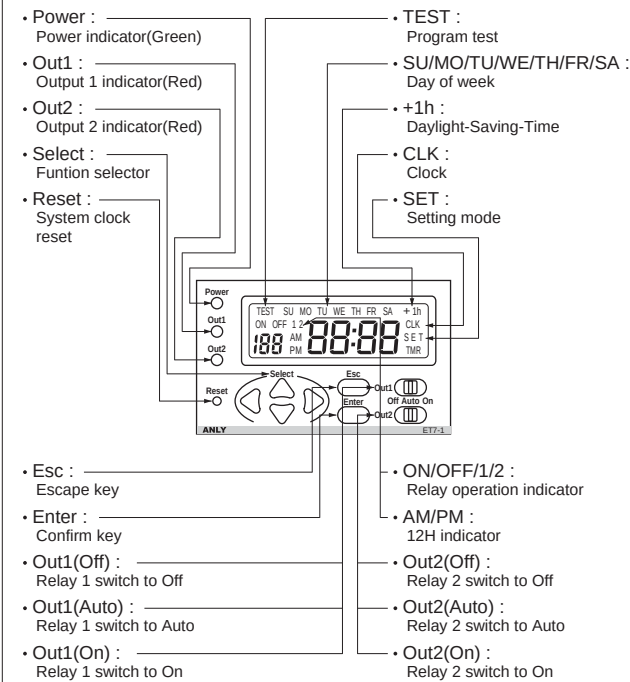

*Esc + Reset : Recall initial value

DIMENSION(mm)

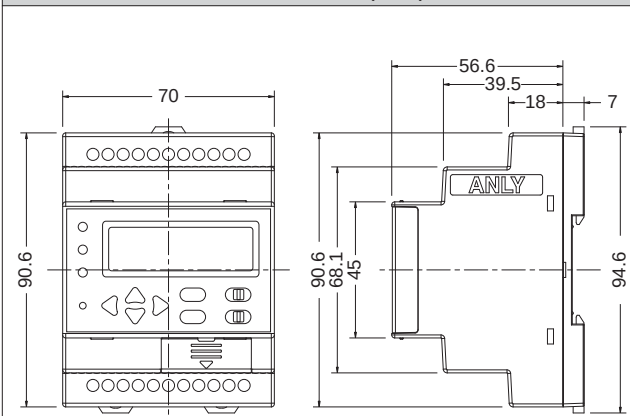

SAFETY PRECAUTION This manual contains the following symbols to ensure safe operation of this timer.

WARNING Warnings are indicated when mishandling this controller might result in death or serious injury to user.

CAUTION Cautions are indicated when mishandling this controller might result in minor injury to the user, or only physical damage to the timer.

WARNING

- Note this incorrect wiring of this controller can damage it and lead to other hazards. Make sure the controller has been correctly wired before turning the power ON.
- Before wiring, or removing / mounting the controller, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the controller. Doing so might cause electric shock or faulty operation.

CAUTION

- Use the controller within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere and etc.). Failure to do so might cause fire or faulty operation.
- Firmly tighten the terminal screws. Insufficient tightening of terminal screws might cause electric shock or fire.
- Press reset before use after turning the battery on or replace the battery.

OPERATING FLOWCHART

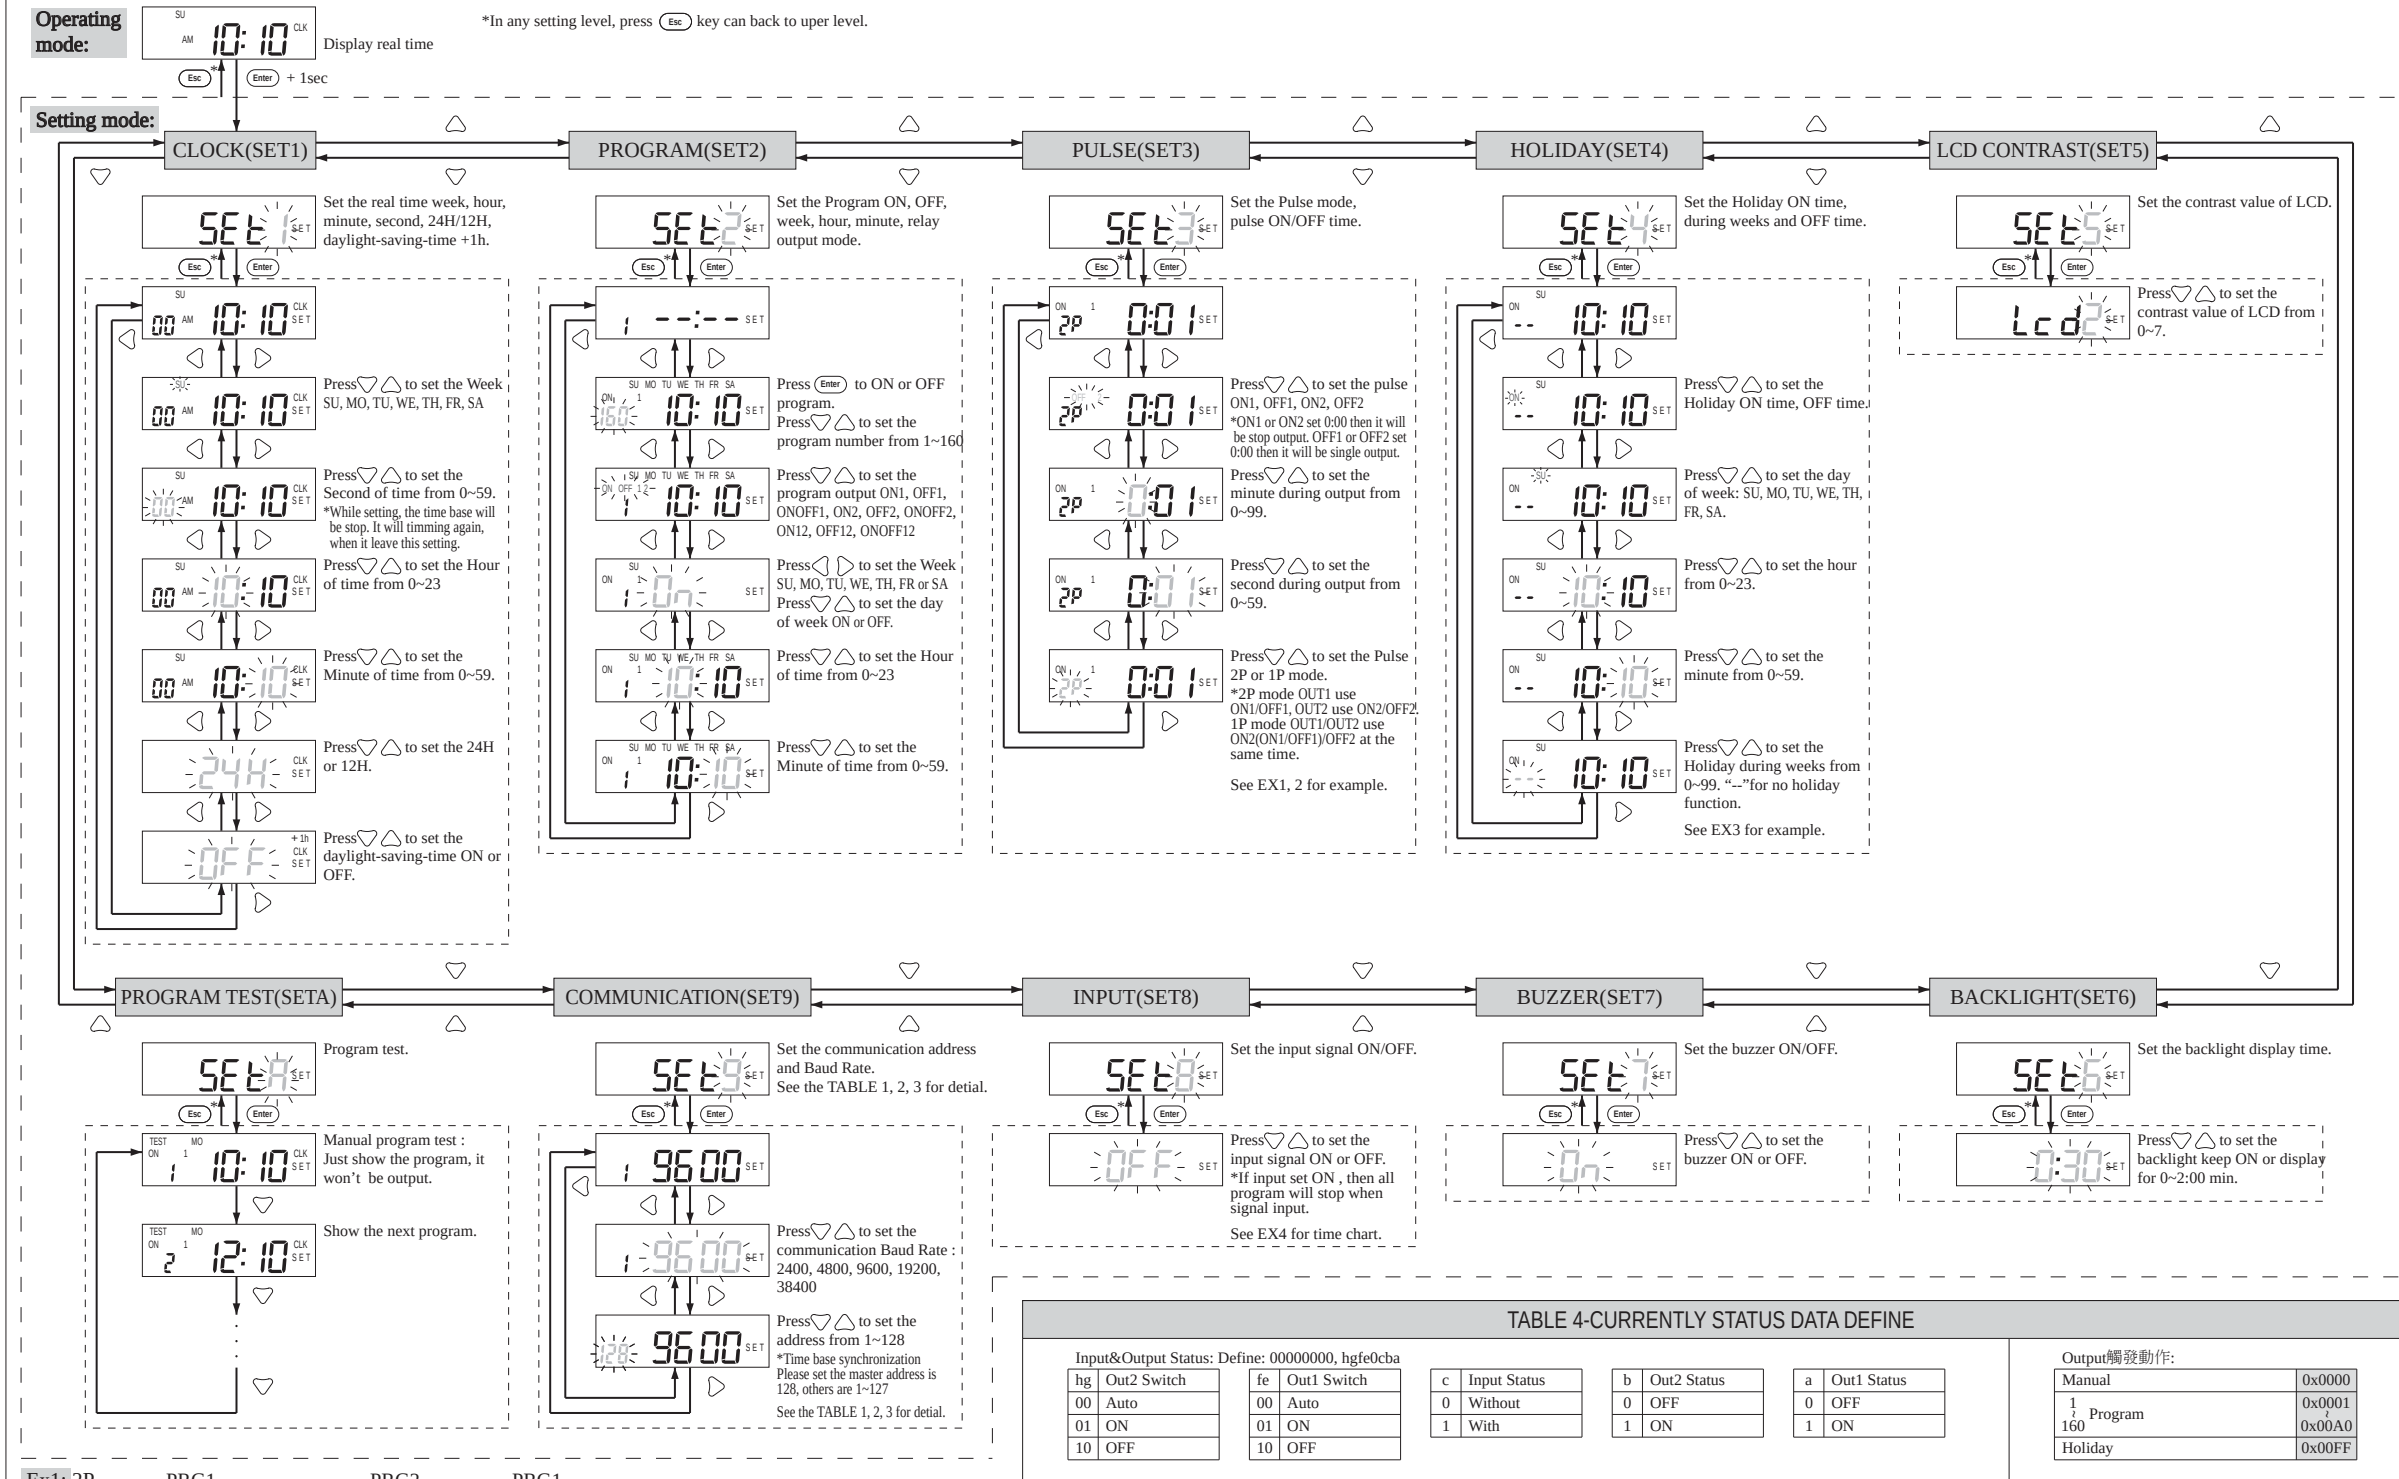


TABLE 4-CURRENTLY STATUS DATA DEFINE

Input&Output Status: Define: 00000000, hgfe0cba			
hg	Out2 Switch	fe	Out1 Switch
00	Auto	00	Auto
01	ON	01	ON
10	OFF	10	OFF

c	Input Status
0	Without
1	With

b	Out2 Status
0	OFF
1	ON

a	Out1 Status
0	OFF
1	ON

Output觸發動作:	
Manual	0x0000
1 Program	0x0001
160	0x00A0
Holiday	0x00FF

