

USER MANUAL

Smart Lock with Keypad

HBUS-MD-BLK-KIT

HBUS-MD-SIL-KIT

G2.20210427




CONTENTS

1. What's Included	01
2. Product Overview	02
3. Specifications	03
4. Getting Started	03
Download TTLock App	03
Prepare Door for Installation	04
5. Installing the Smart Lock	05
6. Setting Up the Smart Lock	11
Pair Your Phone with Smart Lock	11
Set Access Passcode	13
Send Ekey/Authorized Admin	14
Change/Delete Passcodes	14
Turn on Auto-Lock Feature	15
7. Basic Operations	15
Unlock the Door	15
Lock the Door	16
8. Remote Control, Alexa/Google Home	16
How to Pair with Your TTLock App	16
How to Remotely Unlock or Lock the Door	18
How to Use Alexa to Control the Door	18
How to Use Google Home to Control the Door	20
9. Troubleshooting	20
10. Customer Service	22
11. How to Activate the Lock Warranty	22
12. Important Safety Instructions	22




1. What's Included

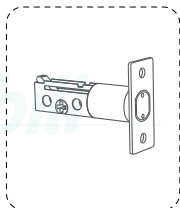


Deadbolt




Front Panel

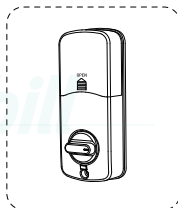


Back Panel

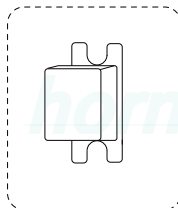

Deadbolt Cover

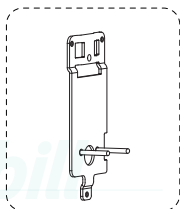


Mounting Plate

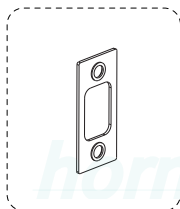


Strike Plate




Pin

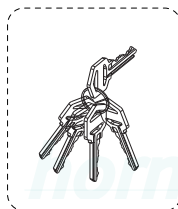


Keys

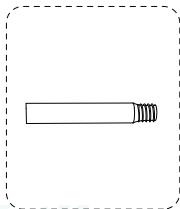


Front Panel
Screw

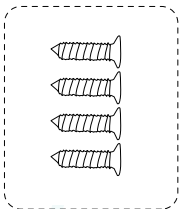


Strike Screws
Deadbolt Screws

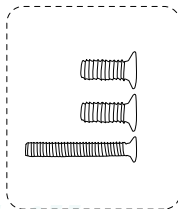

Back Panel
Screws

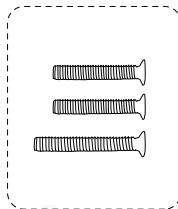


Mounting Plate
Screws

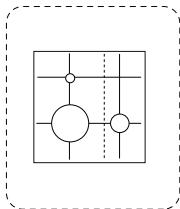

Mark Cards



User Manual

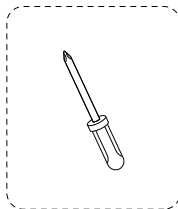


Phillips Screwdriver




2. Product Overview

Front View

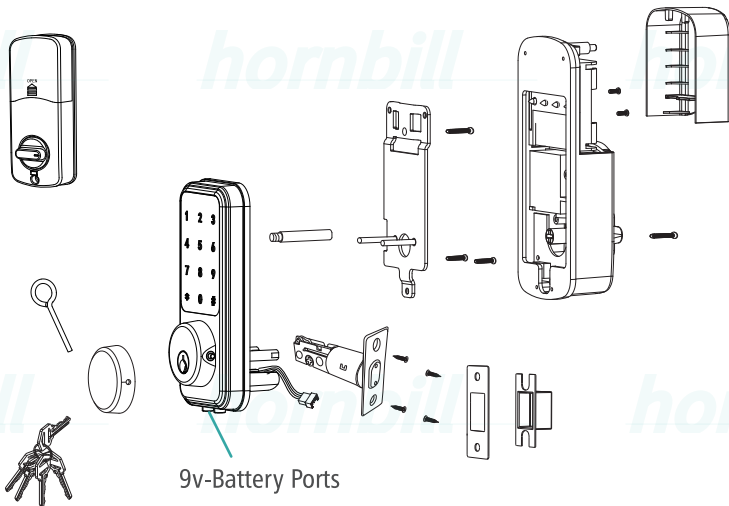

Rear View

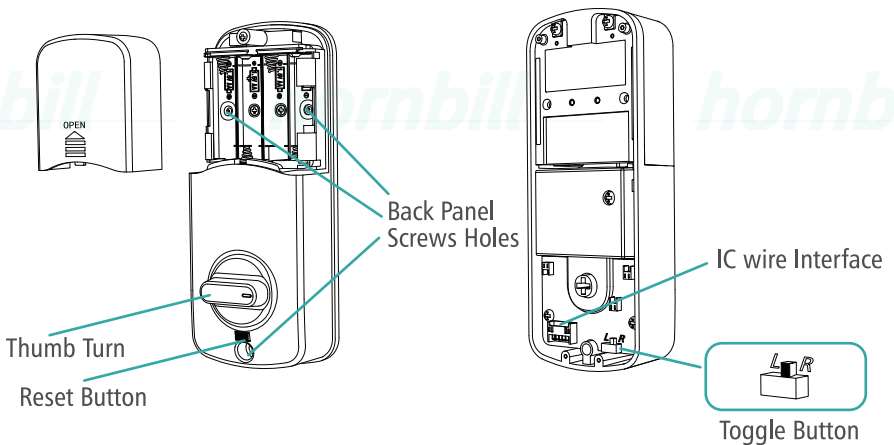

3. Specifications

Maximum Access Code: 150

Maximum Ekey: 1000+

Maximum Authorized Admin: 1000+

Communication Mode: Bluetooth 5.0

Waterproof: IP65 (Front Panel)

Numeric Keypad: Touchscreen Keypad

Operation Temp Range: -20℃ ~ 70℃ (-4°F ~ 158°F)

Lock Material: Zinc Alloy

Battery: 4×AA batteries (Not provided)

Battery Life: 6 Months (If Open and Close the Door for 10 Times Per Day)

Times to Unlock and Lock: 250,000 Times (Mechanical)

4. Getting Started

Download TTLock App

1. Download the TTLock App from the App Store (iOS devices running version 10.2 and later versions) or Google Play (Android devices running version 5.0 and later versions).
2. Set up for TTLock account: Use your phone number (add "+1" in the front of number) or your email to register an account.




Prepare Door for Installation

1. Make sure that the following criteria are met so that the Smart Lock can be installed.

- ① Check the door status. Make sure the door frame is aligned with the door.
- ② There are no obstructions stuck in the door frame.
- ③ Leave enough space for the deadbolt to extend in to the door frame when the door is locked.

2. Check your door/frame dimensions to make sure that they fit the following measurements:

If you have an existing lock, remove it, including the bolt.

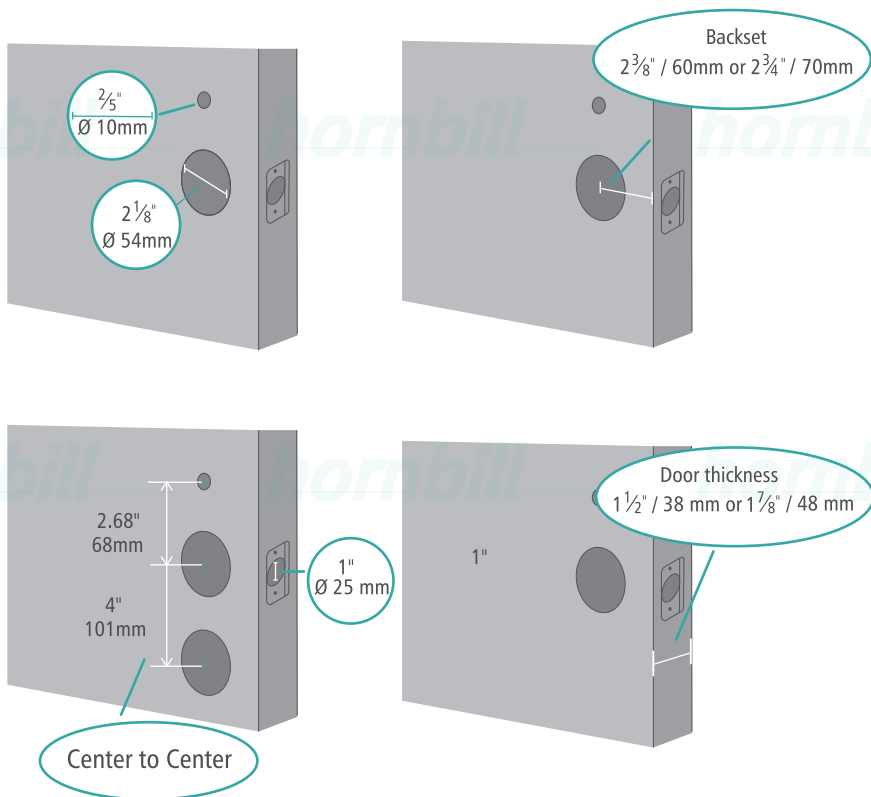


5. Installing the Smart Lock


Step1: Install the Deadbolt


To install the deadbolt:

- ① Measure your door's backset dimension: whether it is 2 3/8"/60mm or 2 3/4"/70mm.
- ② If your door's backset dimensions 2 3/4"/70mm, turn the face plate 90° and pull to extend simultaneously until the deadbolt locks in position

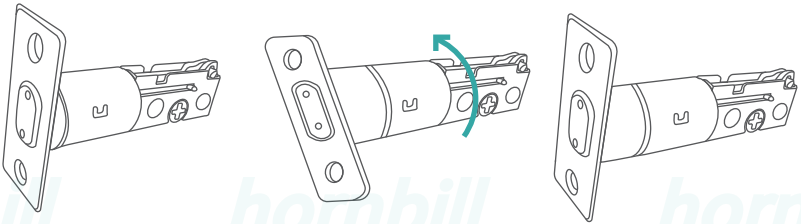


- ③ Insert the deadbolt into the door frame and make sure the word "UP" faces up as indicated on the deadbolt.
- ④ Screw into the door frame with a screwdriver.
- ⑤ What is required: Deadbolt, Deadbolt Screws, Screwdriver.

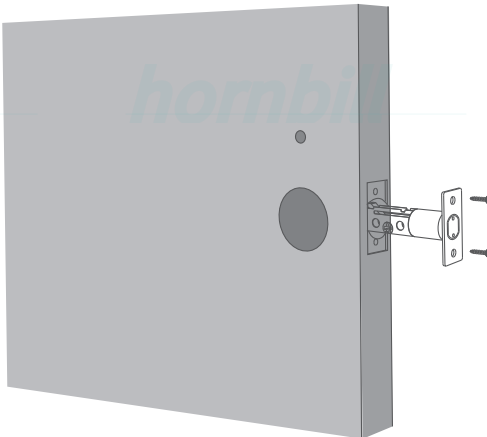


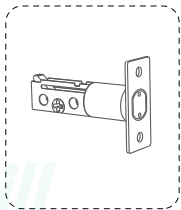

Deadbolt

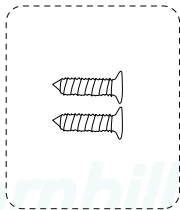

Deadbolt Screws

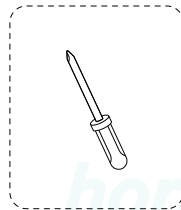



Phillips Screwdriver

Step2: Install the Strike Plate


If you have an existing strike plate installed, skip this step.

To install the strike plate:


- ① Align the strike plate with the center hole of the deadbolt.
- ② Secure the strike plate with strike screws. Make sure the plate is placed in the correct direction.
- ③ What is required: Strike Plate, Strike Screws, Screwdriver.

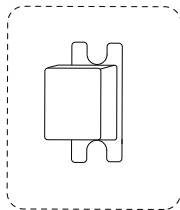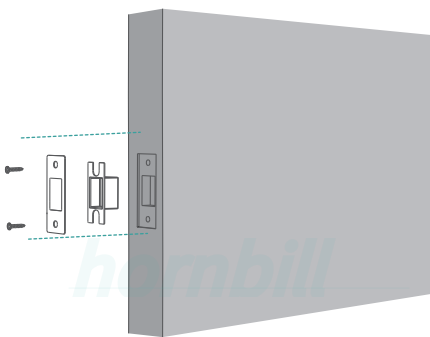


Deadbolt Cover

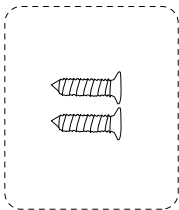

Strike Screws

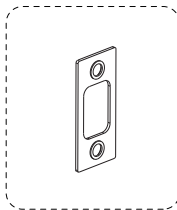

Strike Plate

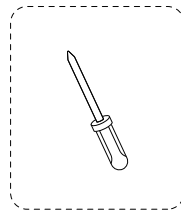



Phillips Screwdriver




Step3: Install the Front Panel

To install the front panel into the door frame:

- ① Measure your cross bore dimension and determine the installation steps accordingly.
- ② Please use the provided the front panel screws to assist in installing the front panel.
- ③ Please make sure the flat ruler is horizontal status and the deadbolt is unlocked status when you install the lock.
- ④ Make sure the flat ruler insert the center hole of the deadbolt.
- ⑤ Route the IC wire connected on the front panel under the deadbolt.
- ⑥ What is required: Front Panel, Front Panel Screws.

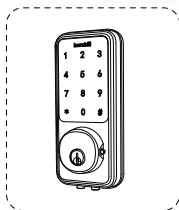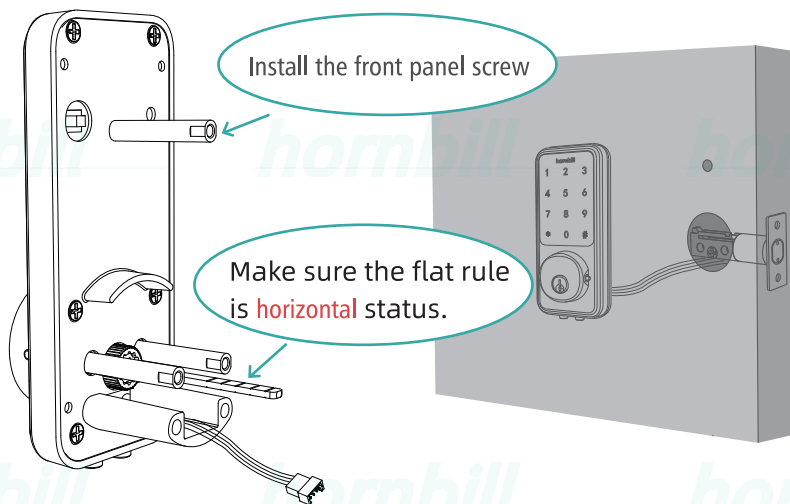



Front Panel

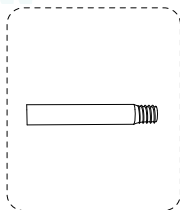


Front Panel
Screws

Step4: Install the Mounting Plate

1. Route the IC wire through the mounting plate.(Special hole)
2. Fix the mounting plate into the front panel using the mounting plate screws.
Make sure the screws go through the holes of the deadbolt and the mounting plate, and lock into place.
3. What is required: Mounting Plate, Mounting Plate Screws

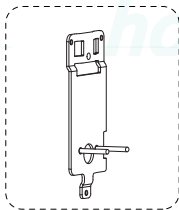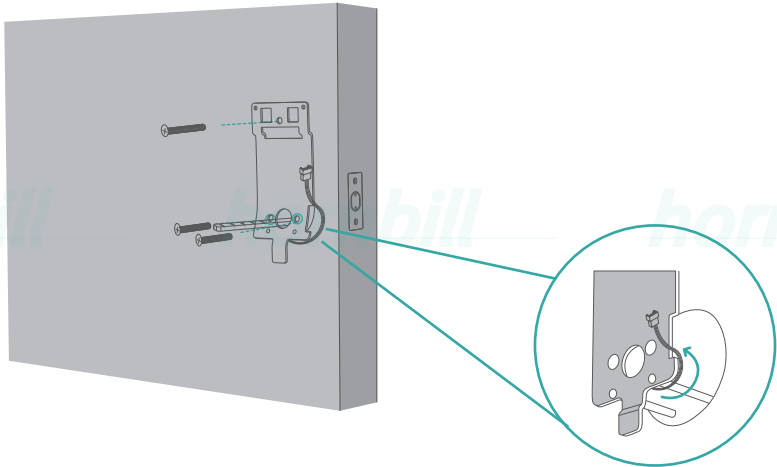

Mounting Plate

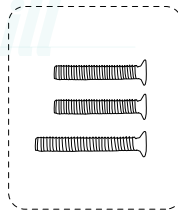

Mounting Plate
Screws




Step5: Install the Back Panel

To install the Back Panel:

① Check/Adjust the Toggle Button(on the back panel bottom.)


A. If the hinges are on the left side, adjust the toggle button to L, the thumb turn is horizontal status.

A view from the outside, the hinges are on the Left side of the door

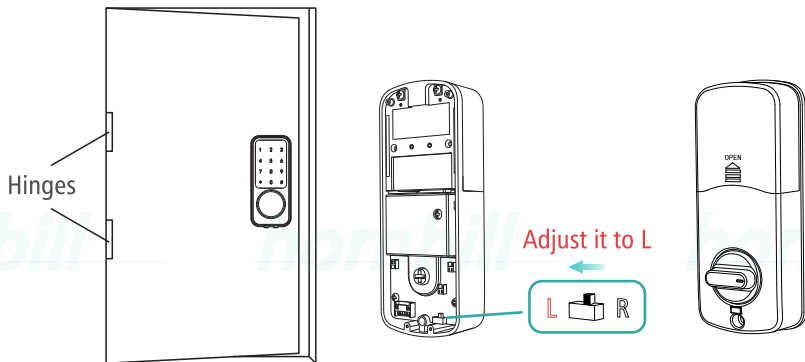


B. If the hinges are on the right side, adjust the toggle button to R, the thumb turn is Vertical status.


A view from the outside, the hinges are on the Right side of the door

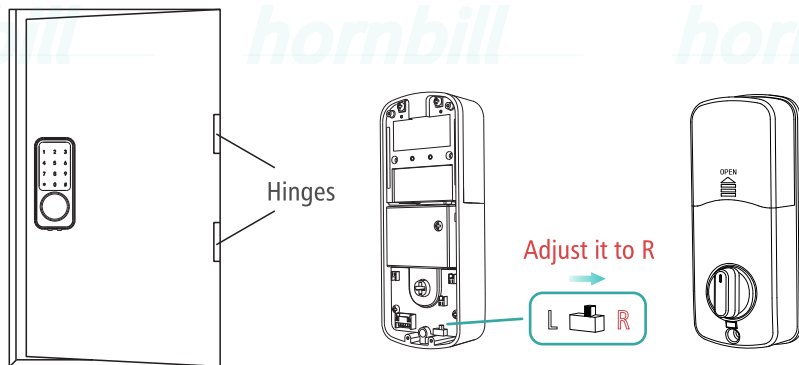


② Match the IC wire connector from the circuit board with the one from the back panel as illustrated. The wire connector can only be plugged into the socket in one way. Make sure you match the dot on the connector with the pin on the circuit board correctly.

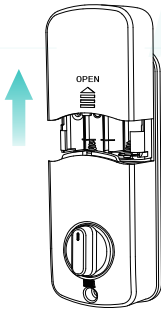


1

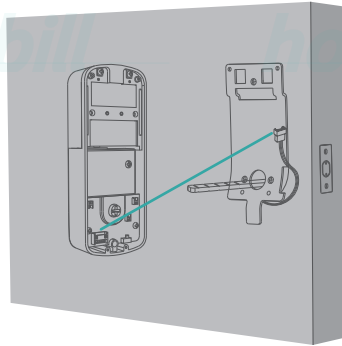

2

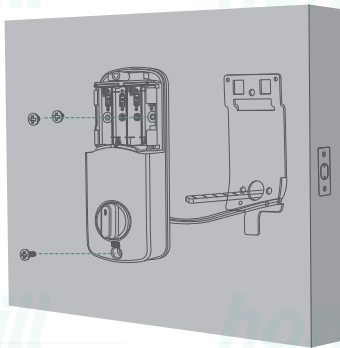


3

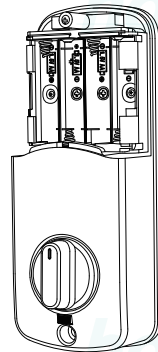


4


- ③ Align the flat rule with the key cylinder.
- ④ Secure the provided screws into the back panel.
- ⑤ Turn the thumb turn to check whether the deadbolt is retracted. If the deadbolt does not work smoothly, adjust the screws and install the mounting plate again.
- ⑥ What is required: Back Panel, Back Panel Screws, Screwdriver

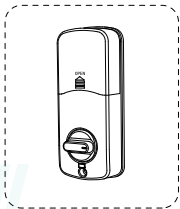

Back Panel

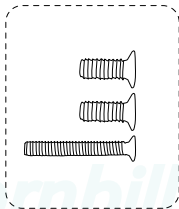


Back Panel
Screws

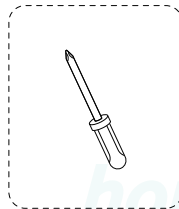

Phillips Screwdriver

Step6: Install Batteries

Insert 4 AA batteries into the battery compartment matching the polarity(+/-) indicated.

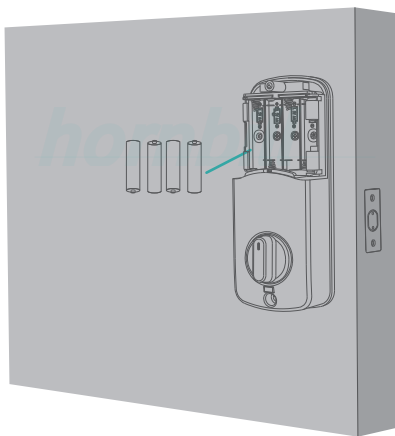

6. Setting up the Smart Lock

Pair Your Phone with Smart Lock

To pair your phone with Smart Lock:

- ① Turn on Bluetooth, open the App, click Add Lock> Door Lock. Follow the on-screen instructions to complete the setup.




- ② Your phone will search for the smart lock, you need to touch the keypad any key.
- ③ After the lock is added, you will hear Di sound, the TTLock App will prompt you to name your Smart Lock.

Note: The user that is paired is the only administrator, and can authorize other users to use the lock.



How to reset the smart lock? When the lock is added.

Remove one battery, and put back the battery again. Press and hold the reset button for 20 seconds (this black button under the knob), you will hear Di Di Sound, the lock will return to default settings. All the settings will be erased and need to be reset. DO NOT press and hold the button if unnecessary.

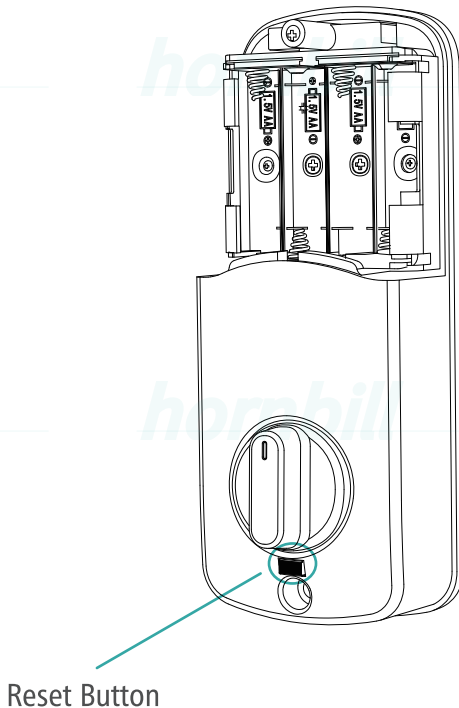

Set Access Passcode


1. The owner passcode: You are the owner of the smart lock, so you can set your owner passcode. Click Settings>Basic>Admin Passcode. The admin passcode should be 4 to 9 characters.
2. Share the passcode with your guests and family members: Click Generate Passcode >Custom>give a name for the passcode>turn on permanent button>set the code you want, it should be 4 to 9 characters.

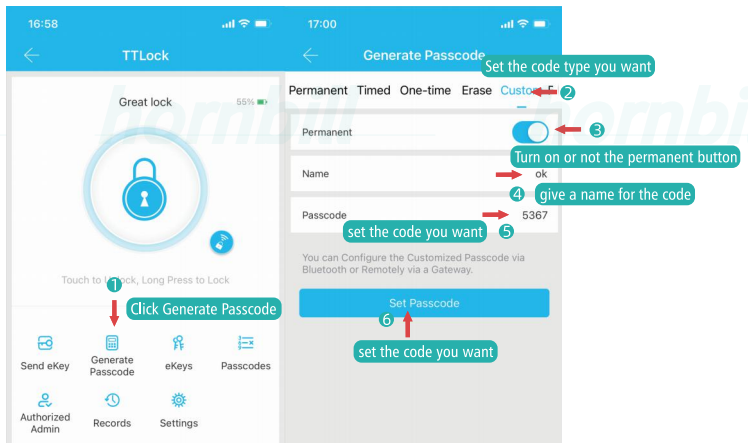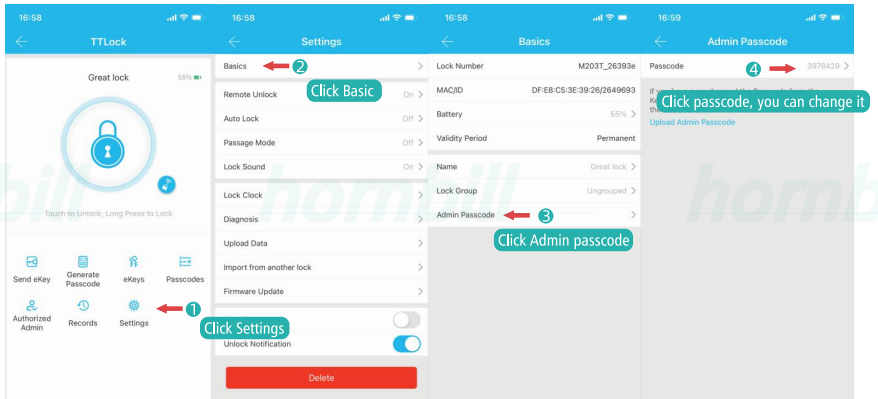

Send Ekey/Authorized Admin


Note: If you hope your family member to use the App to control the same lock, please make sure your family members have registered their own accounts.

1. Open your App, Click Send Ekey>Time/Permanent/One time/Recurring>Enter Recipient's account(If their account is phone number, enter 1 in the front of the number), turn on Allow Remote Unlocking button, click Send.
2. Let your family member to log out the App, and log in the App, they will find your lock in their App.

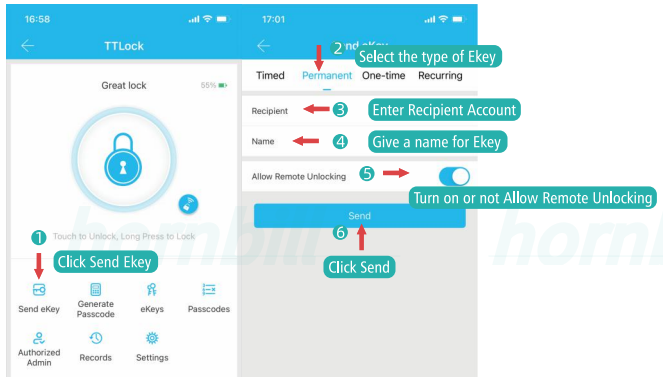


Change/Delete Passcodes

Open your App, Click Passcodes>select the passcode name you want to modify>Click passcode>reset/change it. You can change the Validity Period or delete it.

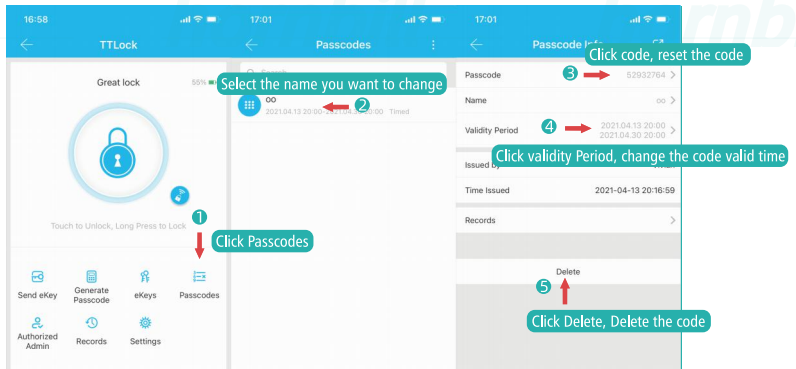

Turn on Auto-Lock Feature

Click Settings>Auto Lock>turn on> you can setting the time, 5~900 seconds.

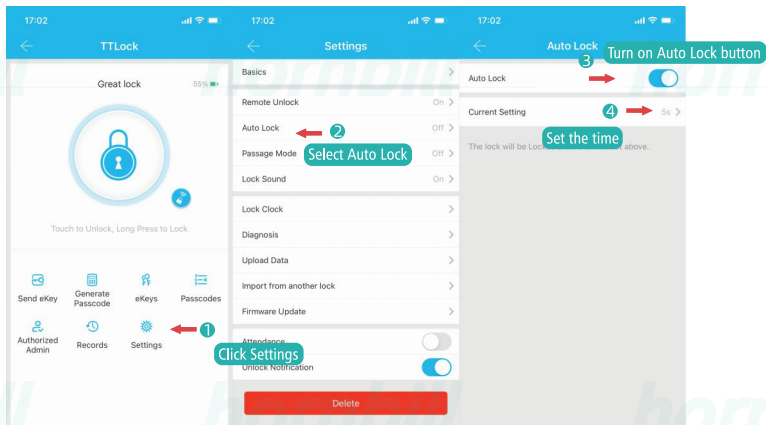

7. Basic Operations

Unlock the Door

1. Use the Passcode

Enter #passcode# on the keypad to unlock the door.

If the Passcode is correct, press #passcode#, the will unlock. If the passcode is wrong, press and enter a new passcode.

Paascode error: A beeps will be heard.

If you fail to unlock the door after 5 attempts using the passcode, the Smart Lock will be locked. The Keypad blinks blue for 3 seconds. Use the App instead to unlock.

2. Use the TTLock App

Open the TTLock App. Touch the main button to unlock the door.

The App will search for Smart Lock Bluetooth and connect (Turn on Bluetooth)

3. Use the Physical Key

Please use the pin to remove the key cover, then you can use the key to unlock the door.

Lock the Door

1. One-Touch Lock the door

Hold down the # key for 2 seconds on the keypad to lock the door.

2. Use the TTLock App

Open the TTLock App. Hold the main button to unlock the door.

The App will search for Smart Lock Bluetooth and connect(Turn on Bluetooth)

3. Set the Auto-Lock Feature

Click Settings>Auto Lock>turn on> you can setting the time, 5~900 seconds.

4. Use the Physical Key

Please use the pin to remove the key cover, then you can use the key to lock the door.



8. Remote Control, Alexa/Google Home

Note: Remotely unlock or lock the door or Use Alexa/Google Assistant, the smart lock needs to be connected with the G2 gateway(It's sold separately)

How to Pair with Your TTLock App


1. Please make sure your phone is connected with your Wi-Fi (works with 2.4Ghz Wi-Fi, it doesn't work with 5Ghz), and make sure your smart lock have paired with your TTLock account.(The gateway needs to near by your locks within 16 ft.)
2. Please plug your gateway into the power, it will red and blue flashing.
3. When you successfully add the gateway on your App, the gateway will find your locks, it may take about 3 minutes. Lastly, your locks connected to your gateway, go back you will find the gateway is online status, if you have two locks (The distant between the gateway and the locks should be within 16 ft.) please click Nearby locks, then your locks will connected to your gateway.



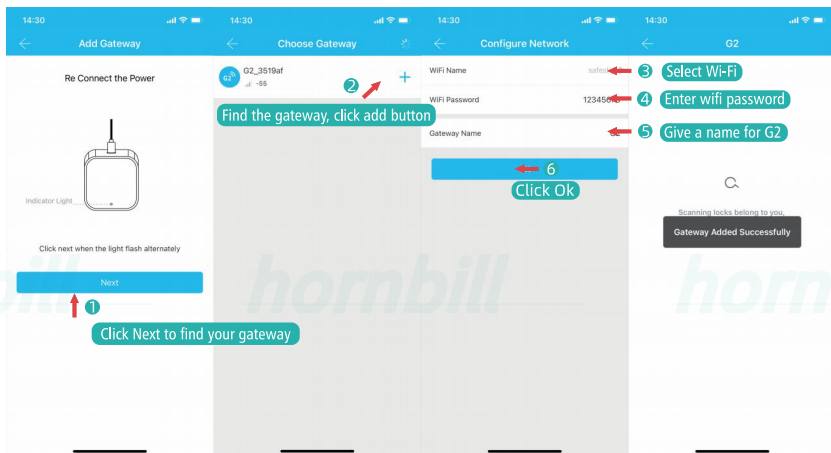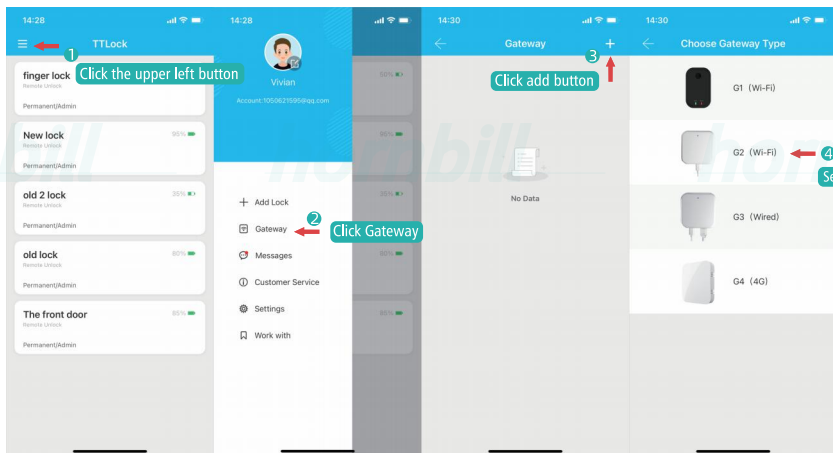

How to Remotely Unlock or Lock the Door

1. Click Settings>remote unlock button>turn on
2. Remote unlock: Touch the little button  remotely unlock the door.
3. Remote lock: Hold the main button  remotely lock the door.

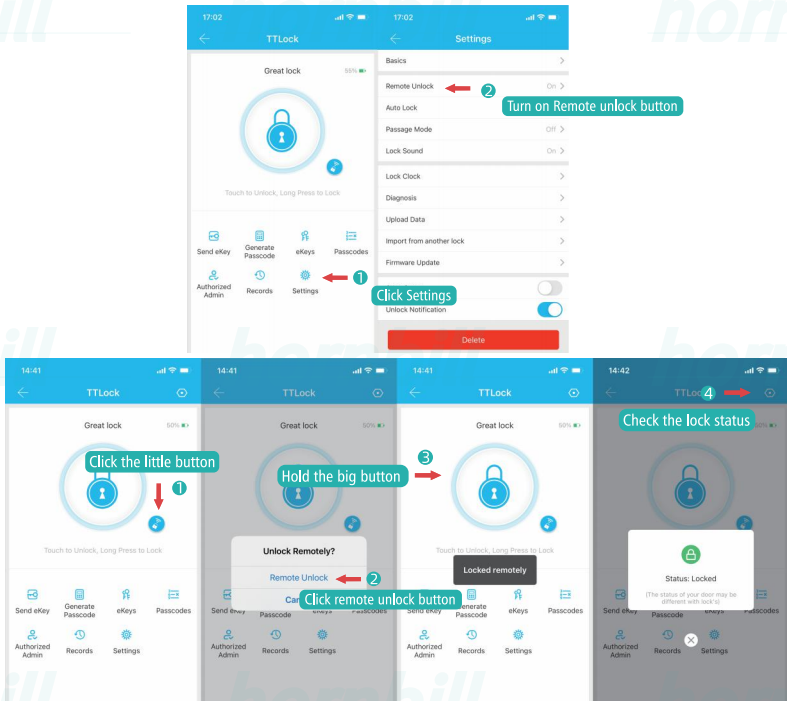

How to Use Alexa to Control the Door

1. Please download Alexa App on your phone, and log in your account (Amazon account)
2. Click More-and click Skills&Games, the US customer to search **TTLock**, the Canada customer search **ScienerSmart**, and then click ENABLE TO USE.
3. Log in your TTLock Account and Password

Note: If your TTLock account is your phone number, please enter "+" +1" on front of your phone number. e.g: +18669859909)

4. When you successfully add the your locks in Alexa, click Devices, you will find your locks, Click your locks, and click the Setting button on the upper right, turn on the unlock via App and turn on unlock by voice, please remember your voice code.

5. How to unlock the door via Alexa App


Alexa unlock the front door, Alexa will say, what is your voice code, then tell her your voice code, Alexa will unlock the door.

Or use Alexa App, Touch the main button to unlock the door.



6. How to lock the door via Alexa App

Only need to say: Alexa lock the front door, Alexa will lock the door.

Or use Alexa App, Touch the main button to lock the door.

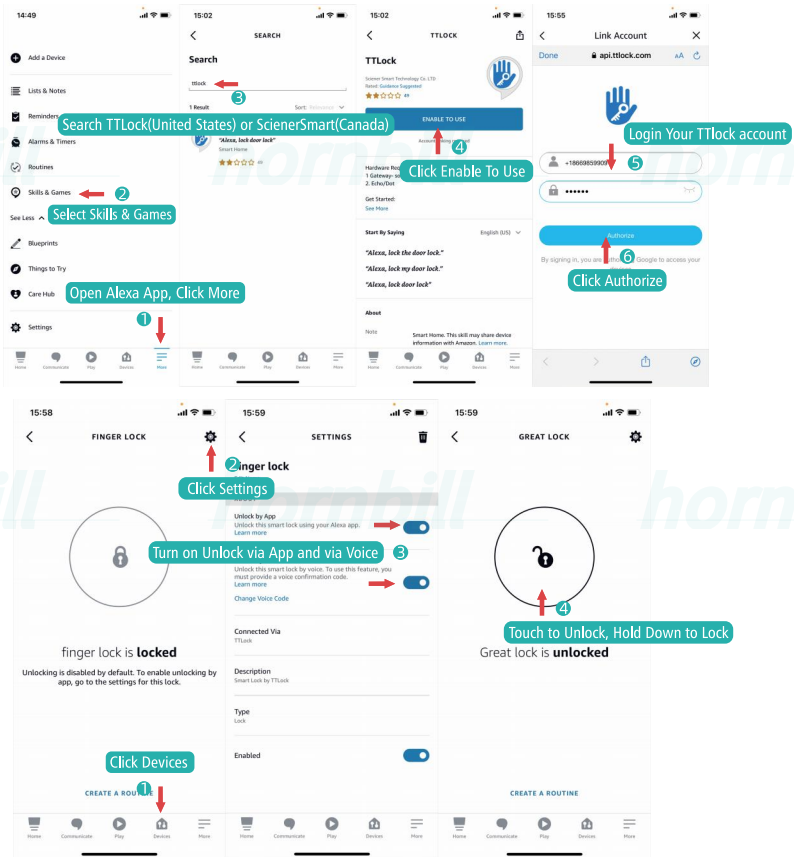

How to Use Google Home to Control the Door

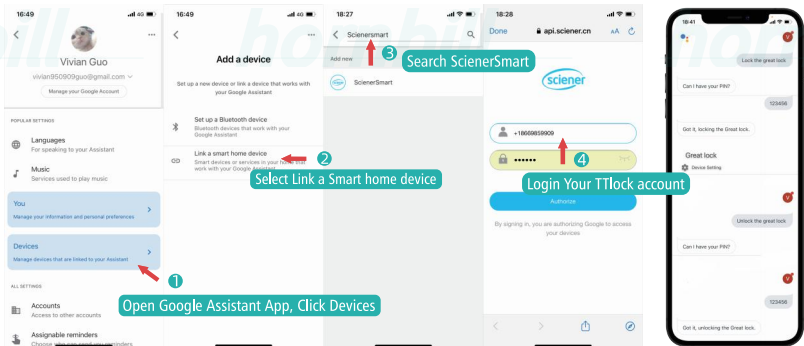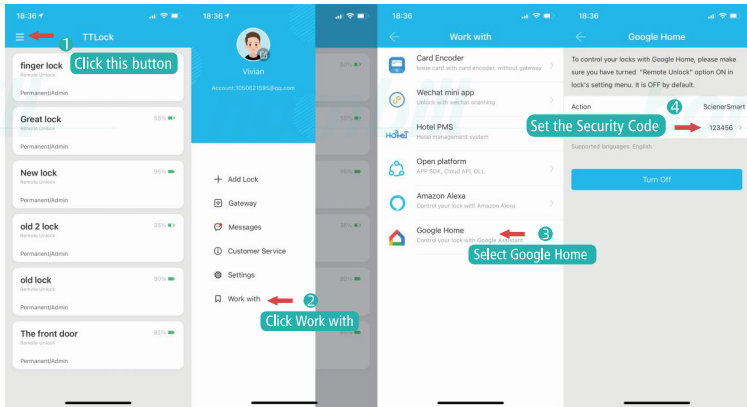


9. Troubleshooting

1. How can I unlock the door if the Smart Lock doesn't work?

- ① Press the reset button to restart the Smart Lock.
- ② Use the provided key to unlock.

2. How can I unlock the door if the Smart Lock's battery run slow?

- ① Insert a 9v battery touch the instant charging port to power the Smart Lock.

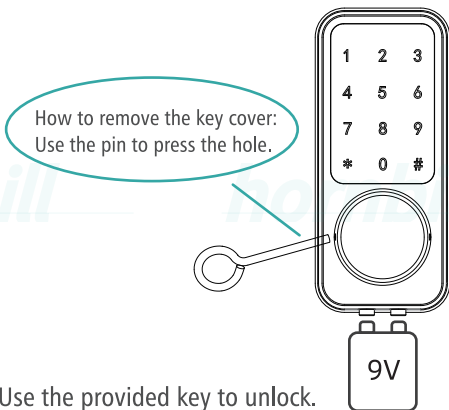

② Use the provided key to unlock.

3. The Smart Lock voice is too loud.

You can turn off the lock voice on the TTLock App. Click settings>Lock Sound>Turn off

4. Why the Smart Lock's battery drains so quickly?

- ① Make sure you use the standard battery.
- ② Check whether the Smart Lock is installed properly.
- ③ Check whether the Smart Lock can be locked or unlocked smoothly using the thumb turn; If not, detach and install the Smart Lock again.
- ④ Check whether water spills in the back panel. Exposure to water will drain the battery quickly.
- ⑤ Contact Customer Service for technical support.

5. Why the lock is reversed?

When you lock the door use the App, but the lock will be unlocked.

The lock is installed incorrectly, please take apart the back lock, you will find the toggle button, if the toggle button is on L, adjust it to R. If it is on R, adjust it to L. then your lock will be working.

6. The lock only works with the physical key.

It doesn't work when pull out the physical key.

The lock is installed incorrectly, we need to install the lock again, please take apart the front panel and the back panel, adjust the flat ruler, make sure it is horizontal status, and the deadbolt is unlocked status, then your lock will be working.

For troubleshooting, check the installation video and instructions. Or You can contact Customer Service staff for technical support via email.

10. Customer Service

 Customer Support: homide@milinaa.com

 Phone Number: 1-866-985-9909 (Available after 6:00 PM at PT)

FaceTime/iMessages: +8617688933815

WhatsApp: +8617688933815

Wechat: +8617688933815

Skype: Vivianhornbill

 Smart Lock: 36-Month Limited Warranty

Mechanical Part: 36-Month Limited Warranty

If you have any questions of the lock, please send email to us, we will help you.

11. How to Activate the Lock Warranty

When your received the lock, please send the information to the customer service, we will activate the warranty for the lock, then your lock will have a 2-year warranty and free lifetime customer service. When your lock is broken or defective, we will help you to get the replacement or help you to fix the issues asap. Thank you so much for your support.

Your Name:

Amazon Order Number:

12. Important Safety Instructions

1. DO NOT attempt to install or repair the product without authorization.
2. Do not use excessive force or sharp objects to press lock buttons, as this can damage the product.
3. Make sure the door is completely closed when going outside. The manufacturer does not assume responsibility for any harm caused by your improper closing the door.
4. Replace batteries when the low battery alarm is heard.
5. Change your access passcode regularly to ensure security.

