

30" Speed Combination Oven

500 Series – Stainless Steel HBL5754UC



BOSCH

Invented for life

All images shown are not final



HBL5754UC
Stainless Steel

The Bosch Combination Wall Oven combines your favorite tools into one appliance. The lower oven is a convection oven, roaster, warming drawer and more.

Features & Benefits

The upper speed oven functions as a microwave and convection oven so you have flexible cooking options.

Convection pro combines a third heating element with a back fan to evenly circulate heat and cook food more quickly.

Get even, consistent results every time, no matter where you place your pan.

General Properties

Speed oven modes – upper oven (36) 12 Auto Programs (including Auto Defrost, Melt Butter, Soften Ice Cream, Pizza), 10 Sensor Cook Programs, 9 SpeedChef® Programs, Hi & Lo Broil, Convection, Keep Warm, Frozen Foods Defrost

Oven modes – lower oven (13) Bake, Broil (Hi & Low), Roast, Warm, Proof Dough, Convection Bake, Convection Broil, Convection Roast, Pizza, Convection Multi Rack, Convection Conversion, Sabbath

Cleaning type – lower oven Self Clean

Telescopic rack 1

Illumination type – upper & lower oven LED / Halogen

Interior lights – upper & lower oven 1 / 2

Oven Performance

Microwave power – upper oven 1,000 W

Microwave power levels 10

Bake / broil element – upper oven 600 / 1,750 W

Convection element – upper oven 1,700 W

Bake element (4-pass) – lower oven 2,400 W

Broil element (12-pass) – lower oven 3,800 W

Technical Details

Watts at 240 / 208 V 9,600 / 8,400 W

Circuit breaker 40 A

Volts 240 / 208 V

Frequency 60 Hz

Power cord length 60"

Plug type Fixed Connection, No Plug

Energy source Electric



Dimensions & Weight

Overall appliance dimensions (HxWxD) 49" x 29 3/4" x 24 1/2"

Required cutout size – Standard (HxWxD) 48 5/8" x 28 1/2" x 23 1/2"

Required cutout size – Flush (HxWxD) 49 1/8" x 30" x 24 1/2"

Oven cavity size – upper & lower oven 1.6 / 4.6 cu. ft.

Overall upper oven interior dimensions (HxWxD) 9 7/8" x 16 1/2" x 16 1/2"

Turntable – metal max. cookware – upper 14 13/16" dia.

Turntable – ceramic tray max. cookware – upper 13 3/4" dia.

Rack – rectangular max. cookware – upper 15" x 12"

Overall lower oven interior dimensions (HxWxD) 17 13/16" x 24 1/8" x 18"

Usable lower oven interior dimensions (HxWxD) 12 1/4" x 23 1/4" x 15 1/4"

Net weight 269 lbs

Accessories – Included

Upper Oven: Metal Turntable, Square Rack, Ceramic Cooking Tray
Lower Oven: 3 Standard Oven Racks

Accessories – Optional



HEZTR301
30" Telescopic Rack



00449757
Broiler Pan



00798845
30" Flat Rack

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

For more information on our entire line of products, go to www.bosch-home.com/us or call 1-800-944-2904

© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

Invented for life

measurements in inches (mm)

49" (1244)

28¹/₁₆" (722)

29³/₄" (755)

60" (1524)

48⁷/₁₆" (1230)

26⁷/₁₆" (672)

23¹/₂" (597)

24¹/₂" (622)

22³/₈" (568)

48⁵/₈" (1234)


28¹/₂" (724)

23¹/₂" (597)

min. 4³/₄"-
max. 18" (121-457)

* Junction box may be installed above, below, or to the left or right of the unit within range of the power conduit.

measurements in inches (mm)

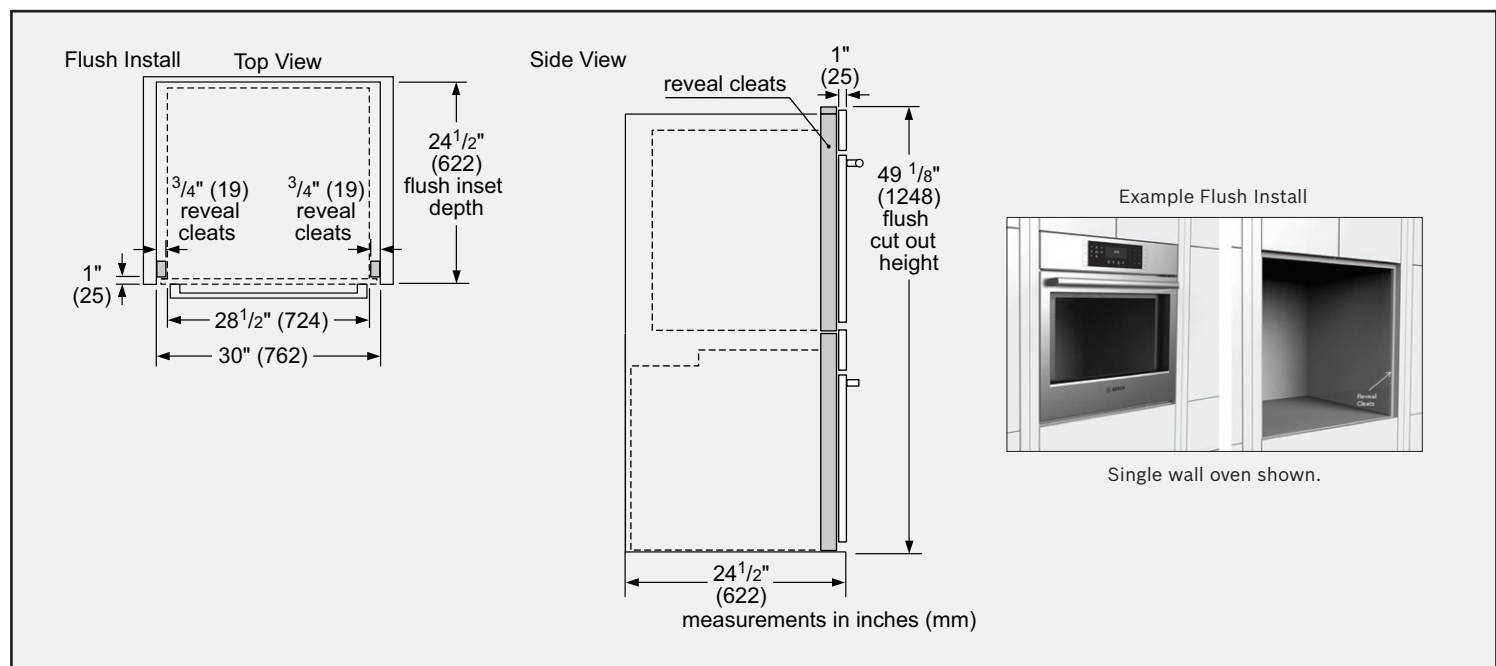

11/21

PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY



Invented for life

Standard Installation
Combination Oven over Storage or Warming Drawer

28 1/2" (724)

48 5/8" (1234)

23 1/2" (597)

9 1/4" (235)

min. 4 3/4" (121-456)

minimum 3/4" (18) required between cutouts

* Wall oven junction box may be located above or right or left of the unit within reach of the power conduit.

** Electrical hook up may be located below (depending on space) or next to the drawer within the reach of the power cord.

Measurements in inches (mm)

11/21