


GDO-8ShedMaster®

Weather Resistant Rolling Door Opener
Quick Operation Guide

1.0 USER OPERATING CONTROLS

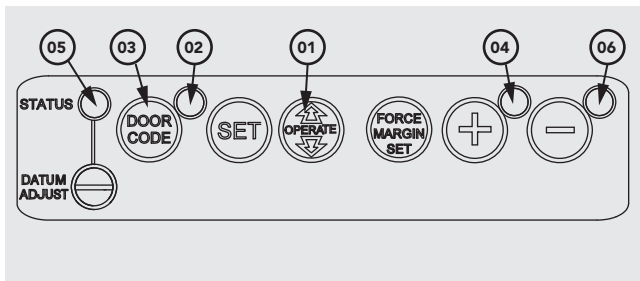

Button	Function
01	Open / Stop / Close
02	Flashes when a code is being stored or when a remote control button is pressed.
03	For storing or erasing remote control button code to switch the courtesy light on or off.
04	Flashes as the door opens and remains on when opened.
05	Illuminates when Service is due.
06	Flashes as the door closes and remains on when closed.

automatic
TECHNOLOGY




2.0 MANUAL DOOR OPERATION


TO DISENGAGE THE OPENER



It is recommended to disengage the door with the door in the closed position.

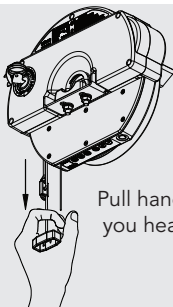

Pull handle, until
you hear a click

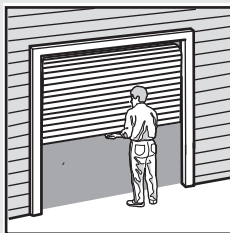


Manually operate
door



CAUTION: When the opener is manually disengaged, the door is no longer locked. To lock the door manually, re-engage the opener after the door is closed.

TO ENGAGE THE OPENER

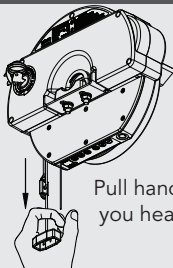

Pull handle, until
you hear a click



Press to test



WARNING! Please test the manual release mechanism to ensure that the manual release is easy to operate. No more than 20kg of force should be required to disengage the door using the manual release cord. IF excessive force is required, contact your dealer.

3.0 CODING A REMOTE CONTROL



tip


The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

STEP ONE



Switch power on

STEP TWO

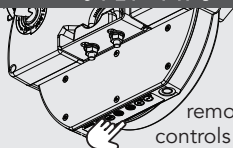

remove
controls cover

STEP THREE



HOLD for 3 sec

RELEASE

HOLD for 3 sec

Release both
buttons

HOLD
Opener beeps

STEP FOUR



Press to test

4.0 CHANGING A BATTERY



tip

Battery Type: 1 x CR2032.

STEP ONE



Check Light
Status Table



HOLD

Light Status

Battery

Solid

OK

Flashing

Replace

No light


Replace

STEP TWO



Use screwdriver
to remove screws
and open

STEP THREE



Use non-metallic
object to push
out.



WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, **SEEK IMMEDIATE** medical attention.

5.0 TROUBLESHOOTING

Symptom	Possible cause	Remedy
The opener does not work from the remote	The opener does not have power	Plug a device of similar voltage (e.g. a hairdryer) into the power point and check it is OK.
	The battery in the remote control is flat	Replace the battery
	The remote button is not programmed to operate the door.	Code in the remote control button
	Door Code LED is flashing yet the opener is not working.	Ensure the correct button on the transmitter is being pressed.
One remote works but the other/s do not	Faulty remote control	Replace remote control
	Flat battery	Replace battery
The motor is running but the door remains stationary	The opener is disengaged	Re-engage the opener
The remote range varies or is restricted	Variations are normal depending on conditions e.g. temperature or external interference	Make sure you can see the door when you use the remote control
	The battery life is exhausted	Check the battery status as per section 4 of this guide
The door stops or moves very slowly	Garage door in poor condition e.g. springs may be broken	Check the door's operation
The door reverses for no apparent reason	If Safety beams are installed they may be partially obstructed	Ensure the beam path is not obstructed. Check the alignment of the beams
The SERVICE LED has started to flash and opener is beeping numerous times	A Fault has been detected. The fault will be active each time an attempt is made to operate the door.	Record opener function (How many beeps?) then press the SET button once to reset the opener. If the fault continues to be tripped contact 1300 133 944 for support.

6.0 CARING FOR YOUR OPENER

Preventative servicing of your garage door and opener, is important. Your garage door is made up of numerous moving parts designed to lift and lower your door safely and efficiently.

Ongoing preventative servicing ensures that your door continues to function within factory specifications, greatly reduces the risk of failure and repair bills down the track and ensure you maintain your Warranty.

Refer to your Owners Opener Handbook for your service schedule available [HERE](#).



Refer to the installation manual for monthly testing procedures in Section 12 to ensure garage door is fit for use available [HERE](#).

Online warranty details are available [HERE](#).

7.0 NEED A SERVICE CALL?

If the opener needs a service please call the dealer who installed the garage door opener (their contact details are usually on a sticker on the back of your garage door).

For product assistance, general enquiry or more information, please visit:

ata-aust.com.au
or call 1300 133 944.

