

AW-CU300V2-EVB

AW-CU300 V2 Evaluation Board

User Guide

Rev. 02

(For Standard)



Revision History

Version	Revision Date	Description	Initials	Approved
01	2020/07/23	● Initial Version	Renton Tao	N.C. Chen
02	2021/11/29	● Update to new EVB ● Update to new format	Renton Tao	N.C. Chen



Contents


- 1. System Setup**
- 2. Normal Link Test**
- 3. Re-write Flash for Other Purpose**
- 4. WLAN RF Test (w/ MFG FW)**
- 5. EVB Attachment**



1. System Setup

1-1. Hardware Requirements

- AW-CU300V2-EVB
- Windows system (OS later than Windows XP) for Labtool.
- Vector Signal Analyzer/WLAN analyzer for transmit measurements.
- WLAN signal generator for receiver measurements.
- RF isolation chamber for receive measurements.
- RF attenuators
- RF cable

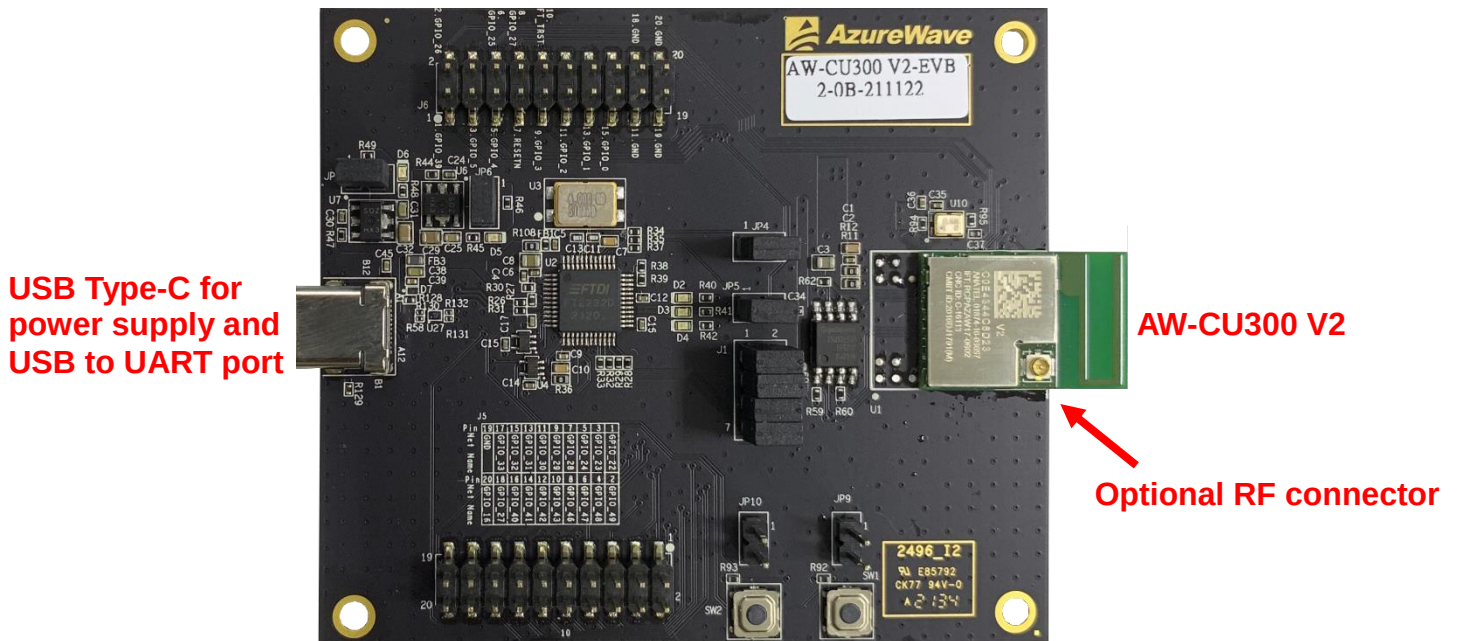

1-2. Environment set up

1-2-1. Download and Install FTDI VCP Drivers (FT2232D)

Install the driver manually. You can get the driver from FTDI's web site.

<http://www.ftdichip.com/Drivers/VCP.htm>

maintain any changes and subsequent WHCK re-certification as a result of making these changes.

FTDI Chip

HOME PRODUCTS APPLICATIONS DRIVERS SUPPORT ABOUT US CHINA

Currently Supported VCP Drivers:

Subscribe to Our Driver Updates


Operating System	Release Date	Processor Architecture							Comments
		X86 (32-Bit)	X64 (64-Bit)	PPC	ARM	MIPSII	MIPSIV	SH4	
Windows*	2021-07-15	2.12.36.4	2.12.36.4	-	-	-	-	-	WHQL Certified. Includes VCP and D2XX. Available as a setup executable . Please read the Release Notes and Installation Guides .

Verifying Driver Installation:

To verify that driver installation has completed successfully, you can open the **"Device Manager"** (right-click My Computer, select Properties).

In the **System Properties** windows, select Hardware, Device Manager.

Two **"USB Serial Port"** should be listed under MY-PC\Ports (COM & LPT)

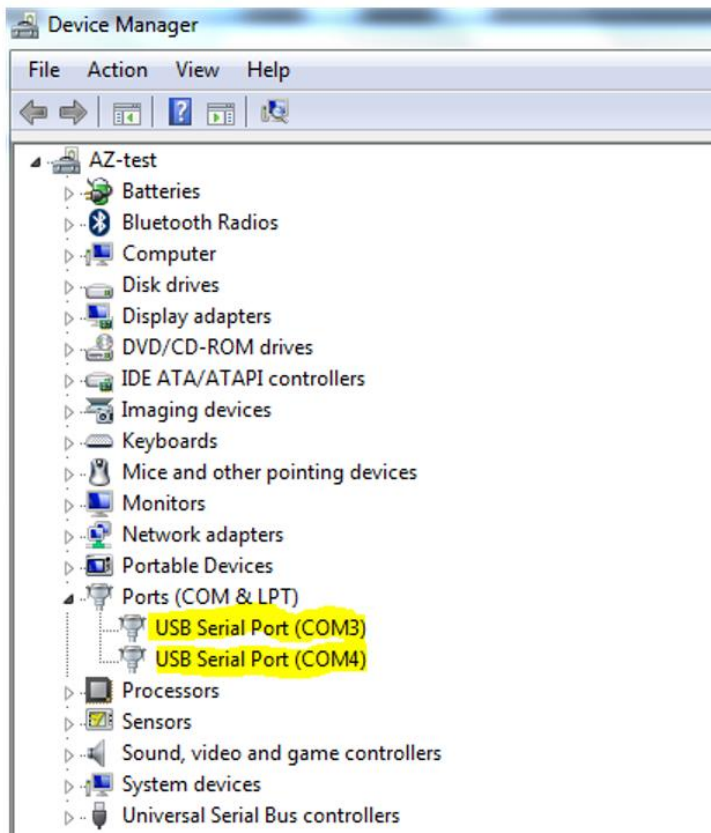


2. Normal Link Test

Open OS terminal and set USB comport (reference to the page9), set baud-rate as 115200


Enter cmd “help” on the screen to see a full list of commands available for use

EX: wlan-scan

That will scan

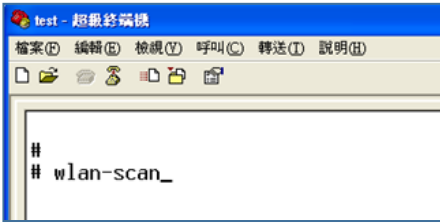

```
test - 超級終端機
檔案(F) 編輯(E) 檢視(V) 呼叫(C) 轉送(T) 說明(H)
#
# wlan-scan_
```

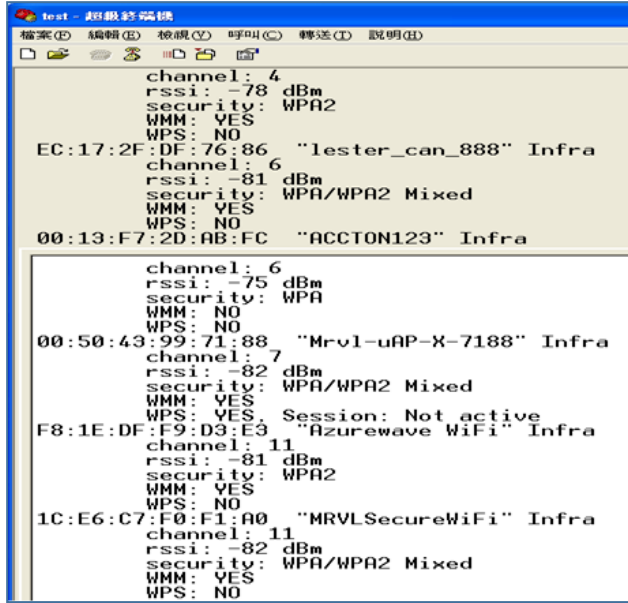

```
test - 超級終端機
檔案(F) 編輯(E) 檢視(V) 呼叫(C) 轉送(T) 說明(H)
channel: 4
rssi: -78 dBm
security: WPA2
WMM: YES
WPS: NO
EC:17:2F:DF:76:86 "lester_can_888" Infra
channel: 6
rssi: -81 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: NO
00:13:F7:2D:AB:FC "ACCTON123" Infra
channel: 6
rssi: -75 dBm
security: WPA
WMM: NO
WPS: NO
00:50:43:99:71:88 "Mrvl-uAP-X-7188" Infra
channel: 7
rssi: -82 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: YES, Session: Not active
F8:1E:DF:F9:D3:E3 "Azurewave WiFi" Infra
channel: 11
rssi: -81 dBm
security: WPA2
WMM: YES
WPS: NO
1C:E6:C7:F0:F1:A0 "MRVLSecureWiFi" Infra
channel: 11
rssi: -82 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: NO
```



3.Re-write Flash for Other Purpose

For other MCU test purpose, user has to re-write the flash to update the MCU function. To re-write flash, programming through MCU JTAG interface is the suggested method.

3-1-1. Download Libusb-win32

To identify the COM port of FT232 for JTAG interface, libusb is needed.

You can get the driver from libusb-win32's web site.

<http://sourceforge.net/projects/libusb-win32>

[Home](#) / [Browse](#) / [Software Development](#) / [libusb-win32](#) /

libusb-win32

Brought to you by: [ste_meyer](#), [trobinso](#), [xiaofanc](#)

[Summary](#) | [Files](#) | [Reviews](#) | [Support](#) | [Wiki](#) | [Mailing Lists](#) | [Trac](#) | [Code](#) | [Tickets](#) | [News](#) | [Don](#)


★ 4.7 Stars (24)
↓ 5 461 Downloads (This Week)
📅 Last Update: 2012-09-15

[Download](#)
libusb-win32-bin-1.2.6.0.zip

[Browse All Files](#)

[Tweet](#) 4 [+1](#) 7 [Like](#) 23

Install Libusb-win32

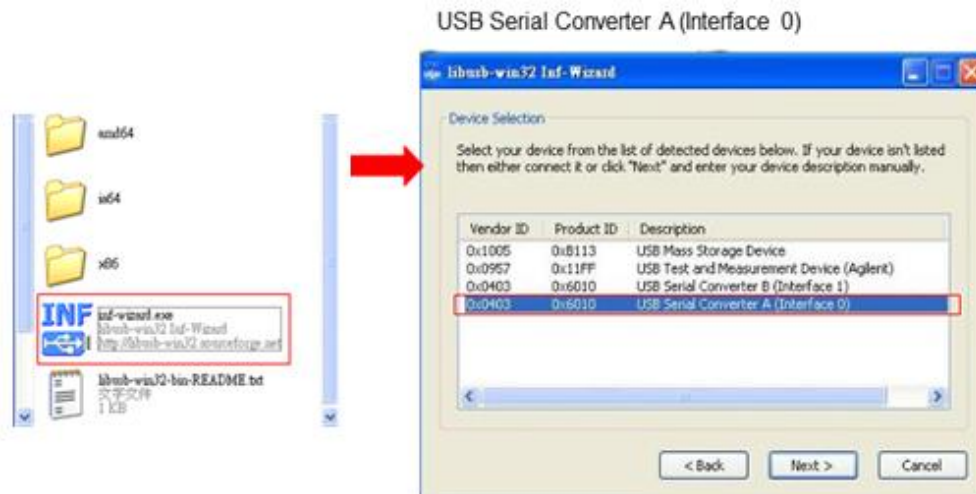


Verifying Driver Installation:

To verify that driver installation has completed successfully, you can open the "Device Manager" (right-click My Computer, select Properties).

In the System Properties windows, select Hardware, Device Manager.

One "USB Serial Converter A" should be listed under MY-PC\Ports (lib usb-win32 devices)



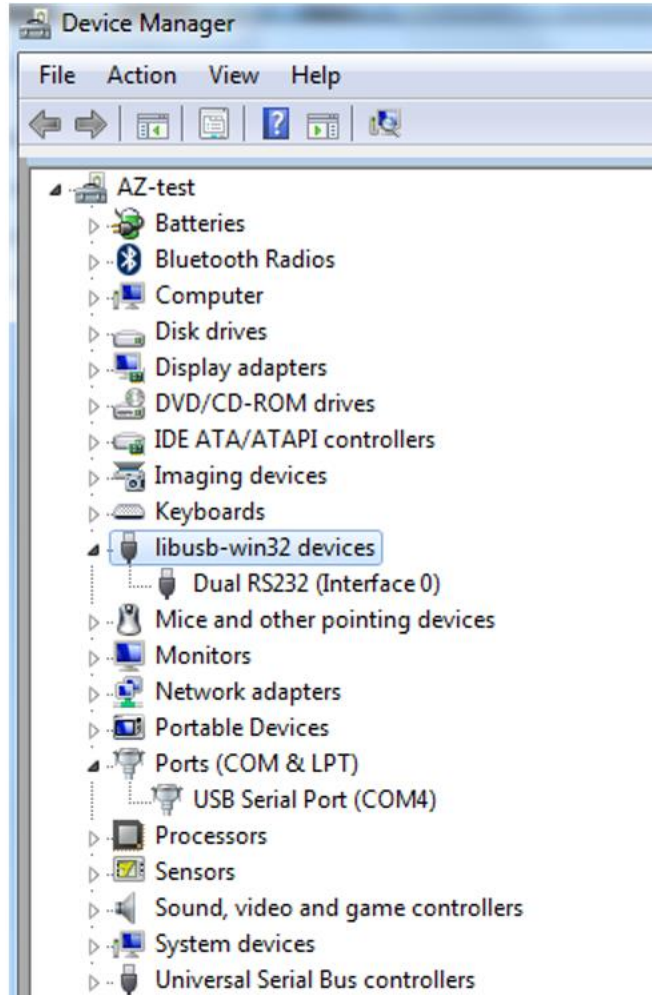

3-1-2. Download and Install Cygwin

Install Cygwin:


1. Download Cygwin from: <http://www.cygwin.com/setup-x86.exe> (for x86 32-bit systems) or http://www.cygwin.com/setup-x86_64.exe (for x86 64-bit systems)
2. Select the option Install from Internet
3. Use default installation path: c:\cygwin. If you chose an alternate installation directory, please make sure that there are no spaces in the path.
4. Pick the Local Package Directory (this is the download cache directory)
5. Select the option Direct Connection
6. Select any mirror you want to use
7. Add additional packages to the default selection:

Click “Next”. The Cygwin Setup window will show the progress as each package gets installed.

Note:


If you are not familiar with cygwin, please visit <http://cygwin.com/> for additional information and details. In particular, the Cygwin User Guide (<http://cygwin.com/cygwin-ug-net/>) is a good resource for new users.



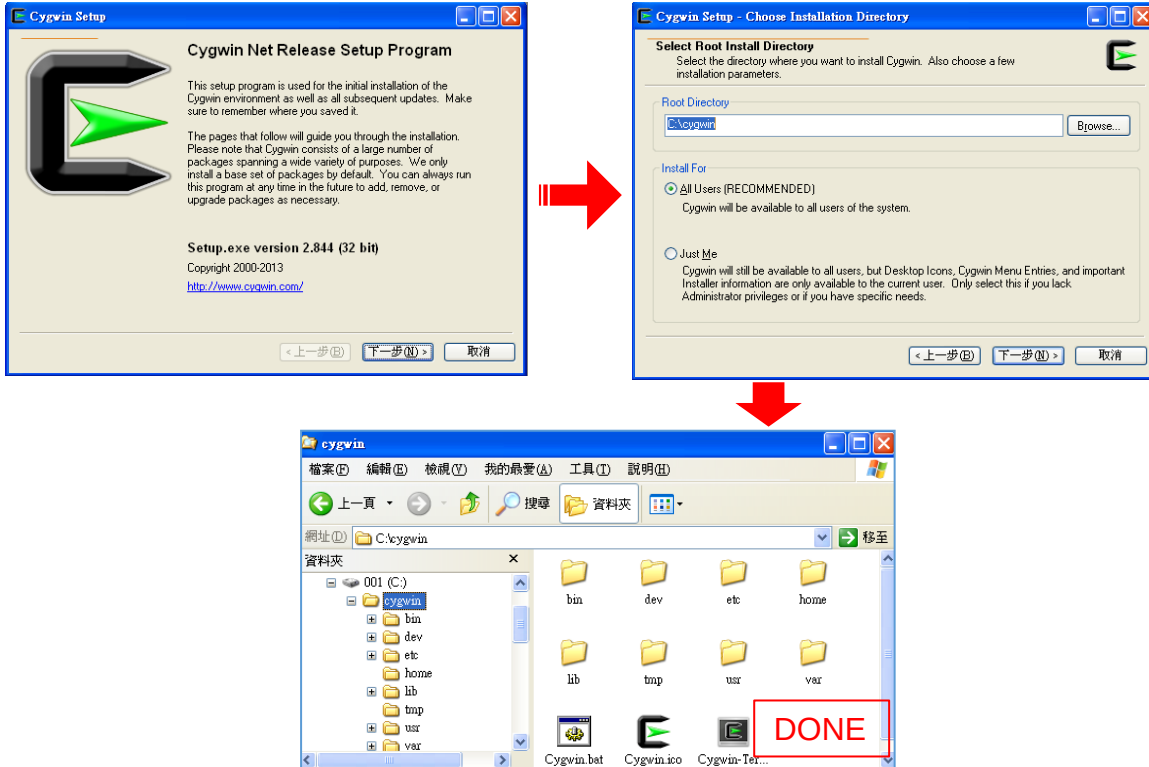


3-1-3 Insert file “OpenOCD.zip” for FW burn in.

Unzip “CU300_OpenOCD.zip” and put “readelf.exe” to C:\cygwin\bin


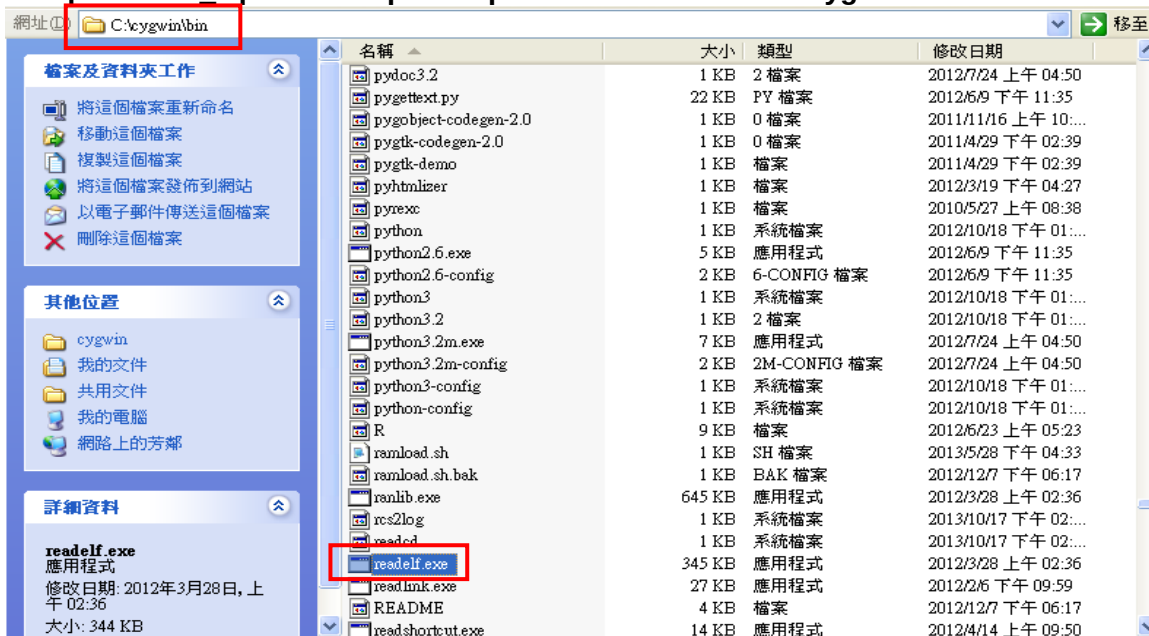


Unzip “CU300_OpenOCD.zip” and put them to C:\cygwin\



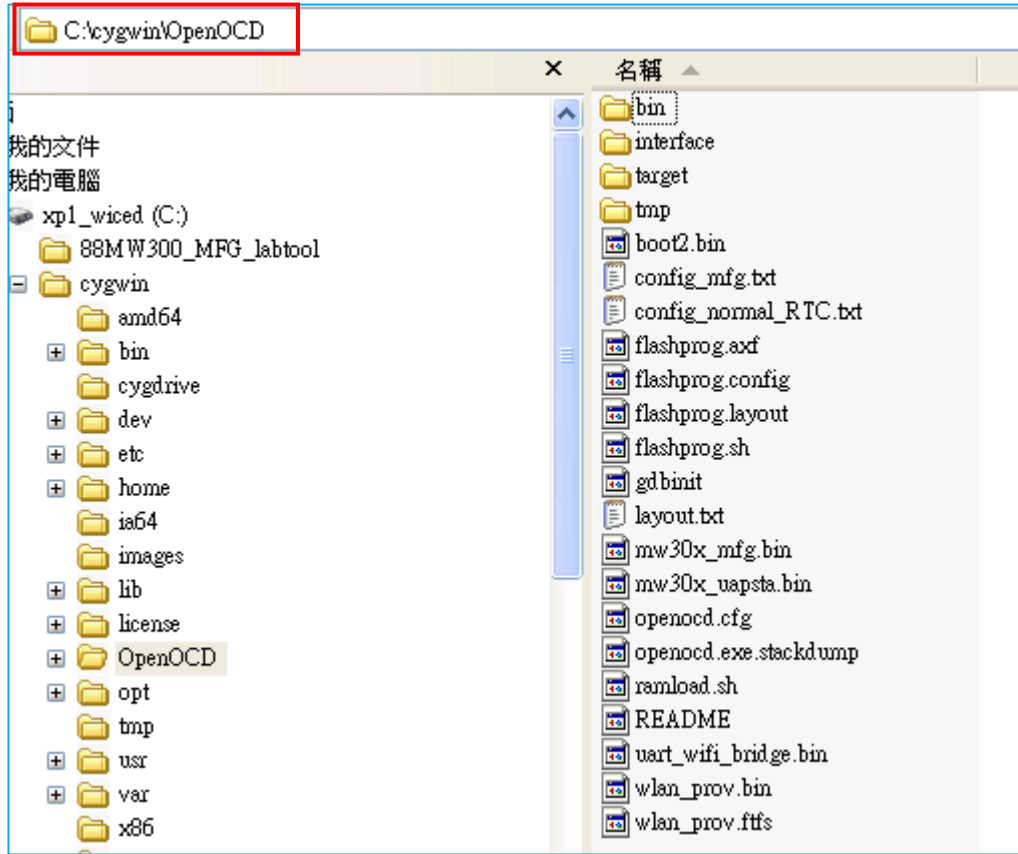

Execute Cygwin.bat

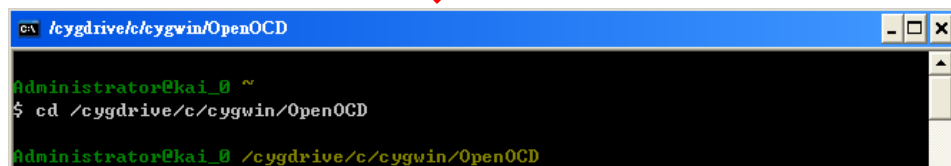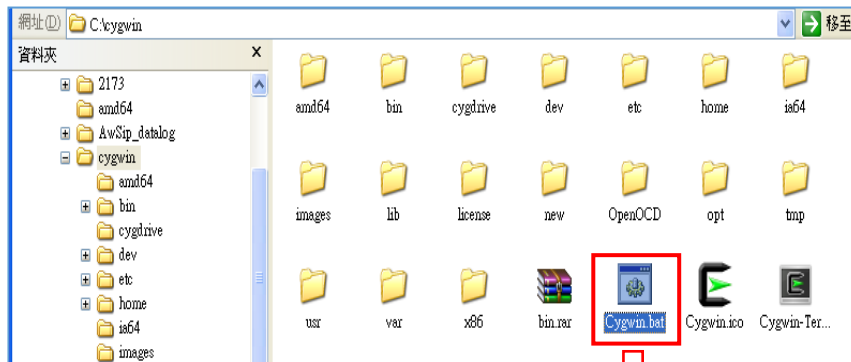

Move to working folder

```

C:\cygdrive\c\cygwin\OpenOCD

Administrator@kai_0 ~
$ cd /cygdrive/c/cygwin/OpenOCD

Administrator@kai_0 /cygdrive/c/cygwin/OpenOCD


```

3-1-4 Burn in FW for RF testing

Example.

A. Link test with RF normal FW(default):

Check config_normal_RTC.txt, layout.txt ... 6 files in the OpenOCD folder

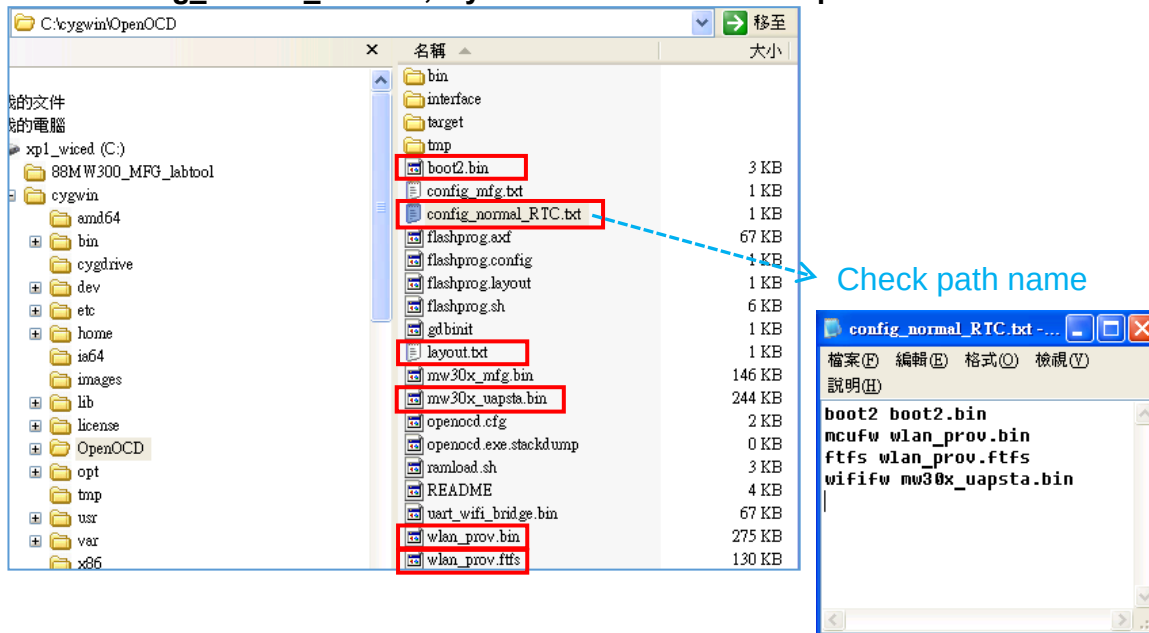

Key in cmd to burn in normal FW.

```

kai@kai-0 ~
$ cd /cygdrive/c/cygwin/OpenOCD

kai@kai-0 /cygdrive/c/cygwin/OpenOCD
$ ./flashprog.sh -l layout.txt -b config_normal_RTC.txt

```

Check if all files are burn in correctly





```
C:\ /cygdrive/c/cygwin/OpenOCD
requesting target halt and executing a soft reset
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00007f14 msp: 0x20001000
30848 bytes written at address 0x00100000
downloaded 30848 bytes in 0.250000s (120.500 KiB/s)
verified 30848 bytes in 0.406250s (74.154 KiB/s)
semihosting is enabled

Flashprog version: 2.0.5
Erasing primary flash...done
Writing new flash layout...done
Writing "boot2" @0x0 <primary>...done
Writing "mcufw" @0x7000 <primary>.....done
Writing "ftfs" @0xb7000 <primary>.....done
Writing "wififw" @0x117000 <primary>.....done
Please press CTRL+C to exit.
Exiting.

Terminated

kai@kai-0 /cygdrive/c/cygwin/OpenOCD
$ _
```


Now you can perform normal link testing. (Needs to re-boot the EVB after burning in)



B. RF test with MFG FW:

For RF testing with MFG FW, you need to re-burn in the FW as below.

Check config_mfg.txt, layout.txt ... 5files in OpenOCD folder

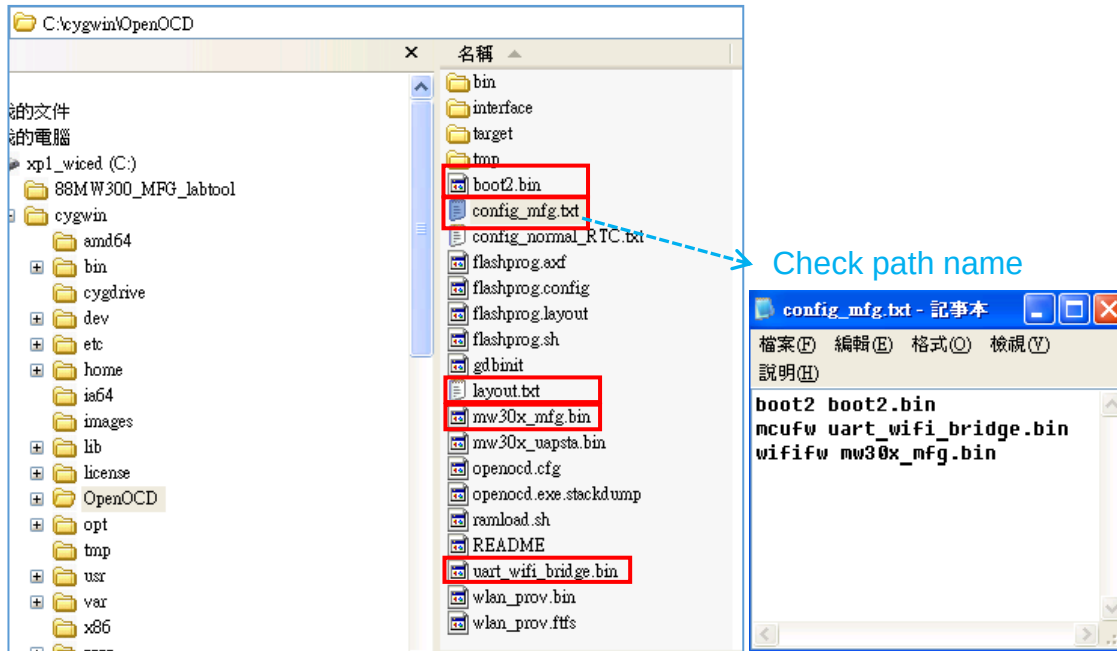

Key in cmd to burn in MFG FW.

```
kai@kai-0 ~
$ cd /cygdrive/c/cygwin/OpenOCD

kai@kai-0 /cygdrive/c/cygwin/OpenOCD
$ ./flashprog.sh -l layout.txt -b config_mfg.txt
```

Check if all files are burn in correctly





```
C:\ /cygdrive/c/cygwin/OpenOCD
xPSR: 0x01000000 pc: 0x00007f14 msp: 0x20001000
requesting target halt and executing a soft reset
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00007f14 msp: 0x20001000
30848 bytes written at address 0x00100000
downloaded 30848 bytes in 0.296875s (101.474 KiB/s)
verified 30848 bytes in 0.531250s (56.706 KiB/s)
semihosting is enabled

Flashprog version: 2.0.5
Erasing primary flash...done
Writing new flash layout...done
Writing "boot2" 0x0 (primary)...done
Writing "mcufw" 0x7000 (primary)...done
Writing "wififw" 0x117000 (primary)....done
Please press CTRL+C to exit.
Exiting.

Terminated


kai@kai-0 /cygdrive/c/cygwin/OpenOCD
$
```

Now you can perform MFG RF testing. (Needs to re-boot the EVB after burning in)



4.RF Test (w/MFG FW)

Run Lab tool in Windows OS.

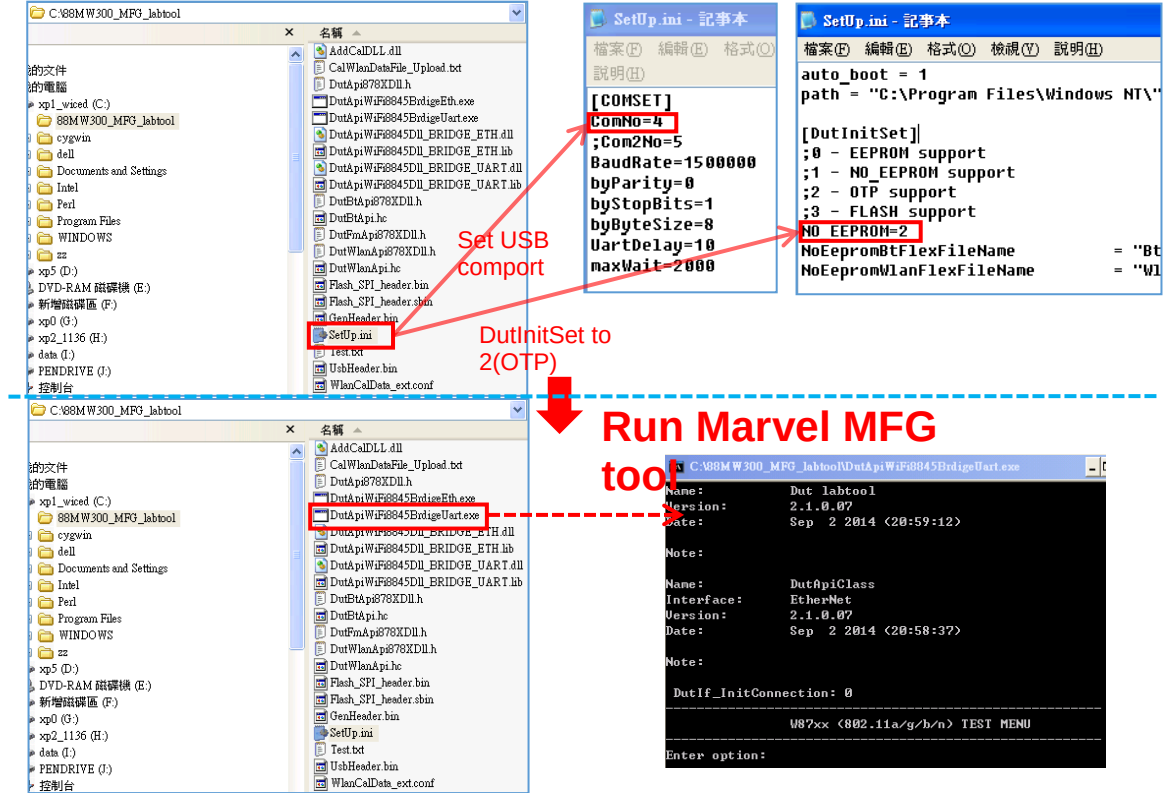

The screenshot illustrates the setup for running the Marvel MFG tool in Windows OS. It shows the file explorer view of the `C:\88MW300_MFG_labtool` directory, highlighting the `Setup.ini` and `DutInitSet` files. The `Setup.ini` file is edited to configure the COM port and baud rate. The `DutInitSet` file is edited to set the OTP support. The terminal window shows the execution of the `Dut labtool` command, displaying the version and date information.

Setup.ini - 記事本

```
[COMSET]
ComNo=4
;Com2No=5
BaudRate=1500000
byParity=0
byStopBits=1
byByteSize=8
UartDelay=10
maxWait=2000
```

Setup.ini - 記事本

```
auto_boot = 1
path = "C:\Program Files\Windows NT\"

[DutInitSet]
;0 - EEPROM support
;1 - NO EEPROM support
;2 - OTP support
;3 - FLASH support
NO EEPROM=2
NoEepromBtFlexFileName = "Bt
NoEepromWlanFlexFileName = "Wl
```

Run Marvel MFG tool

```
C:\88MW300_MFG_labtool>Dut labtool
Name:      Dut labtool
Version:   2.1.0.0?
Date:      Sep 2 2014 <20:59:12>

Note:

Name:      DutApiClass
Interface: EtherNet
Version:   2.1.0.0?
Date:      Sep 2 2014 <20:58:37>

Note:

DutIf_InitConnection: 0

U8?xx <802.11a/g/b/n> TEST MENU

Enter option:
```

4-1 Generate 802.11b/g/n Packet commands

a. Tx on CH 6 at 10 dBm with a CCK-11Mbps data rate in 20 MHz BW mode on WiFi

```
25          // Stop Tx
112 0       // Set to 20 MHz BW
12 6        // Set to CH 6
22 6 10 0   // Set to CH 6 at 10 dBm Output Power with CCK/BPSK Data Rate on WiFi
25 1 4      // Tx at 11 Mbps
```

b. Tx on CH 100 at 8 dBm with a MCS7 Data rate in 20 MHz BW Mode on WiFi

```
25          // Stop Tx
112 0       // Set to 20 MHz BW
12 13       // Set to CH 13
22 13 8 1   // Set to CH 13 at 8 dBm Output Power with OFDM Data Rate on WiFi
25 1 22     // Tx at MCS 7
```



Data rate set up

B mode & G mode:

1Mbps	5.5Mbps	11Mbps	6Mbps	9Mbps	12Mbps	18Mbps	24Mbps
1	3	4	6	7	8	9	10
36Mbps	48Mbps	54Mbps					
11	12	13					

N mode:

MCS0	MCS1	MCS2	MCS3	MCS4	MCS5	MCS6	MCS7	
15	16	17	18	19	20	21	22	

After you type above command, you can measure the 802.11b/g/n packet by your RF test instrument (exp: Agilent 4010, IQview...).

4-2 Generate 802.11 b/g/n continuous symbol Commands

a. Cont. Tx on CH 7 at 8 dBm with a MCS7 Data rate in 20 MHz BW Mode on WiFi

```

17          // Stop Cont. Tx
25          // Stop Tx
112 0      // Set to 20 MHz BW
12 7       // Set to CH 36
22 7 8 1   // Set to CH 36 at 8 dBm Output Power with MCS Data Rate on WiFi
25 1 22    // Tx at MCS 7
25         // Stop Tx
17 1 22    // Cont. Tx at MCS7
17         // Stop Cont. Tx
  
```

4-3 Test RX sensitivity Commands

a. Rx on CH 7 in 20 MHz BW Mode on WiFi






```

25          // Stop Tx
112 0      // Set to 20 MHz BW
12 7       // Set to CH 7
31         // Clear all the received packets
32         // Get Rx Packet Count and then clear the Rx packet counter
  
```


4-4 Others Commands

- (1) **Command 45**→ Check the MAC
- (2) **Command 99**→ Quit the test mode/ Quit the MFG tool







QSPI FLASH

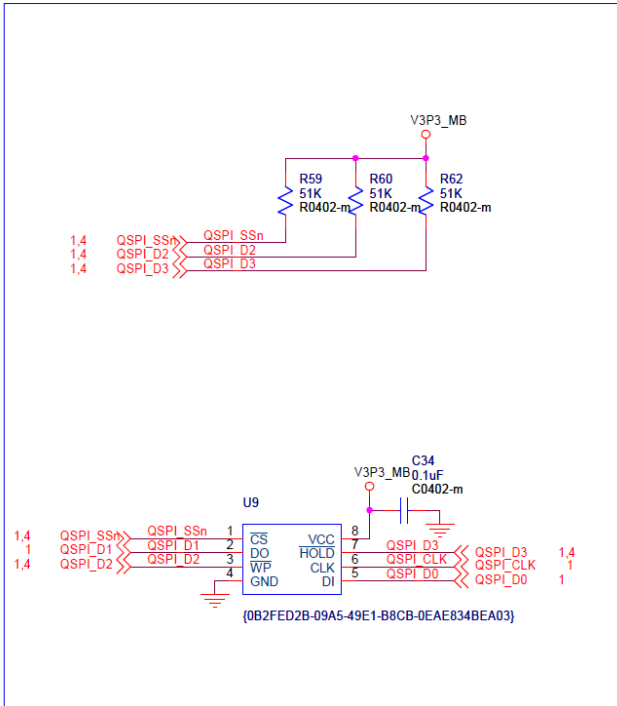

Sleeping Clock (Option by software)

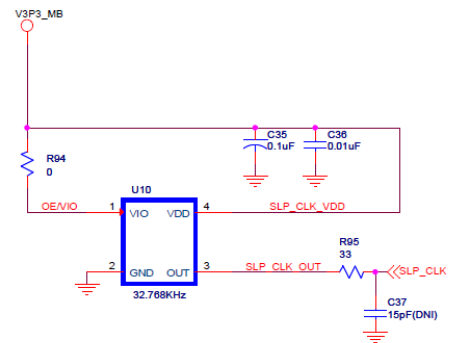

System reset

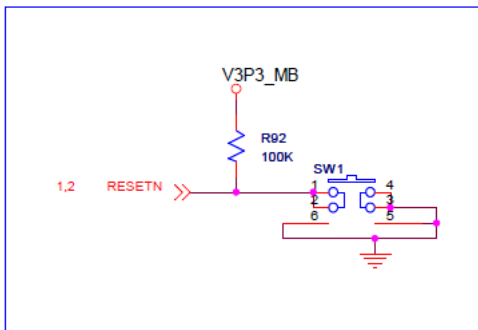

Jtag reset

