

Instruction Sheet

Subject: BIC Flavor Activation or Deactivation

SCOPE: ALL MULTIPLEX BIC UNITS

TOOLS REQUIRED

- Food Grade Scale (measure to at least one decimal point)

NOTE: There are two different User Interface (UI) screens that are used on Blend-in-Cup (BIC) units. Follow instructions for correct screen configuration.



MR7
Plastic Overlay




Common Controller
Glass Screen

MR7 SCREEN INSTRUCTIONS

VERIFY RECIPE FILE


- From the DRINK menu press the BACK arrow to return to easyToUCH screen.

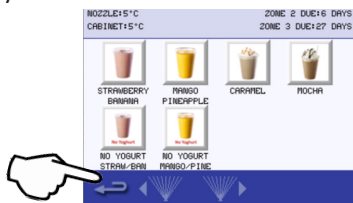


- Press MANAGER MENU. Press A then press GREEN check.



- Press DOWN arrow twice.

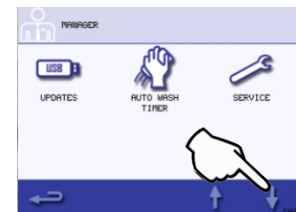


- Verify recipe file displays MUSM752R.CBR or MUSM768R.CBR.

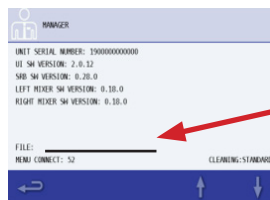

MUSM752R.CBR
--- or ---
MUSM768R.CBR

- If recipe file does not display MUSM752R.CBR or MUSM768R.CBR then STOP and call 844-724-CARE.
- Press BACK arrow until return to easyToUCH screen.

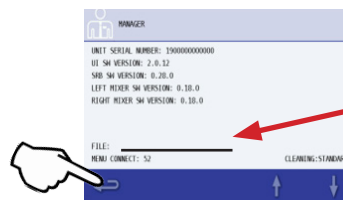


MUSM752R.CBR
--- or ---
MUSM768R.CBR

ACTIVATE OR DEACTIVATE FLAVOR


- Press MANAGER MENU. Press A then press GREEN check.



- Press CONFIGURE SLOTS.

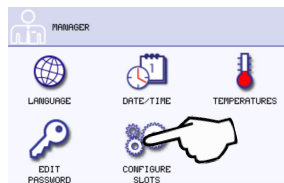


- Press SLOT FLAVOR.

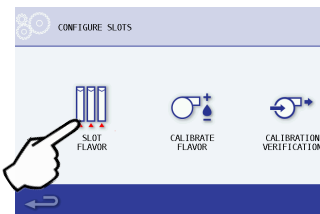

10. Press ASSIGN FLAVOR if prompted. Press SLOT to be assigned new flavor.

NOTE: Any slot may be used, however SLOT 7 is the designated slushy base slot.

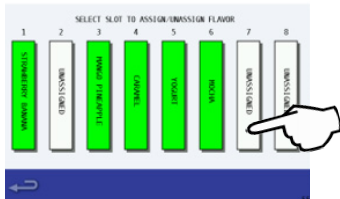

11. From the FLAVORS MENU press DOWN arrow until flavor appears. Press correct flavor button.



12. Screen will automatically return to SLOT SELECTOR screen. Confirm new flavor has been assigned to correct slot.



13. Press BACK arrow until return to easyToUCH screen.




LOAD BAG


14. Press INVENTORY MENU then press new flavor slot.



15. Follow onscreen instructions for loading new flavor bag then press GREEN check.

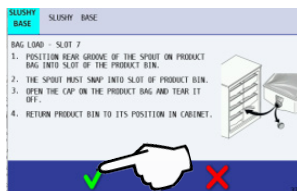


16. Press FULL BAG.

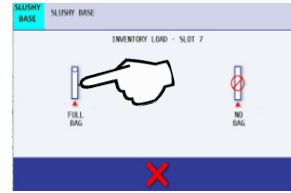

17. Place a clean empty cup in dispense area.

18. Press PRIME button 4 to 5 times until a steady stream of new flavor product dispenses then press GREEN check.

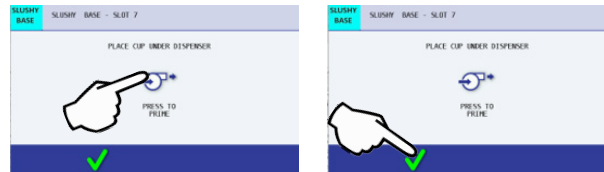


19. Press BACK arrow until screen returns to easyToUCH screen.


20. Dispose of dispensed product in cup. Do NOT pour down the machine's drain.

CALIBRATE FLAVOR


21. Press MANAGER MENU. Press A then press GREEN check.

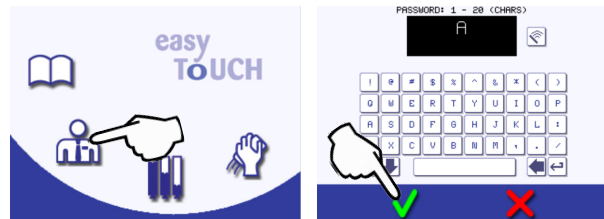


22. Press CONFIGURE SLOTS.

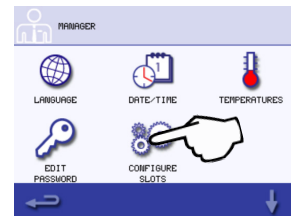

23. Press CALIBRATE FLAVOR.

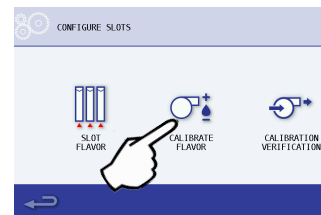


24. Press slot that displays new product flavor.

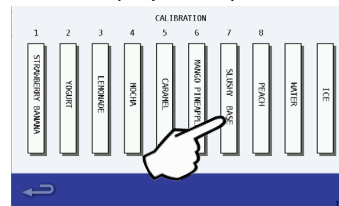


25. Follow the onscreen instructions.

- A. Get a scale.
- B. Place empty cup on the scale.
- C. Tare or zero empty cup weight on the scale.
- D. Position the empty cup for dispense on the unit.
- E. Press GREEN check when ready to dispense.

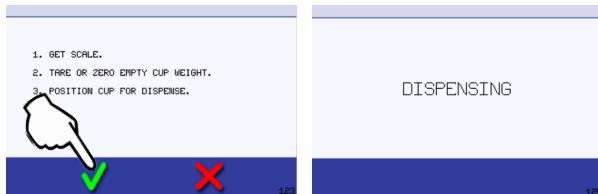


- F. Wait until dispensing is complete.
- G. Remove cup from the dispense area and weigh.
- H. Press button to enter weight.

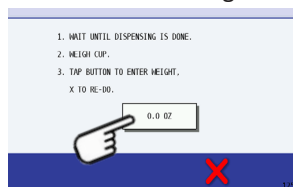

26. The Enter Weight screen will appear.

- A. Enter the cup weight using the number pad.
- B. Press the GREEN check when done to continue.

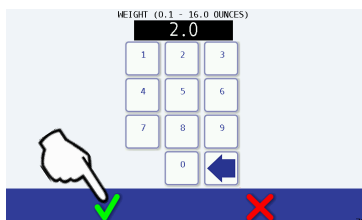

27. Confirm the weight entered is correct. Press the GREEN check to confirm or enter weight again.

28. The calibration complete screen will display. Press GREEN check to return to the calibration screen.

29. The newly calibrated slot will be highlighted in GREEN.

- A. Choose another flavor, water or ice to calibrate.
- B. Or press the return arrow to go back to the CONFIGURE SLOTS Screen. Press BACK arrow until screen returns to easyToUCH screen.

30. If new flavor activated, make a drink that uses new product flavor to confirm operation.

COMMON CONTROLLER SCREEN INSTRUCTIONS

VERIFY RECIPE FILE

1. Verify current recipe file.

- ☐ From SETTINGS screen press VERSION INFO
- ☐ Verify MENU VERSION is 0.0.07 or higher
- ☐ Press BACK arrow until return to easyToUCH screen

ACTIVATE OR DEACTIVATE FLAVOR

2. Assign SLOT FLAVORS.

- ☐ From easyToUCH screen press SETTINGS
- ☐ Press "A" for password then press GREEN check
- ☐ Press CONFIGURE SLOTS
- ☐ Press SLOT FLAVOR
- ☐ Press an EMPTY slot to assign flavor

NOTE: Any unassigned slot may be used, however SLOT 7 is the designated slushy base slot.

- ☐ Press flavor
- ☐ Repeat assigning slot flavors per store/corporate guidelines
- ☐ Press back arrow to return to easyToUCH screen

LOAD BAG

3. Load product bags into lower refrigerated cabinet.

4. Load inventory in the INVENTORY screen.

- ☐ From easyToUCH screen press inventory LEVELS
- ☐ Press slot with flavor assigned
- ☐ Follow onscreen instructions for loading product bag and priming
- ☐ Repeat loading product bag process until all flavors have been loaded
- ☐ Press BACK arrow until return to easyToUCH screen

CALIBRATE FLAVOR

5. Perform calibration of new flavor.

- ☐ From easyToUCH screen press SETTINGS
- ☐ Press "A" for password then press GREEN check
- ☐ Press CONFIGURE SLOTS
- ☐ Press CALIBRATE FLAVOR
- ☐ Press new flavor and follow the onscreen calibration instructions

NOTE: Flavors and flavor fill levels may display "ghosted" or semi-transparent until flavor has been calibrated. Press the "ghosted" or semi-transparent flavor to start the calibration process.

- ☐ Press BACK arrow until return to easyToUCH screen

CONFIRM OPERATION

6. Make several drinks in different sizes with manager

present to confirm operation.

- ☐ From easyToUCH screen press PRESS & GO to access drink making menu
- ☐ Use icons on screen to make drink
- ☐ Arrow onscreen will indicate which side to place cup for blending
- ☐ Press BACK arrow until return to easyToUCH screen

NOTE: Drink Making Screen is not accessible if cleaning timer has expired.

