英语说明书(HB24)
尺寸:450*120MM
说明书为折叠式
料号：20040093A
类型： 环保
版本：1.2

HelloBaby®

Baby Monitor

Focus on Mom & Baby Care !

User Manual

Wireless Digital Video Baby Monitor

Model: HB24

www.hellobaby.net.cn
service@hellobaby.net.cn

Thank you for purchasing the HB24. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their play room.

Please retain your original dated sales receipt for your records. For warranty service of your HelloBaby product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

Please make sure you have the following in your package

Parent unit x 1 — Camera unit x 1 — Power Adapter x 2
User manual x 1 — Wall-mounting kit x 1

1. SAFETY INSTRUCTIONS

CAUTION: Keep the device away from children.

Strangulation Hazard: Children can become entangled in the cords, therefore power cords should be kept more than 3 feet (1 meter) away from the crib and baby's reach at all times. Baby monitors and cameras with power cords should never be hung on or near the crib. Never use extension cords with A/C adapters. Use only the A/C adapters supplied. This product is not a toy and should be kept out of children's reach. Choking hazard – This product contains small parts, so exercise care when unpack and assemble the product.

Read and keep to instructions: All the safety and operating in structions should be read before the video baby monitor is operated. This product cannot replace responsible adult supervision.

Water and moisture: This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

DO NOT: Use the appliance if the cord or plug is damaged. If your baby monitor is not operating properly or has suffered any damage, contact "Videotimes" service center to request inspection and repair of the appliance in order to avoid any possible risk.

DO NOT: Attempt to repair or adjust any of the electrical or mechanical functions of the unit, if you do, the guarantee will be made void.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area such as a bookcase or drawer that may impede air flow.

Keep away from sources of heat: This unit should not be exposed to direct heat sources such as a candle, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

Power source: This unit should only be used with the AC power adapters included in this package (rated 6V 600mA/).

Damage requiring service: This unit should be serviced by qualified personnel only when:
. Objects have fallen or liquid has been spilled into the product;
. The units have been exposed to rain;

. The units do not appear to operate normally or exhibits a distinct change in performance;
. The units have been dropped or the enclosure damaged;

2. INSTALLATION GUIDELINES

* To use your parent unit and camera unit together, you must be able to establish a radio linkbetween them, and the range will be affected by environmental conditions.
* Any large metal object, like a refrigerator, a mirror, a filling cabinet, metallic doors or reinforced concrete between the baby and parent unit may block the radio signal.
* The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
* Use of other 2.4GHz product, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.

3. PLACEMENT OF THE BABY MONITOR

This camera is desktop and wall mountable. Do not place on soft quilts or blankets or in the corners of cupboards, shelves, etc; Place the baby monitor away from heat sources such as radiators, chimneys, cookers and direct sunlight; Place the baby unit away from TV sets, microwave oven and radios. If interference occurs, move the camera to another location;

* Place the camera within 6 feet (2 meters) of the area being monitored for optimum performance.

4. Instructions for using a baby monitor

4.1 TURN ON THE BABY UNIT:

1. Insert the DC plug of the power adapter into the DC jack in the rear of the Baby Unit.
2. Plug the A/C adapter into the wall outlet.
3. Once the adapter is connected, the power LED will light up.

4.2 TURN ON THE PARENT UNIT:

1. Insert the DC plug of the power adapter into the DC jack in the side of the parent Unit.
3. Plug the A/C adapter into the wall outlet;
4. Press and hold the power key on the top of the parent unit;
5. Once parent unit is on, the power LED will light up and the image will display on the LCD;

4.3 TO CHARGE THE PARENT UNIT:

1. Connect the power adapter to the parent unit;
2. Plug the adapter into the mains, then the charging LED on the parent unit will light in RED;
3. It takes less than 8 hours to charge fully.

5.PRODUCT OVERVIEW

5.1 ICONS OVERVIEW:

Signal Strength	Volume	Zoom
Alarm	Brightness	Two-Way Talk
Lullaby	Night vision	vox Voice Activation
Camera	Battery Level	Temperature

5.2 PARENT UNIT OVERVIEW:

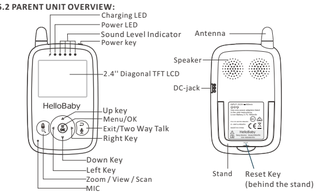

5. 3 BABY UNIT OVERVIEW:

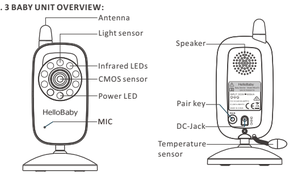

6. Key OPERATION

6.1 POWER SAVE/SCREEN OFF

Short press the power key to turn on / off the screen.

6.2 VOLUME ADJUSTMENT

Press the ▲ key to increase the volume; Press the ▼ key to decrease the volume;

6.3 BRIGHTNESS ADJUSTMENT

Press the ◀ key to decrease the brightness; Press the ▶ key to increase the brightness;

6.4 CAMERA VIEW / SCAN

Press Scan key to view / scan camera;During scan mode, the scan icon will be displayed on the top of screen. And each camera's' video will be stay on the LCD around 10 seconds then change to next camera;

6.5 DIGITAL ZOOM & PAN / TILT

Press and hold the key around 2 seconds to operate Zoom in / out; At the Zoom mode , press the ◀ key to Pan left; press ▶ key to Pan right; press ▲ key to tilt up; press ▼ key to tilt down;During digital zoom mode, the zoom icon will be displayed on the top of screen.

Warm reminder: If you want to adjust the volume/Brightness, you have to exit the Zoom mode before your operate it.

6.6 TALK TO BABY

To talk, press and hold the talk key on the front of the monitor. A microphone icon will be displayed on the top of the LCD screen while this function is working.Release the button when you have finished talking and listening to the sound from the baby's room again.Bear in mind that you can't listen to your baby whilst you're talking to it; to listen to it, you will have to stop pressing this button.

6.7 INFRARED NIGHT VISION (Automatic)

The infrared night vision function allows the camera to pick up images of your baby or the monitored area in dark or low light conditions.In this mode, only black and white images will be displayed on the monitor, the optimum image is 6 feet distance between baby unit and object.When the camera is in night vision mode, the icon will be displayed on the top of screen.

7. MENU OPERATION

7.1 PAIRING THE CAMERA AND MONITOR

The baby unit is pre-registered to your parent unit. You do not need to register it again unless the baby unit loses its link with the parent unit. To re-register your baby unit, or register a new baby unit, follow the procedure below:

Note: Before you begin pairing, be sure to have the monitor and the camera side by side.

1. Press the MENU key then the menu will pop up;
2. Press the ◀ / ▶ key until the camera icon highlighted, then press ▲ / ▼ key to select your desired camera;

3. Press OK key enter into sub-menu;
4. Press ▲ / ▼ key to select ADD CAM then press OK key;
5. While the "Pairing" dialogue displayed on theLCD screen, press the PAIR button on the back of camera;
6. Once paired, it will display "pair is succeed" on the LCD screen.
7. If unsuccessful, please repeat the above steps.
8. Press the key to Exit.

7.2 DELETTING A CAMERA

1. Press the MENU key and the menu will pop up;
2. Press the ◀ / ▶ key until the camera icon is highlighted then press ▲ / ▼ key to select your desired camera;
3. Press OK key, enter into sub-menu;
4. Press ▲ / ▼ key to select DEL CAM then press OK key;
5. Press ▲ / ▼ key to select, continue to delete the camera;
6. Press OK key to confirm the option.
7. Press the key to Exit.

7.3 VOX SETTING

This option in the parent unit menu allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit picks up, e.g. you will want to hear when your baby cries, but you may be less interested in its babbling.

1. Press the MENU key and the menu will pop up;
2. Press the ◀ / ▶ key until the icon **VOX** is highlighted, then press ▲ / ▼ key to select desired level;
3. Press OK key to confirm;
4. Press the key to Exit.

Note: VOX-Lo is Low sensitivity level;
Note: VOX-Hi is High sensitivity level;

7.4 TEMPERATURE UNIT SETTING

1. Press the MENU/OK key and the menu will pop up;
2. Press the ◀ / ▶ key until the temperature icon is highlighted;
3. Press ▲ / ▼ key to select between **°F** or **℃** .
4. Press OK key to confirm;
5. Press the key to Exit.

Note: For this unit,The environment test temperature range is 0~50 **℃**.

Room temperature alarm setting

1. Enter the temperature selection interface, press ▼ direction key, choose Alert, then press **OK** key to enter setup;
2. Open the environment temperature alarm function, select **ON**, press **OK** key to confirm; close the environment temperature alarm function, select **OFF**; press **OK** key to confirm;
3. Set alarm temperature value Choose **ON**, then press **OK** to confirm, enter the setup interface of high and low temperature; Now, the Hight value appears red box, press the

▲ / ▼ key to adjust the maximum environmenttemperature alarm value, after it is set, press **OK** key to confirm; When the highest temperature alarm value is set, it will automatically jump into the lowest temperature alarm value set; When the Low temperature alarm value appears red box, press ▲ / ▼ key to make lowest environment temperature alarm value adjustment, then press **OK** key to confirm and the system returns to the superior directory automatically ; If you don't want to change, press the Return key to return to the superior directory;

Note: the High temperature alarm range is 20-40 **℃**, and the Low temperature alarm range is 0-19 **℃**.

7.5 LULLABY SETTING

You can soothe the baby to sleep by playing a gentle lullaby from the baby unit.

1. Press the MENU key and the menu will pop up;
2. Press the ◀ / ▶ key until the lullaby icon is highlighted;
3. Press ▲ / ▼ key to select one of the 8 available lullabies, silence or loop playing ;
4. Press OK key to confirm;
5. Press the key to Exit.

Note 1: Once the lullaby was is turned on, the lullaby icon will display on the top of the screen.
Note 2: The lullaby default setting is OFF.
Note 3: Lullaby loop playing function is, play all the lullabies one time.

7.6 ALARM SETTING

You can use the alarm to remind yourself to feed your baby / change diaper / sleeping, etc.

1. Press the MENU key and the menu will pop up;
2. Press the ◀ / ▶ key until the alarm icon is highlighted;
3. Press ▲ key to decrement or press ▼ key to increment ;
4. Press OK key to confirm;
5. Press the key to Exit.

Note 1: The minimum unit is 0.5 hour. The maximum setting is 4 hours (8 levels).
Note 2: Once the alarm is turned on, alarm icon will display on top of the screen.
Note 3: The alarm default setting is OFF.
Note 4: When the alarm is ringing, press any key to answer it.

8. TROUBLE SHOOTING

No reception on the monitor	* The power adapters may not be properly connected; * Confirm that the camera and monitor are ON; * Camera may be far away from the monitor; * Camera and monitor may not be properly paired; follow PAIRING instructions;
Interference or poor recetion	* Move the monitor close to the camera; * The camera or monitor may be placed too close to many metal objects; * Other electronic devices may be interfering with the signal; * The battery power may be too low;

Feedback (screeching, static)	* The camera and monitor may be too close to each other; * The volume on the monitor may be set too high; * Cannot hear the baby on the parent unit, * Volume setting may be too low;
Image frozen	* Restart the baby unit (plug out the adapter, then plug it into the socket again); * Press the reset key at the back of parent unit (hidden behind the stand)

9. FCC AND IC REGULATIONS

FCC Part15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

* Reorient or relocate the receiving antenna.
* Increase the separation between the equipment and receiver.
* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
* Consult the dealer or an experienced radio/TV technician for help."

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.
Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé.

10. TECHNICAL DATA

Frequency	2402MHz~2478MHz
Operating Range	Up to 900 feet (straight line and open space)
Power adapter Input	Input: 100-240VAC 50 / 60Hz; Output: 6V, 600mA;
LCD	2.4'' TFT LCD
Rechargeable battery for (pre-installed in the parent unit)	Model: 503450; 3.7V,950mAh,3.515Wh;
Operating time with battery fully charged	Up to 12 hours (VOX on)
Maximum power	19dBm
Operation environment	Temperature : +32F- +104F (0 **℃** -40 **℃**) Relative Humidity : 15%-85%
Storage environment	Temperature : -4F- +185F (-20 **℃** -70 **℃**) Relative Humidity : 15%-85%

11. MAINTENANCE

* Clean the surfaces of the camera and monitor with a soft, fluff-free cloth;
* Never use cleaning agents or solvents;
* If the units become dirty, use a lightly dampened cloth to wipe surfaces, taking care to not allow water into any openings.

12. Disposal guide for battery and product

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment.

Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.
Please contact your local authorities in case you need more information on the collection points in your area.
Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

Warning:

Risk Group 1
WARNING IR emitted from this product. Do not stare at operating lamp
Product tested against En62471

Ver: 1.4
Part No: 20040
Made in China

www.hellobaby.net.cn