




BLOSSOM®
luxury made simple

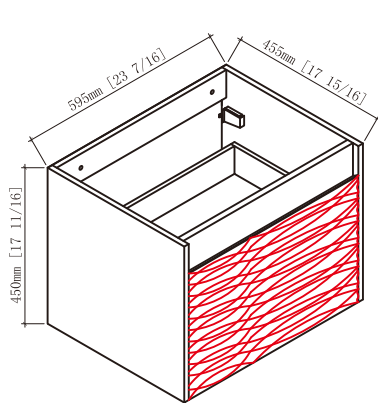


V8008-24

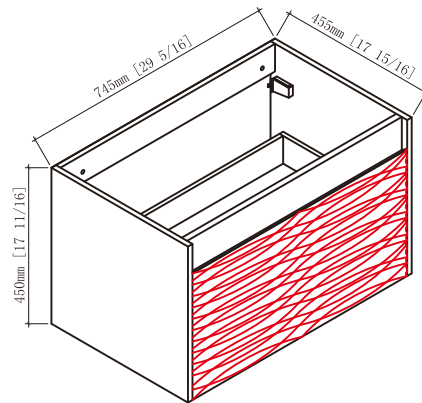

V8008-30

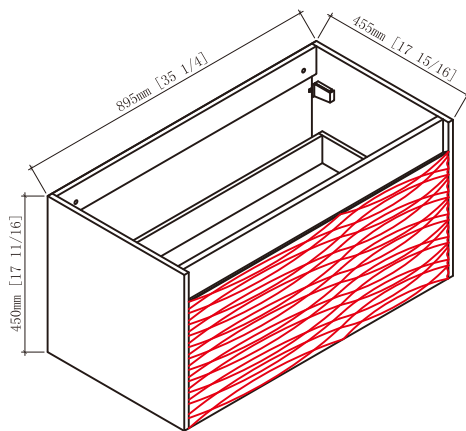

V8008-36

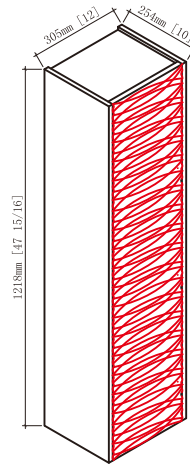

S8008-12

[PARIS]
Series Vanities
Specification & Installation Guide



Features

- Classic wavy design with high glossy paint.
- Soft-closing drawer.
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Full extension drawers.
- Easy installation

Package Dimension

12	14-61/64" x 12-61/64" x 50-19/32"
24	26-3/8" x 20-55/64" x 20-43/64"
30"	32-9/32" x 20-55/64" x 20-43/64"
36"	38-3/16" x 20-55/64" x 20-43/64"

Colors / Finishes

Glossy White - 01

Gross Weight

12"	43 LBS
24"	45 LBS
30"	52 LBS
36"	58 LBS


Sink Top Options

	Vanities	Ceramic basin	Artificial stone basin
12"	S8008-12		
24"	V8008-24	C04 2418	A10 2418 25
30"	V8008-30	C04 3018	A10 3018 25
36"	V8008-36	C04 3618	A10 3618 25




36"

35-1/4" X 17-15/16" X 17-11/16"

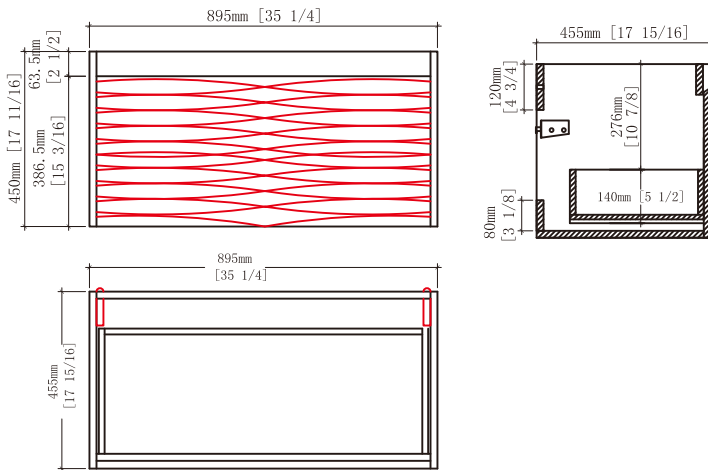


30"

29-5/16" X 17-15/16" X 17-11/16"

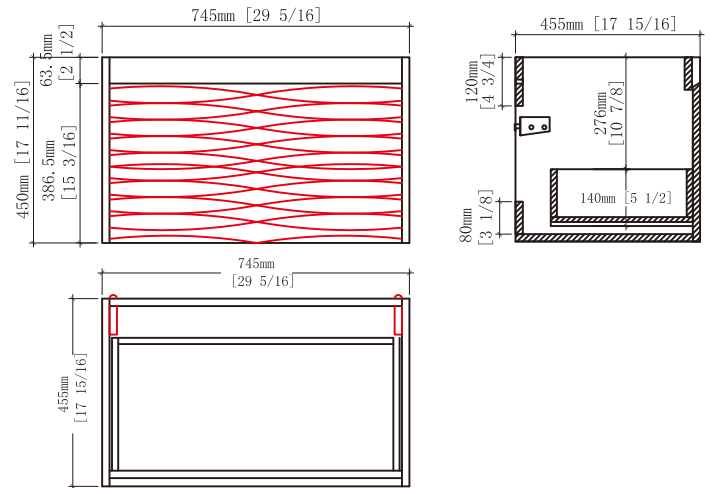


24"


23-7/16" X 17-15/16" X 17-11/16"

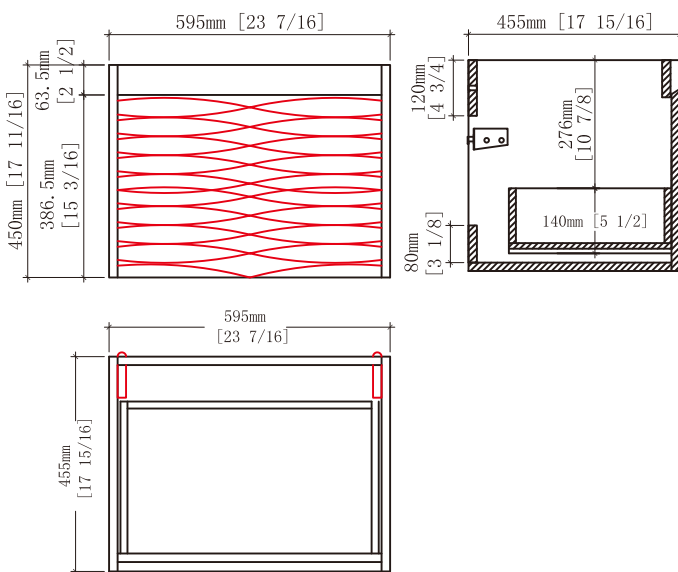

12"


12" X 10" X 47-15/16"

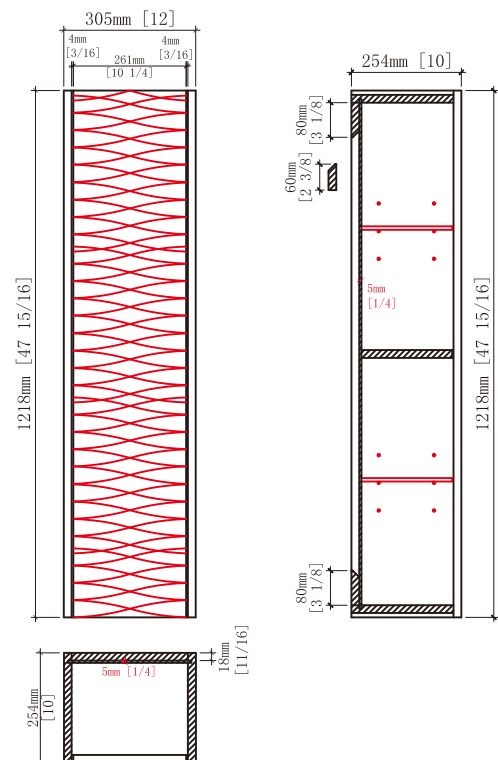

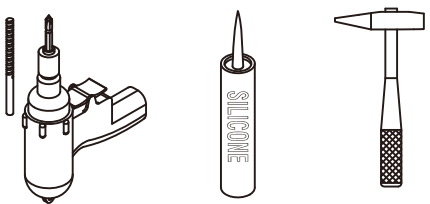Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		2pcs		
B	Screws (Ø4 x 68mm)		2pcs		
C	Stainless steel cover		2pcs		
D	Green rubber plug		6pcs		
E	Screw		6pcs		


Wall Preparation

- The typical dimensions shown will result in vanity cabinet height of 32-3/4"(831mm). Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) 35-1/4"(895mm). If an alternate height is desired, adjust the rough-in and backing material heights using the dimensions provided.

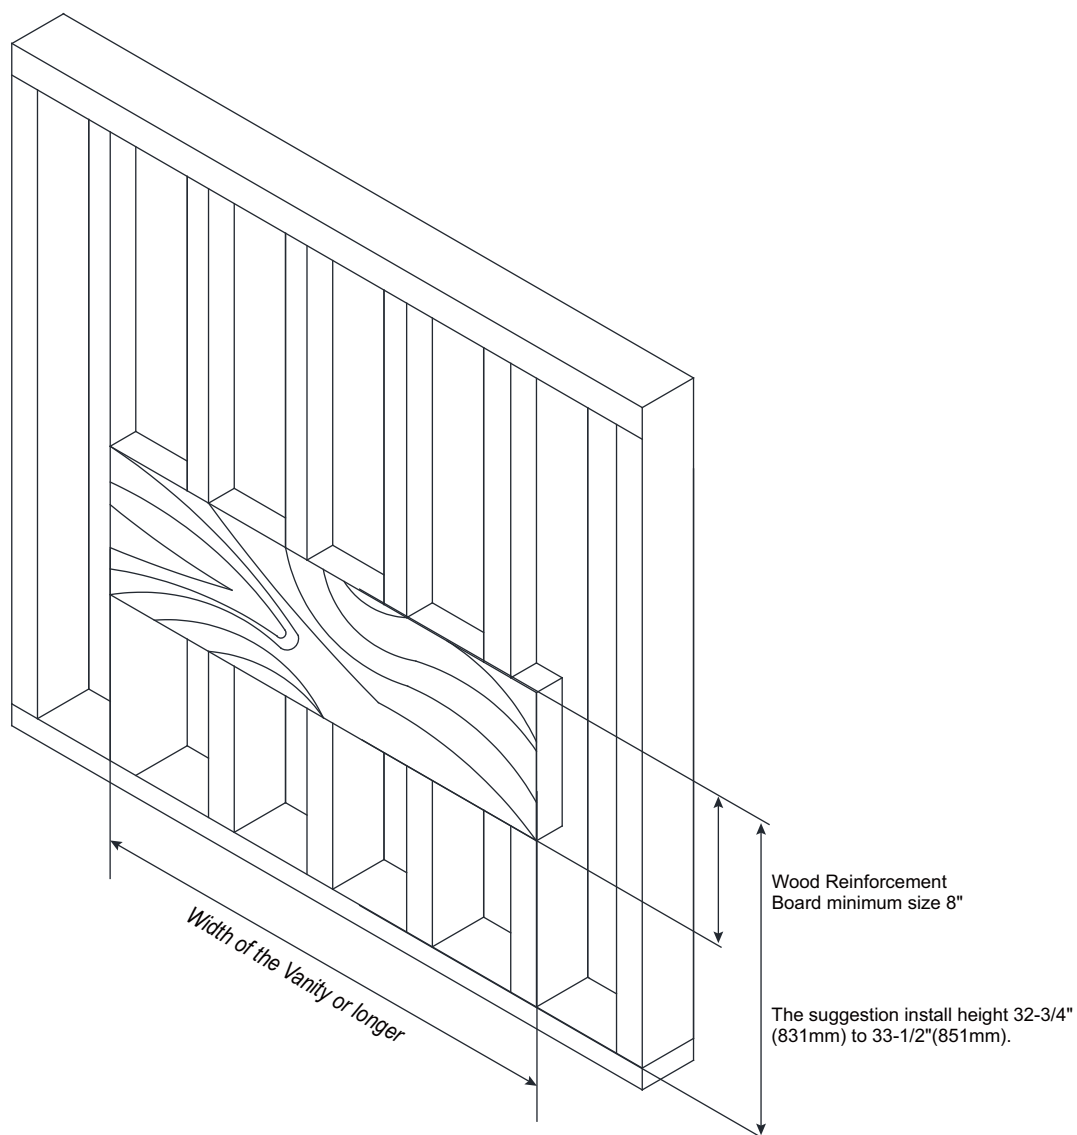


STEP 1

Draw a punched position on the wall with a pencil.

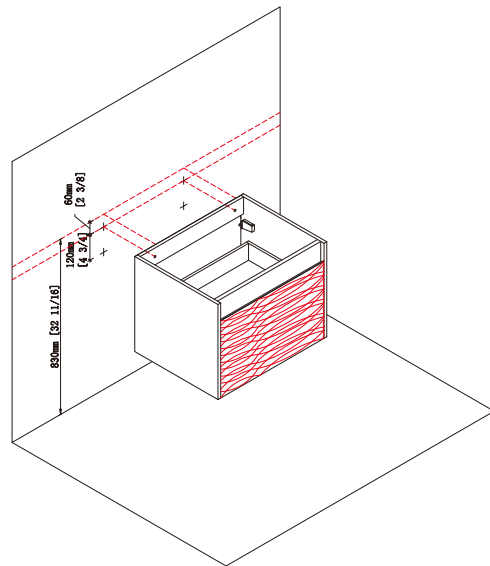


STEP 2

Drill the holes with suitable drill-bits base on different condition of the wall. Use a hammer to knock the white expansion rubber plug into the upper hole, and knock the green rubber plug into the three lower hole, align the hole in the wall and lock the leveling bracket to the wall with screws.

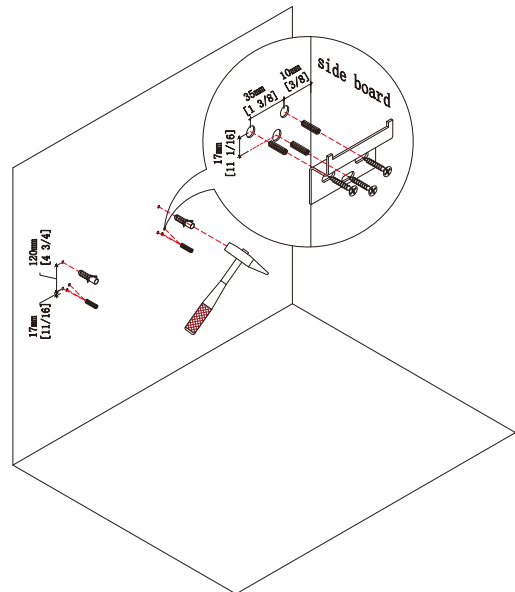


STEP 3

Hang the cabinet.(As the picture shows.)

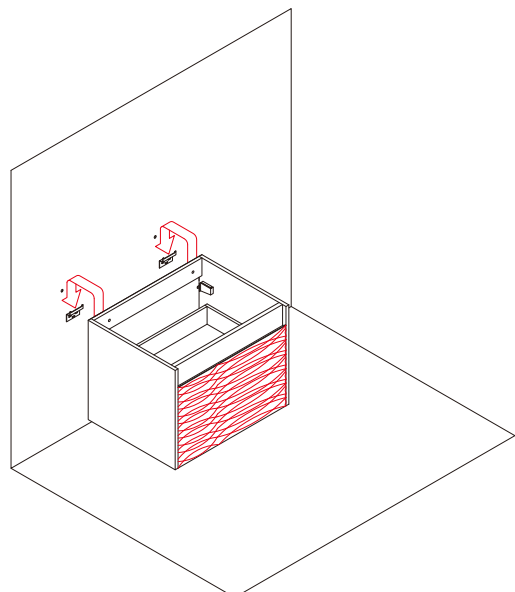


STEP 4

Secure the vanity onto the wall with screws.

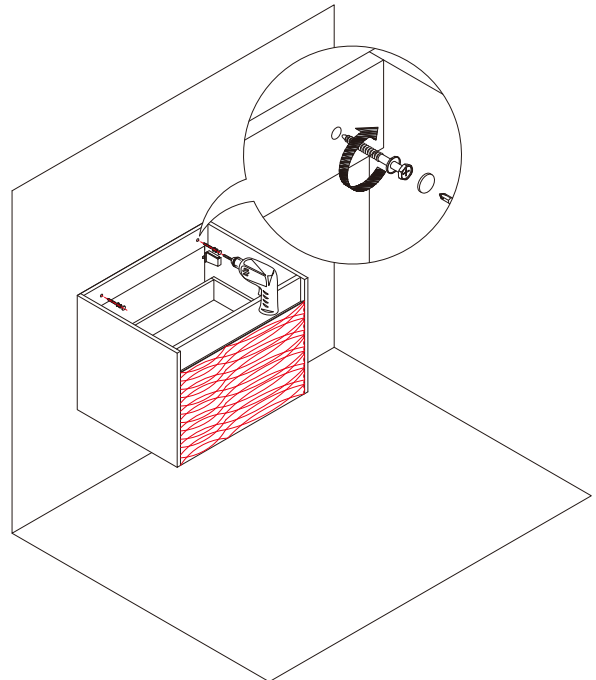


STEP 5

Install sink top with silicone.

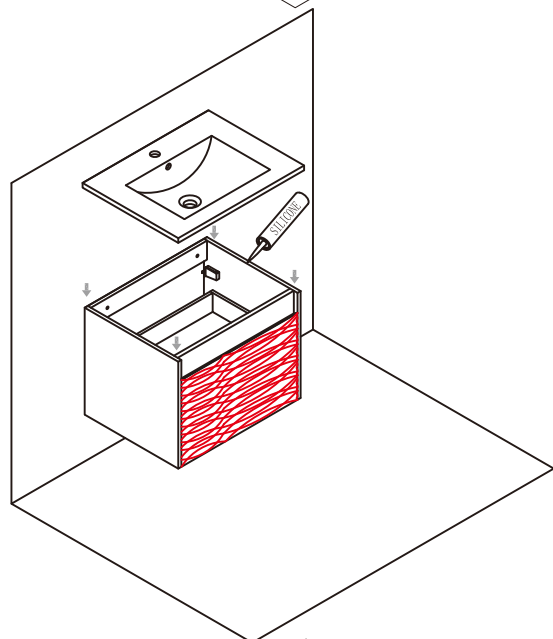


STEP 6

Finish.

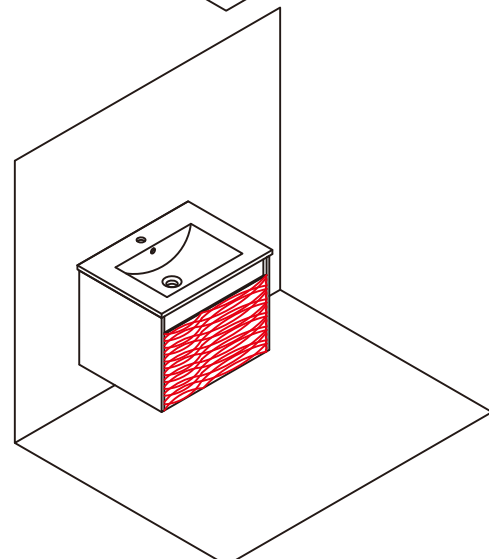


STEP 1

1. Measure the wall-hung board and mark down the holes on the wall.
2. Drill the holes with suitable drill-bits base on different condition of the wall.
3. Use a hammer to knock the green expansion rubber plug into the hole.

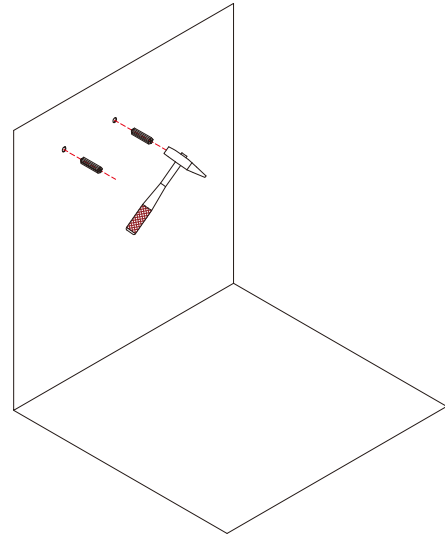


STEP 2

Screw the 45 degree wall-hung panel onto the wall.

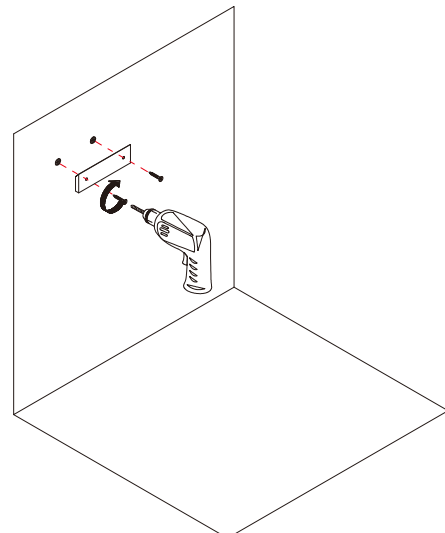

STEP 3

Put up the back top panel of side vanity on the 45 degree wall-hung panel .
Finished.

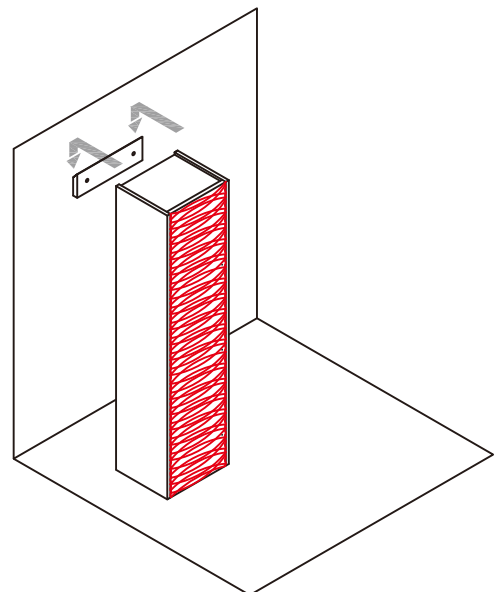



Blossom Kitchen & Bath Supply Corporation
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

