




IS7p

USER MANUAL

Distribution Date: March 1st, 2021

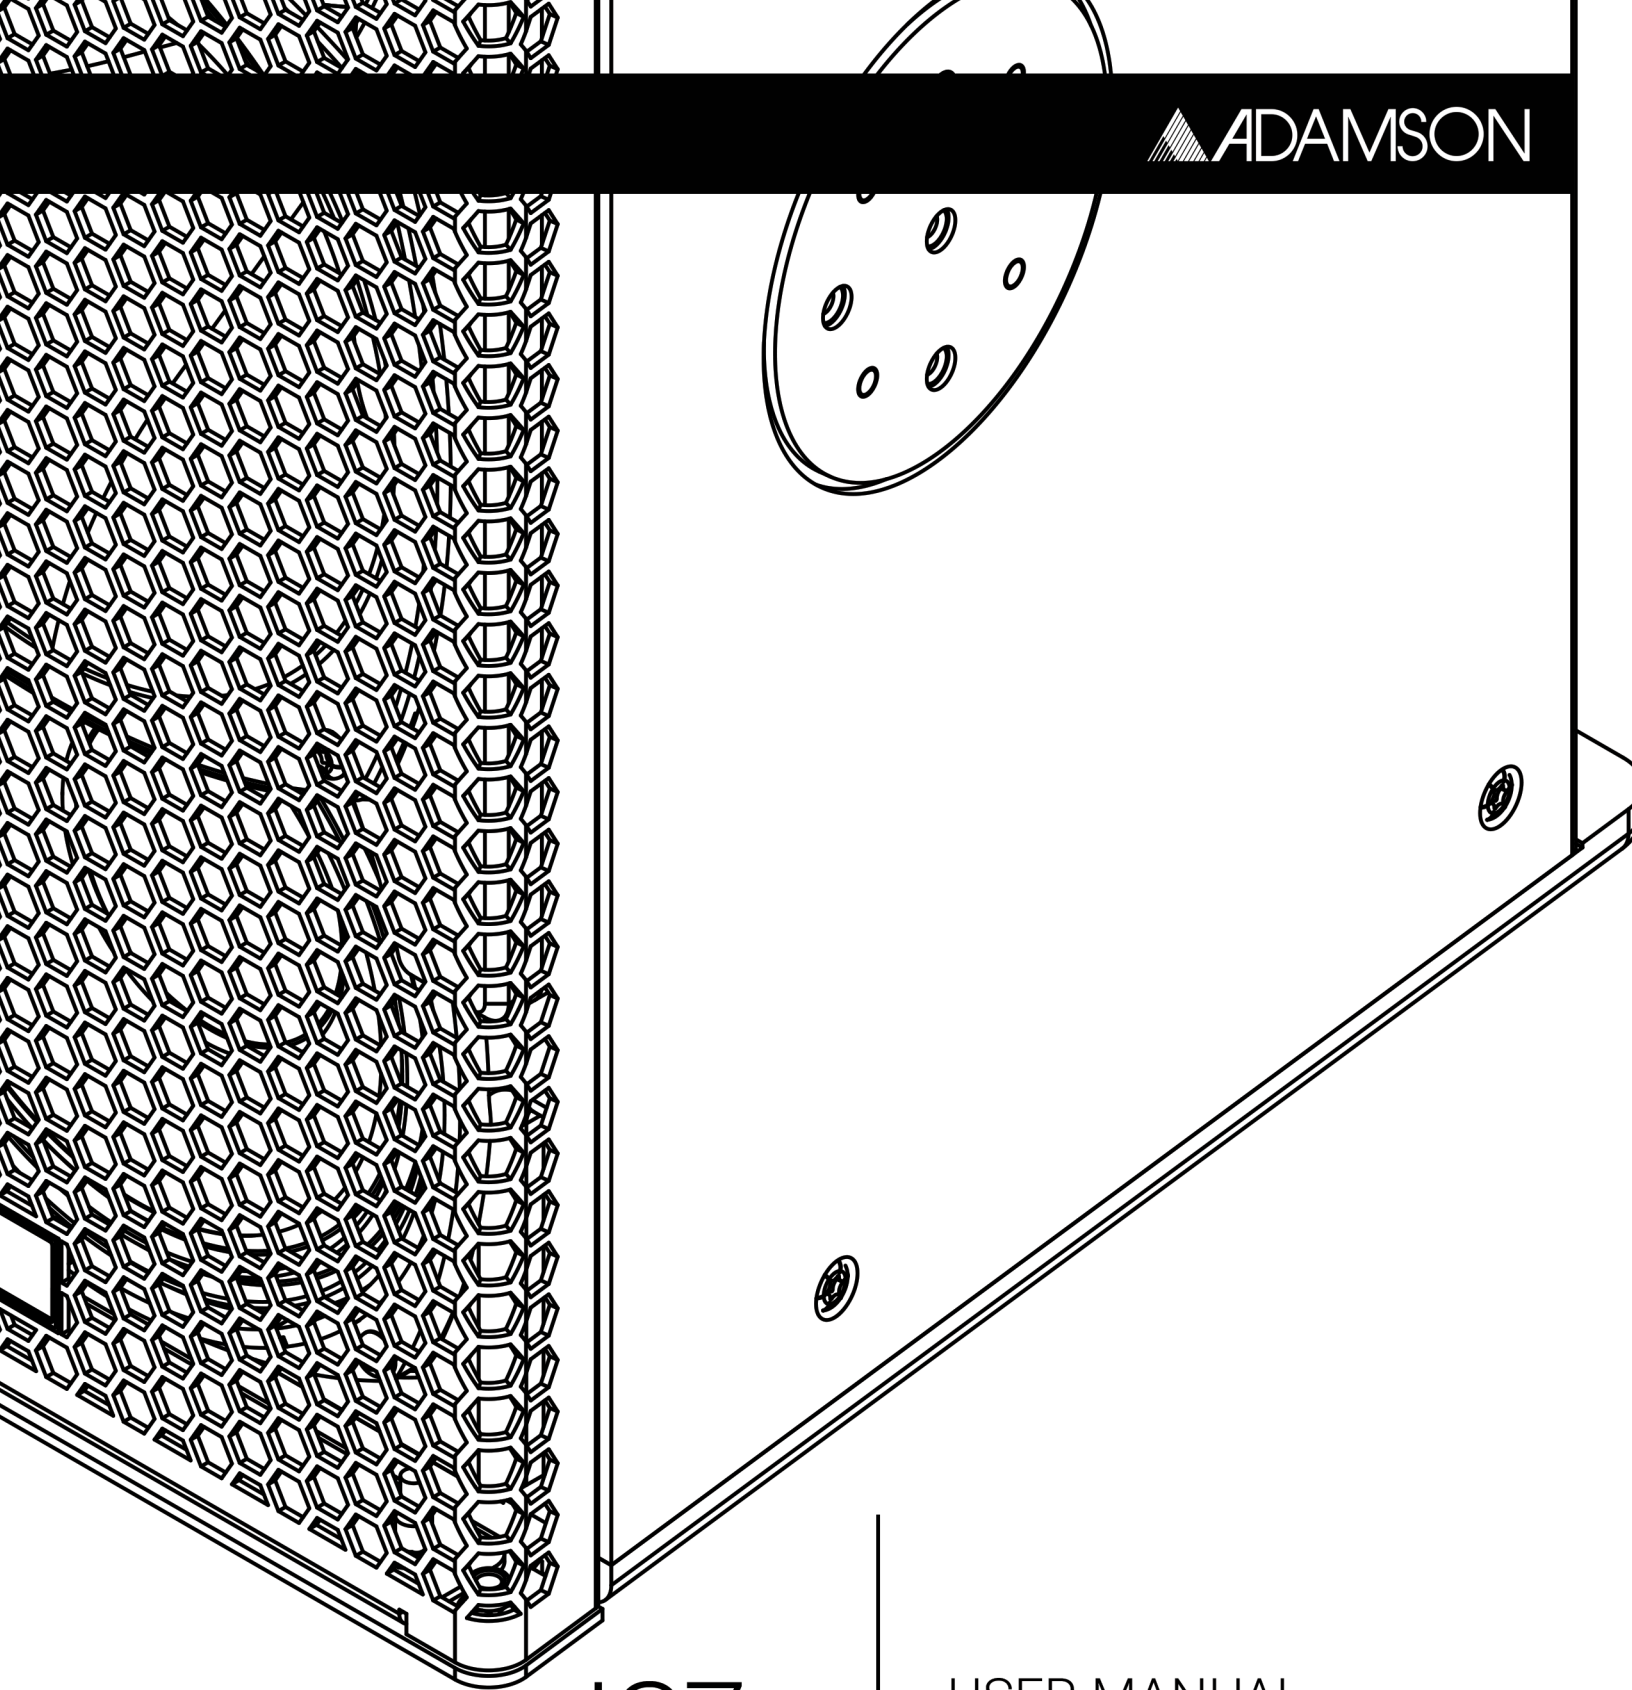

IS7p User Manual

Distribution Date: March 1st, 2021

Copyright 2021 by Adamson Systems Engineering Inc.; all rights reserved

This manual must be accessible to the person operating this product. As such, the product owner must store it in a safe place and make it available upon request to any operator.

Resale of this product must include a copy of this manual.

This manual can be downloaded from

<https://www.adamsonsystems.com/en/support/downloads-directory/is-series/is7p>

Declarations

EU Declaration of Conformity

Adamson Systems Engineering declares that the products stated below are in conformance with the relevant fundamental health and safety criteria of the applicable EC Directive(s), in particular:



Signed at Port Perry, ON, CA - March 1st, 2021

Directive 2014/35/EU: Low Voltage Directive

967-0001 IS7p - 70 x 40
967-0002 IS7pb - 70 x 40
967-0003 IS7p - 100 x 50
967-0004 IS7pb - 100 x 50

A handwritten signature in blue ink, appearing to read 'Brock Adamson', is written over a horizontal dashed line.

Brock Adamson (President & CEO)

Directive 2006/42/EC: Machinery Directive

930-0031 IS7p & IS10p Fill Plate
930-0032 IS7p Short Fill Plate
934-0027 IS7p Horizontal Bracket
934-0028 IS7p Vertical Bracket
934-0026 IS-Series Sight Mount
932-0006 Bracket C-Clamp
932-0039 IS-Series Pole Mount Adapter
932-0040 IS-Series C-Clamp
932-0041 IS-Series Point H-Clamp
932-0042 IS-Series Tilt Adaptor
932-0044 IS-Series Sight Mount Link
934-0031 IS-Series Super Sight Mount
934-0032 IS-Series Articulator

ADAMSON SYSTEMS ENGINEERING, Inc.
1401 Scugog Line 6, Port Perry (ON), L9L 1B2, Ontario,
Canada
T: +1 905 982 0520, F: +1 905 982 0609
Email: info@adamsonsystems.com
Website: www.adamsonsystems.com



Table of Contents

1.	Safety & Warnings	3
2.	Product Introduction	4
3.	Wiring	5
4.	Amplification	6
5.	Presets & Control	7
6.	Technical Specifications	8

Safety & Warnings



Read these instructions, keep them available for reference.

This manual can be downloaded from

<https://www.adamsonsystems.com/en/support/downloads-directory/is-series/is7p>



Heed all warnings and follow all instructions.



A qualified technician must be present during the installation and use of this product. This product is capable of producing extremely high sound pressure levels and should be used according to the specified local sound level regulations and good judgement. Adamson Systems Engineering will not be liable for damages caused by any possible misuse of this product.



Servicing is required when the loudspeaker has been damaged in any way, such as when the loudspeaker has been dropped; or when for undetermined reasons the loudspeaker does not operate normally.

Protect the cabling from being walked on or pinched.

Read the appropriate IS-Series Rigging Manual before installing the product.

Pay attention to rigging instructions included in both Blueprint AV™ and the IS-Series Rigging Manual.


Use only with the rigging frames/accessories specified by Adamson, or sold with the loudspeaker system.

This speaker enclosure is capable of creating a strong magnetic field. Please use caution around the enclosure with data storage devices such as hard drives.

In an effort to continuously improve its products, Adamson releases updated accompanying software, presets and standards for its products.
Adamson reserves the right to change the specifications of its products and the content of its documents with no prior notice.



IS7p Ultra Compact Point Source

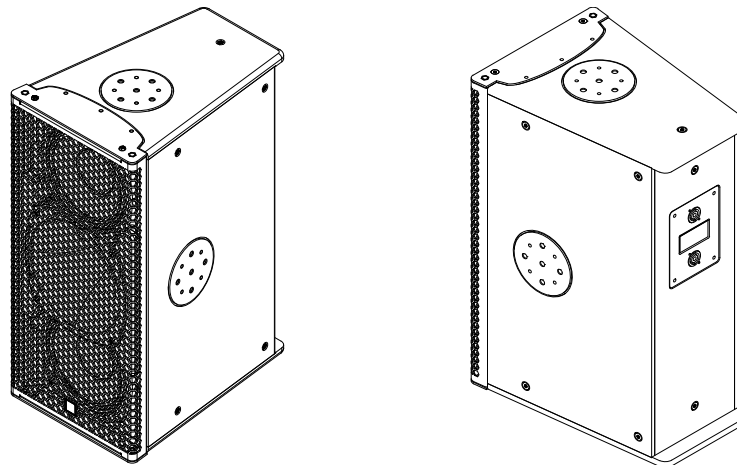


- The IS7p is an ultra-compact point source enclosure. It contains two symmetrically arrayed 7" LF transducers and a 3" HF compression driver mounted on an Adamson waveguide, available in two configurations; with dispersion patterns of either 70° x 40° (HxV) or 100° x 50° (HxV) each rotatable in increments of 90°.
- The operational frequency range of the IS7p is 80Hz to 18kHz. The use of proprietary technologies such as Advanced Cone Architecture allows high maximum SPL of 136.5 dB.
- The enclosure has an unobtrusive visual design which blends seamlessly into the surrounding space, is made of marine grade birch plywood, and has steel rigging discs on the top, bottom, and on each side, to be used with a wide variety of rigging accessories. Without sacrificing low resonance to composite material, the IS7p weighs only 15 kg / 33.1 lbs.
- The IS7p is intended to be used as either a standalone system, or a fill enclosure in tandem with other IS-Series products. The IS7p is designed to pair easily and coherently with all IS-Series subwoofers.
- The IS7p is designed for use with Lab.gruppen's D-Series line of installation amplifiers. The nominal impedance of the IS7p is 8 Ω per band, maximizing amplifier efficiency.




IS7p

Wiring


- The **IS7p** (70x40 - 967-0001/100x50 - 967-0003) comes with 2x Neutrik Speakon™ NL4 connections, wired in parallel.
- The **IS7pb** (70x40 - 967-0002/100x50 967-0005) comes with an external barrier strip.
- Pins 1+/- are connected to the 2x ND7-LM16 MF transducers, wired in parallel.
- Pins 2+/- are connected to the NH3-8 HF transducer.

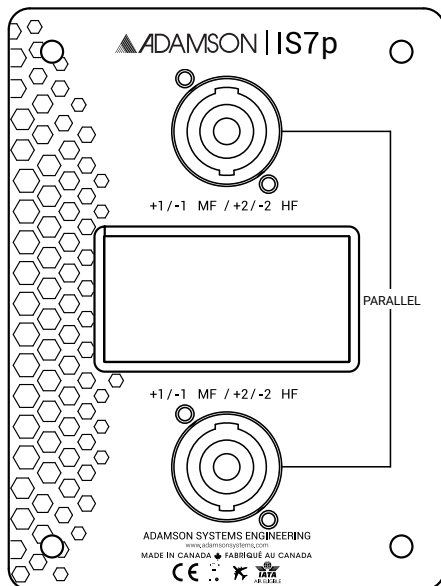

IS7p Jackplate

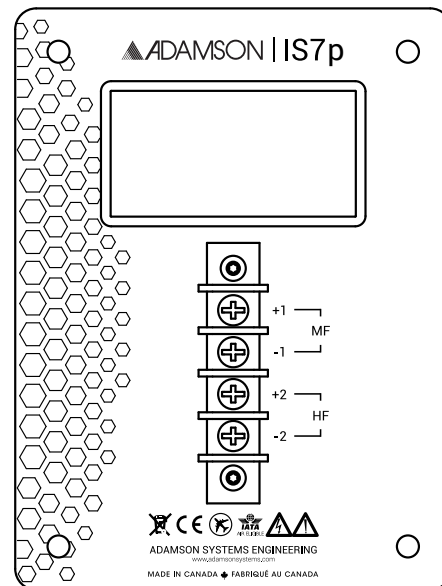

IS7pb Jackplate

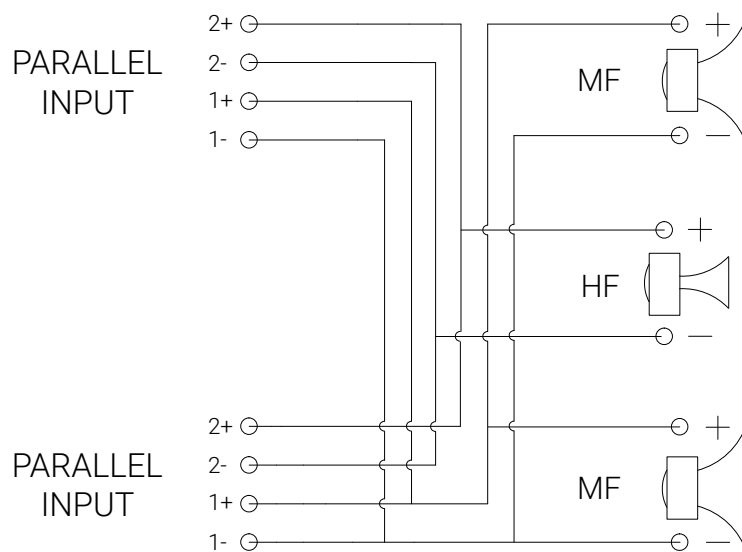

IS7p & IS7pb Internal Wiring (IS7pb only has one input)

IS7p


Amplification

The IS7p is paired with Lab.gruppen **D-Series** amplifiers.

Maximum quantities of the IS7p per amplifier model are shown below.

For a master list, please refer to the Adamson Amplification Chart, found on the Adamson website.

<https://adamsonsystems.com/support/downloads-directory/is-series/is7p/327-max-enclosures-per-amplifier-v5-0-1-7-1-1>

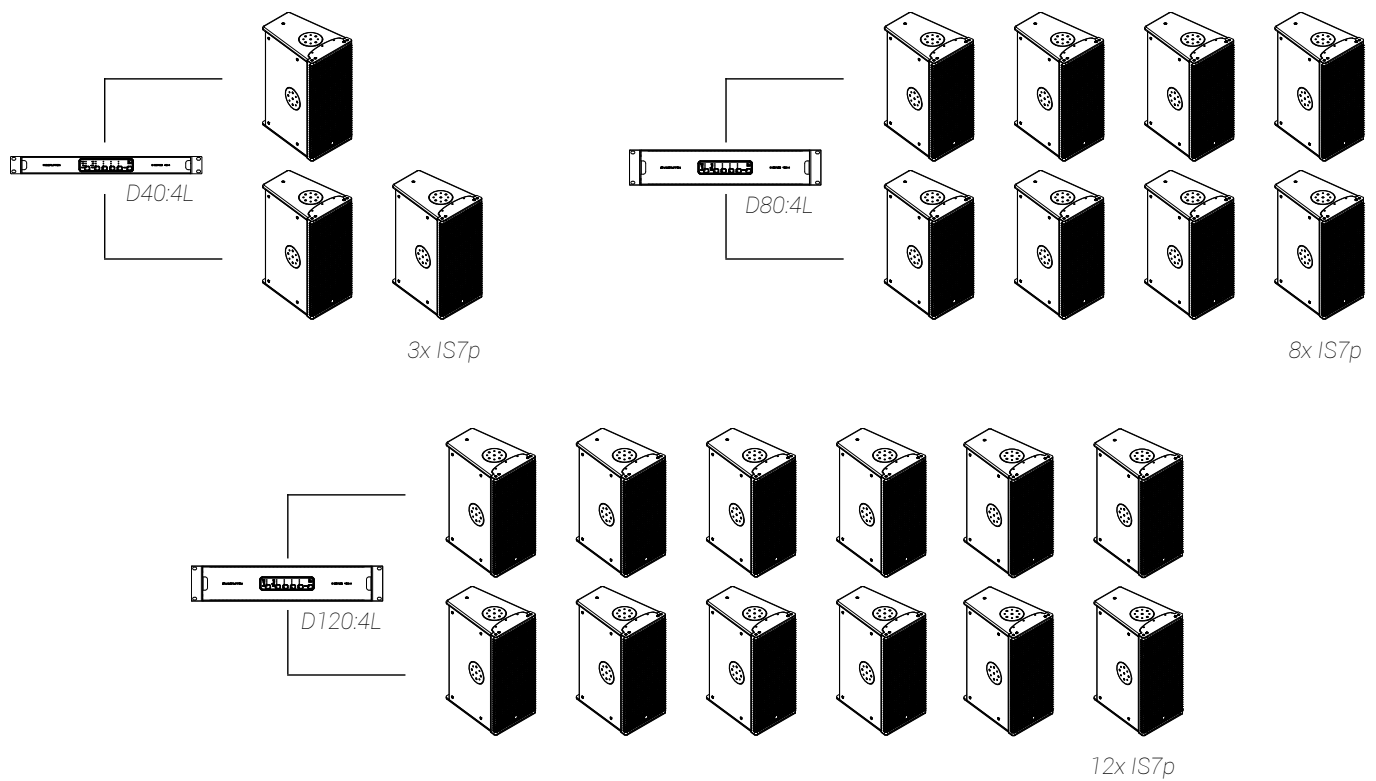

Enclosure	Frequency Band	Output Channel	Cable
IS7p #1	LF	1	#1 (Pin 1, +/-)
	HF	2	#1 (Pin 2, +/-)
IS7p #2	LF	3	#2 (Pin 1, +/-)
	HF	4	#2 (Pin 2, +/-)


The Adamson Load Library, found on the Adamson website, contains presets designed for a variety of IS7p applications. Furthermore, there are presets designed to pair with either Adamson subs, or Adamson Line Arrays. For a master list, please refer the Adamson PLM & Lake Handbook, found on our website.

<https://adamsonsystems.com/support/downloads-directory/design-and-control/e-rack/205-adamson-plm-lake-handbook>


Cabinet Configuration

Applicable Preset

Cabinet Configuration




IS7p FR
Fullrange Mode

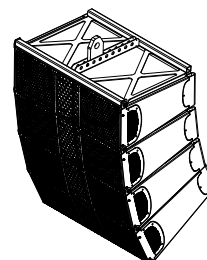


IS7p FR LP
Fullrange Mode

*Linear phase response
matching Adamson Line
Arrays*

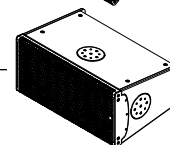





IS7p Xo80
Low Cut at 80 Hz

*Add 5ms of delay for
alignment of IS-Series Subs at
same distance*

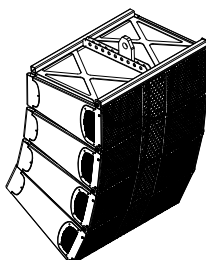


IS7p Xo80 LP
Low Cut at 80 Hz


*Linear phase response
matching Adamson Line Arrays*

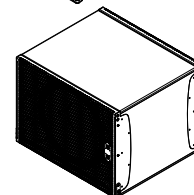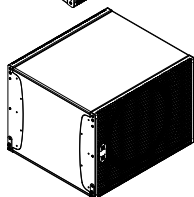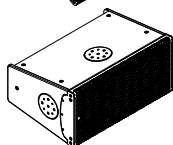

Technical Specifications

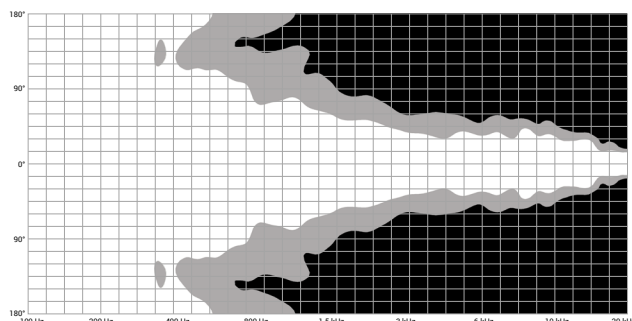

IS7p 70x40 Horizontal Pattern

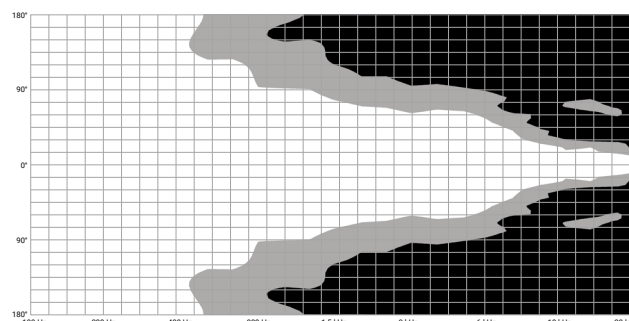

IS7p 100x50 Horizontal Pattern

Frequency Range (-6 dB)	80 Hz - 18 kHz
Nominal Directivity (-6 dB) H x V	70° x 40° / 100° x 50°
Maximum Peak SPL**	136.5
Components LF	2x ND7-LM16 7" Neodymium Driver
Components HF	NH3-8 3" Diaphragm / 1.4" Exit Compression Driver
Nominal Impedance LF	8 Ω (2x 16 Ω)
Nominal Impedance HF	8 Ω
Power Handling (AES / Peak) LF	500 / 2000 W
Power Handling (AES / Peak) HF	110 / 440 W
Rigging	Integrated Rigging System
Connection	2x Speakon™ NL4 or Barrier Strips
Height (mm / in)	527 / 20.75
Width Front (mm / in)	251.5 / 9.9
Width Rear (mm / in)	170 / 6.7
Depth (mm / in)	356 / 14
Weight (kg / lbs)	15 / 33.1
Colour	Black & White (Standard), RAL Colours (On Demand)
Processing	Lake

**12 dB crest factor pink noise at 1m, free field, using specified processing and amplification

