


M-LYNX-702 V.3

Dual 7" LCD Display

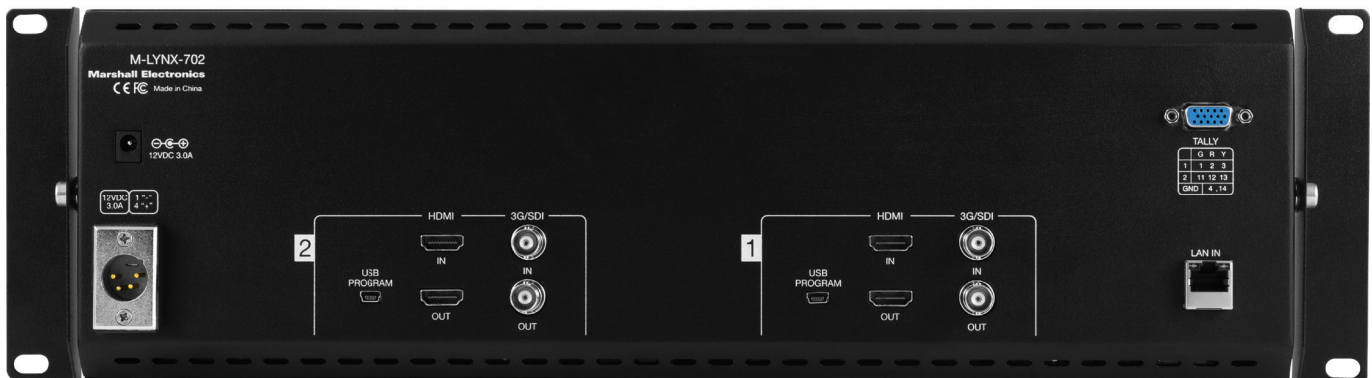

User Manual



Table of Contents

Table of Contents 01

1. Package Includes 02

2. Product Description 02

 2.1 Front Panel 02

 2.2 Rear Panel Connections 03

3. On-Screen Menu 04

 3.1 Main Menu Categories 04

 3.2 Sub-Menu Descriptions 04

 3.2.1 Video 06

 3.2.2 Audio 07

 3.2.3 Setting 07

 3.2.4 OSD (On-Screen Display) 08

4. Dimensions 09

5. Parameters 10

6. Network Controls 11

Warranty End




1. Package Includes

- One M-LYNX-702 Monitor
- One universal AC power adapter
- One AC power cord
- Information card

2. Product Description

2.1 Front Panel

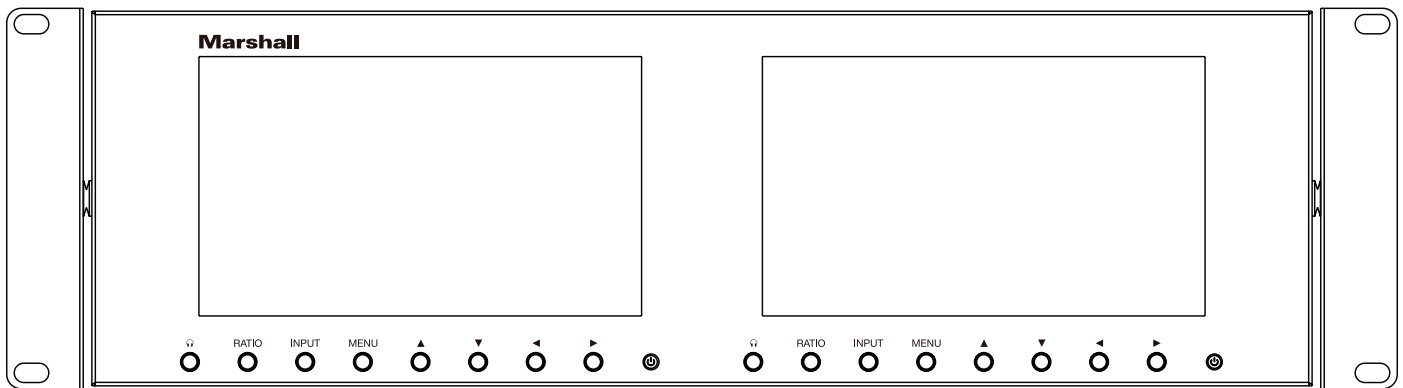

Headphone jack (one per screen). Monitor channels 1 and 2 of embedded audio from HDMI or SDI source.

RATIO: Aspect ratio button provides quick selection of Full Screen, 16:9, and 4:3.

INPUT: HDMI/SDI button switches between HDMI or SDI inputs.

MENU: Accesses the on-screen menus. Press the menu button a second time to clear the screen or wait 10 seconds and it will clear itself.

▲ : Short cut key to change Brightness. When menu is on screen, moves selection up.

▼ : Short cut key to change Contrast. When menu is on screen, moves selection down.

◀ : Short cut key to decrease Volume. Use after ▲ or ▼ short cuts to decrease brightness or contrast.

When menu is on screen, use to change selected parameter.


▶ : Short cut key to increase the Volume. Use after ▲ or ▼ short cuts to increase brightness or contrast.

When menu is on screen, use to change selected parameter.

Power button. Press to turn screen on or off.



2.2 Rear Panel Connections

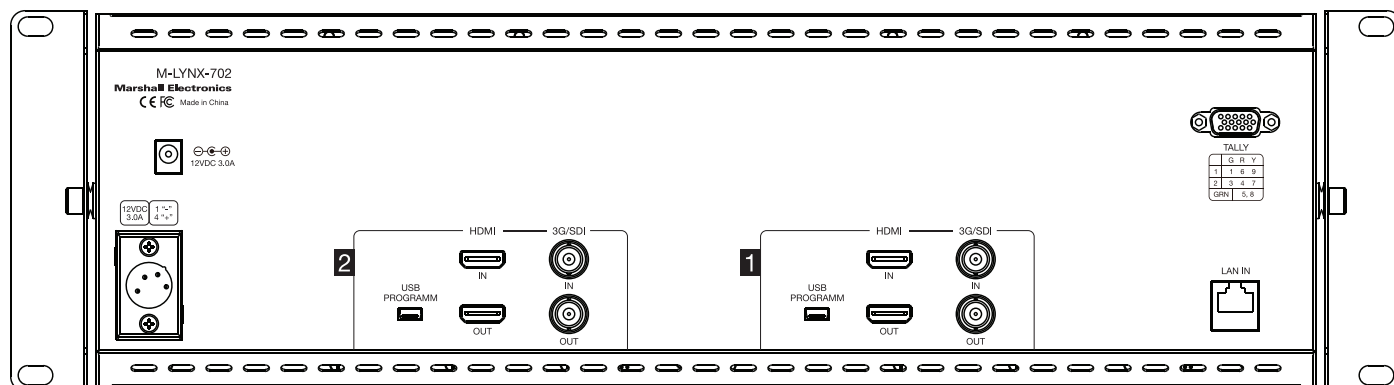

Power Input

The M-LYNX-702 V.3 monitor can be powered using either the included 12-Volt power supply plugged into the small coaxial connector or standard 12-Volt camera-type power supply connected to the 4-pin XLR connector. It is recommended to connect only one type of power supply at one time.

USB Port

The USB port is used for service functions only.

HDMI Input and Loop Out

Connect a standard HDMI source here. For details, see the Compatible Input Formats section below. Active loop out allows “daisy-chaining” to other devices. (Loop out continues to function when the screen is turned off.)

3G/SDI Input and Loop Out

Connect a serial digital source here. It is compatible with SDI, HD SDI, or 3G SDI sources. Active loop out allows “daisy-chaining” to other devices. (Loop out continues to function when the screen is turned off.)

TALLY

The 15-pin D-Sub connector on the back panel is used to control the on-screen colored tally indicators. The Red, Green, or Yellow border color can be turned on by connecting the appropriate pin on this connector to the ground pin via “dry contact” or “open collector” type source. Refer to the table printed next to the connector for wiring information. Note: External power should not be applied to this connector.



LAN Port

Ethernet LAN “RJ-45” Connector. The monitor can be operated from a PC using the application provided with the unit.

3. On Screen Menu

Access the main menu by pressing the Menu button on the front panel.

Use the ▲ / ▼ keys to move within the main menu.

Use the ► key to access a sub-menu.


Once in a sub-menu, use the ▲ / ▼ keys to select an item to adjust and use the ◀ / ▶ keys to change values or choices within their range.

Use the “Menu” key to return to main menu from the sub-menus.

To exit from the on-screen menus, press the “Menu” key again.


3.1 Main Menu Categories

Video – Contrast, Brightness, Saturation, Sharpness, Color Temp., Picture Mode, Aspect Ratio, Check Field (selection of individual color), H/V delay (Only available on SDI signal), Scan Mode.


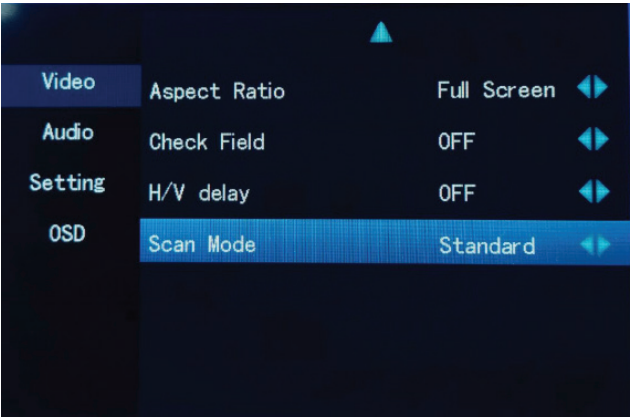


Continued on Next Page


Audio – Volume, Balance.

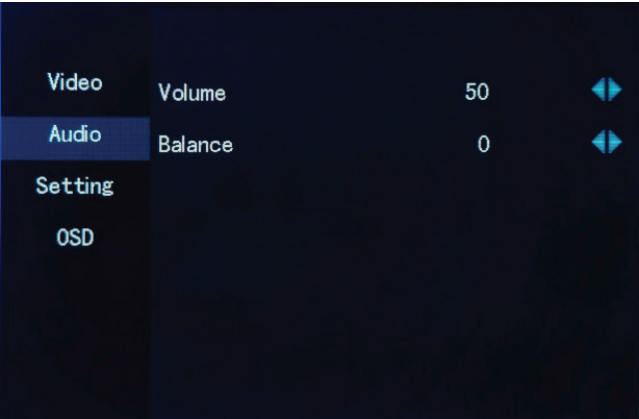

Setting – Screen Markers, Center Marker, Image Flip, Language, Reset, IP, Com, Ver.

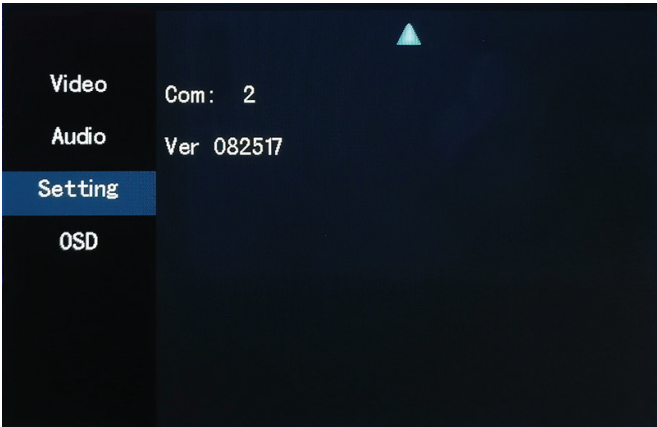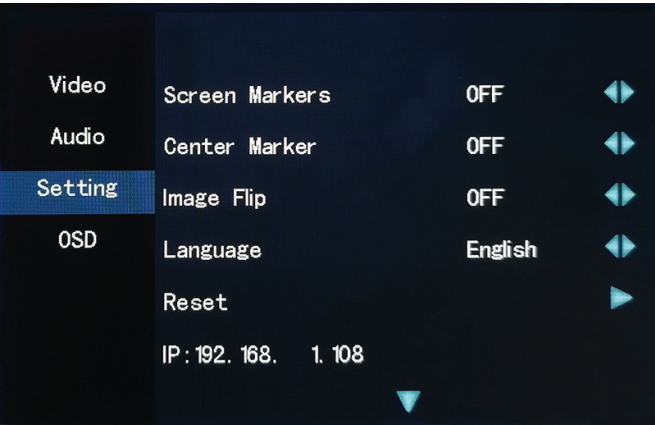

OSD – Setup On-Screen Menu Display. Has selections for Horizontal Position, Vertical Position, Menu Transparency, Menu Timeout, and display of Input Format.

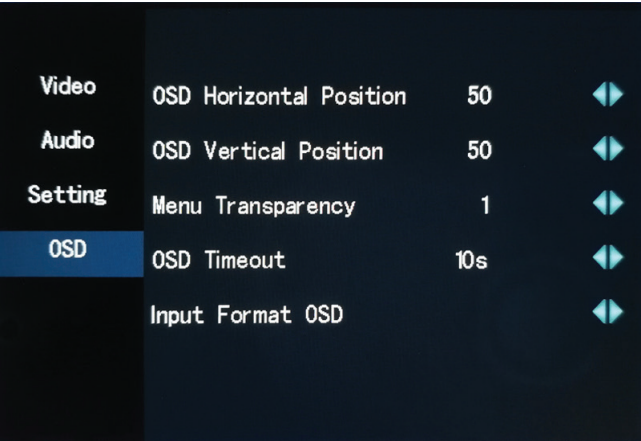

3.2 Sub-Menu Descriptions

The default settings shown are the values the unit comes with “out-of-the-box.” In most cases, these are the mid-range settings for a given function and are not intended to be used as “ideal” values or choices. Best settings will depend on the application.

3.2.1 Video

- | | |
|-------------------|---------------------------|
| Contrast | • (0 – 100, 50 = default) |
| Brightness | • (0 – 100, 50 = default) |
| Saturation | • (0 – 100, 50 = default) |
| Sharpness | • (0 - 100, 0 = default) |

Color Temp (6500K=Default)

- 6500K (approximates REC 709 standards)
- 7300K
- 9300K
- User (0 – 255, 128 = default)
- (Allows fine-tuning display white balance)

Picture Mode

- | | |
|-----------------|--|
| Standard | • Contrast, Brightness and Saturation = 50 |
| Soft | • Contrast = 40, Brightness and Saturation = 45 |
| User | • Returns display to most recent User settings for Contrast, Brightness and Saturation |
| Vivid | • Contrast = 60, Brightness = 55, Saturation = 75 |

Aspect Ratio (Full Screen = Default)

- | | |
|-----------------------|--|
| Full Screen | • Picture is sized to fit the 16:10 display area |
| 4:3 | • Display is set to exact 4:3 aspect ratio |
| 16:9 | • Display is set to exact 16:9 aspect ratio |
| 14:9 | • Display is set to exact 14:9 aspect ratio |
| Zoom1 | • The picture is expanded |
| Zoom2 | • The picture is expanded twice as much as Zoom1 |
| Panorama | • Display is set for 1.85 aspect ratio |
| Pixel to Pixel | • Incoming video pixels are mapped 1:1 to display pixels. This may result in an apparent shrinking or expansion of the image depending on the incoming format. (In other words, the resulting image will appear in native resolution without scaling.) |



Check Field (Off = Default)

- | | |
|-------|--|
| Off | • Default |
| Mono | • Picture will be displayed as black & white, all other color information is removed |
| Red | • Only red color information is displayed |
| Green | • Only green color information is displayed |
| Blue | • Only blue color information is displayed |

H/V Delay (Only available on SDI signal. Off = Default)

- Off
- H/V delay
- V delay
- H delay

Scan Mode

- | | |
|------------------|-------------------------|
| Standard | • Normal picture size |
| Overscan | • Expands picture by 5% |
| Underscan | • Shrinks picture by 5% |

3.2.2 Audio

Volume (0 – 100, 50 = default)

- Increase or decrease headphone volume

Balance (-10 - +10, 0 = default)

- Increase or decrease headphone volume

3.2.3 Setting

Screen Markers (OFF = Default)

Set size of reference frame mark to show area of interest.

- OFF
- 96%
- 93%
- 90%
- 85%
- 80%



Center Marker (OFF = Default)

Displays a red “+” mark on the screen to indicate the center position

- OFF
- ON

Image Flip (OFF = Default)

- OFF
- V - Flips the image vertically
- H - Flips the image horizontally
- V/H - Simultaneously flips the image vertically and horizontally

Language (English = Default)

Select language used for the on-screen menus

- English
- Español

Reset

Selecting Reset will produce this message: Reset function values?: Yes / No

Press ◀ / ▶ keys to select “Yes” or “No” and press the front panel “MENU” key to confirm the selection. Selecting “Yes” will reset the monitor back to factory default values and choices.

IP: 0. 0. 0. 0

Displays the monitor default IP address: 192. 168. 0. 8 when monitor is not connected to network. Displays IP address assigned by DHCP enabled server or router when monitor is connected to network.

Com: 1 or 2

“Com: 1” is screen 1, “Com: 2” is screen 2.

Ver: Firmware version.

3.2.4 OSD (On-Screen Display)

OSD Horizontal Position (0 – 100, 50 = default)

OSD Vertical Position (0 – 100, 50 = default)


Menu Transparency (0 – 10, 1 = default)

OSD Timeout (5s / 10s / 15s / 60s, 10s = default)

- Moves Menu Display Horizontally
- Moves Menu Display Vertically
- Darken or Lighten the background behind the menus
- The input video format will be displayed for the selected number of seconds whenever the input source is changed



4. Dimensions (mm)

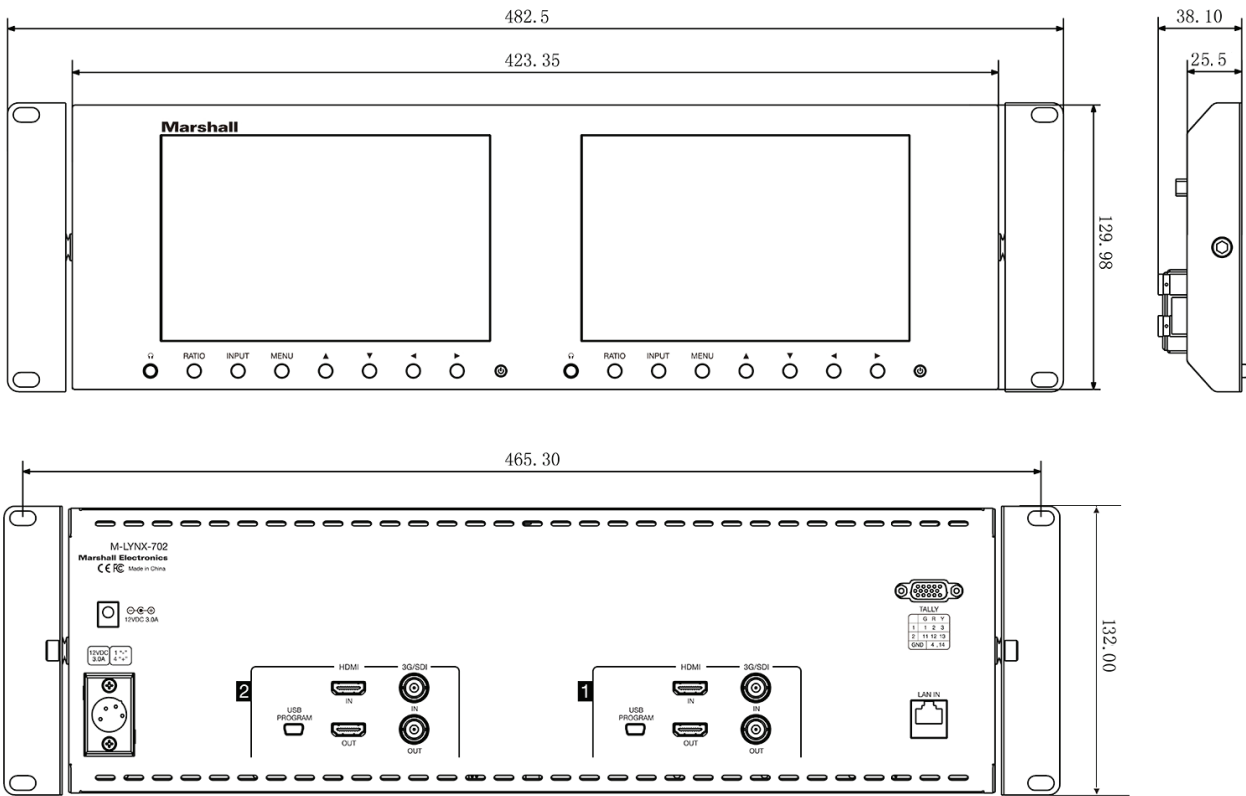

Continued on Next Page



5. Parameters

Screen	7" screen x 2
Screen Resolution	1280 x 800
Dot pitch	0.117 (H) x 0.117 (V)
Ratio	16:10
Brightness	400 cd/m2
Contrast	800:1
Response Time	14ms
Back light	LED
View angle	89°/89°, 89°/89° (L/R,U/D)
Input	HDMI-IN, SDI-IN per screen
Output	HDMI-OUT, SDI-OUT per screen
Control	Ethernet
SDI input formats	SD: 480i 59.94 / 576i 50
	HD: 720p 25, 29.97, 30, 50, 59.94, 60 / 1080p 23.98, 23.98sF, 24, 24sF, 25, 29.97, 30/ 1080i 50, 59.94, 60
	3G-Level A: 1080p 50, 59.94, 60
HDMI input formats	SD: 480i 59.94/ 480p 59.94/ 576i 50/ 576p 50
	HD: 720p 25, 29.97, 30, 50, 59.94, 60
	1080i 50, 59.94, 60
	1080p 23.98, 23.98sF, 24, 24sF, 25, 29.97, 30, 50, 59.94, 60
Power consumption	< 24W
Voltage	11 – 17 VDC
Operating current	1.61A
Work temperature	0° ~ 35°C / 32°F ~ 95°F
Store temperature	~10°C ~ 50°C / ~14°F ~ 122°F
Size	482.50 x 132.00 x 25.50 mm / 19" x 5.2" x 1"
Weight	1.85 kg / 4 lbs

Continued on Next Page



6. Network Control


Please download related Windows application from the Marshall website at:
<http://www.lcdracks.com/monitors/LYNX/M-LYNX-702.php>

1. On the monitor, select Menu/Setting and read the IP address.

Note: It is best to connect to the network first then connect power supply. In this way, the monitor will correctly display the IP information. (See Menu/Setting screen below.)



- Open the application you have downloaded, Then, Input: User / Password, Click Log In.

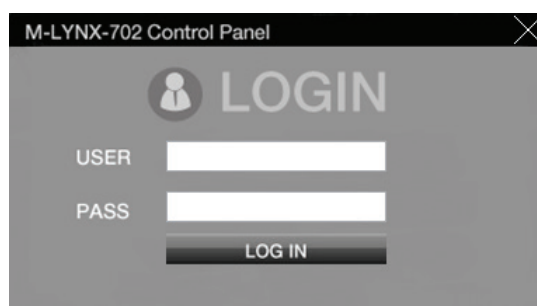


PLEASE NOTE:

The default username is: **marshall**


The default password is: **1**




- After login, Click: Add monitors.

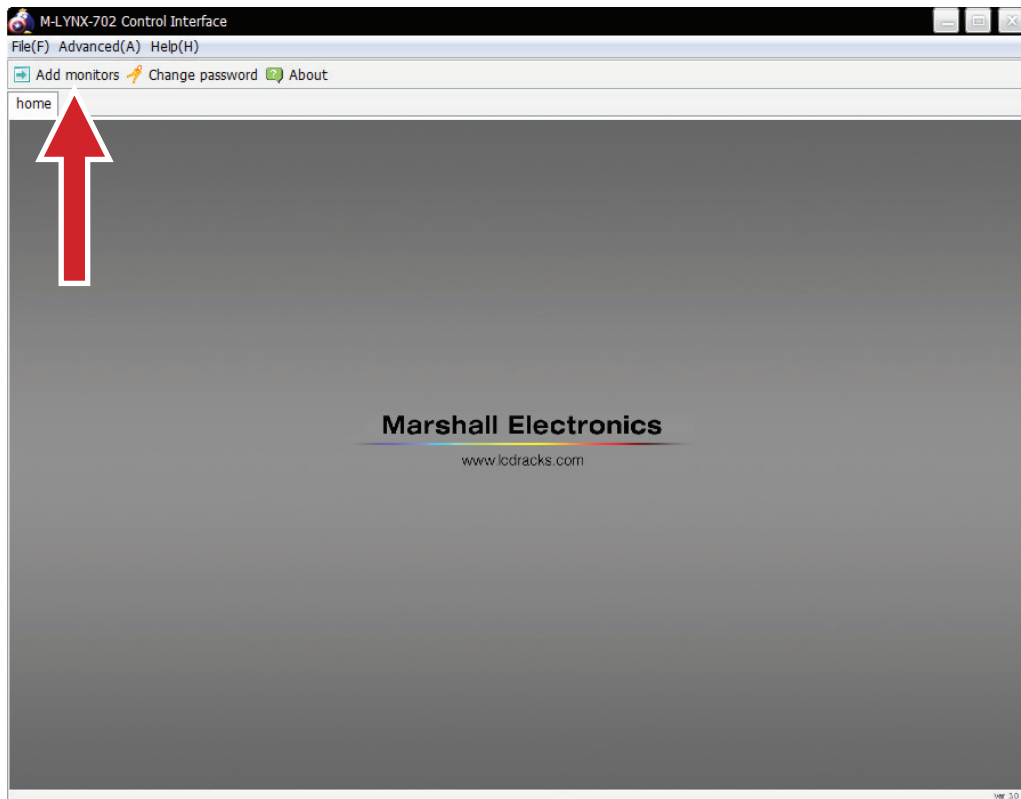


2. Input IP address shown in the monitor Menu under “Setting” option, then click connect.

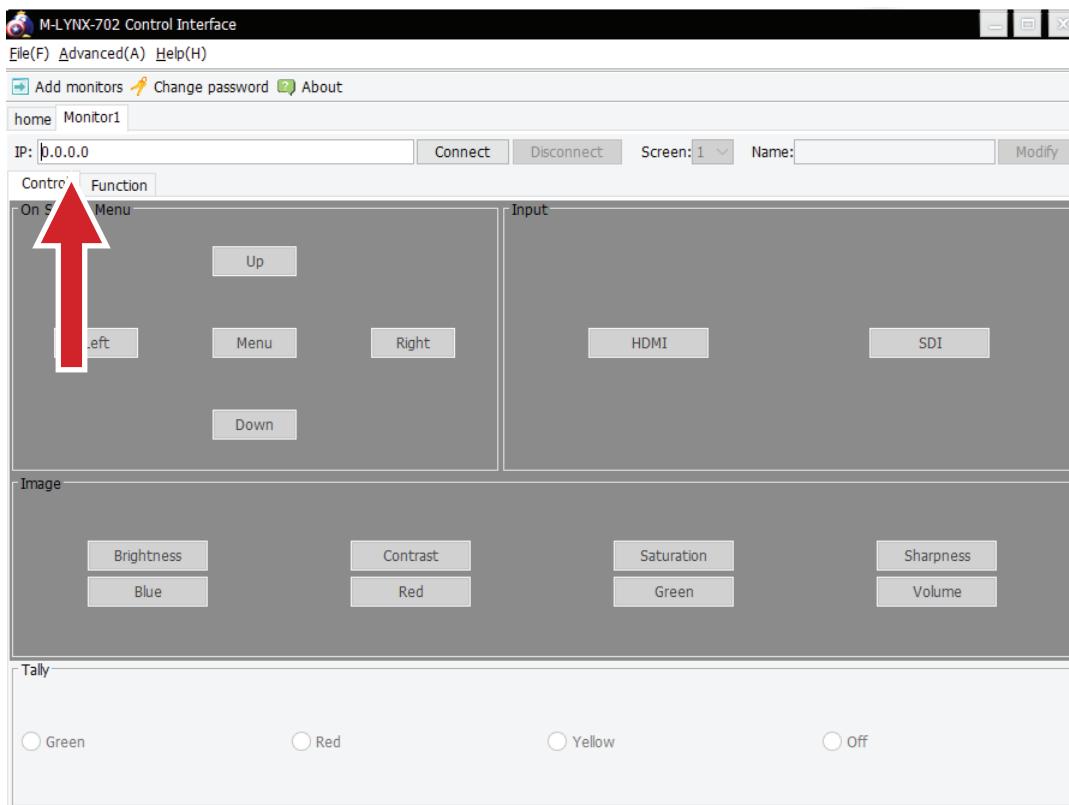

- Select Screen 1 (left) or Screen 2 (right).

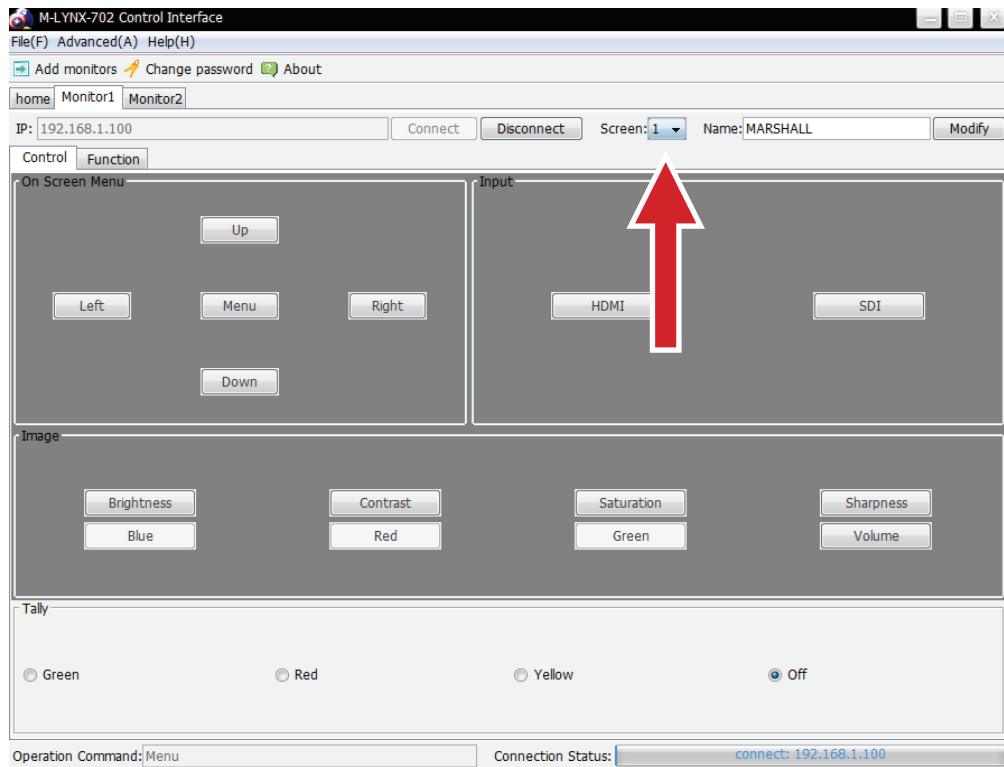

- Then, select Control to operate basic menu settings.

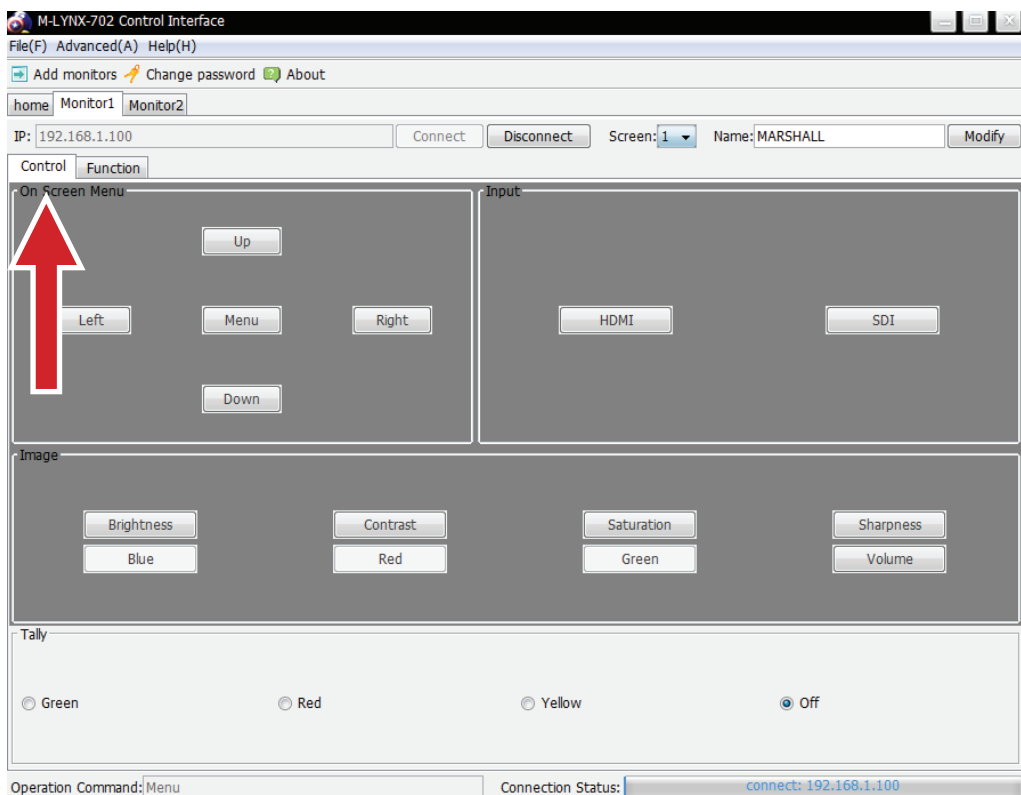

- Or, select Function then click on the desired choices. The monitor will immediately respond.

M-LYNX-702 Control Interface

File(F) Advanced(A) Help(H)

Add monitors Change password About

home Monitor1

IP: 10.0.0.0 Connect Disconnect Screen: 1 Name: Modify

Control Function

Color Temp

☐ User ☐ 6500K ☐ 7300K ☐ 9300K

Pic.Mode

☐ User ☐ Vivid ☐ Standard ☐ Soft

Center Marker

☐ On ☐ Off

Image

☐ H Flip ☐ V Flip ☐ Off

Check Field

☐ Red ☐ Green ☐ Blue ☐ Mono ☐ Off

Aspect Ratio

☐ Full ☐ 4:3 ☐ 16:9 ☐ 14:9 ☐ Zoom1 ☐ Zoom2 ☐ Panorama ☐ Pixel to Pixel

ScanMode

☐ Standard ☐ OverScan ☐ UnderScan

H_Vdelay

☐ Off ☐ H/V ☐ V ☐ H

Screen Markers

☐ 80% ☐ 85% ☐ 90% ☐ 93% ☐ 96% ☐ Off

Language

☐ English ☐ Espanol

Warranty

Marshall Electronics warrants to the first consumer that this device will, under normal use, be free from defects in workmanship and materials, when received in its original container, for a period of two years from the purchase date. This warranty is extended to the first consumer only, and proof of purchase is necessary to honor the warranty. If there is no proof of purchase provided with a warranty claim, Marshall Electronics reserves the right not to honor the warranty set forth above. Therefore, labor and parts may be charged to the consumer. This warranty does not apply to the product exterior or cosmetics. Misuse, abnormal handling, alterations or modifications in design or construction void this warranty. No sales personnel of the seller or any other person is authorized to make any warranties other than those described above, or to extend the duration of any warranties on behalf of Marshall Electronics, beyond the time period described above.

Due to constant effort to improve products and product features, specifications may change without notice.

Marshall

20608 Madrona Avenue, Torrance, CA 90503

Tel: (800) 800-6608 / (310) 333-0606 • Fax: 310-333-0688

www.marshall-usa.com

support@marshall-usa.com

