



2.4GHz Digital Wireless 7" LCD Surveillance Kit



User Manual

QC-3762





Box Contents:



1 x 7" LCD Monitor



1 x Wireless Camera



2 x Mains Power Adaptors



1 x Camera Antenna



1 x Mounting Hardware

Product Diagram:

7" LCD Monitor:



No.	Description
1	7" LCD Touch Screen
2	Wireless Antenna
3	Microphone





No.	Description
4	Power/Scan Button
5	Volume Up
6	Volume Down
7	Talk Button
8	SD Card Slot
9	Speaker
10	Power Socket
11	LED Status Indicator
12	Folding Stand



Wireless Camera:



No.	Description
1	Weather Shield
2	Camera Lens
3	Wireless Antenna
4	IR LEDs
5	Microphone
6	Motion Detector (PIR)
7	Speaker



Installation & Setup:

Monitor:

1. Pull out the folding stand to position the monitor securely.
2. Position the antenna located at the top of the monitor to an upright position.
3. Connect the 5VDC, 2A mains power adaptor to a 240VAC standard power outlet, and the DC plug in to the power socket of the monitor.
4. Press and hold the power/scan button located on the top of the monitor for 3-4 seconds for the unit to power up.
5. The monitor will display the TECHview startup screen for a few seconds and will transition to live view.

Please Note: The screen will remain dark until the cameras are powered up.

Camera:

1. Position the camera securely in place, it is best to have the monitor located near the camera temporarily so you can see the exact position of the camera.
2. Once you have camera in the correct position, mark the location of the screw holes.
3. An extra hole may need to be placed for the power cable to run depending on your installation.
4. Fix the included screws and anchors to attach the camera to the wall or ceiling.
5. Attach the wireless antenna to the rear antenna socket and screw in tightly.
6. Connect the 9VDC, 600mA mains power adaptor to a 240VAC standard power outlet, and the DC plug in to the power socket of the camera.
7. Once the camera and monitor are powered on, the unit now should be displaying the camera footage.


Please Note: Please install the camera in an undercover area if place outside as the unit is weatherproof only.



Operation:

Viewing Modes:


The live view area displays the live video stream from the cameras, each camera will display its own section of the quad view or can be viewed individually. There are 4 viewing modes That can be displayed as shown below:

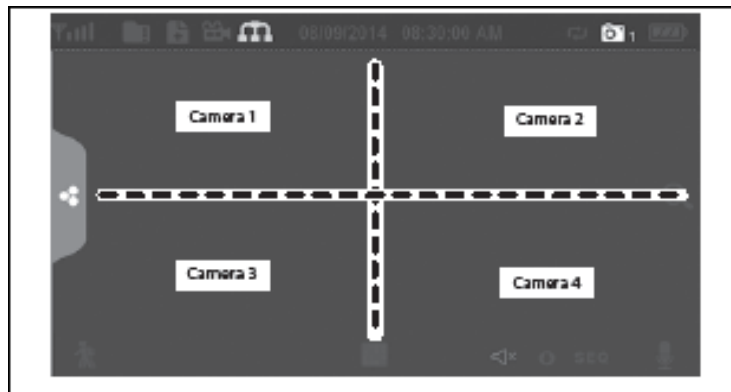

- **Quad View:** This splits the screen's image area into 4 quadrants and displays the active camera in each quadrant. Press the center of the individual quadrant to enter single viewing mode.
- **Single View:** This mode displays one camera at a time on full screen. Press the  button to change between the channels. Tap the center of the image to return to quad viewing mode
- **Scan Mode:** The monitor's screen and speakers will remain off until a camera detects motion. The camera will then display at full screen (sound and video on) until there has been no motion for 15 seconds. After that, the monitor screen will turn off again. Press and release the power/scan button to turn scan mode on.
- **Auto Sequence:** Displays each channel automatically in sequence in full screen display. The system defaults to auto sequence mode when scan mode is turned off. Press the SEQ button to turn auto sequence mode off and return to quad viewing mode.

Live Screen Diagram:

Different icons are displayed on the monitor screen depending on what is going on with your cameras. This image shown below is an example of what could be on your screen (the video image is removed to make it easier to see the icons). Please see the icons and descriptions listed below:

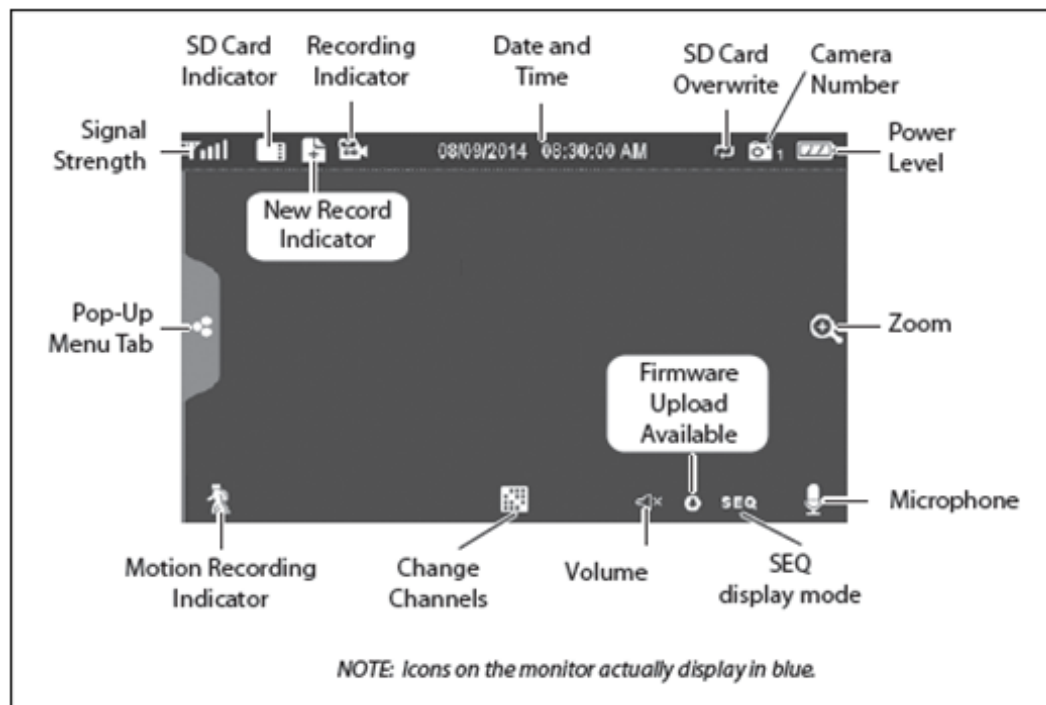


Icon	Description
Signal Indicator 	Shows how strong the camera's signal is. Signal ranges from 4 bars down to 0 bars (out of range).
SD Card 	This graphic displays if an SD card is inserted into the monitor. If the icon is blue, recording space is available. If the icon is red, the SD card is full. Tap this icon to view recorded files.
New Recording Indicator 	New recordings have been saved on the SD card.
Recording Indicator 	When this icon flashes red, it indicates that recording is in progress.

Time Stamp	Current date/time is displayed in day/month/year, second/minute/hour format.
SD Card Overwrite 	Displays if the SD card is allowed to overwrite files when it is full.
Channel Indicator 	Displays the current channel number you are currently viewing. If viewing multiple cameras at once, the camera indicator will appear above each video display.
Battery Indicator 	Indicates the LCD monitor's battery life: Flashing Red - Low battery Green - Full battery Flashing Green - Charging
Zoom Indicator 	When you tap this icon on the screen, the monitor breaks the screen image into 5 areas. Tap the area you want to see zoomed in. That area displays in 2X size. Tap the icon again to exit zoom mode.
Volume Indicator 	Indicates the current audio volume. You must be in single channel viewing mode to change volume. Tap + or - to raise or lower the volume.  will display when the volume is off (muted).
Talk Back Indicator 	Displays when the TALK button is pressed. Press and hold the TALK button on the side of the monitor to talk back through the camera. Release the TALK button to wait for a reply.
Sequence Indicator 	Displays when the monitor is in auto sequence mode; it will change channels automatically.
Change Channel 	Press this icon to manually change channels.
Motion Recording Indicator 	Indicates motion detection status. Blue - Automatic recording OFF. Red - Automatic recording ON.
Pop Up Menu Tab 	Press to access the pop up menu system.

Pop Up Menu Tab:


This pop up menu tab will display settings for playback recorded files, set alarms, change the brightness and general settings. To enter this menu, press the  pop up menu tab as shown below:

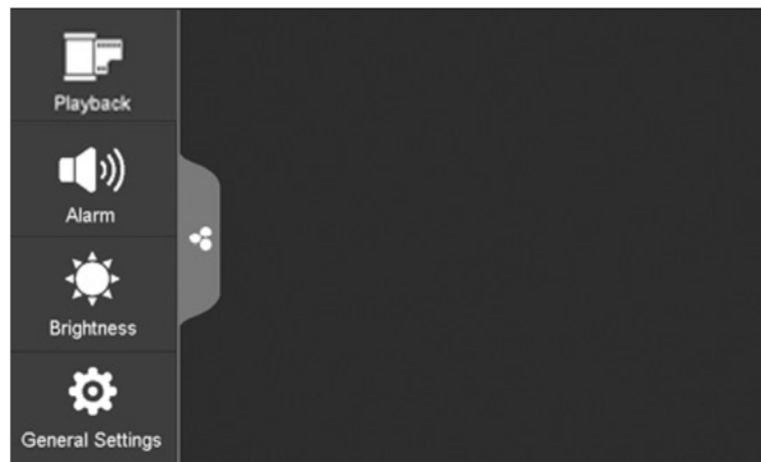


Playback:

You can manage recorded files within this screen. You can see what recorded files you have, play or delete them.


1. Press the  playback icon which is as shown below:

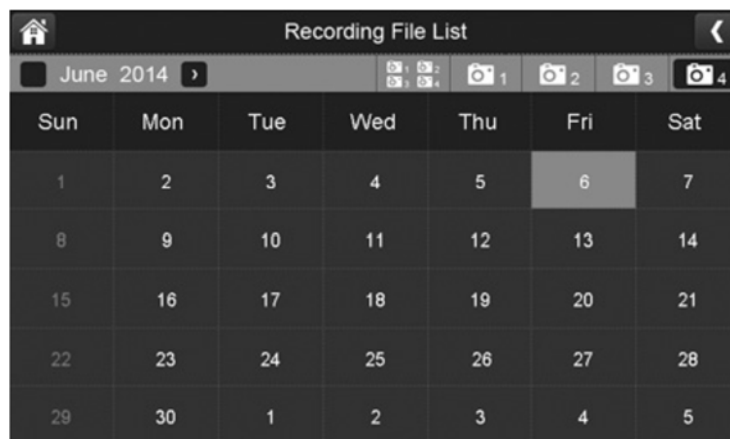

2. Days that are highlighted have recorded files. Press the day you want to review and a list of recordings for that day will be displayed as shown below.

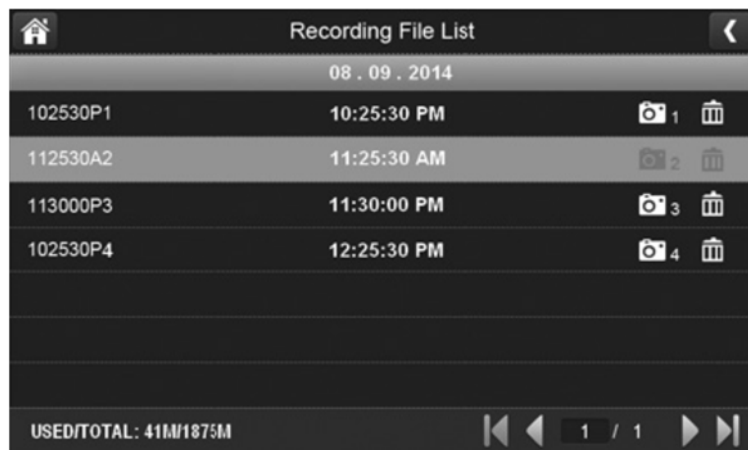

- Press the recorded file you want and it will start playing, with a bar across the bottom of the screen for control.

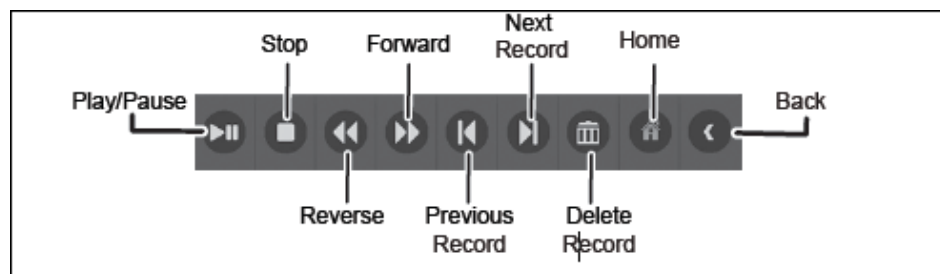

- When the file is finished playing, the monitor will display the recorded file list again.
- Press the  recycle icon to delete the recorded file.

Alarm:

When the motion sensor is triggered, the camera will begin to record. The monitor will sound with an alarm tone. This screen lets you determine how loud the alarm will be.

- Press the  alarm icon which is as shown below:




Press + or – to increase or decrease the alarm volume. Press the  pop up menu tab to return to the previous menu.

Brightness:

This allows you to set each camera's brightness level.

1. Press the  brightness icon which is as shown below:

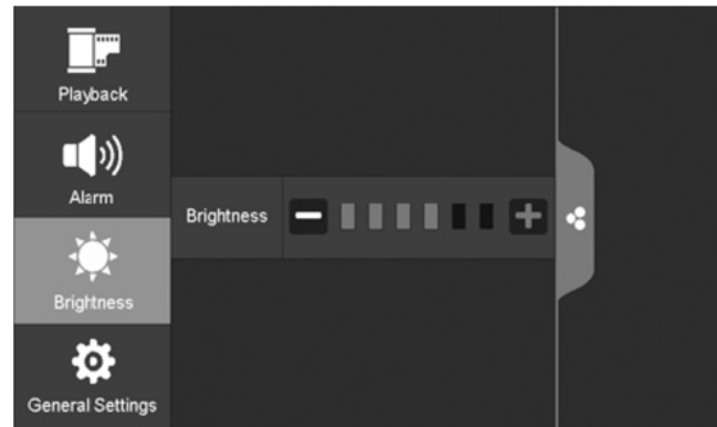


2. Press + or – to increase or decrease the monitor's screen brightness. Press the  pop up menu tab to return to the previous menu.

General Settings:


The general settings tab will display camera setup, recording setup, system settings, motion detection settings, network setup and firmware upgrade which is shown below:

Please Note: This model does not support network function.

Tap the following icons as they appear on the screens:

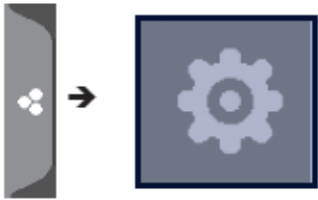

This screen should display:

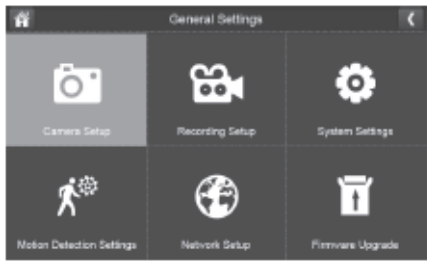


Main Screen	Sub-Screen	Description
Camera Setup	Paring	This system comes with cameras already paired. Use Pairing to assign these cameras to different channels or to pair additional new cameras to the monitor.
	ON/OFF	Makes the cameras visible to the monitor.
	Resolution	Adjusts the video quality of each camera.
Recording Setup	Duration	Set the length of time the camera records once motion sensitivity triggers the camera to record. The options are 15 seconds (Default), 30 seconds, or 1 minute.
	Scheduled Recording	Set up a schedule for pre-determined recording times and lengths.
	File Overwrite	Overwrites the oldest recorded data on the SD card once the card is full.
System Settings	Date & Time	•Time Setting: Set the current time (including daylight savings Time). •Time Zone: Set the time zone for your system.
	Time Zone	•Set the time zone for your system. •Enable/Disable Daylight Savings Time.
	Language	Changes languages setting for the monitor (English, French or Spanish)
	Default Settings	Restores the system to default settings.
	Format SD Card	Reformats the SD card and deletes all existing data.
	Information	Displays the current firmware information for the monitor and each camera.
Motion Detection Settings	A single screen lets you set motion detection sensitivity for each camera. It also lets you determine which viewing areas for each camera should be masked from motion detection.	
Firmware Upgrade	Let's you select to upgrade your firmware if neccesary (from SD card).	



Camera Setup:

This allows you to pair existing or additional cameras, turn the cameras on or off and adjust the resolution as shown below:

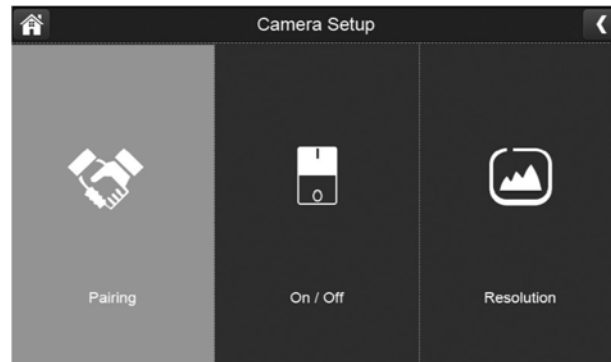


Pairing:

Your camera is already pre-paired to the monitor on channel 1. When you add a new camera to your system, you have to "pair" the camera and monitor to each other so they can communicate. You can also use pairing to change one camera to a different channel if required.

Please Note: If the camera is already assigned to the selected channel, pairing on the same channel will overwrite the current camera with the new one.

Please only pair one camera at a time otherwise the cameras may interfere if multiple is pairing at once.

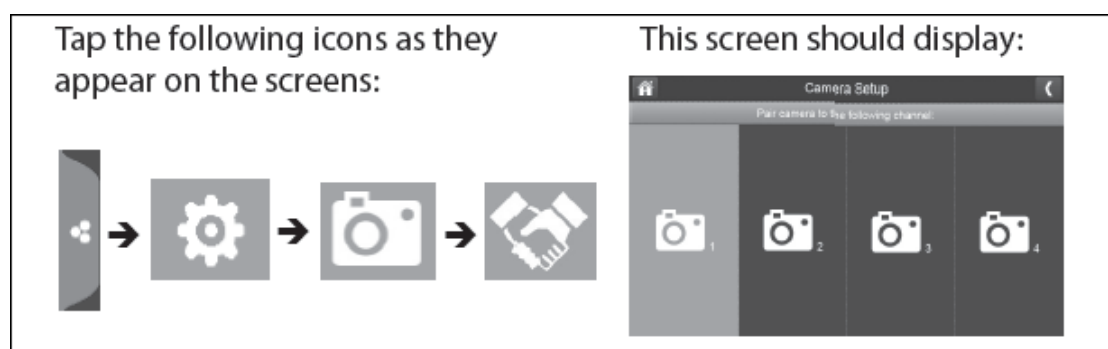


1. Press the pairing button on the camera setup screen.
2. Select the channel number you want to pair the camera to.
3. A message will be displayed with instructions to press the pair button on the camera. Press and release the pair button located at the rear of the camera. A 30-second countdown will begin.
Please Note: You must press the pair button on the camera during the 30-second countdown otherwise the camera will not pair with the monitor
4. The system will display live video 3 seconds after the camera has successfully paired.



On/Off:

When you add a camera to your system, pair up the camera with the monitor and the system will automatically turn it on.

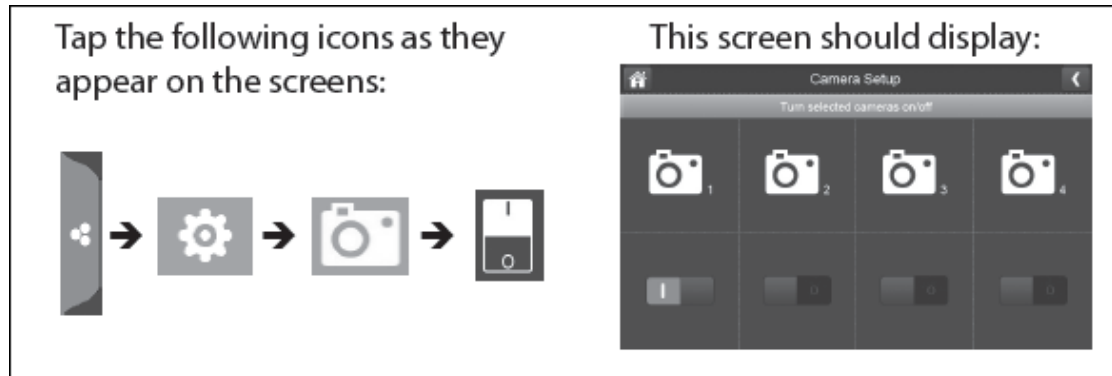

1. Press the switch bar under the camera you want to turn on or off.
2. The switch bar indicator will turn green when the camera is on. It will be greyed out when the camera is off.


Please Note: Although the camera is turned off, it is still powered on. The monitor will not receive video signals from that camera.

3. Press the  left arrow to return to the previous menu.

Resolution:

You can adjust the resolution between high and a low frame rate for each camera.


Please Note: When you only have 2 cameras paired it will record at 25fps however if you have 4 cameras then it will record and display at 15fps.

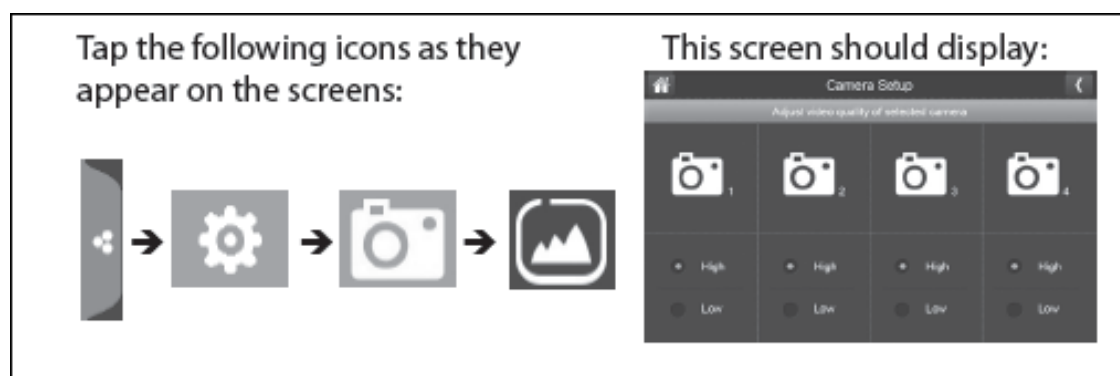

1. Press the high or low option to set the frame rate for each camera.
2. Press the  left arrow to return to the previous menu.


Recording Setup:

This allows you to set the length of time the system will automatically record when the motion trigger records, schedule a set time for recording for set up file overwrite.

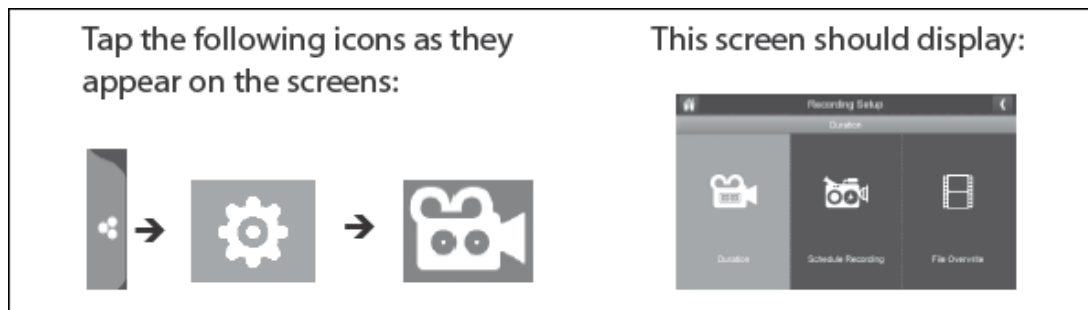

Duration:

You can set how long the camera keeps recording after motion detection is triggered. The options are 15 seconds (Default), 30 seconds, or 1 minute.

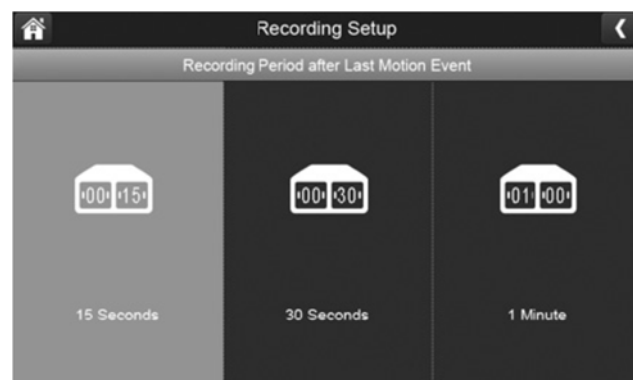

1. Press which duration you wish to set which is either 15, 30 seconds or 1 minute.
2. Press the  left arrow to return to the previous menu.


Scheduled Recording:

This feature lets you set up a block of time for a camera to record on a weekly schedule. You can set up multiple cameras to record at the same time and the recording times can overlap between cameras.

Please Note: Total recording time is limited to the space available on the SD card. If you set the SD card to delete the oldest files when it is full, the system continues recording; otherwise, recording stops until space is available.



1. Press the  scheduled recording icon and the overview will display as shown below:
2. Press the modify button in the lower right corner to display the scheduled recording setup screen.

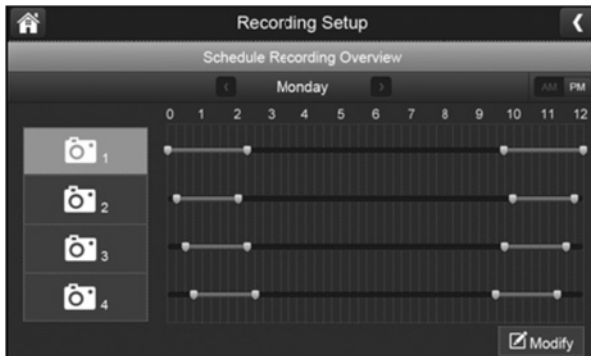


3. Select the camera you wish to setup scheduled recording for, if you want more than one camera to record at the same time then select multiple cameras.
4. Set the recording start time.
 - Press the AM/PM block to toggle between them.
 - Press the hour and number boxes separately and tap the up and down arrows to set the time in HH:MM format.
5. Press the save button, the system will return to the scheduled recording overview screen with the recording period indicated.
6. Press the modify button again to set up another recording session to schedule.

Please Note: Scheduled recordings are broken up into 10 minute file sizes. For example, if you record a 25 minute event, you will have two 10 minute recordings plus one 5 minute recording.

File Overwrite:

This feature lets you set the system to automatically overwrite the oldest files once the SD card is full. This will allow you to continue recording. If you do not allow overwrite then the recording will stop once the SD card is full.


1. Press  the file overwrite button to access this function. Press either yes or no to activate this function.

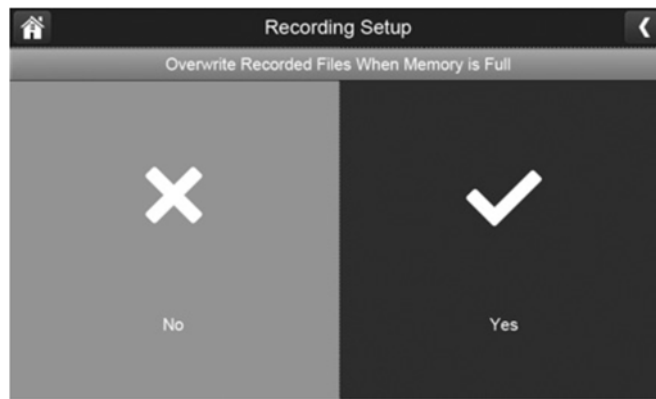

2. Press the  left arrow to return to the previous menu.


System Settings:

You can use these settings to change the date, time, time zone, language, reset to default, format memory card and information as shown below:

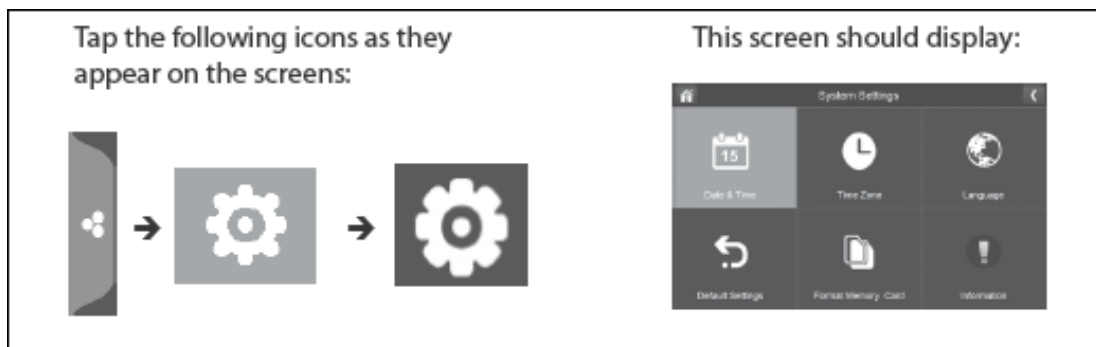

Date & Time:

1. Press the  date & time icon to access the date & time menu.

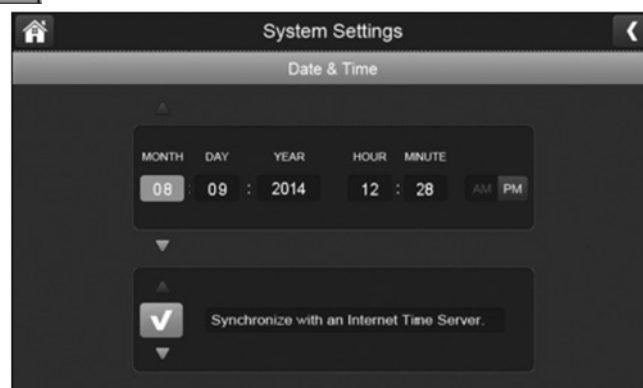


2. Press the up or down arrow to set the month, day, and date.

3. Press the up or down arrow to set the time.
 - Press the AM/PM block to toggle between them.
 - Press the up or down arrows to set the correct hour and minute.
4. Press the  left arrow to return to the previous menu.

Time Zone:

Time Zone allows you to set the time zone your monitor is in. Your system will know that your request refers to the time zone the monitor is in. The default is GMT + 10 (NSW, ACT); if you are in a different state in Australia or New Zealand then please change the time zone accordingly.


1. Press  the time zone button to access the setting as shown below:

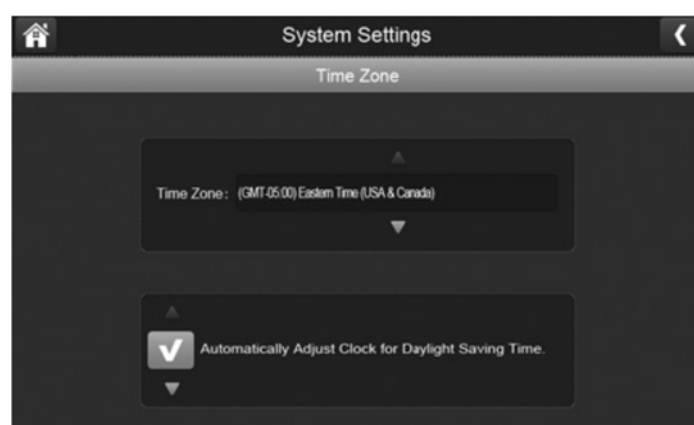

2. Scroll up and down to find your camera's time zone and then select it.
3. Press the next option to turn daylight savings time on or off.
4. Press the  left arrow to return to the previous menu.

Language:

Press the  language button to set the language on your system. The default is English however you have the option to also set to Spanish or French.

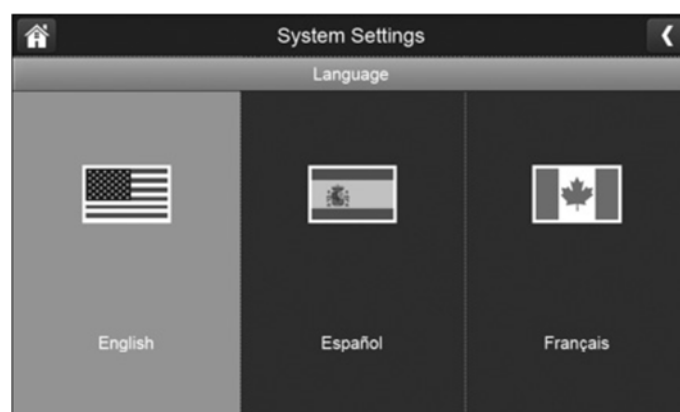


1. Select the language you want your system to use.
2. Press the  left arrow to return to the previous menu and will automatically change over to the selected language.

Please Note: Restart is not necessary once you change the language.

Default Reset Settings:

1. Press the  default settings button to reset to original factory default settings.

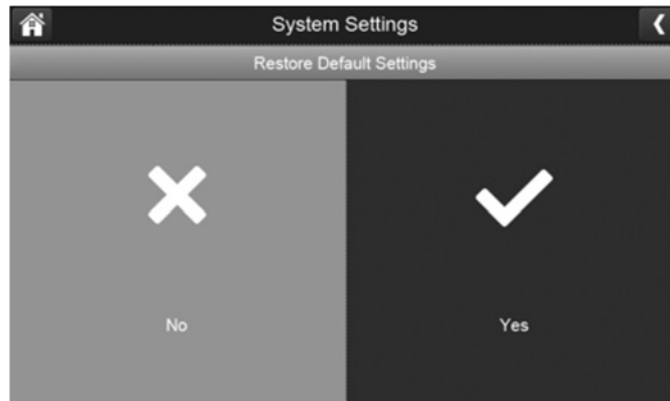


2. Select yes to restore to original factory default settings.
3. Press ok to confirm resetting the unit.

Format SD Card:


Formatting the SD card erases all the data stored on the card. (Default is set to No)

1. Press the  button to reformat your SD card.

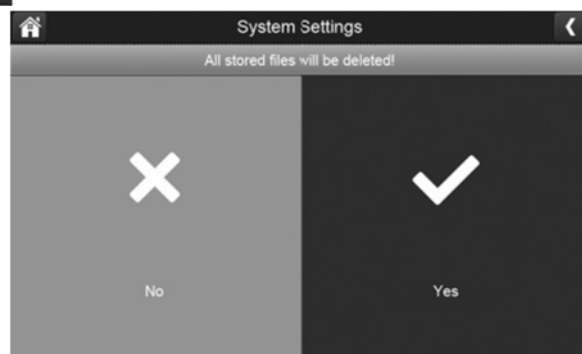

2. Press yes to format your SD card.
Please Note: All your existing files will be deleted if you select yes.
3. Press yes to confirm that you want to format the SD card.



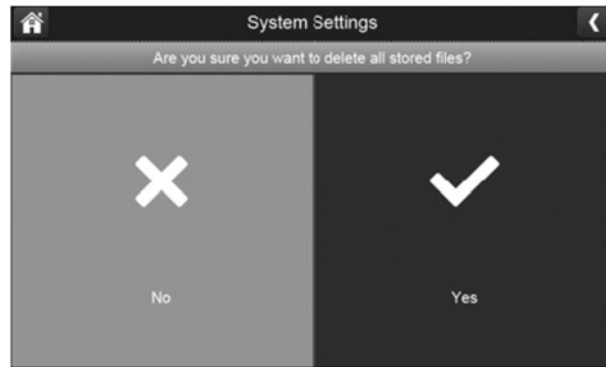

4. A progress bar will be displayed on the screen. After formatting is complete format ok message will display.

Information:

This screen lists the firmware information of the monitor and all cameras paired to it.

1. Press the  information button to display this screen.



2. Press the  left arrow to return to the previous menu.

Motion Detection:

You are able to control how sensitive the motion detection is triggered and mask off any areas for the camera to ignore. For example, you may have trees located in your image that would set off the motion detection if there is wind so you are able to block them out.

Tap the following icons as they appear on the screens:




This screen should display:



Sensitivity:

This option allows you to set the camera's motion detection sensitivity levels to high, low, or off.

1. Press the  sensitivity button to access the following menu:

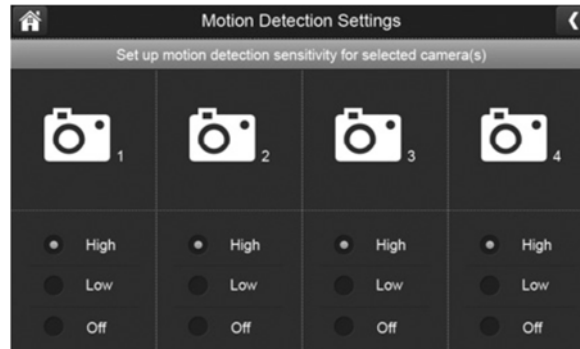


2. Press high, low, or off to set sensitivity.
3. Press the  left arrow to return to the previous menu.

Mask Area:

Use this option to mask off any parts of the viewing area you don't want to be included for motion detection.


1. Press  the mask area button to display which blocks you would like superimposed over the image.

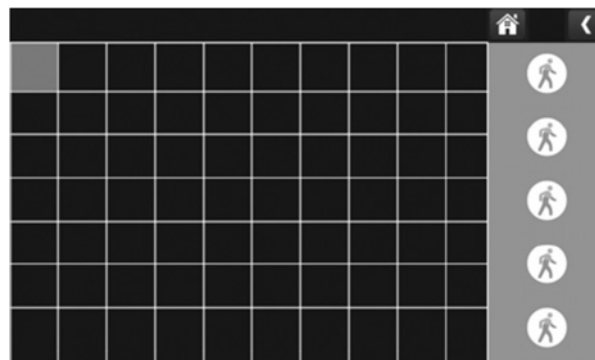


2. Select the squares that cover the areas of the image you do not want affected by motion detection.
3. When you are finished, press  the left arrow to return to the previous menu.

Upgrade From SD Card:

1. Press  the upgrade from SD card button to upgrade the firmware.
2. To upgrade the firmware through the SD card, select yes on the confirmation screen.

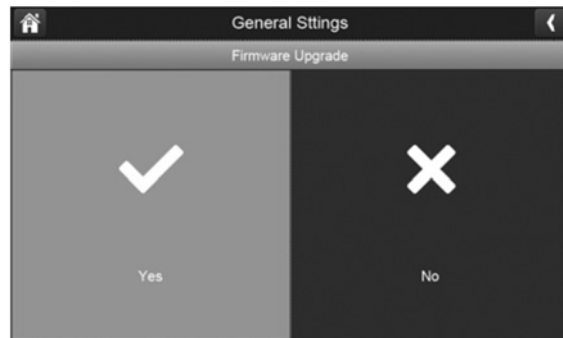

3. A progress screen will be displayed.

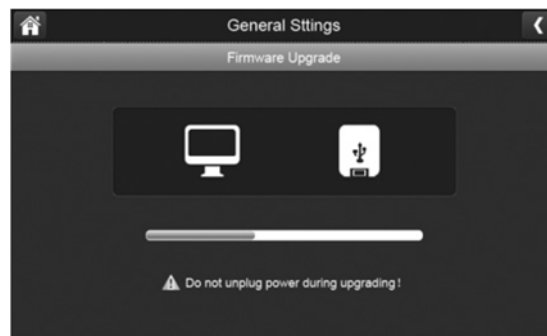

4. When the update is complete, the monitor displays Firmware Upgrade Successful and automatically reboots.

Please Note: It is not required to update the firmware from default unless deemed necessary.

Recording Live Video (Monitor):

1. On the live viewing screen, press the red viewing icon  for the camera to begin recording.
2. The icon will blink and turn blue while recording.
3. Press it again to stop recording. The icon stops blinking and will turn red.


Please Note: You can record from all cameras at the same time.

Play Back Recorded Video:

There are two ways to access recorded video files. You can either tap the SD card icon  on the live screen or you can tap the playback pop up menu.  Either way, the following screen displays:



1. Select the highlighted day containing the recording you want to view or on a specific camera to only view that camera's recordings. The recording file list screen displays those recordings.

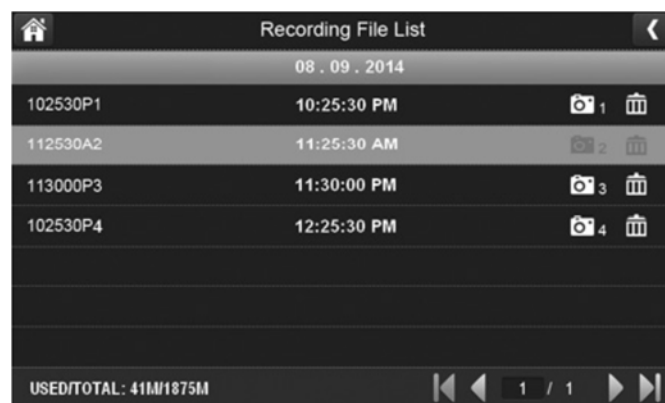

Please Note: If you select on a day that is not highlighted, there will be no action taken at all.

2. Press the recording you want to view and it will begin playing. The control icons will be displayed across the bottom of the screen.

3. Select any area of the screen that does not have control icons to bring up the playback progress bar. Press any area again to close it. While playback progress is visible, you can fast forward/ rewind by dragging the playback bar forwards or backwards.
Please Note: On the playback progress bar, tap the double arrow to skip forward or backwards about 10 seconds. Press the arrow and bar to skip to the next or previous video.
4. When the playback ends, press the  left arrow to return to the previous menu.

Live View Functions:

Please see the list of basic functions listed below:

Live View Functions:	Action
Manually Start/Stop Recording Video	1. Press the blue  icon on the monitor screen. The icon turns red and flashes, indicating that recording has started. 2. Press the icon again to stop recording, the icon will then turn blue.
Set Up automatic Recording Schedule	1. From the general settings/recording setup, press the  icon. 2. The scheduled recording Overview screen will display 3. Press modify to view the recording setup screen.
Delete Recording schedule	1. From General Settings/Recording Setup, Press the  icon. The scheduled recording overview screen will display. 2. Select the day you want to modify and press modify to view the recording schedule for that day. 3. Select the camera(s) whose schedule you want to delete. Enter the schedule (or part of a schedule) you want to delete and press delete.
Watch Recorded video	1. From the main screen, press the pop out menu tab and then press the icon , the recording file list displays the recorded files. 2. Press the day you want to view, and then tap the file. 3. The video will begin playing
Delete Recorded Videos	1. From the Recorded File List, press the  icon. 2. Press yes to confirm deletion.
Change Channels	1. Press the  icon. 2. The next channel will displays



Troubleshooting:

If...	Try...
The camera's signal status icon shows no bars	·Make sure the camera is connected to power. ·Make sure that the camera's antenna is attached and the monitor's antenna is extended. ·Make sure the camera is paired to the correct channel. ·Re-pair the camera and monitor.
The camera won't pair with the monitor	·Make sure the camera is connected to power. ·Press and release the pairing button quickly. Do not press and hold the pairing button.

Safety Instructions:

- Do not open the monitor or camera for any reason.
- Do not expose the camera outdoors, it is a weatherproof camera however it is recommended to be placed undercover otherwise it may damage the camera.
- Avoid pointing the camera in direct sunlight.

Specifications:

Monitor:

LCD: 7" Touch Screen
Frequency: 2.4GHz Digital
Wireless Range: Up to 100m
Resolution: 800 x 480 (VGA)
Video Compression: MPEG-4
Recording Format: ASF
Storage: Up to 128GB SD
Battery: 3.7V, 2000mAh Li-Ion
Battery Time: Up to 2.5hrs
Power: 5VDC, 2A
Dimensions: 196(L) x 123(H) x 20(D)mm

Camera:

Image Sensor: 1/4" Colour CMOS
Resolution: 640 x 480 (VGA)
Frame Rate: 25fps (Up to 2 x Cameras)
15fps (Up to 4 x Cameras)
Lens: 3.6mm
Viewing Angle: 66°



Night Vision: 24 x IR LEDs

IP Rating: IP65

Power: 9VDC, 600mA

Dimensions: 191(L) x 69(Dia)mm

Recording

Time:

SD Card Capacity:	QVGA (15fps)		VGA (25fps)	
	Min	Max	Min	Max
1G	2.8 Hrs	10.7 Hrs	2.6 Hrs	10.5 Hrs
2GB	5.6 Hrs	21.4 Hrs	5.2 Hrs	21 Hrs
4GB	11.3 Hrs	42.8 Hrs	10.3 Hrs	42 Hrs
8GB	22.6 Hrs	85.6 Hrs	20.7 Hrs	83.9 Hrs
16GB	45.2 Hrs	171.3 Hrs	41.4 Hrs	167.8 Hrs
32GB	90.3 Hrs	342.6 Hrs	82.8 Hrs	335.6 Hrs
64GB	180.6 Hrs	685.1 Hrs	165.6 Hrs	671.2 Hrs
128GB	361.2 Hrs	1370.2 Hrs	331.2 Hrs	1342.4 Hrs

File Size:

Time:	QVGA (15fps)		VGA (25fps)	
	Min	Max	Min	Max
1 Min	1.45Mb	5.5Mb	1.48Mb	6Mb
10 Mins	14.5Mb	55Mb	14.8Mb	60Mb
30 Mins	43.4Mb	165Mb	44.4Mb	180Mb
60 Mins	86.8Mb	330Mb	88.8Mb	360Mb

Distributed by:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

