

SL100-Temperature and Humidity Sensor(E-paper)



User Manual for SL100 Series(E-Paper)

LoRaWAN Temperature and Humidity Sensor V1.0



Jiangsu Rejee Intelligent Technology Co., Ltd

Address: No. 20,Xinghuo Road, Jiangbei District, Nanjing, China
Email: Jullie.zheng@rejee.com
Tel: 0086 158 6180 7793
Web: <http://www.rejee.com>

1. General Information

SL101 is long range low power temperature and humidity sensor based on Semtech SX1262/SX1268.


Sensor Type	Product Number
Built-in SHT30, 2.9-inch E-Paper	SL101CN, SL101EU,SL101US,SL101AS

1.1 Main features:

- Sensirion High Sensitivity Sensor
- 2.9-inch Screen Local Display

Type-C for Local Configuration
Internal Battery Up to 5 Years
LoRa SX1262/SX1268, Long Range Low Power


1.2 Details

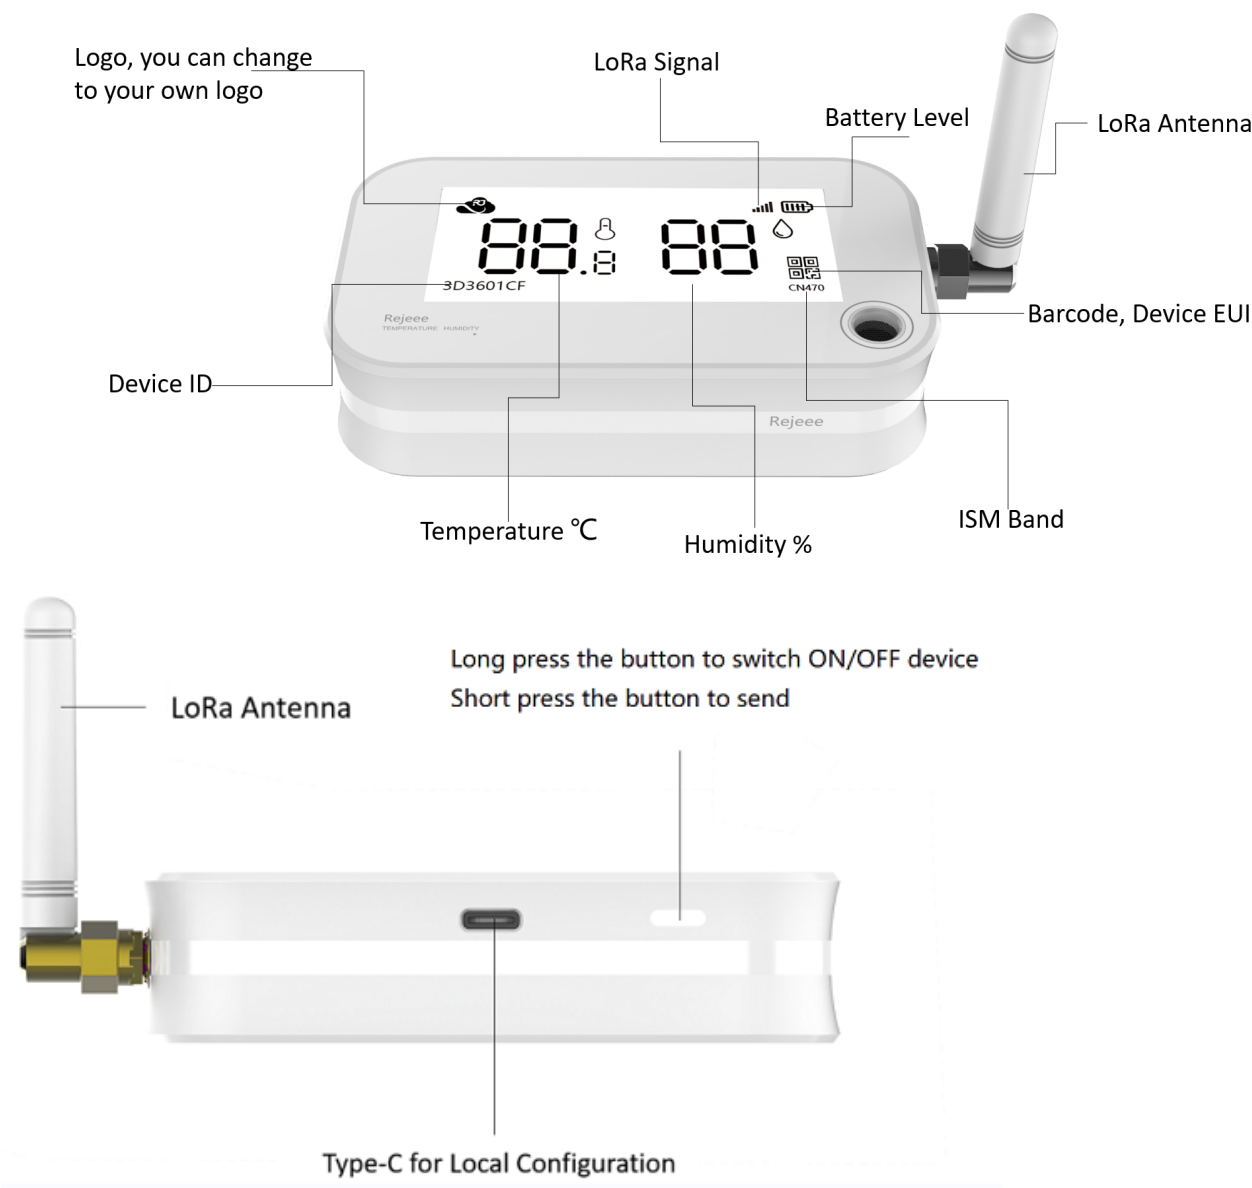

Parameters	Feature
CPU	STM32L151
Wireless	LoRaWAN(SX1262/SX1268)
Encryption	AES128
Battery	Built-in Li-battery (Changeable, and No Recharge)
Battery Capacity	5400mAh
E-Paper Temperature	0°C~+ 50°C
Sensor Temperature	-45°C~+ 85°C
Sensor Humidity	0 ~100 %RH
Communication	Half duplex

Parameters	Feature
Accuracy	Temperature : $\pm 0.3^{\circ}\text{C}$ Humidity: $\pm 3\% \text{RH}$
Lifespan	5 Years(Every 30 Minutes for data uploading)
Data Speed	300bps-62.5k bps
Size	102mm*60mm*25mm
TX Power	22dBm Max
RX Sensitivity	-140 dBm
Frequency	SX1268: CN470 SX1262: EU868 / US915 / AS923

1.3 Size: 102mm*60mm*25mm

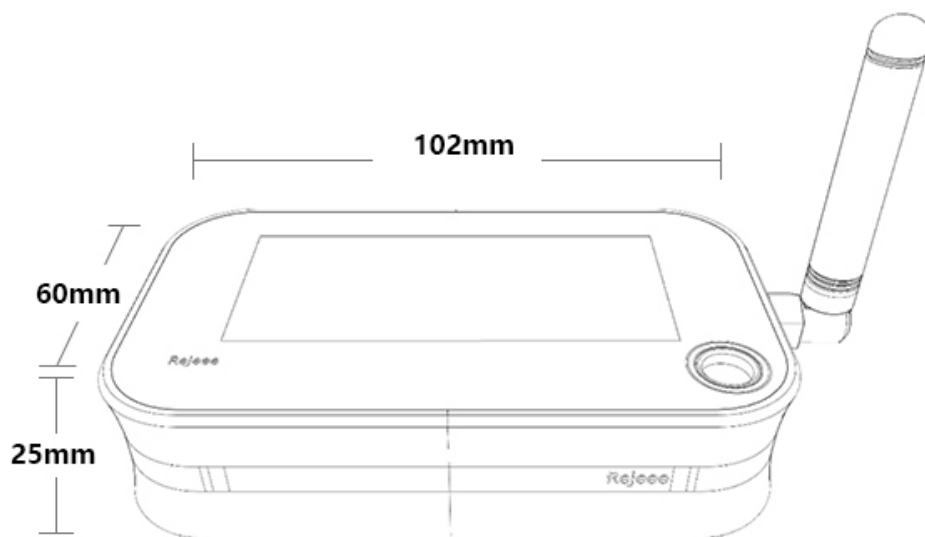

1.4 Installation



2. User Guide

Make sure antenna is installed before turn on the device.

2.1 Turn on/off the device

When you get the device, it is off, and on the screen, you can find the device EUI as below, the QR on the screen is Rejee website. Just press the button for more than 3 seconds, then you can turn on the device. If you want to turn off the device, just press the button 3 seconds. You can change the QR code on the screen to your own website QR code: [SensorTool Manual](#).



2.2 Information display on screen


The device screen is 2.9-inch low power e-paper, when turn on the device, you can find information displaying on the screen as below, you can change the logo as you like. [SensorTool Manual](#).



2.3 USB-C Configuration

There is one USB-C port as below, which is for power on and config, connect device to laptop with a USB-C cable, and you can config the device, make sure to install CH34x USB driver and here is the link for driver: [USB-to-Serial](#)

Driver.

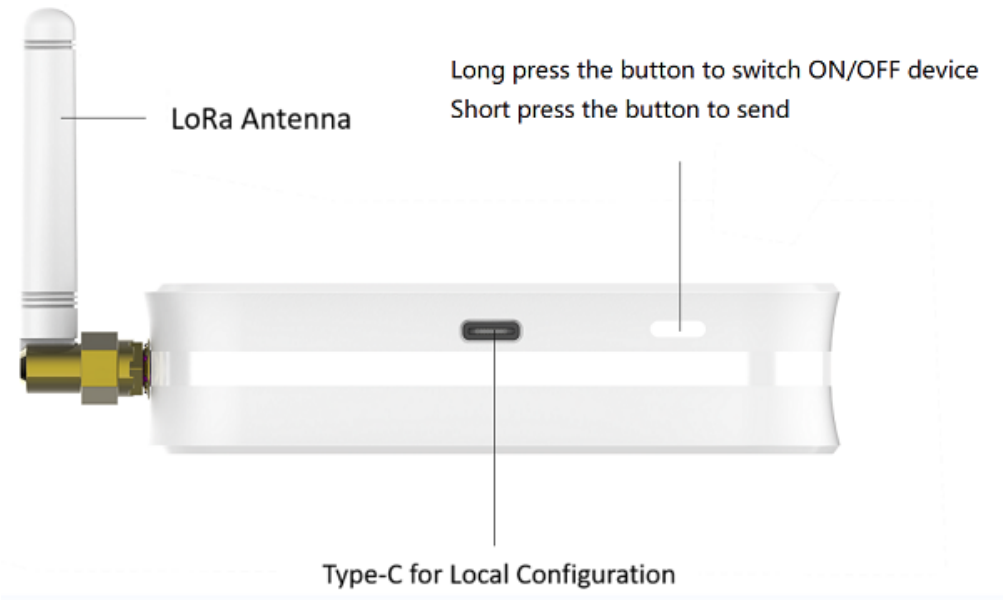


3. Data Uploading

When turn on the device, it will send data immediately, also you can press the button a short time(0.1 seconds), then the device will also send data. Normally when you get the device from factory, the reset time for data sending is every 30 mins, and if you want to change the time, you can connect the device to computer for config, here there is instruction about the time configuration.[SensorTool Manual](#).

4. Connect to LoRaWAN Network

LoRaWAN Network Structure

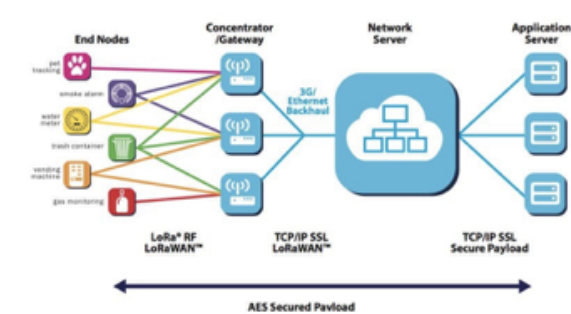

SL101 temperature and humidity sensor is based on standard LoRaWAN Class A, so you can connect to any LoRaWAN network as below through OTAA: On the back of device, you can find information as below, with this information, you can connect to any LoRaWAN server.

```
Device EUI: CACBB80100002296
APP EUI: CACBB80000000001
APP Key: 1122334455667788
          9900AABBCCDDEEFF
```

Connecting to The Things Network, please make sure choose manually connect and OTAA as below:

Sensor	LoRaWAN
--------	---------

Sensor	LoRaWAN
SL100CN	From The LoRaWAN Device RepositoryManually Frequency plan ⓘ * China 470-510 MHz, FSB 11 LoRaWAN version ⓘ * MAC V1.0.3 Regional Parameters version ⓘ * PHY V1.0.3 REV A Show advanced activation, LoRaWAN class and cluster settings ^ Activation mode ⓘ * Over the air activation (OTAA)
SL100EU	Frequency plan ⓘ * Europe 863-870 MHz (SF12 for RX2) LoRaWAN version ⓘ * MAC V1.0.3 Regional Parameters version ⓘ * PHY V1.0.3 REV A Show advanced activation, LoRaWAN class and cluster settings ^ Activation mode ⓘ * Over the air activation (OTAA)
SL100US	From The LoRaWAN Device RepositoryManually Frequency plan ⓘ * United States 902-928 MHz, FSB 2 (used by TTN) LoRaWAN version ⓘ * MAC V1.0.3 Regional Parameters version ⓘ * PHY V1.0.3 REV A Show advanced activation, LoRaWAN class and cluster settings ^ Activation mode ⓘ * Over the air activation (OTAA)
SL100AS	From The LoRaWAN Device RepositoryManually Frequency plan ⓘ * Asia 923 MHz with only default channels LoRaWAN version ⓘ * MAC V1.0.3 Regional Parameters version ⓘ * PHY V1.0.3 REV A Show advanced activation, LoRaWAN class and cluster settings ^ Activation mode ⓘ * Over the air activation (OTAA)

4.1 Set ID and Key

[Show advanced activation, LoRaWAN class and cluster settings](#) ▾

DevEUI ? *

.....



Generate

0/50 used

AppEUI ? *

.....

Fill with zeros

AppKey ? *

.....



Generate

End device ID ? *

my-new-device

This value is automatically prefilled using the DevEUI

After registration

☒ View registered end device

☐ Register another end device of this type

Register end device

Data analysis example for JavaScript:


```
function decodeUplink(input) {
  var obj = {};
  var warnings = [];
  obj.battery = (input.bytes[1]&0x1F);
  obj.vol = (input.bytes[2]);
  obj.temperature = (((input.bytes[4] & 0x80 ? input.bytes[4] - 0x100 : input.bytes[4]) << 8)
+
input.bytes[5]) / 10;
  obj.humidity = input.bytes[7];
  if (obj.temperature < -10) {
    warnings.push("it's cold");
  }
  return {
    data: obj,
    warnings: warnings
  };
}
```

5. Wireless LoraWAN Sensor Data Format


LoRaWAN Format:

Picture as below, FRMPayload is sensor data.

PHYPayload:

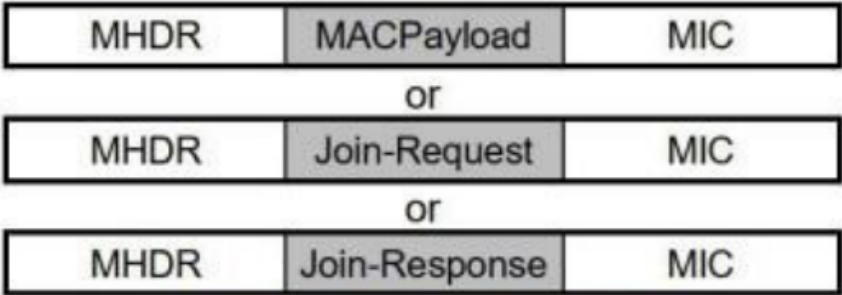

MACPayload:



MHDR	FHDR	FPort	FRMPayload=Sensor Data(Message)			MIC 4 Bytes
			Data 1	...	Data N	
			Type+Data N Bytes	Type+Data N Bytes	Type+Data N Bytes	

6. Sensor Data Definition

6.1 Device Information(0x00)

Type	Value	Value	Value
1 Byte	3 bit	5bit	1 Byte
0x00	Version	Battery Level	Reserve

6.2 Temperature(0x04)

Type 1 Byte	Value 2 Bytes	Comments
0x04	Temperature	2-byte signed integer with negative value below zero The default unit is 0.1 degrees, that is 201 means 20.1 degrees

e.g. 0xFF88 is -120 (-12°C), Network byte order mode is {04 FF 88}

6.3 Humidity(0x05)

Type 1 Byte	Value 1 Byte	Comments
0x05	Humidity	Unsigned integer of 1 byte. The default unit is 1%RH, that is 10 means 10%RH

FRMPayload Example: 00 3F 24 04 01 1C 05 3E
00 3F24 Device Information, Version is 0x01, level is 0x1F = 31

04 011C Temperature is $0x011C = 284 = 28.4\text{ }^{\circ}\text{C}$

05 3E Humidity is $0x3E = 62 = 62\text{ \%RH}$

7. Local Configuration:

Note: Factory reset data uploading is every 30 mins, customers can change data uploading frequency as below:
Connect sensor with a USB-C cable to computer for local configuration, through local configuration, you can change the packet frequency. Refer [SensorTool Manual](#).