



AMERICA'S PREMIER EXERCISE EQUIPMENT



OWNER'S MANUAL

Apollo
7000 SERIES

HIGH LOW STATION

Introduction

About the HIGH LOW STATION. Congratulations on your new purchase of the HIGH LOW STATION. We hope you are completely satisfied with this product and wish you many years of enjoyment.

Tuff Stuff Equipment

This Tuffstuff product has been built to precise quality standards and has been carefully packaged to ensure that damage will not occur during shipment. The Home Lifetime Warranty and signature indicating final inspection has been conducted by our line foreman, is an expression of our confidence in the completeness, the materials, and workmanship of this product.

Warranty

SEE A COPY OF WARRANTY ON BACK PAGE.

Registration Card

To avoid unnecessary delays in warranty service and to insure that a permanent record of your purchase is on file with our factory, be sure to complete the warranty registration card and send it to TuffStuff Fitness Equipment today.

Specifications

1. Maximum Wt. Capacity - 200 lbs.
2. Total Machine Weight - 413 lbs.
3. Footprint (LWH) - Height is 84". For footprints refer to the Center Post/Rear Post Assembly Manuals.

Note: Due to continuing product improvements, specifications and designs are subject to change without notice.


Prior to the Assembly of the HIGH LOW STATION

1. We advise you to consult your local Tuff Stuff retailer if you should have a question or problem regarding the proper assembly of this unit.

Tool Requirements

1. One 7/8" combination wrench
2. Two 3/4" combination wrench
3. One 9/16" combination wrench
4. One 1/2" combination wrench
5. One 7/16" combination wrench
6. One adjustable wrench
7. One ratchet
8. One 3/4" socket
9. One 9/16" socket
10. One rubber mallet
11. Windex or household glass cleaner
12. Measuring tape
13. Utility knife
14. The hex key alloy set included in the Center Post/Rear Post box.

Hardware Measurement Diagram

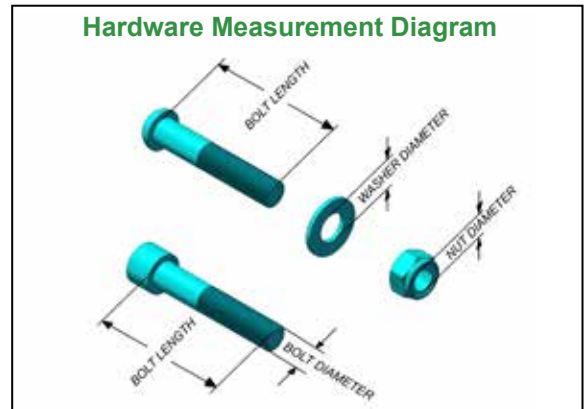

Safety Precautions

Safety First

Regardless of how enthusiastic you may be about getting on your equipment and exercising, take the time to ensure that your safety is not jeopardized. A moment's lack of attention can result in an accident, as can failure to observe certain simple safety precautions.

1. Read, study and understand the Assembly Instructions and all the warning labels on this product. Furthermore, it is recommended to familiarize yourself and others with the proper operation and workout recommendations for this Tuff Stuff product prior to use.
2. It is imperative that you retain this Assembly Instructions and be sure all warning labels are legible and intact. Replacement Assembly Instructions and labels are available from your local Tuff Stuff retailer.
3. Consult with your physician before beginning any exercise program.
4. Frayed or worn cables can be dangerous and may cause injury. Periodically check the cable for any indication of wear.
5. Use proper discretion when children are present.
6. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
7. Do not attempt to lift more weight than you can control safely.
8. Inspect the Unit for any sign of wear on parts, hardware becoming loose or cracks on welds. If a problem is found **do not use or allow the machine to be used** until the defective part is repaired or replaced.




INSTRUCTIONS FOR A SINGLE STATION ASSEMBLY ONLY:
FOR STEPS 1 AND 2 YOU WILL NEED SOME HARDWARE THAT IS PROVIDED IN THE AP-70RP BOX. ONCE YOU COMPLETE STEPS 1 AND 2 SKIP TO STEP 5 TO RESUME INSTALLATION.

INSTRUCTIONS FOR A MULTI STATION ASSEMBLY ONLY:
BEGIN ASSEMBLY IN STEP 3. FOR STEPS 3 AND 4 YOU WILL NEED SOME HARDWARE THAT IS PROVIDED IN THE AP-70CP BOX.


STEP 1

Assembly List

Item #	Description	Qty.
B1	REAR POST	1
B7	FLAT WASHER SAE N/P 3/8"	4
B8	FLAT WASHER N/P 3/8 ID X 1 1/2 OD X 3/16	4
B9	NYLON INSERT LOCK NUT N/P 3/8-16	4
B11	SOCKET CAP SCREW GR-8 N/P 3/8-16 X 3	4
2	BASE FRAME	1
9	FOOT SUPPORT TUBE	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	1
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	1
38	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 5	2
48	FLAT WASHER SAE N/P 3/8"	4
56	NYLON INSERT LOCK NUT N/P 3/8-16	3
79	U-SHAPE WASHER N/P 3/8 ID X 1 1/2 OD X 3/16	2

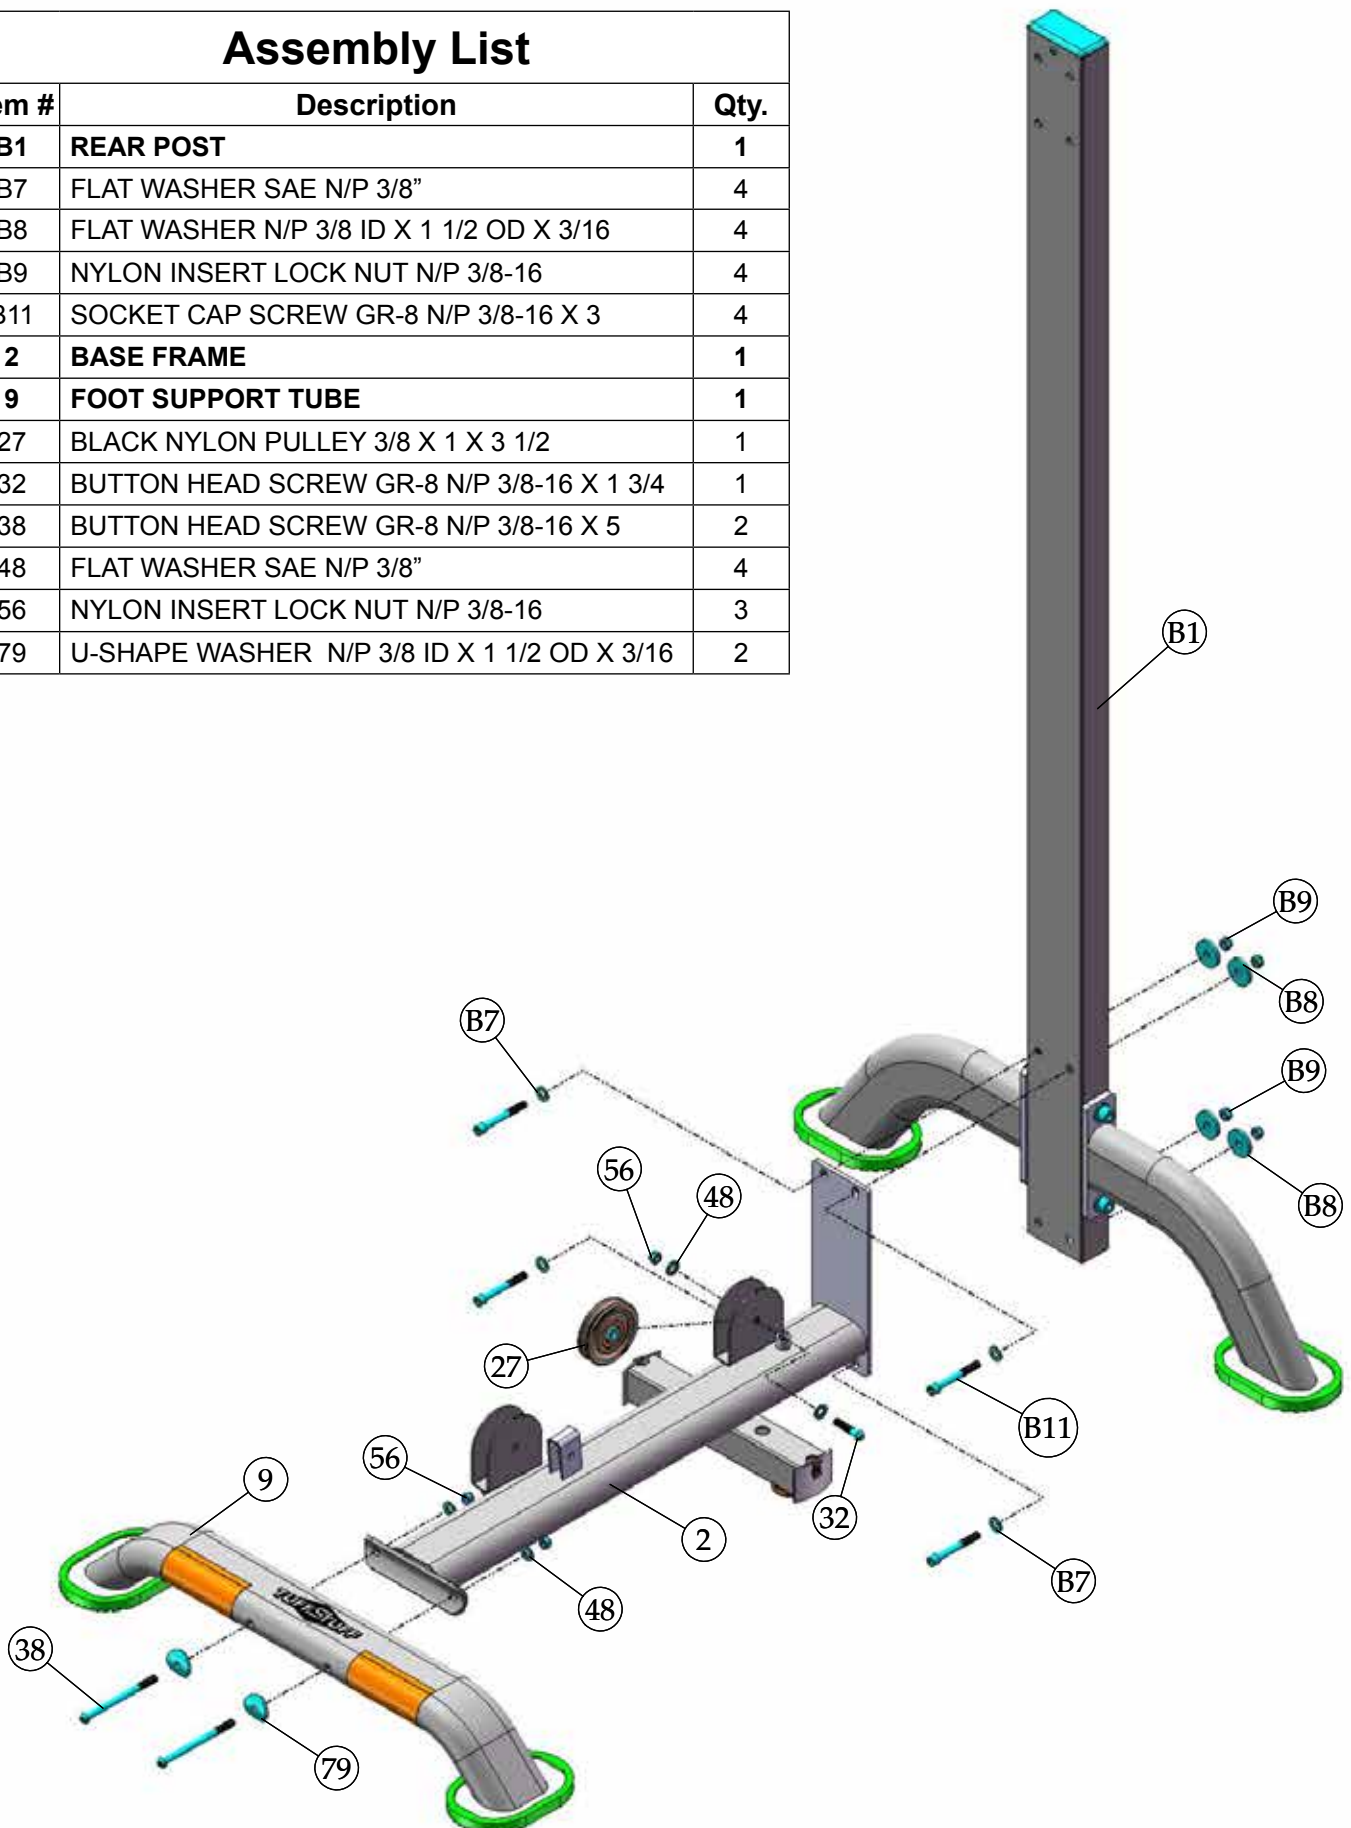


Item #	Description	Qty.
B7	FLAT WASHER SAE N/P 3/8"	4
B8	FLAT WASHER N/P 3/8 ID X 1 1/2 OD X 3/16	4
B9	NYLON INSERT LOCK NUT N/P 3/8-16	4
B11	SOCKET CAP SCREW GR-8 N/P 3/8-16 X 3	4
1	ADJUSTABLE PULLEY BRACKET	1
6	COUNTER BALANCE	1
8	COUNTER BALANCE GUIDE ROD 1/2 RD X 66 3/4	1
10	GUIDE RODS 3/4 RD X 71 3/4	2
12	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	1
13	SMALL COVER PLATE 3 1/2 PULLEY	2
14	SPACER 1 ID X 1 1/4 OD X 5	2
18	TOP GUIDE ROD HOUSING	1
19	TOP PLATE DOUBLE PULLEY HOLDER	1
21	10 LB STEEL WEIGHT PLATE BLACK 4 9/16 X 9 7/16	19
22	10 LB TOP PLATE W/ADJ SLTR BAR 19 BLK WTS	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	5
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	3
36	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 3 1/2	1
45	DECAL-WEIGHT NUMBERS REF TP-10 (200 lbs)	1
46	FINISHED HEX NUT N/P 1/2-13	3
47	FLAT WASHER SAE N/P 1/2"	2
48	FLAT WASHER SAE N/P 3/8"	8
50	FLAT WASHER N/P 3/4 X 2	4
56	NYLON INSERT LOCK NUT N/P 3/8-16	4
62	RUBBER DONUT 3/4 X 2 1/2	2
74	SPLIT LOCK WASHER N/P 1/2"	2

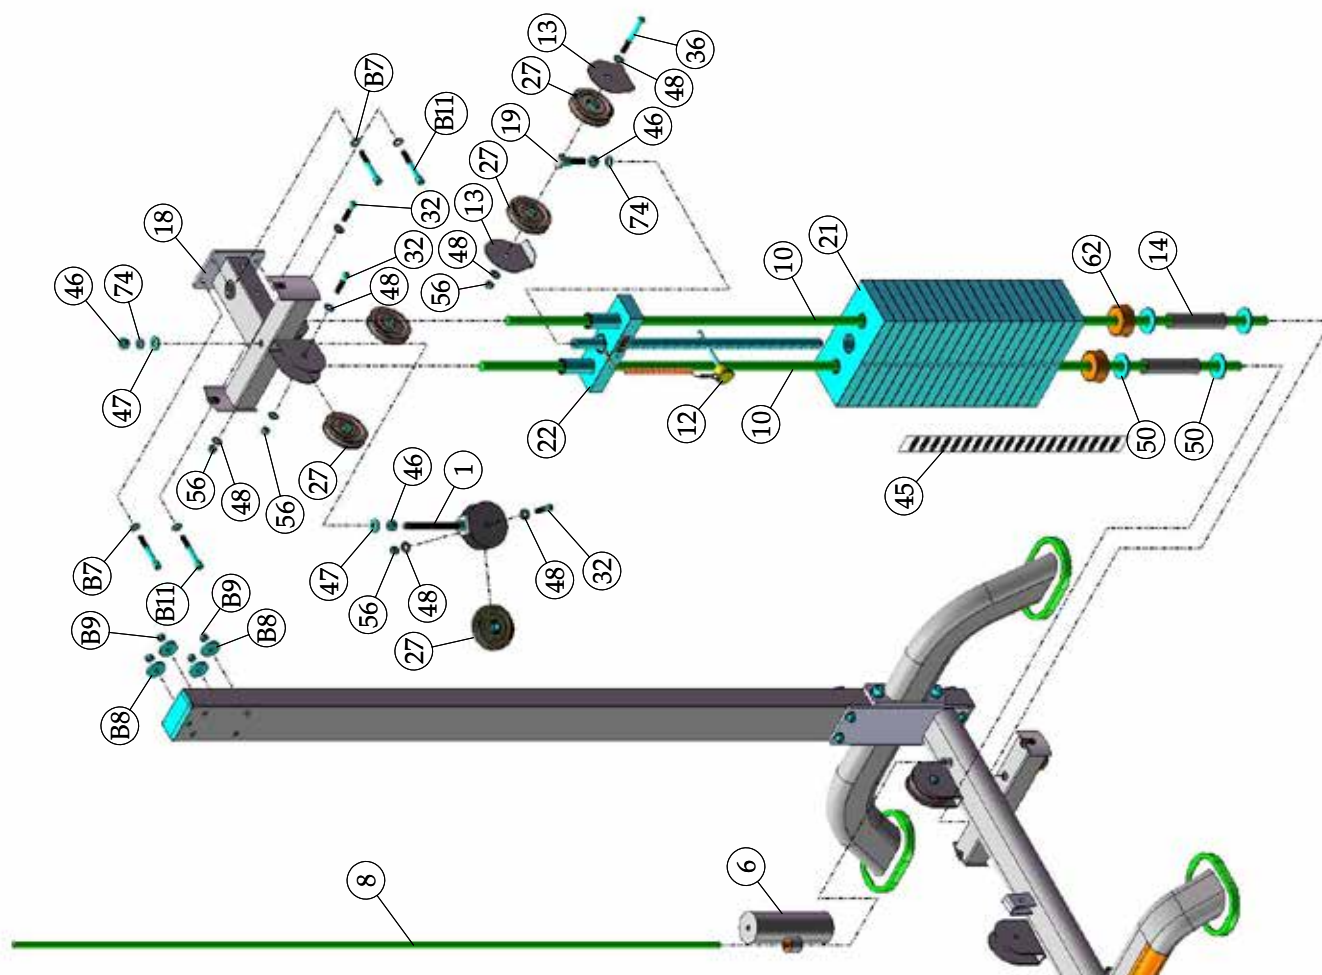

STEP 3


Assembly List

Item #	Description	Qty.
A1	CENTER POST	1
A7	SOCKET CAP SCREW GR-8 N/P 3/8-16 X 1	4
A8	FLAT WASHER SAE N/P 3/8"	4
A10	SPLIT LOCK WASHER N/P 3/8"	4
2	BASE FRAME	1
9	FOOT SUPPORT TUBE	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	1
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	1
38	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 5	2
48	FLAT WASHER SAE N/P 3/8"	4
56	NYLON INSERT LOCK NUT N/P 3/8-16	3
79	U-SHAPE WASHER N/P 3/8 ID X 1 1/2 OD X 3/16	2

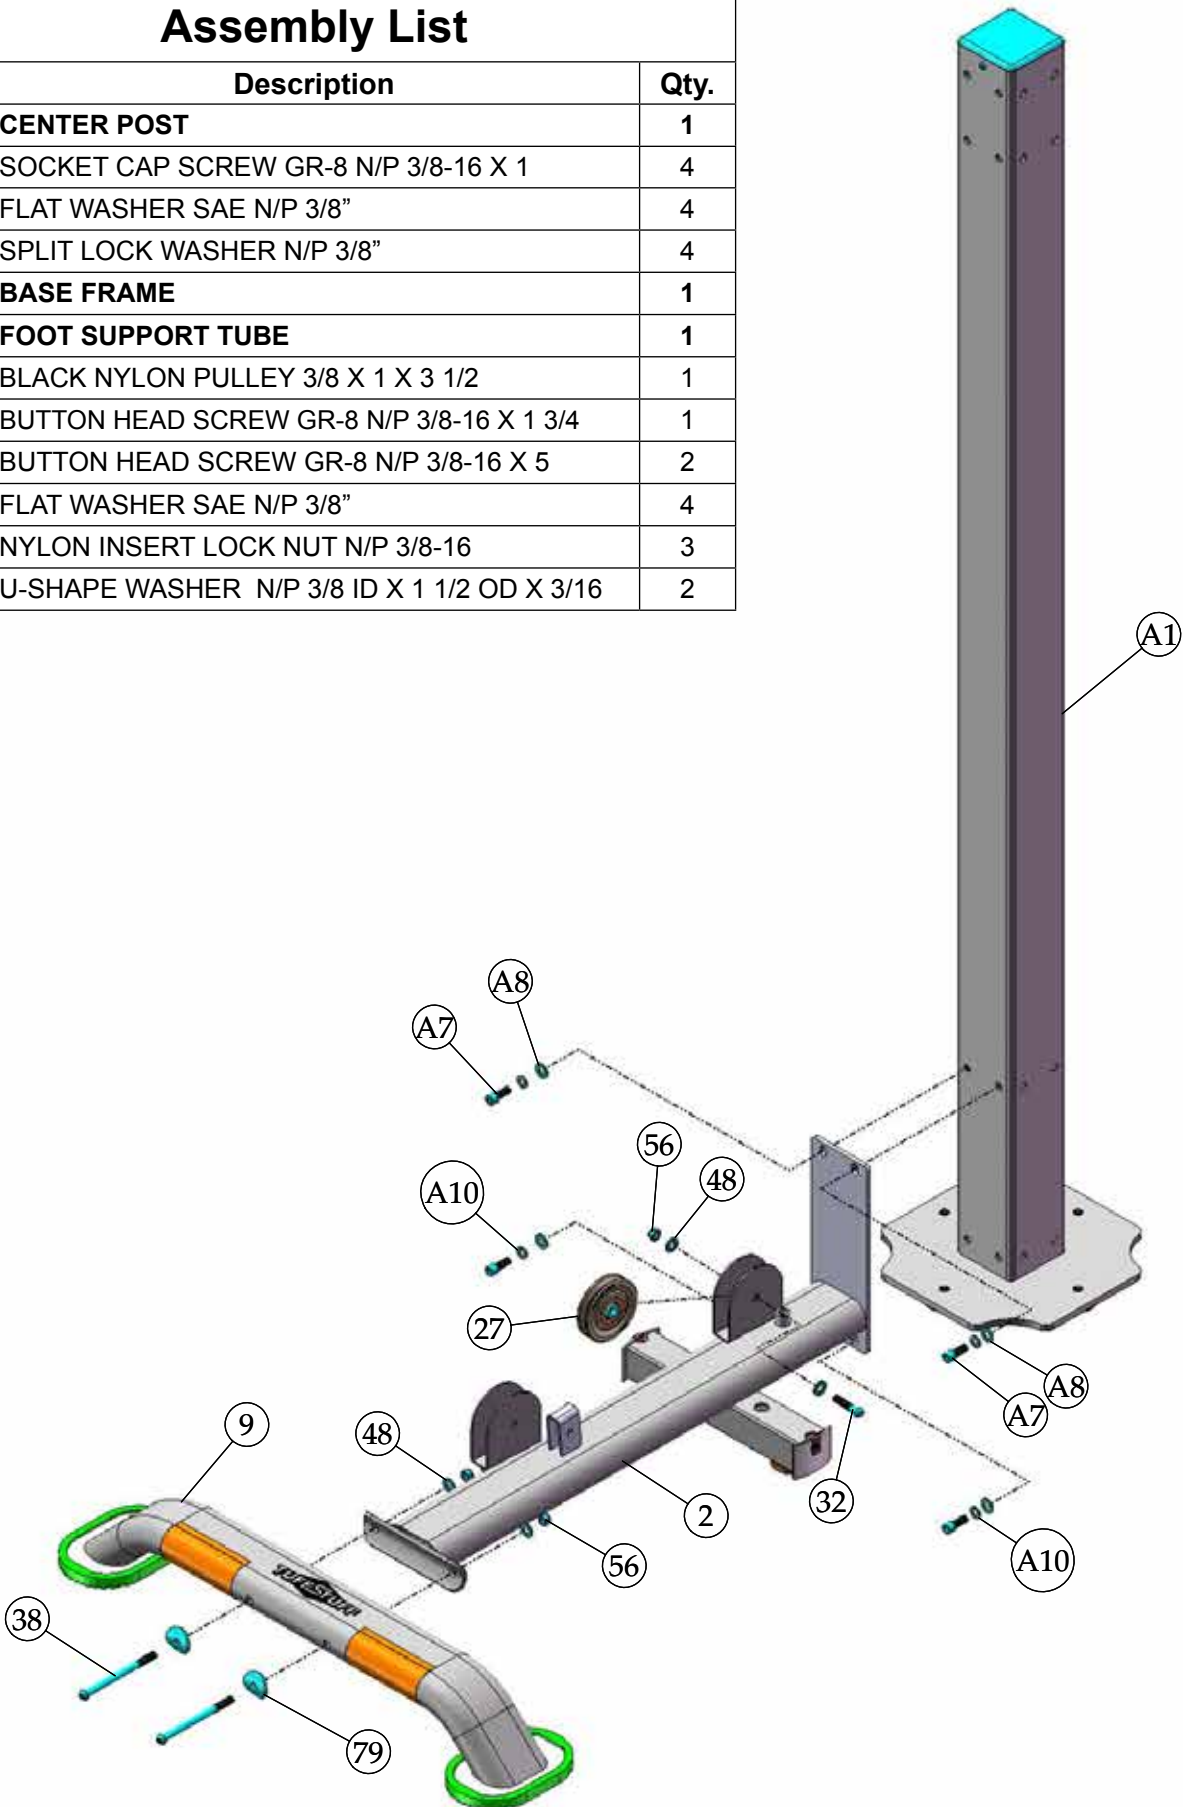

Assembly List

Item #	Description	Qty.
A7	SOCKET CAP SCREW GR-8 N/P 3/8-16 X 1	4
A8	FLAT WASHER SAE N/P 3/8"	4
A10	SPLIT LOCK WASHER N/P 3/8"	4
1	ADJUSTABLE PULLEY BRACKET	1
6	COUNTER BALANCE	1
8	COUNTER BALANCE GUIDE ROD 1/2 RD X 66 3/4	1
10	GUIDE RODS 3/4 RD X 71 3/4	2
12	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	1
13	SMALL COVER PLATE 3 1/2 PULLEY	2
14	SPACER 1 ID X 1 1/4 OD X 5	2
18	TOP GUIDE ROD HOUSING	1
19	TOP PLATE DOUBLE PULLEY HOLDER	1
21	10 LB STEEL WEIGHT PLATE BLACK 4 9/16 X 9 7/16	19
22	10 LB TOP PLATE W/ADJ SLTR BAR 19 BLK WTS	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	5
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	3
36	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 3 1/2	1
45	DECAL-WEIGHT NUMBERS REF TP-10 (200 lbs)	1
46	FINISHED HEX NUT N/P 1/2-13	3
47	FLAT WASHER SAE N/P 1/2"	2
48	FLAT WASHER SAE N/P 3/8"	8
50	FLAT WASHER N/P 3/4 X 2	4
56	NYLON INSERT LOCK NUT N/P 3/8-16	4
62	RUBBER DONUT 3/4 X 2 1/2	2
74	SPLIT LOCK WASHER N/P 1/2"	2

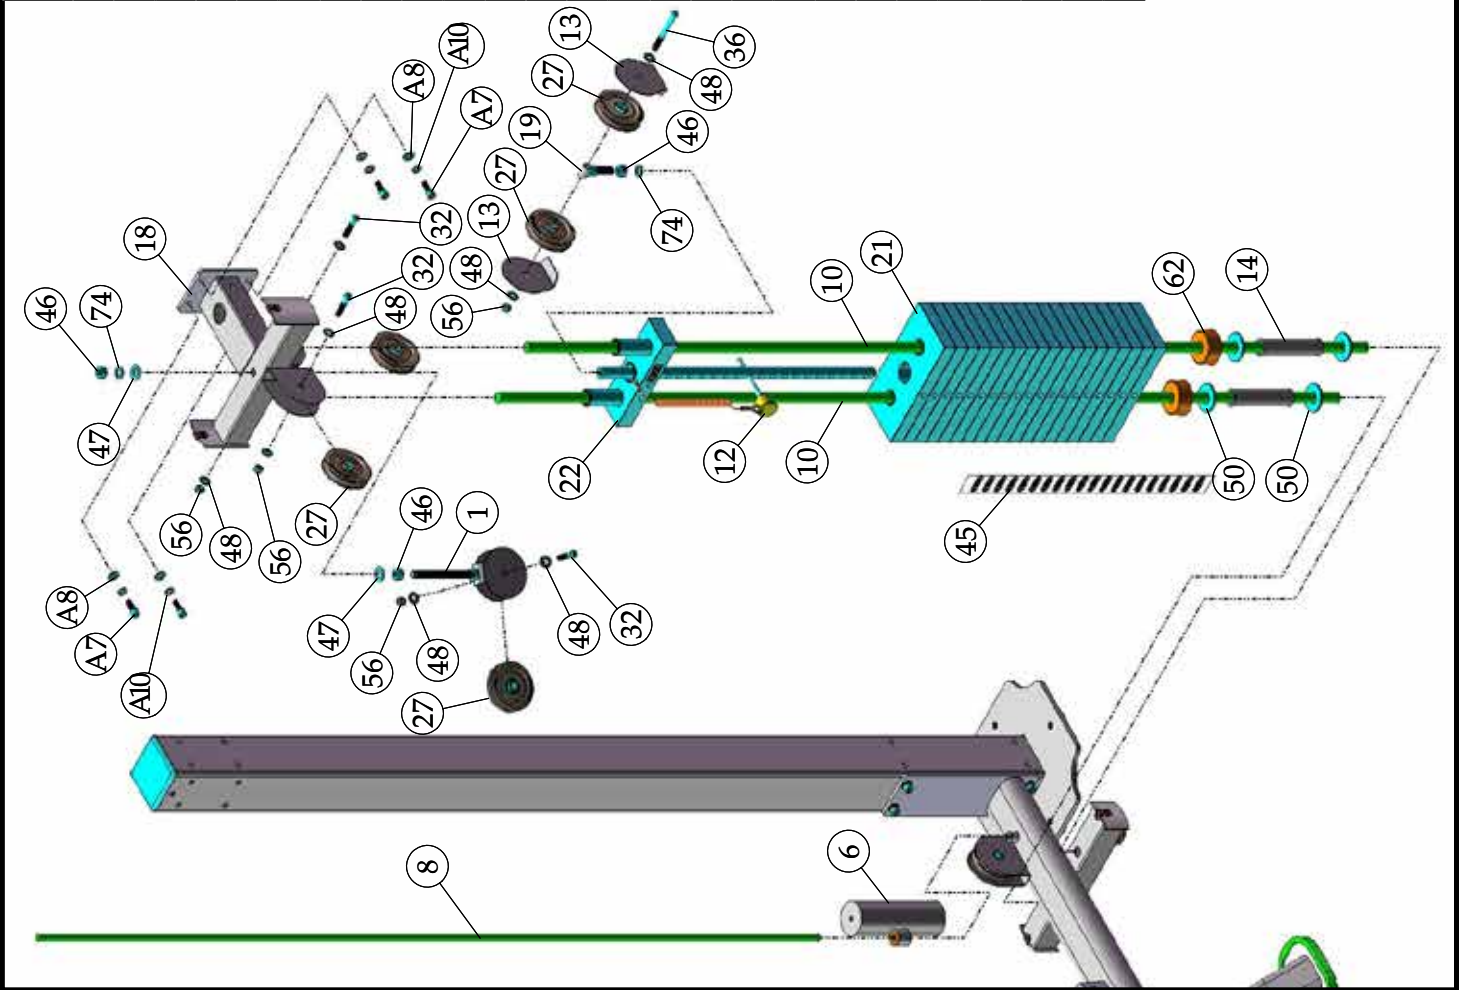

STEP 5


Assembly List

Item #	Description	Qty.
3	CARRIAGE	1
5	CHROME SELECTOR POST	1
17	TOP FRAME	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	6
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	7
35	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 2 1/4	1
37	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 4	2
48	FLAT WASHER SAE N/P 3/8"	20
56	NYLON INSERT LOCK NUT N/P 3/8-16	10




STEP 6 HIGH LOW CABLE ASSEMBLY

Assembly List		
Item #	Description	Qty.
11	HIGH/LOW CABLE	1
52	HARD PVC CABLE STOPPER 1 1/2 RD X 2	2
54	NYLON D HANDLE (# H834A)	2
68	SHOULDER BOLT N/P 3/8 X 3/4 CUSTOM	2
70	SNAP LINK N/P 8MM X 80MM	2
76	STRAP BRACKET 20 #SF20 STAINLESS STEEL	2

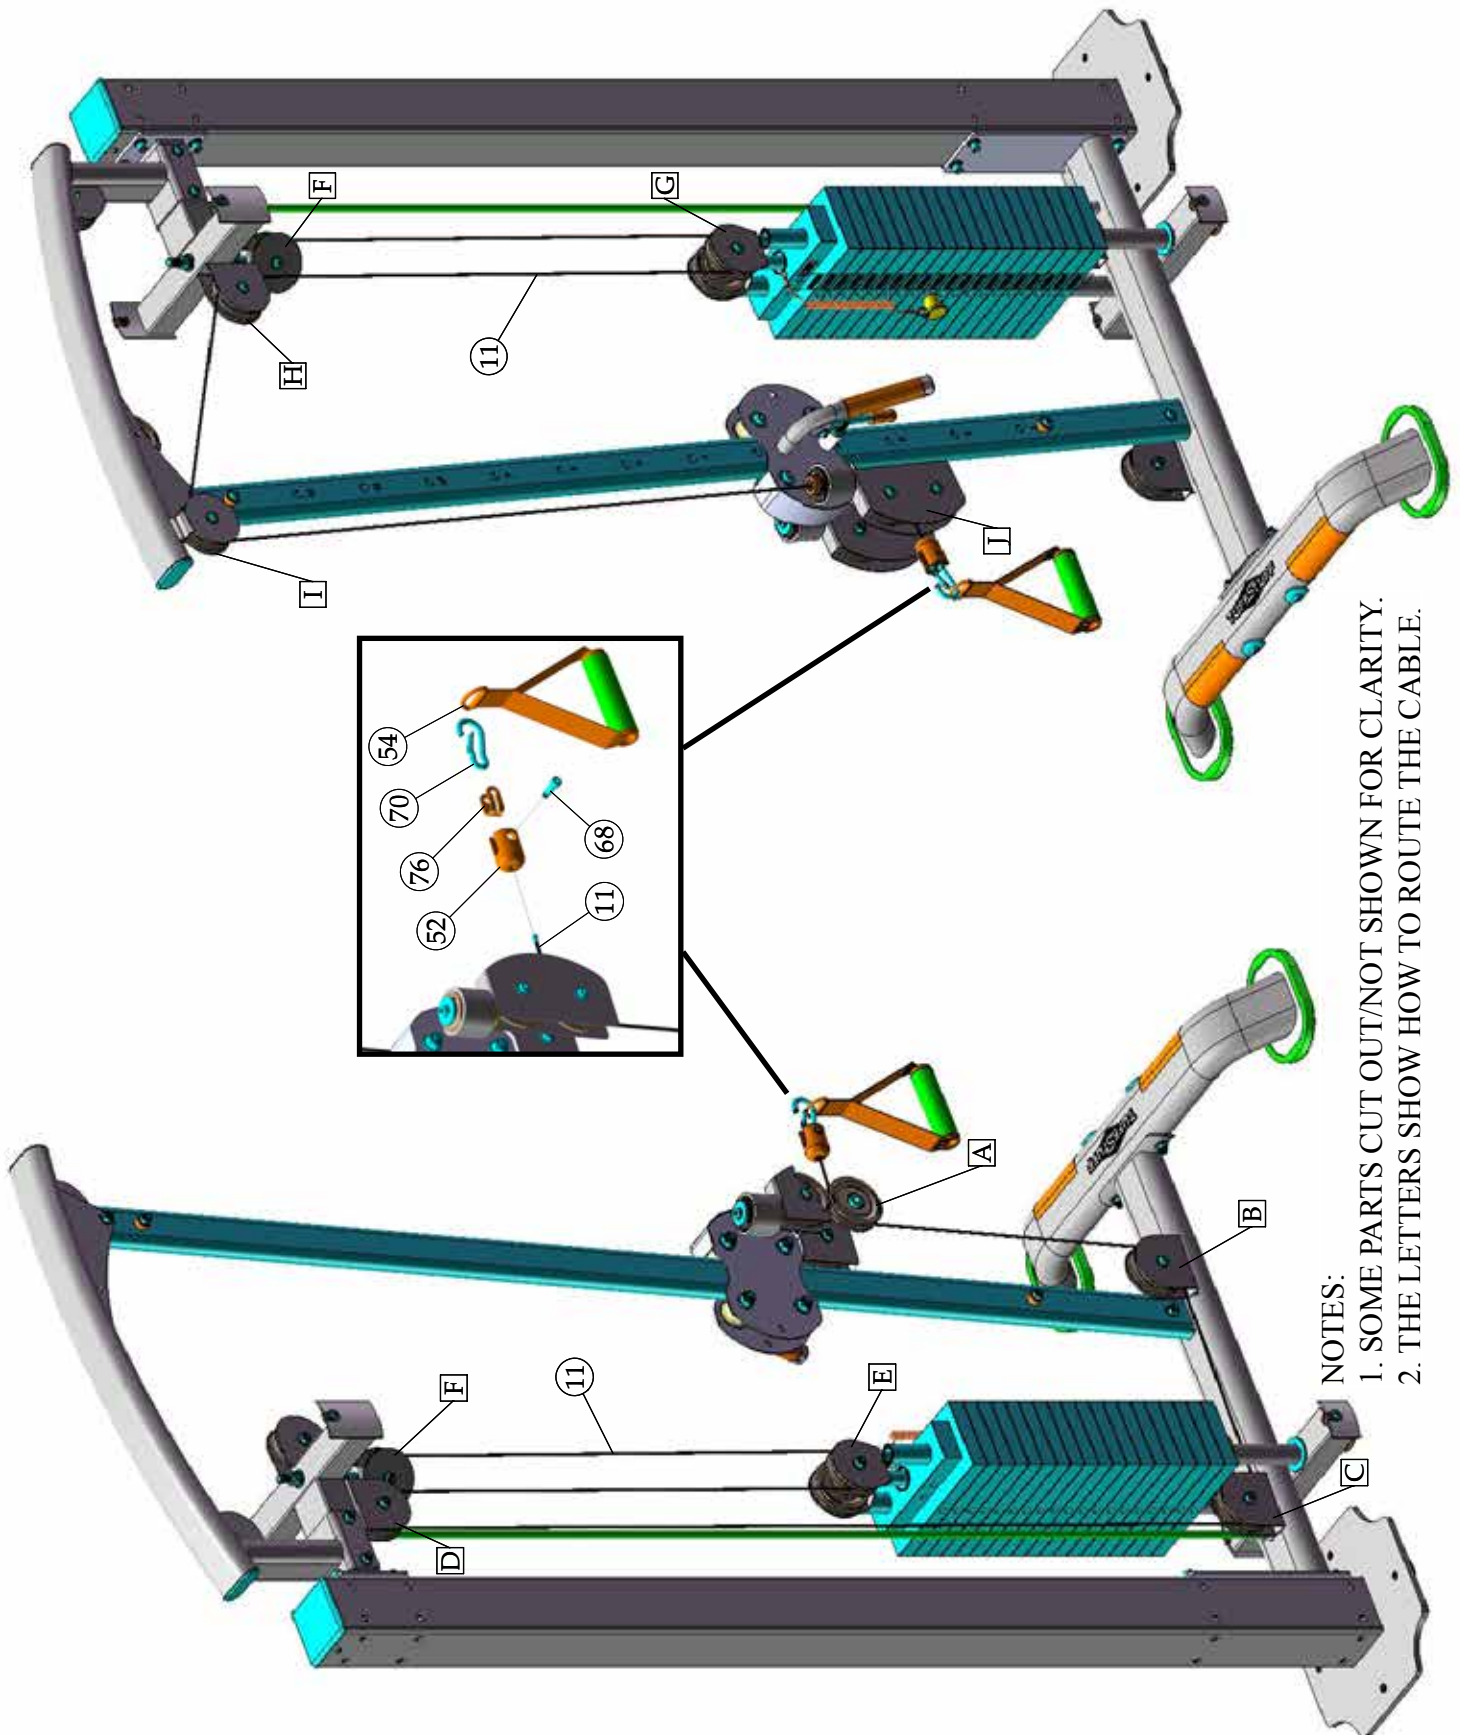

- NOTES:
1. SOME PARTS CUT OUT/NOT SHOWN FOR CLARITY.
 2. THE LETTERS SHOW HOW TO ROUTE THE CABLE.

STEP 7 COUNTER BALANCE CABLE ASSEMBLY

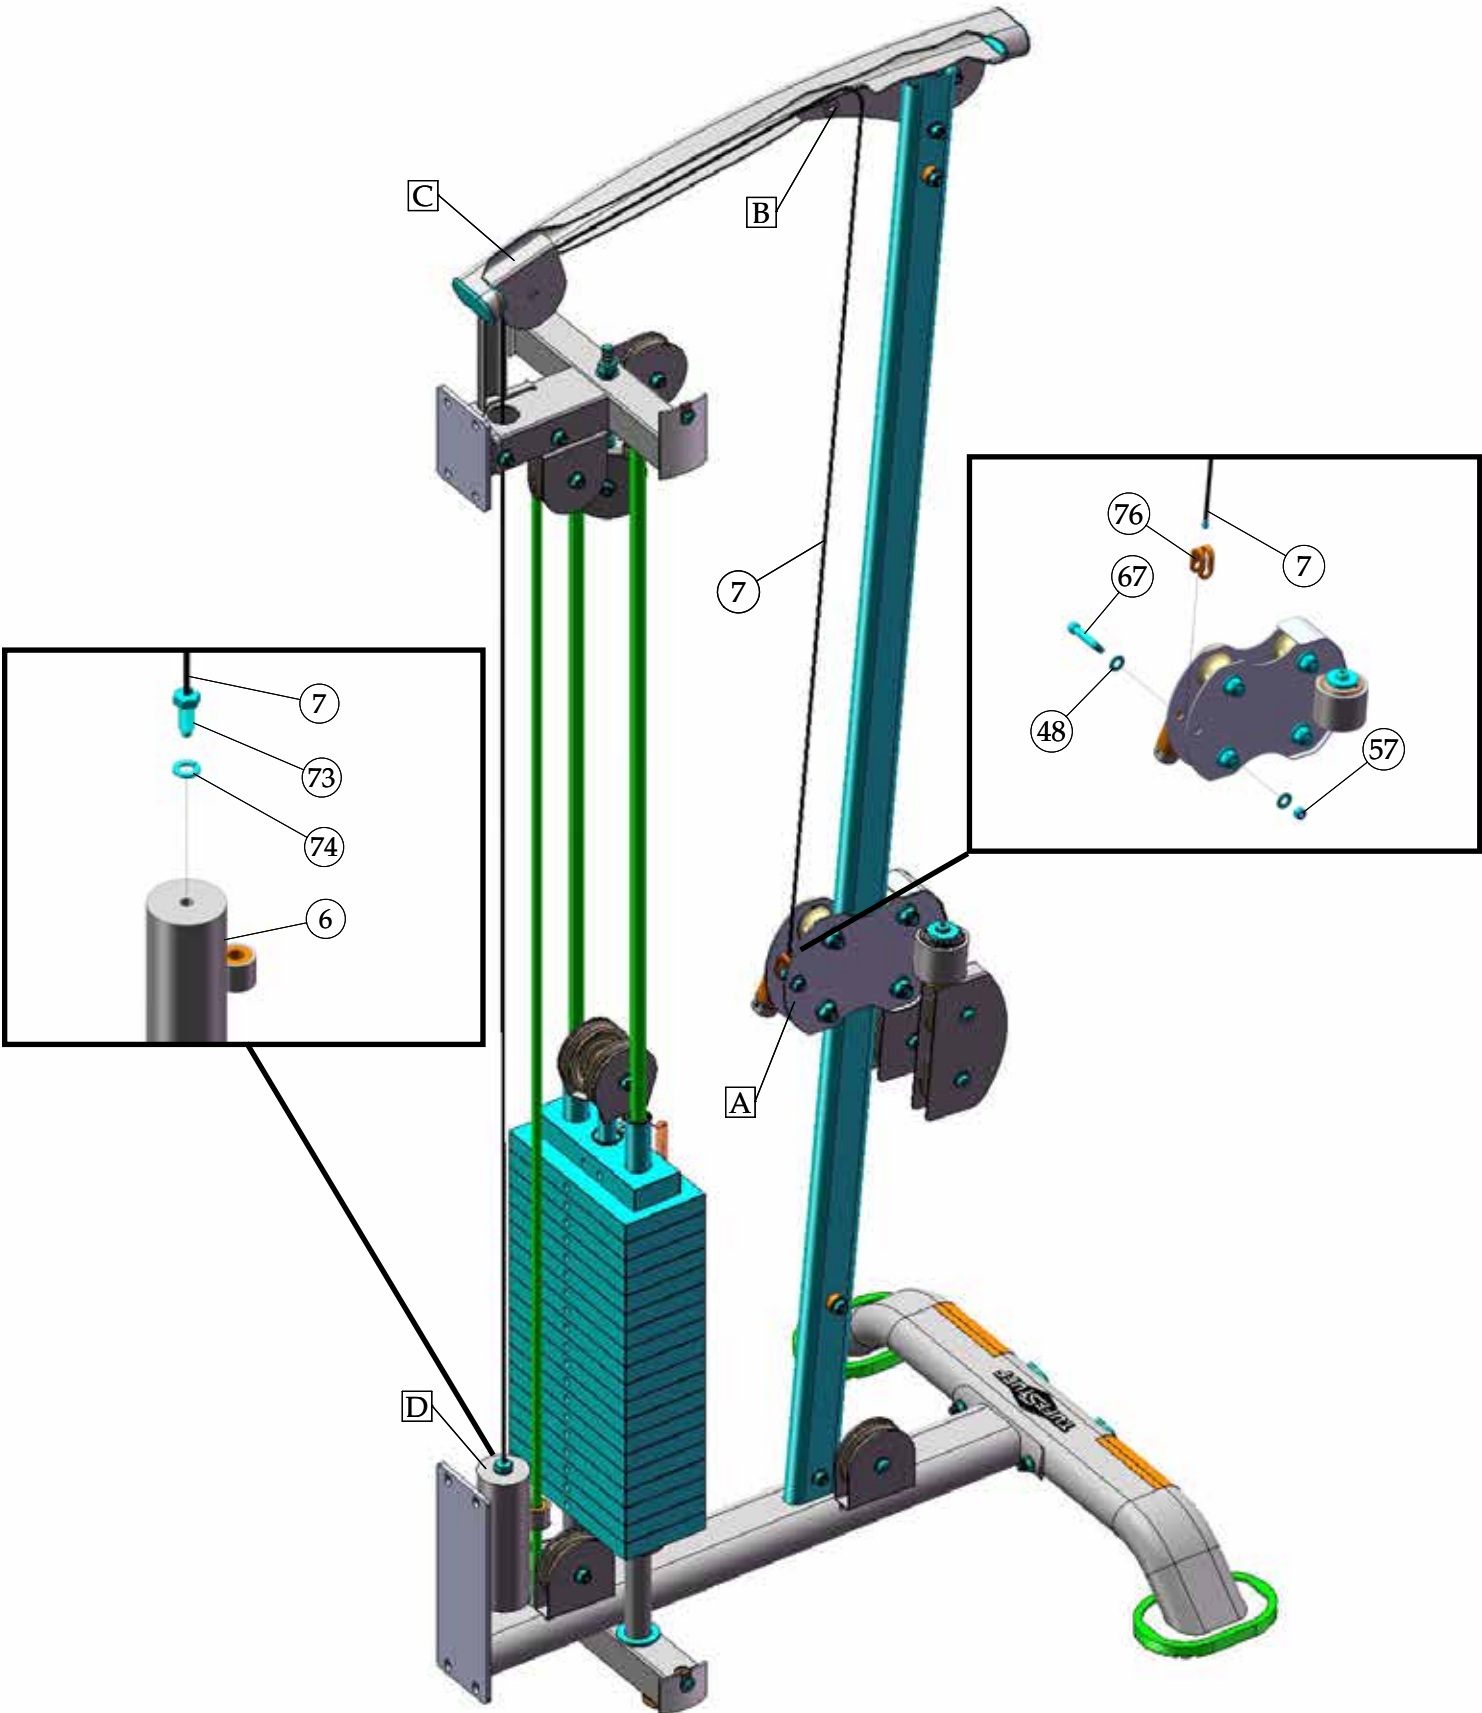


NOTES:

1. SOME PARTS CUT OUT/NOT SHOWN FOR CLARITY.



Assembly List


Item #	Description	Qty.
6	COUNTER BALANCE	1
7	COUNTER BALANCE CABLE	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2	2
32	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 1 3/4	1
35	BUTTON HEAD SCREW GR-8 N/P 3/8-16 X 2 1/4	1
48	FLAT WASHER SAE N/P 3/8"	6
56	NYLON INSERT LOCK NUT N/P 3/8-16	2
57	NYLON INSERT LOCK NUT N/P 5/16-18	1
67	SHOULDER BOLT N/P 3/8 X 1 5/8	1
73	SPLIT BOLT N/P 1/2-13 X 1	1
74	SPLIT LOCK WASHER N/P 1/2"	1
76	STRAP BRACKET 20 #SF20 STAINLESS STEEL	1

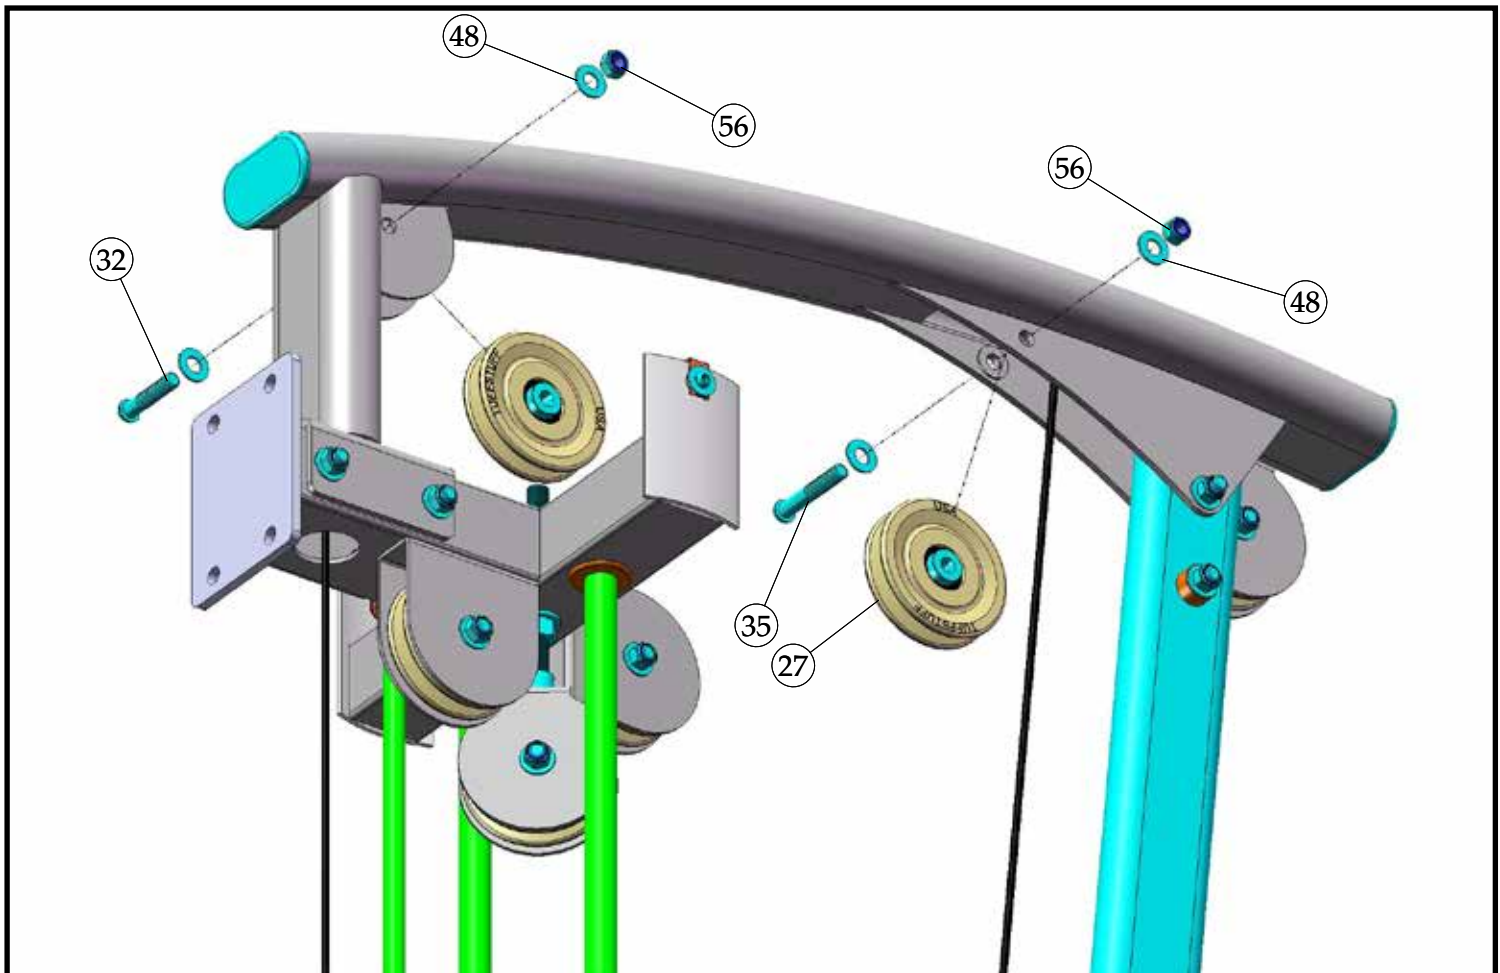


STEP 9

Assembly List

Item #	Description	Qty.
20	WEIGHT SHIELD	2
30	BUTTON HEAD SCREW GR-8 N/P 1/4-20 X 3/4	4
33	WEIGHT STACK LID	1
49	FLAT WASHER USS N/P 1/4"	4

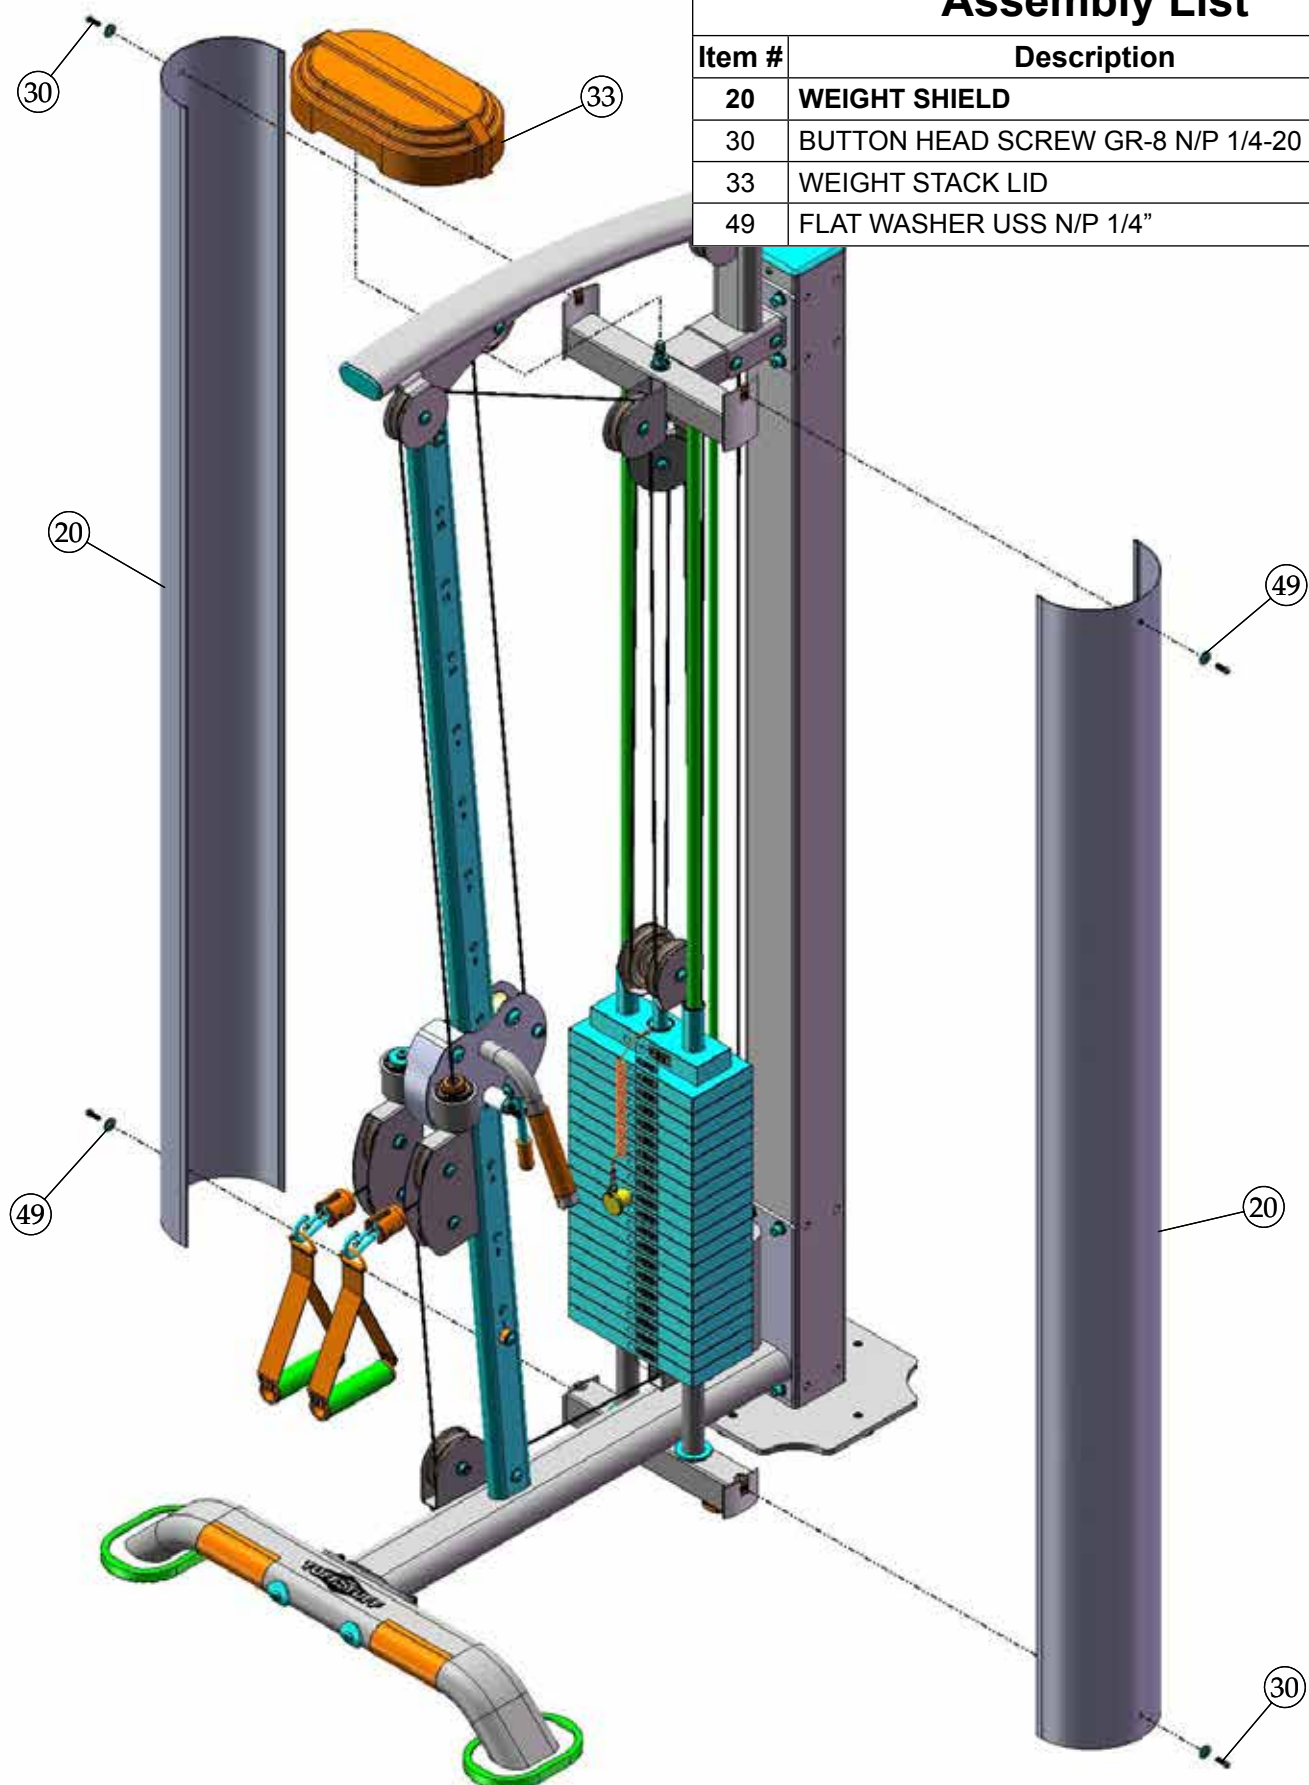

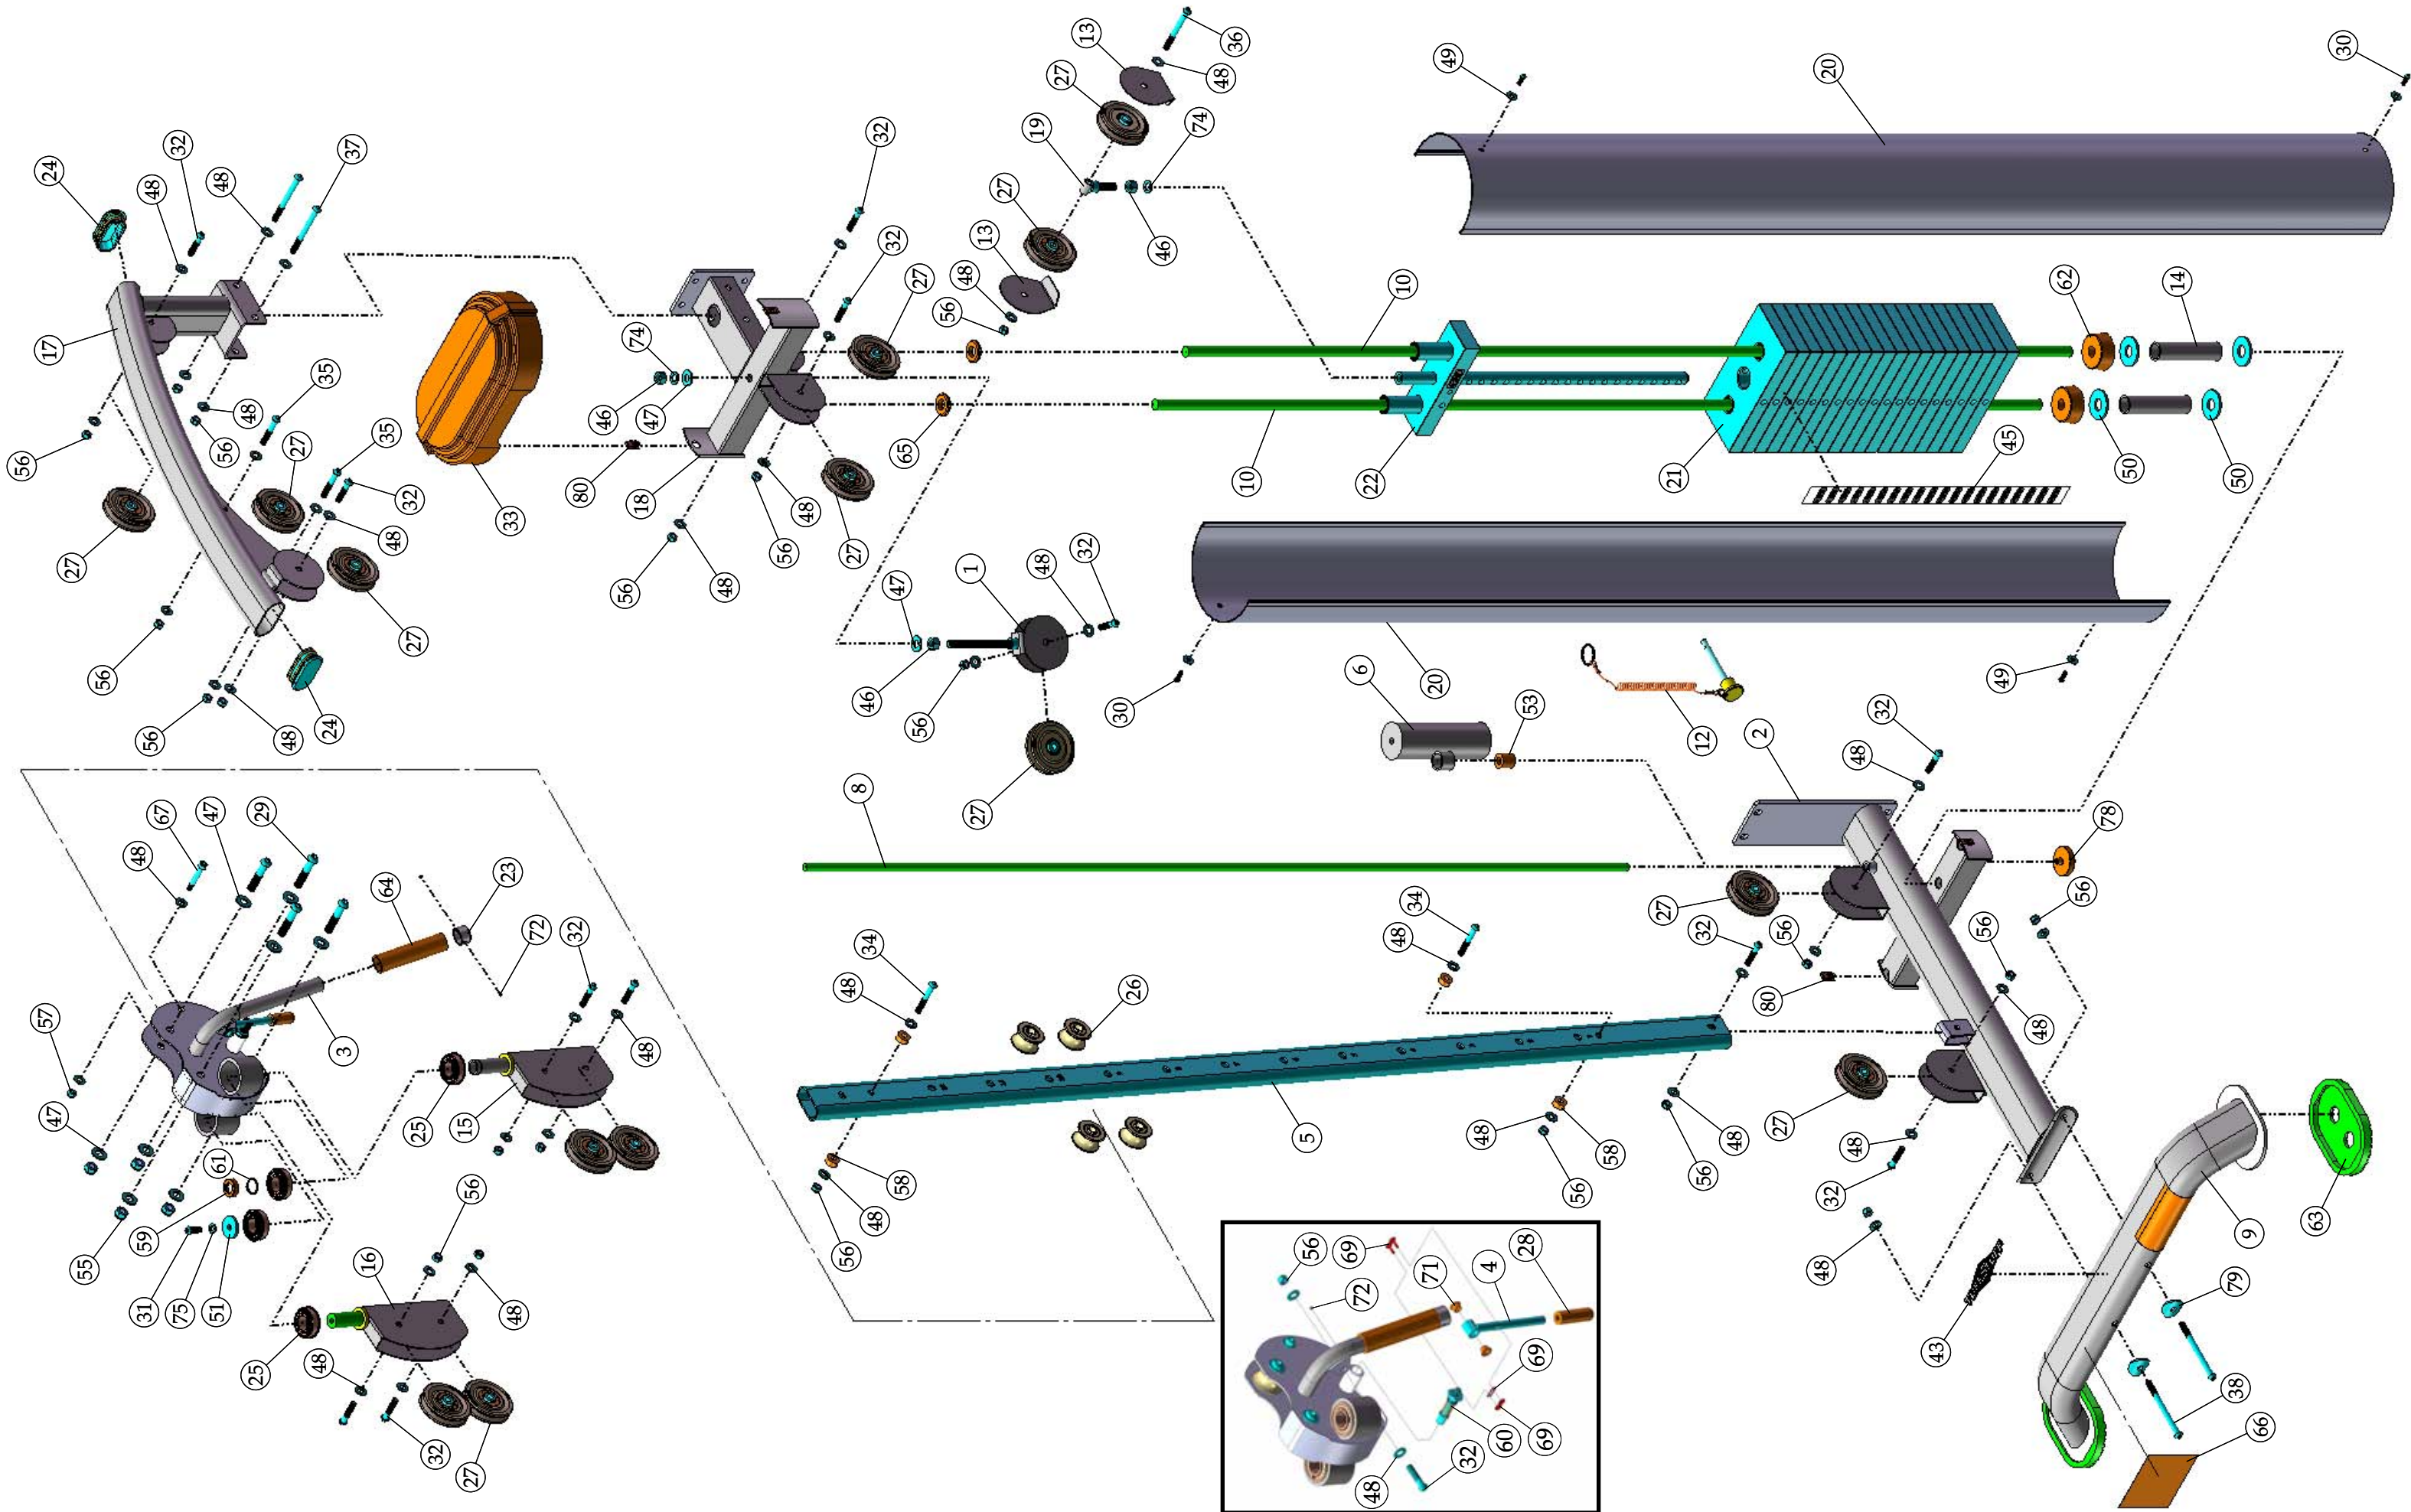

COLOR CHART

GRAY= SUB-ASSEMBLY PARTS

BLACK= HARDWARE

AP-71HL REV0

AP-71HL

Parts List

Item No.	Description	Rev.	Part No.	Qty.	Item No.	Description	Part No.	Qty.
1	ADJUSTABLE PULLEY BRACKET	0	UP6257	1	42	DECAL-IMPORTANT FOR BEST PERFORMANCE... (REV 0)	BNH1894	3
2	BASE FRAME	0	UP6206	1	43	TUFFSTUFF LOGO ALUMINUM SMALL (ADHESIVE)	BNH2463	1
3	CARRIAGE	0	UP6207	1	44	DECAL-WARNING ATTENTION USERS! MOVING... (REV 0)	BNH1895	1
4	CARRIAGE RELEASE HANDLE	0	UP6260	1	45	DECAL-WEIGHT NUMBERS REF TP-10 (200 lbs)	BNH1542	1
5	CHROME SELECTOR POST	0	UP6208	1	46	FINISHED HEX NUT N/P 1/2-13	BNH2516	3
6	COUNTER BALANCE	0	UP6209	1	47	FLAT WASHER SAE N/P 1/2"	BNH2523	10
7	COUNTER BALANCE CABLE	0	UP6255	1	48	FLAT WASHER SAE N/P 3/8"	BNH2524	48
8	COUNTER BALANCE GUIDE ROD 1/2 RD X 66 3/4	0	UP6210	1	49	FLAT WASHER USS N/P 1/4"	BNH2525	4
9	FOOT SUPPORT TUBE	0	UP6189	1	50	FLAT WASHER N/P 3/4 X 2	BNH2526	4
10	GUIDE RODS 3/4 RD X 71 3/4	0	UP6201	2	51	FLAT WASHER N/P 3/8 ID X 1 1/2 OD X 3/16 THICK	BNH2398	1
11	HIGH/LOW CABLE	0	UP6254	1	52	HARD PVC CABLE STOPPER 1 1/2 RD X 2	BNH2258	2
12	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	0	UP3035	1	53	NYLON BUSHING 1/2 ID X 1 OD X 1	BNH2456	1
13	SMALL COVER PLATE 3 1/2 PULLEY	0	UP1000	2	54	NYLON D HANDLE (# H834A)	BNH1215	2
14	SPACER 1 ID X 1 1/4 OD X 5	0	UP6266	2	55	NYLON INSERT LOCK NUT N/P 1/2-13	BNH2451	4
15	SWIVEL DOUBLE PULLEY BKT (HOLLOW SHANK)	0	UP6193	1	56	NYLON INSERT LOCK NUT N/P 3/8-16	BNH2450	22
16	SWIVEL DOUBLE PULLEY BKT (SOLID SHANK)	0	UP6192	1	57	NYLON INSERT LOCK NUT N/P 5/16-18	BNH2529	1
17	TOP FRAME	0	UP6211	1	58	NYLON SPACER 3/8 X 3/4 X 3/8	BNH0392	4
18	TOP GUIDE ROD HOUSING	0	UP6212	1	59	PLASTIC TUBE END 0.9785 X 1.1655 X 0.4225	BNH1824	1
19	TOP PLATE DOUBLE PULLEY HOLDER	0	UP6256	1	60	PUSH PULL PIN 1/2 X 2 3/4 DRILLED ASSY	BNH1151	1
20	WEIGHT SHIELD	0	UP6205	2	61	RETAINING SNAP RING EXT. PLAIN .925 X 1 X .042	BNH0419	1
21	10 LB STEEL WEIGHT PLATE BLACK 4 9/16 X 9 7/16 ASSY		BNH1650	19	62	RUBBER DONUT 3/4 X 2 1/2	BNH0068	2
22	10 LB TOP PLATE W/ADJ SLTR BAR 19 BLK WTS ASSY		BNH1982	1	63	RUBBER FOOT FOR 6 X 4 1/4 PLATE	BNH1647	2
23	ALUMINUM CAP 1.020" RD (CAP-100)		BNH0537	1	64	RUBBER GRIP 1 ID X .125 X 5	BNH0957	1
24	ALUMINUM INSERT ELLIPTICAL CAP 40mm X 80mm		BNH2457	2	65	RUBBER GROMMET 3/4" ID	BNH0401	2
25	BALL BEARING #W 516		BNH0628	4	66	SAFETY TAPE ANTI-SLIP 4" WIDE X 5 1/2	BNH1182	2
26	BLACK CASTER WHEEL 1/2 X 1 7/8 X 1 3/8		BNH2235	4	67	SHOULDER BOLT N/P 3/8 X 1 5/8	BNH2473	1
27	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2 (P-35375-H)		BNH0553	14	68	SHOULDER BOLT N/P 3/8 X 3/4 CUSTOM	BNH2487	2
28	BLACK RUBBER GRIP 1/2 X 2 3/4		BNH2467	1	69	SINGLE STRAND CONNECTING LINK #40 (6261K193)	BNH0066	1
29	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 1/2-13 X 2 1/2		BNH2404	4	70	SNAP LINK N/P 8MM X 80MM	BNH2517	2
30	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 1/4-20 X 3/4		BNH2447	4	71	BRONZE FLANGED BUSHING 3/8 X 1/2 X 1/2 X 11/16 X 1/16	BNH0738	2
31	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 1		BNH2528	1	72	SOCKET SET SCREW N/P 10-32 X 1/8	BNH2518	3
32	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 1 3/4		BNH2426	13	73	SPLIT BOLT GR-8 N/P 1/2-13 X 1 (RND CUT)	BNH2478	1
33	WEIGHT STACK LID		BNH1693	1	74	SPLIT LOCK WASHER N/P 1/2"	BNH2519	3
34	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 2 1/2		BNH2428	2	75	SPLIT LOCK WASHER N/P 3/8"	BNH2520	1
35	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 2 1/4		BNH2429	2	76	STRAP BRACKET 20 #SF20 STAINLESS STEEL	BNH0562	3
36	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 3 1/2		BNH2433	1	77	SUPER LUBE TEFLON LUBRICANT 82340	BNH0704	1
37	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 4		BNH2436	2	78	RUBBER BUMPER 2"	BNH2486	2
38	BUTTON HEAD SOCKET CAP SCREW GR-8 N/P 3/8-16 X 5		BNH2440	2	79	U-SHAPE WASHER N/P 3/8 ID X 1 1/2 OD X 3/16 THICK	BNH2393	2
39	DECAL-DANGER TIGHTEN THIS RETAINING... (REV 2)		BNH0142	1	80	U-STYLE TAPPED HOLE NUT 1/4-20	BNH0708	4
40	DECAL-EXERCISE HIGH/LOW (AP-71HL)		BNH2464	2	81	DECAL-EXERCISE HIGH/LOW 2 OF 2 (AP-71HL)	BNH2530	1
41	DECAL-IMPORTANT ADJUST CABLE HERE 1 OF 2 (REV 0)		BNH1893	1	82	DECAL- SERIAL NO. (AP-71HL)	BNH2537	1



TuffStuff Basic Strength Equipment Safety and General Maintenance

All TUFFSTUFF strength equipment is designed and manufactured to offer maximum, long-life service with minimal maintenance. However, safety inspection and routine maintenance in your facility should be the upmost importance in your daily operation. Information presented in these pages will serve as a basic guideline to design your own inspection procedures.

Part One: General Inspection and Cleaning

Equipment should be wiped down with a damp cloth and dried on a daily basis. The powder coat finish should be polished with a good car wax on a monthly basis. A daily wipe down of the upholstery with a lanolin based hand cleaner or Naugahyde Cleaner. Do not use cleaners such as Lysol or Windex as they will dry out and crack the vinyl. Lanolin hand cleaner dissolves the sweat and lubricates the vinyl, maintaining its natural flexibility. Sweat is corrosive and when left on the frame and components will eventually cause corrosion or rust. When performing these cleaning sessions, it is the perfect time to inspect the equipment and note any problems for the maintenance personnel to correct.

1. Check equipment if it is operating properly.
2. Check the cable for loose fittings or frayed cable and is seating properly on the pulleys and cams.
3. Make sure that the proper weight stack selector pin is with each machine and that the pin functions properly.
4. If something appears loose be sure to have it tightened immediately.
5. If a piece of equipment appears damaged or not operation properly, place the piece out-of-service immediately.

Part Two: Maintenance

In this paragraph, we will discuss the inspection of the cables, pulleys and their associated components. If there exists the potential for injury to occur on a machine, it will most likely lie in the cable system. It is important to inspect the cables frequently and let it be known to all users that it is their responsibility to report any worn-out cable to prevent a sudden failure that can result in an injury. Cables are moving parts, meaning cable-wear will occur regardless of the type or size used. In the advent of the 3/16" mill-spec cable this wear takes longer to become apparent and this is why frequent inspections are so important.

1. Check the cable termination at the weight stack. To perform any cable tension adjustment, loosen the hex jam nut and thread the hex tap bolt in or out to give cable the proper tension. Re-tightened the hex jam nut when adjustment is complete and make sure the hex tap bolt is threaded 1/2" into the socket of the selector bar top plate.
2. Check the cable as it terminates at the cam. Check the end fitting for any signs of fraying in this area. Inspect the bolt and nut and/or screw holding the fitting and be sure that it is tight.
3. Check the cables as it passes over all pulley wheels. Visually inspect the cables and pulleys. A cable that is wearing will exhibit a ballooned surface that passes over the pulley. This is an early warning sign to replace the cable.





Maintenance

Part Three: Lubrication

Bearing and linear bearings systems have advanced over the years but they must be maintained on a regular basis if you expect them to last and perform efficiently. TuffStuff uses only the highest quality bearings and linear motion components that are virtually trouble-free but requires the regular preventive maintenance to insure long-lasting performance.

1. Bronze and nylon bushings, we recommend on a monthly basis to spray a teflon-base lubricant (silicone-free) directly onto the shaft as it passes through these bushings. Spray a small amount onto the shaft and rotate it through its complete movement and wipe off any excess.
2. Weight stack guide rods and bushings, again use teflon spray lubricant and this time spray onto a rag and wipe the guide rods down with this rag on a weekly basis. Do not use WD-40 or other lubricants as they attract dirt and will create a mess between the weight plates and bushings.
3. Sealed bearings pivot points, as the name implies are protected from the outside environment and require no lubrication. During the machine wipe down, wipe the external bearing surfaces with the damp rag and dried to prevent the build up of dust and sweat.
4. Linear bearing systems are precision, high load components that require regular maintenance. Dirt and corrosion are the major culprits in linear bearing failure. The hardened shafts must be wiped down weekly and lubricated with a light layer of teflon grease. We recommend a teflon-base (silicone-free) gel/grease for this purpose. Lack of care and maintenance will result in corrosion of the linear shaft causing the bearings to clogged and jammed.

If you religiously perform the maintenance procedures, you will increase the life of the machine and ultimately lower your maintenance costs with fewer replaced components and downtime.

Any doubts, equipment with mechanical problems should be placed "Out-of-Service" until all problems are corrected. If replacement parts are required or maintenance questions, please contact:

TuffStuff Fitness Equipment, Inc.
Service Department
1325 E. Franklin Avenue
Pomona, CA 91766
1-800-961-9377
e-mail: service@tuffstuff.net



DO NOT DISCARD THIS MANUAL



TUFFSTUFF LIMITED WARRANTY

TuffStuff warrants to the original purchaser that TuffStuff equipment will be free from defects in material and workmanship. All warranty periods begin to run from the date of delivery to the original purchaser. The warranty and remedies set forth herein are conditioned upon proper storage, installation, use and maintenance and conformance with any recommendations of TuffStuff. This warranty does not cover products not manufactured by TuffStuff or products which are altered without the express written consent of TuffStuff. This warranty as specified:

WARRANTY: a) Frames, welds, cams and weight plates -- Lifetime, b) Pivot bearings, pulleys, bushings, gas shocks and guide rods -- Five (5) years, c) Belts, linear bearings and pull-pin components -- One (1) year, and d) Upholstery, cables, finish and rubber grips -- Six (6) months, and all other parts not mentioned elsewhere in this warranty will expire one (1) year from the date of delivery to the original purchaser. The obligation of TuffStuff under this warranty is limited to repairing or replacing warranted defective parts, as TuffStuff may elect, at TuffStuff's facility in Pomona, California, without charge to purchaser for either parts or labor. Purchaser is responsible for installation of repaired or replaced parts, and all transportation and insurance costs on returned or replaced equipment to and from TuffStuff's facility in Pomona.

THE FOREGOING SHALL CONSTITUTE THE SOLE REMEDY OF THE PURCHASER AND THE SOLE LIABILITY OF TUFFSTUFF WITH REGARD TO WARRANTY. NO IMPLIED STATUTORY WARRANTY OR IMPLIED STATUTORY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT, WHETHER AS A RESULT OF BREACH OF CONTRACT, WARRANTY, NEGLIGENCE OR OTHERWISE, SHALL TUFFSTUFF BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE, LOSS OF USE OF EQUIPMENT, COST OF CAPITAL, COST OF SUBSTITUTION EQUIPMENT, DOWNTIME COST, OR CLAIMS OF CUSTOMERS OR PURCHASER FROM SUCH DAMAGE.

This written warranty is the final, complete and exclusive agreement of the parties with respect to the quality or performance of the equipment and no action for breach of this written warranty or any implied warranty shall be commenced more than one (1) year after the accrual of the cause of action. No modification of this warranty or waiver of its terms shall be binding on either party unless approved in writing by an authorized representative of the party. Contact TuffStuff Fitness Equipment, Inc. at 1325 E. Franklin Avenue, Pomona, California 91766, before returning any defective equipment.

TuffStuff Fitness Equipment, Inc.

1325 E. Franklin Avenue

Pomona, CA 91766, USA

Ph: 909-629-1600 Fax: 909-629-4967

E-mail: service@tuffstuff.net Net: www.tuffstuff.net

