


Smart Watch User Manual




Brief Introduction


1, Appearance

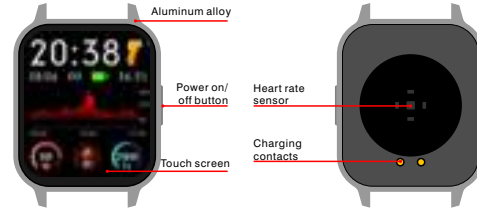

2, Charging

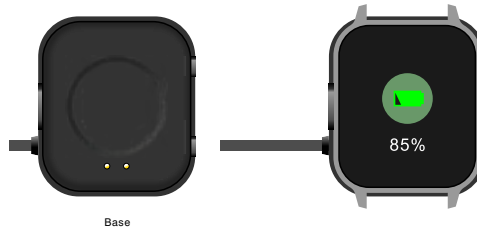

3, Strap installation method

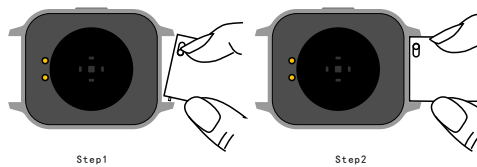


4, Packing List

Watch*1 User Manual*1 Charging base*1

5, Battery Parameters

type of battery: Lithium polymer battery
battery model: CH382224
battery capacity: 200mAh
Charging voltage: 4.2V

Basic Operations

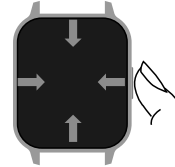


1. Long press the button for 4 seconds to power on or power off, short press to return to main interface.
2. On the main interface, press and hold for 3 seconds to switch the dial.
3. On the main interface, swipe down to show Bluetooth, battery volume and shortcut menu.
4. On the main interface, swipe up to show incoming messages and tap to read the content.
5. On the main interface, swipe right to show function list.
6. On the main interface, swipe left to show common functions.

APP Download and Installation


1. Scan the QR code as follows or access to major application markets to download and install "GloryFit".
2. After APP has been downloaded, start new user registration or third-party login with basic personal information.



GloryFit

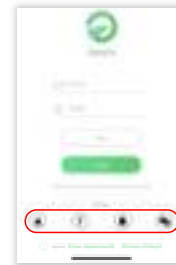


3. Start to bind the watch.

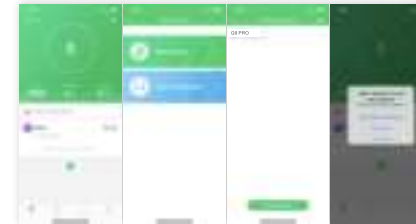

4. After the watch binding is completed, start function setting in the APP based on individual habits.



Basic Functions

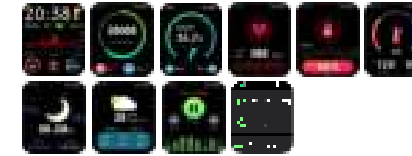

Main interface/dial

long press for 3 seconds to switch the dial on the main interface

Exercise status

record current walking steps, distance, calories in real time

Body temperature monitoring

Switch to the body temperature interface to measure the body surface temperature and actual body temperature in time

Heart rate monitoring

switch to the interface of heart rate monitoring, current heart rate will be automatically measured, swipe to exit the measurement. Real-time heart rate measurement can be activated or inactivated in the APP.

Blood oxygen saturation monitoring

tap on blood oxygen saturation monitoring to start the measurement, the watch will vibrate to remind measurement completed.

Blood pressure monitoring

The current high and low pressure can be measured in time, and can be synchronized to the APP

Sleep monitoring

switch to sleep monitoring interface to check the sleep last night. When you fall asleep by wearing the watch, the deep sleep, light sleep and total sleeping hours will be automatically recorded.

Weather

When it's connected to the APP, the weather conditions of that day and next week will be displayed.

Message reminding

The latest 8 messages will be saved, tap to read or click to delete.

24 sport modes

tap on the sport mode to enter the sport list, tap on the selected sport mode to start measurement, swipe right to pause, stop or continue.

DND mode

DND period can be set in the APP, the mode can be activated or inactivated in the watch

Brightness adjustment

tap on "+" and "-" to adjust brightness, four levels available

Find Phone

tap on Find Phone and the phone will ring as reminding without lighting up the screen.

Setting

dial selection, about, shutdown, reset

Music control

Play music on phone, tap to control on watch, pause/play, previous, next

Stopwatch

tap to access stopwatch and click to start, stopwatch can be paused, continued or reset.

Countdown

tap to access Countdown, select time or swipe up to set countdown time

Flashlight

tap to activate Flashlight mode and swipe right to exit

Other reminding functions:

Incoming call reminding /Message reminding/ Alarm reminding

Sedentary reminding /Goal reaching reminding

Notes:

1. Avoid strong impact, extreme heat and sun exposure.
2. Do not disassemble, repair or modify the device without authorization.
3. This device is charged with 5V 500MA power supply. Over-voltage power supply is strictly forbidden for charging.
4. Charging is prohibited in the case of water stains.
5. This product can only be used for electronic consumer monitoring instead of medical purposes, the measurement data is for reference only.

Note:

The company reserves the right to modify the user manual without any notifications in advance. It's normal that some functions may be different in specific software versions.